

Notes

1. Do not touch by hand directly. If you want to move or carry the stove fan, please use the extendable handle while wearing gloves.
2. Please keep the product away from children and pets. Children must be accompanied by parents to use fireplace fans.
3. When you find that the fan won't turn, it is better to find the reason according to the instructions.
4. Please avoid using the stove fan at a high temperature continuously to ensure a longer lifetime.
5. Simply place the stove fan on the smooth surface of the top of the stove, close to the side or back of the stove. The stove fan needs to be placed at least 10.16cm/4 inch away from the stove.
6. Please note that this product should be used with a freestanding furnace, not a built-in furnace or other furnaces with insulation top design.
7. Never place the fan on an unprotected surface if the fireplace fan base is still hot.
8. Please use and install this product in strict accordance with the instructions.
9. Please allow the slight color difference caused by the shooting light and 1-3cm error due to manual measurement, and make sure you do not mind before ordering.