

Product #:	WHHD2048
Product Name:	Snowman Plastic Ribbon Holiday Decoration with Battery Operated Lights

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.


INSTRUCTIONS:

- To insert batteries, open the battery box cover.
- Insert 3 x AA batteries, ensuring you follow the diagram in the battery box.
- Close the cover by sliding the cover back on the battery box.
- By pressing the button on the battery box, you can achieve the following:
 1. ON
 2. OFF

Storage Tips:

- Remove batteries from battery compartment.
- Store the product in a cool, dry location protected from sunlight where the temperature does not exceed 35°C (95°F).

Battery Compartment

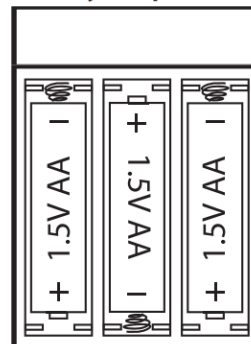

WARNINGS:

- This product is for indoor decorative use only.
- Retain the box for storage and future reference.
- Carefully remove from packaging.
- To avoid risk of suffocation to animals or children, dispose of the plastic bag immediately.
- This is not a toy. For decorative purposes only. Keep children and pets away from the product.
- Choose a suitable location and ensure the products do not cause an obstruction or a potential hazard.
- Position on a flat level surface.
- Do not illuminate while the product is still within its packaging.
- Do not connect the item electronically to any other item.
- Do not leave the product operating unattended.
- Do not allow any plastic parts to come into contact with heat or flames or submerge in water.
- Batteries are to be inserted with the correct polarity.
- Remove batteries and store them in a cool, dry place when not in use.
- The supply terminals are not to be short-circuited.
- Important: bulbs are not replaceable.
- Color reproduction is accurate within the limitations of the manufacturing process. Also note, colors will vary under different lighting.