 






Installation Instruction




























Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.



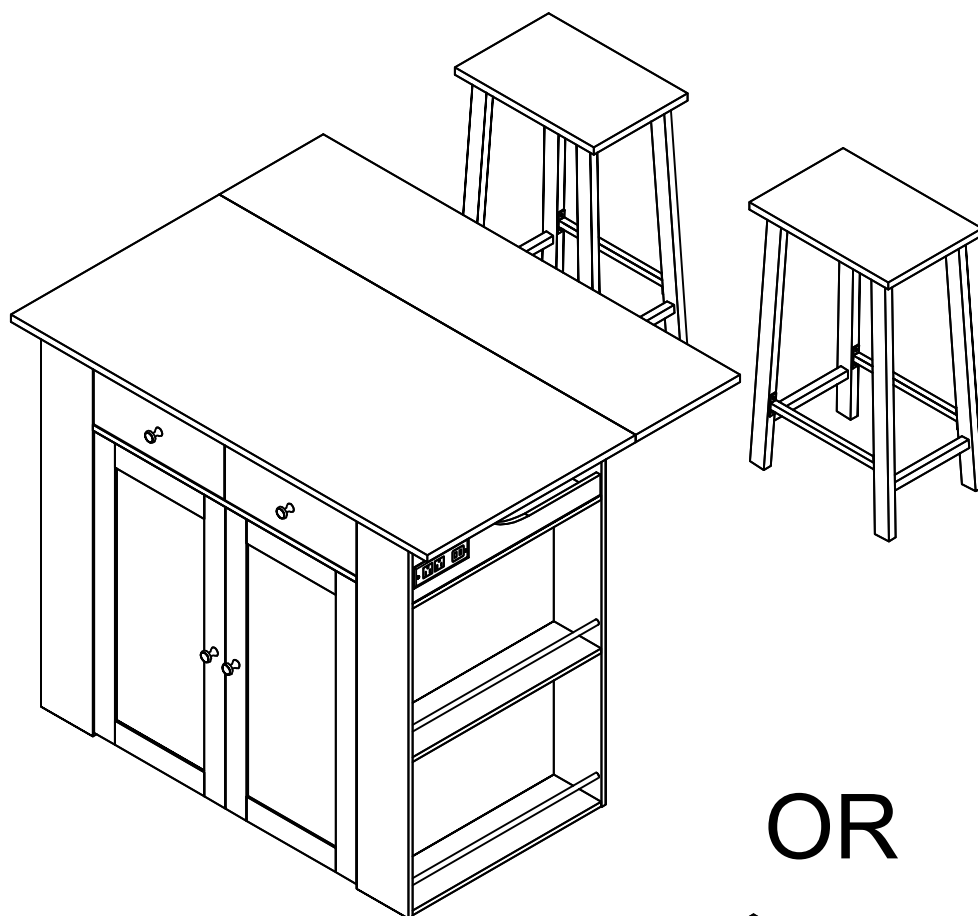


                             OR

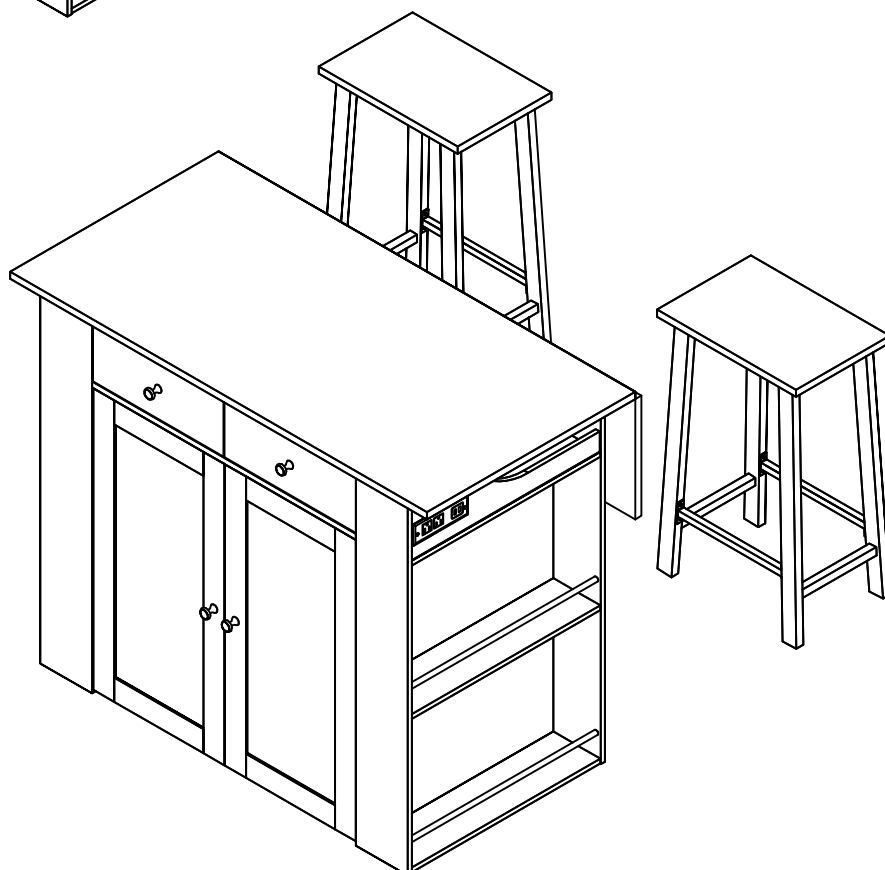


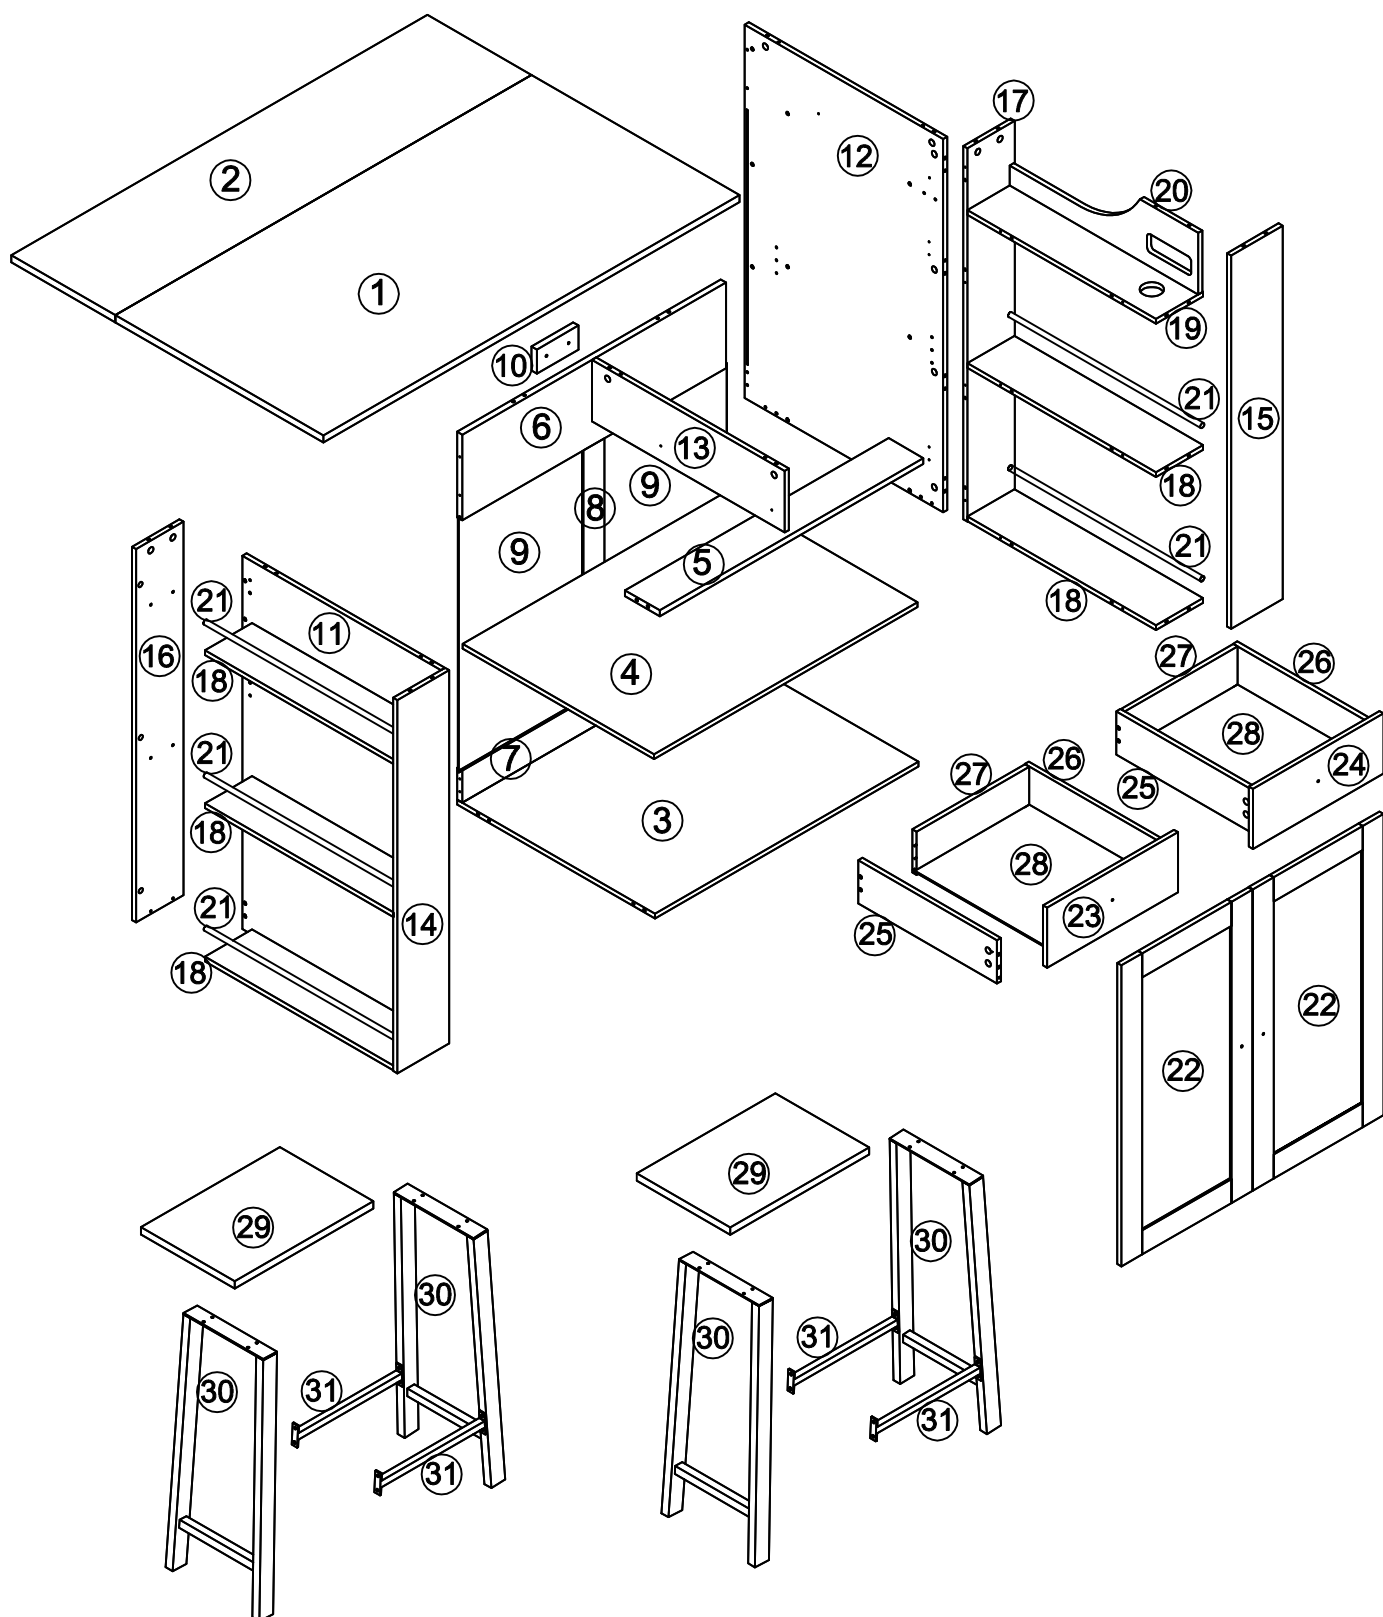

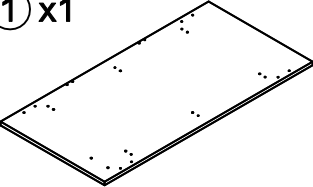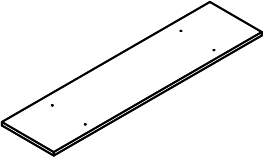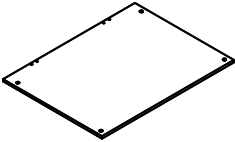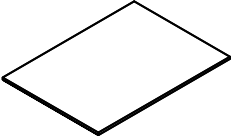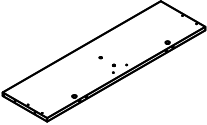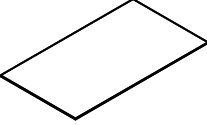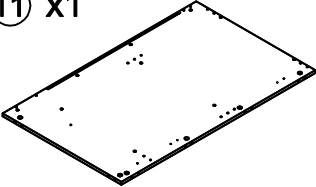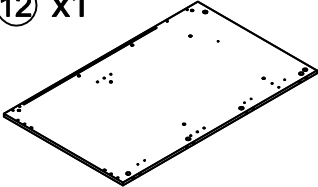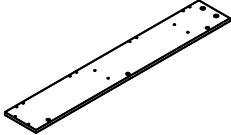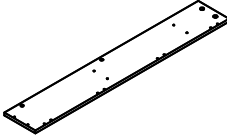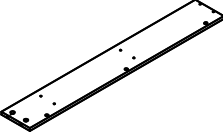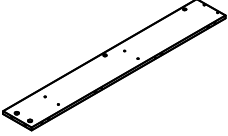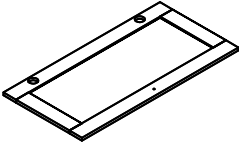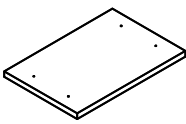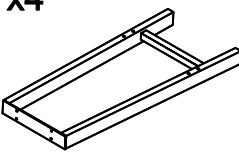
① x1 	② x1 	③ x1 	④ x1 
⑤ x1 	⑥ x1 	⑦ x1 	⑧ x1 
⑨ x2 	⑩ x1 	⑪ x1 	⑫ x1 
⑬ x1 	⑭ x1 	⑮ x1 	⑯ x1 
⑰ x1 	⑱ x5 	⑲ x1 	⑳ x1 
㉑ x5 	㉒ x2 	㉓ x1 	㉔ x1 
㉕ x2 	㉖ x2 	㉗ x2 	㉘ x2 
㉙ x2 	㉚ x4 	㉛ x4 	

   
A x64 +2(spare)  Ø6.5x32mm	B x64 +2(spare)  Ø15x10mm	C x4 +1(spare)  Ø8x40mm	D x44 +2(spare)  Ø6x30mm	E x2  	F x4 
G x4  Ø6.5x32mm	H x4  M4x16mm	I x1  	J x4  	K x36 +2(spare)  M4x35mm	L x10 +1(spare)  M4x25mm
M x34 +10(spare)  M3.5x12mm	N x1  	O x8 +4(spare)  	P x24 +2(spare)  M3.5x16mm	Q x16 +1(spare)  M6x15mm	
CL x2  L400mm	CR x2  L400mm	DL x2  L400mm	DR x2  L400mm		

 1

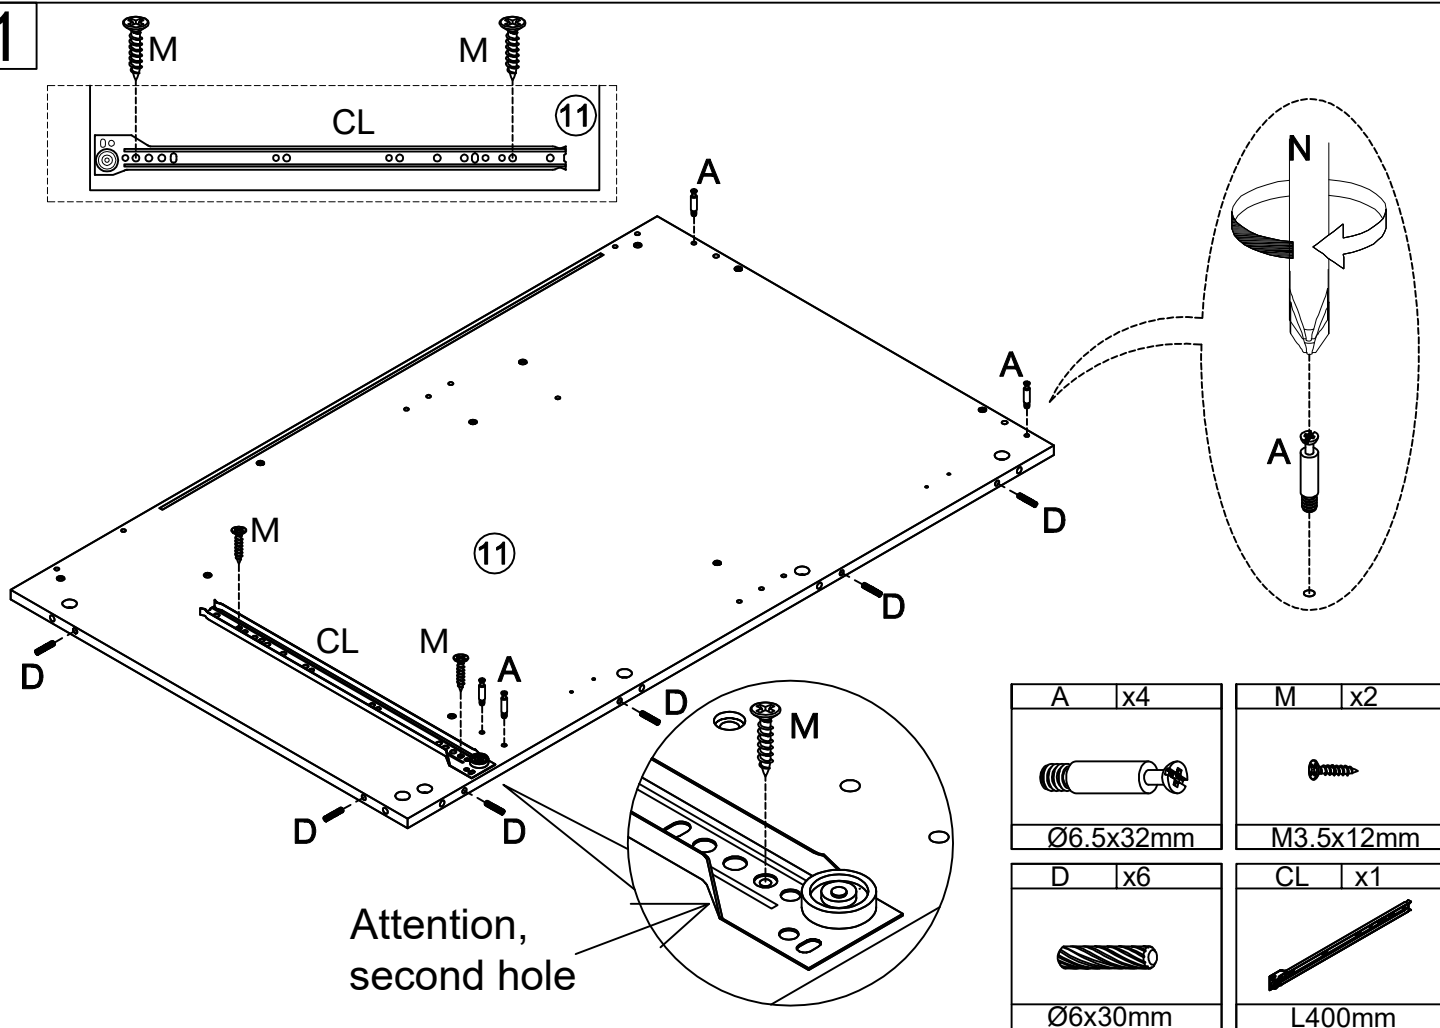



2

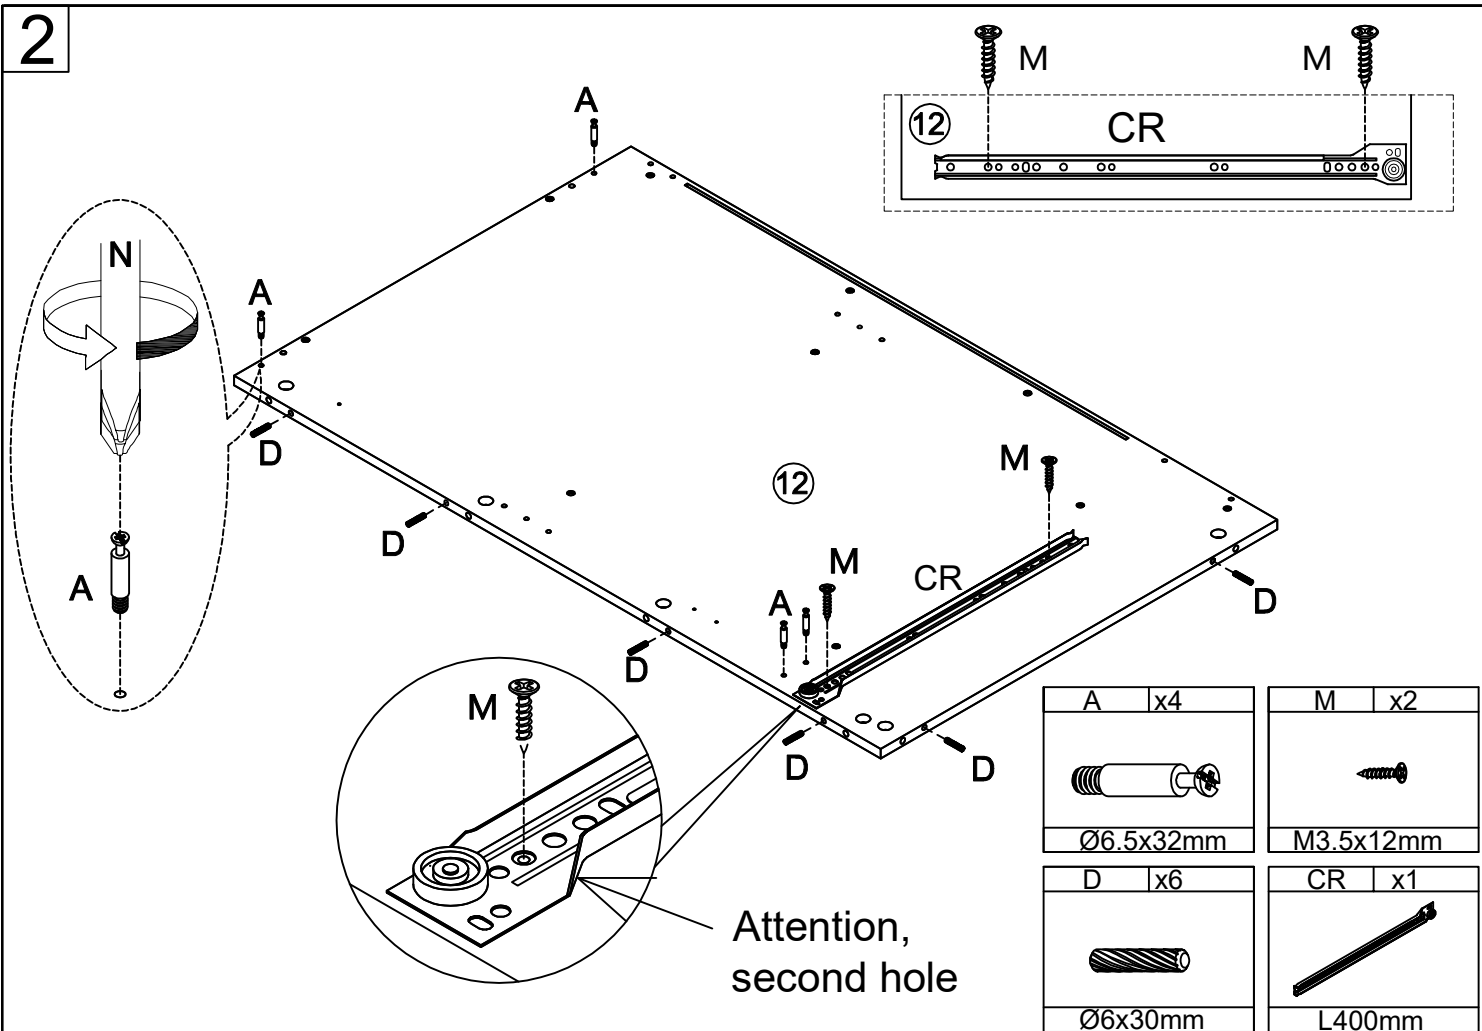 

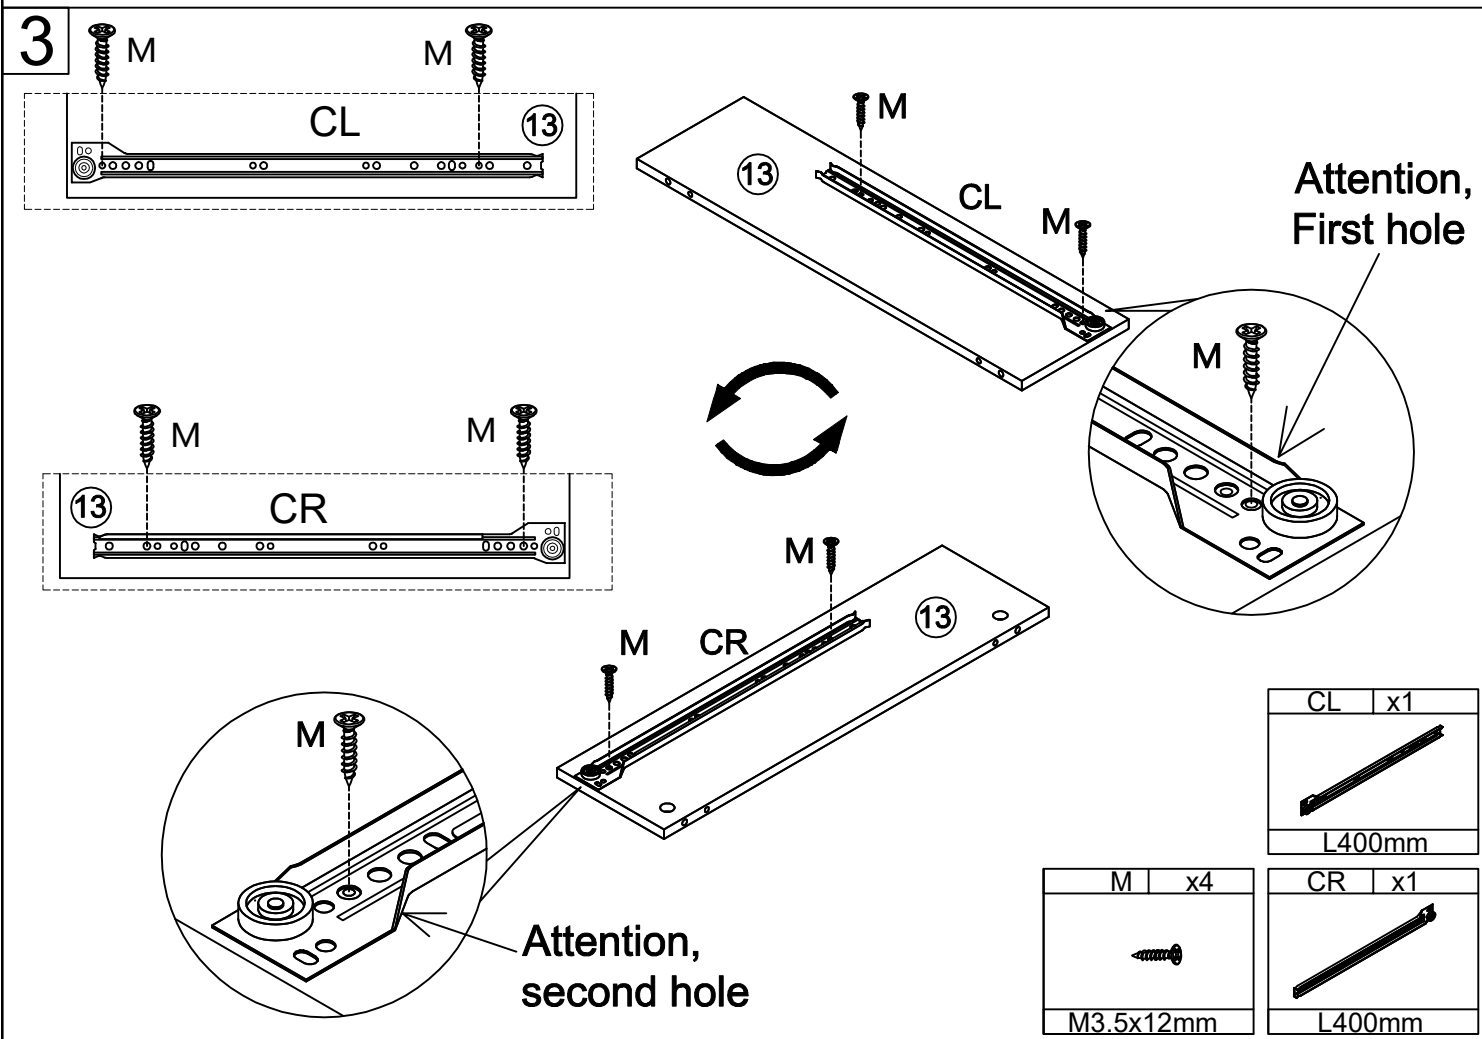 
3

  4

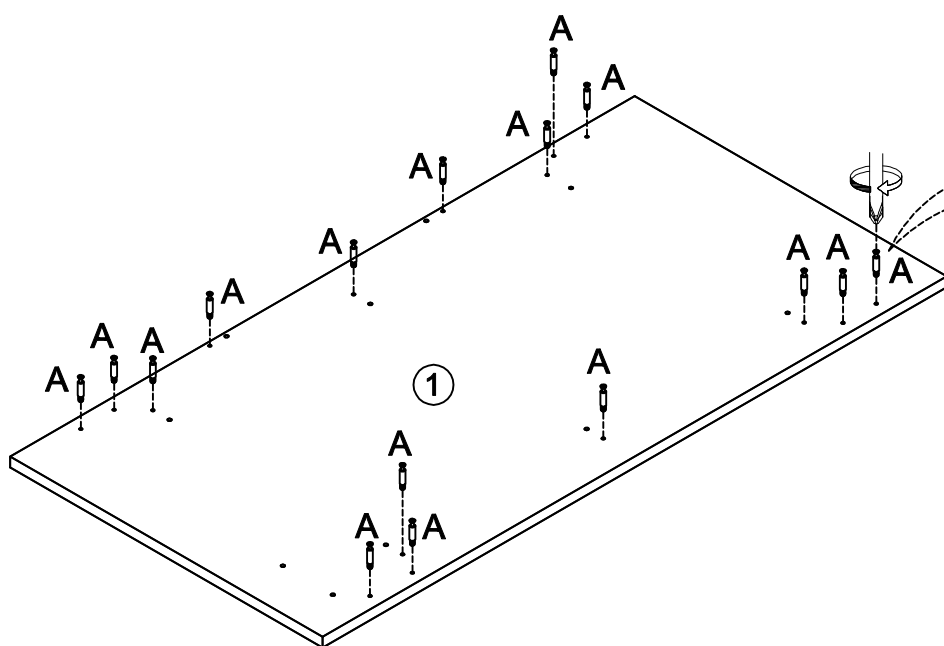


A	x16
	
Ø6.5x32mm	

 5

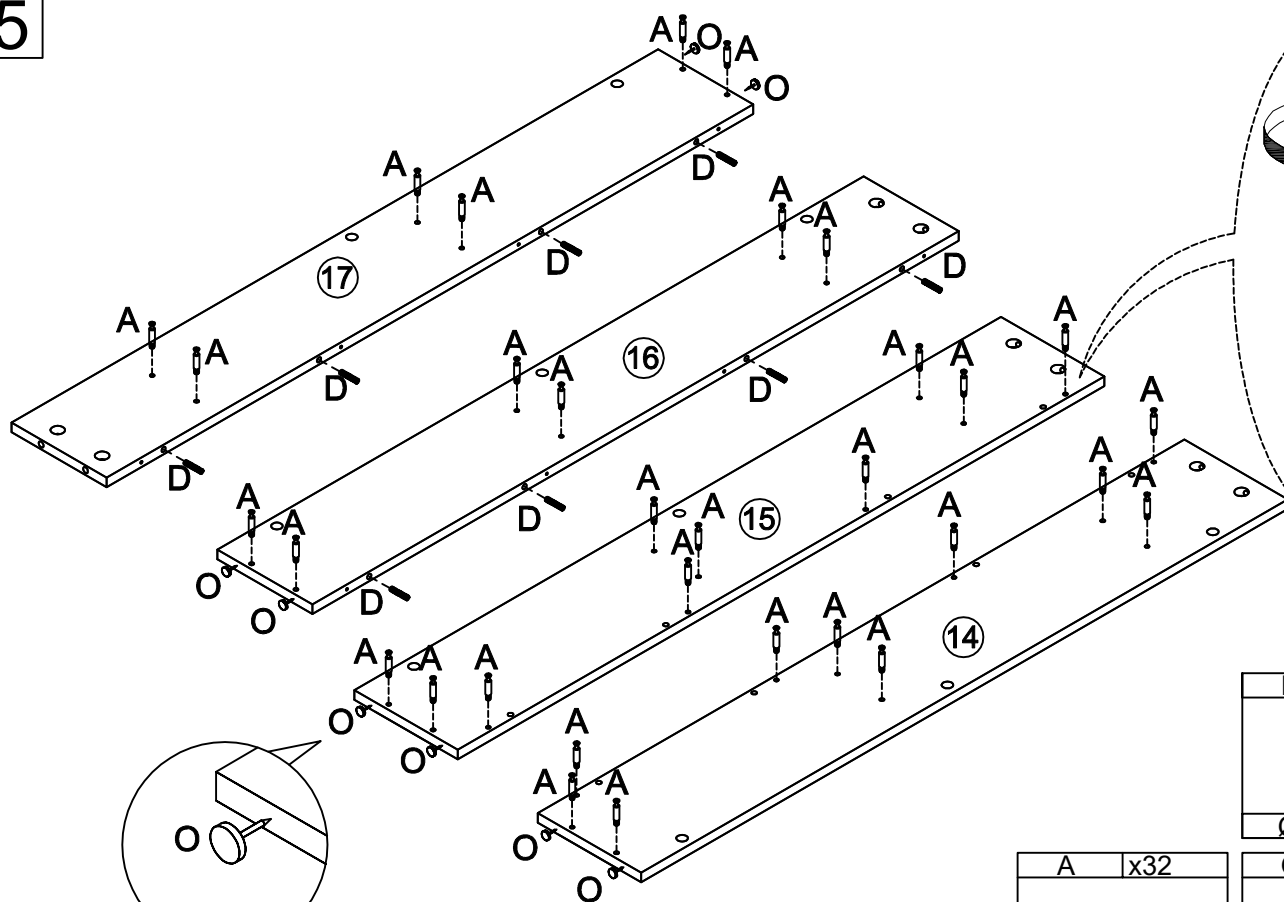


D	x8
	
Ø6x30mm	

 
A	x32
	
Ø6.5x32mm	

O	x8
	

 
6

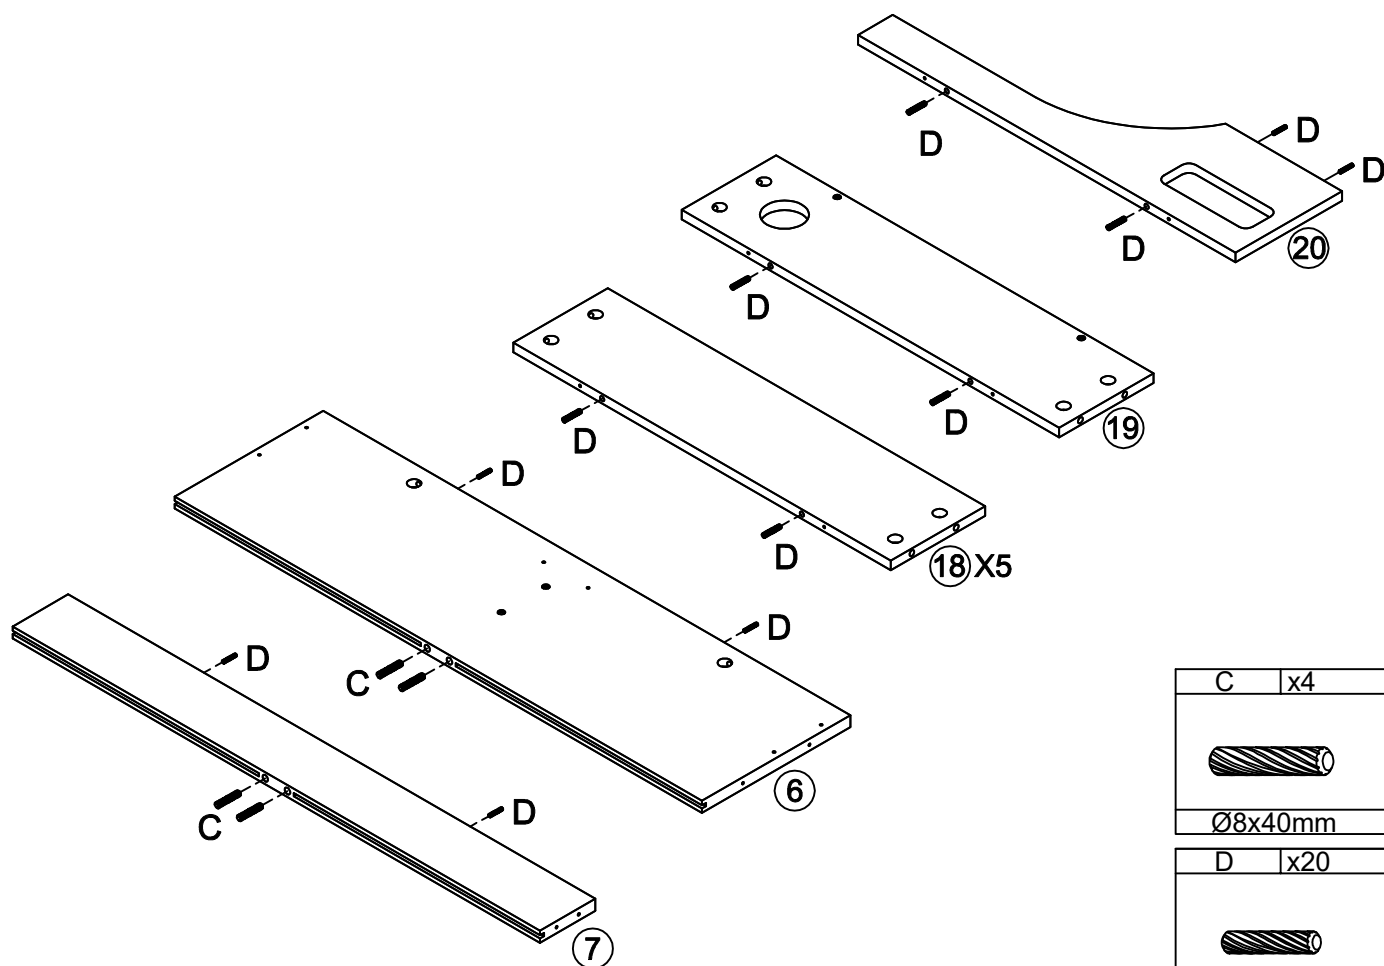


7

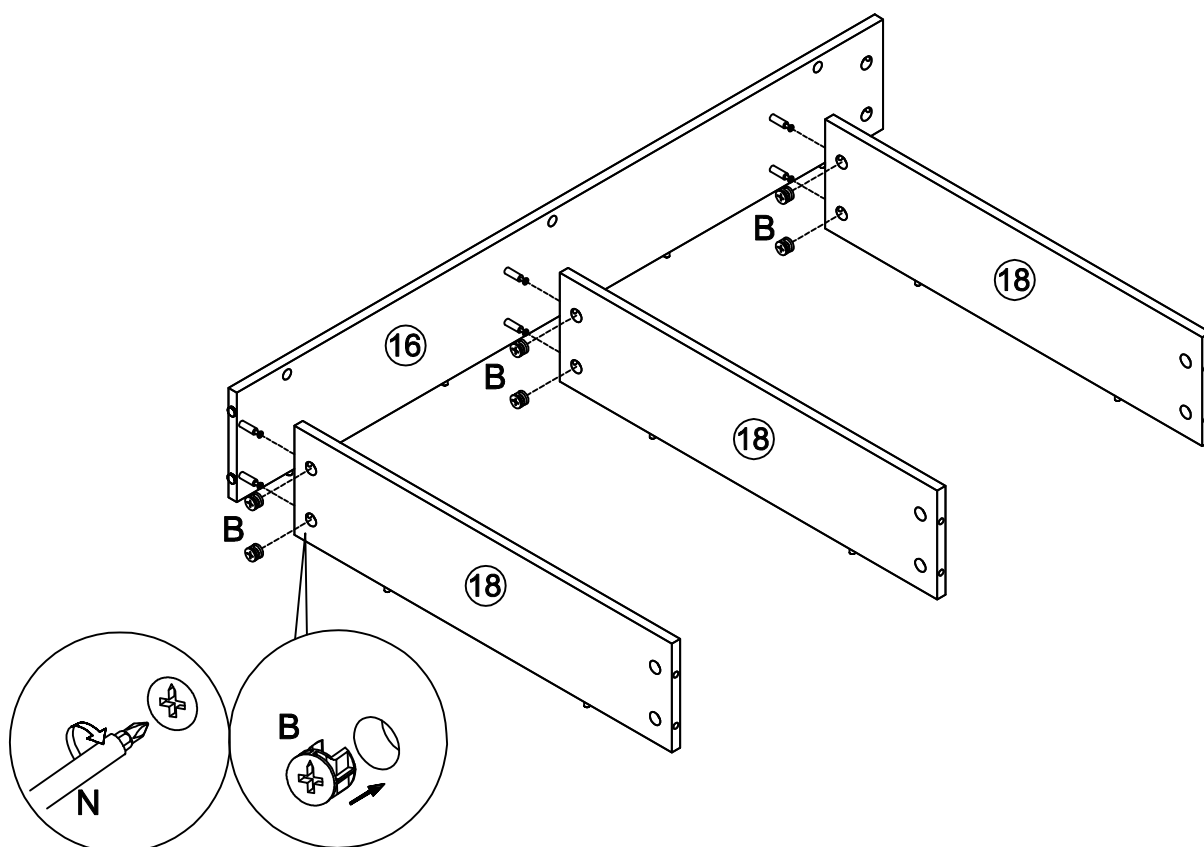 


8

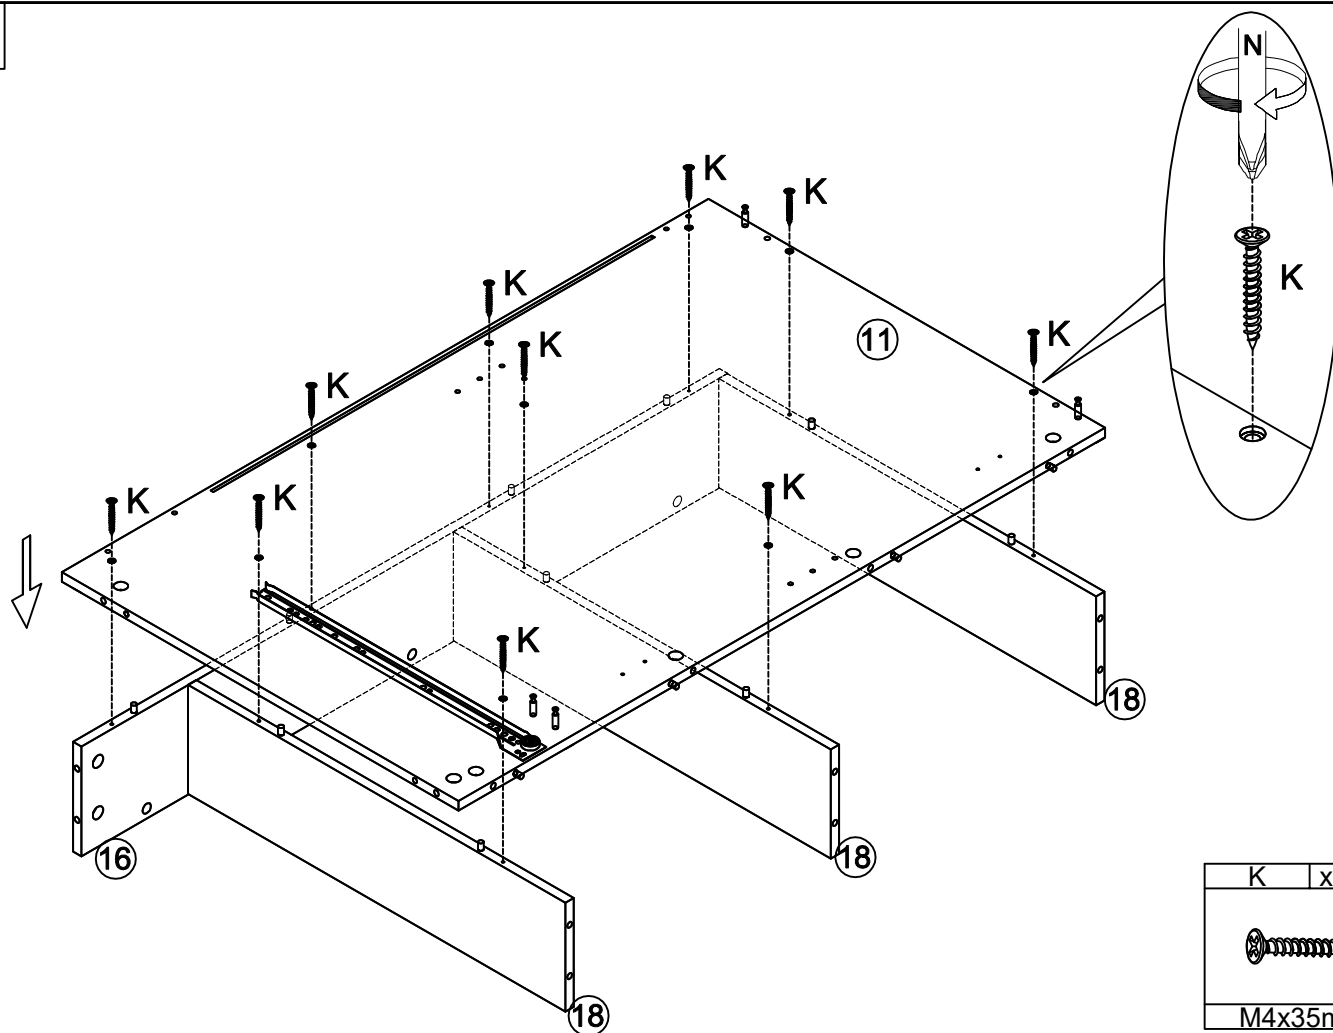 

9

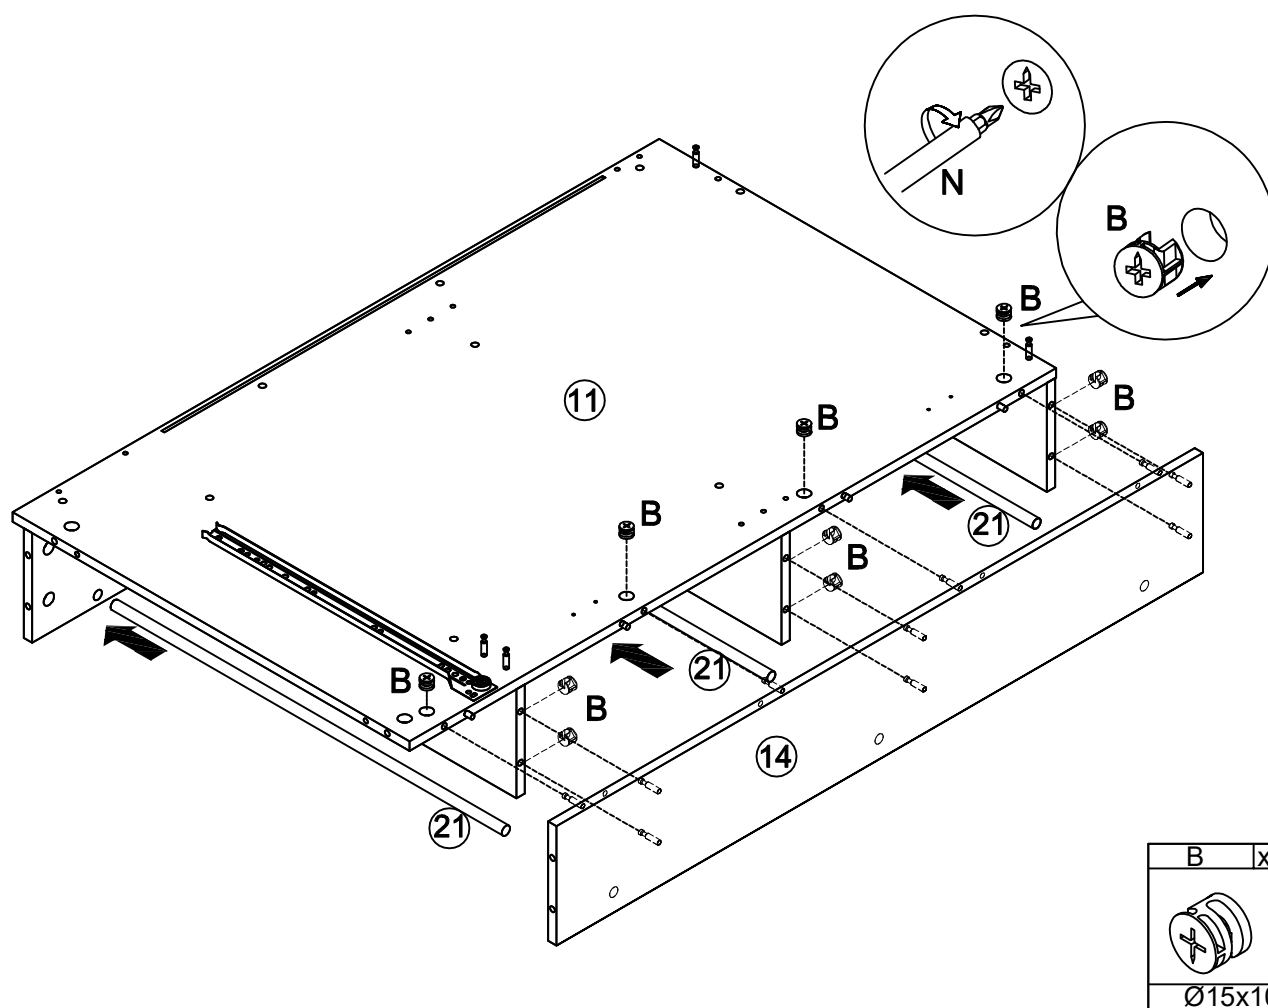 


10

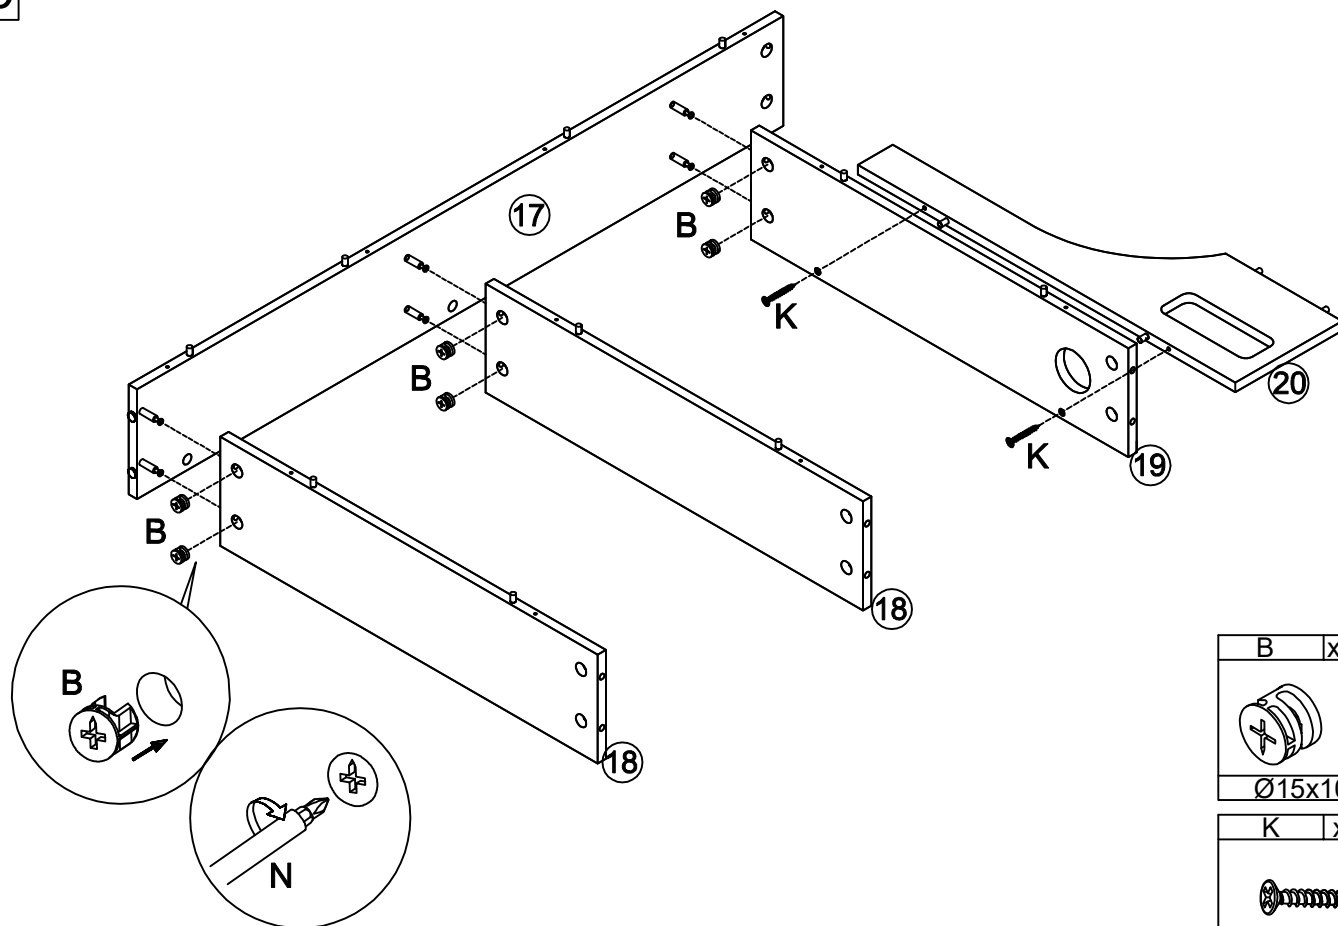 


B	x6
	
Ø15x10mm	
K	x2
	
M4x35mm	

 11

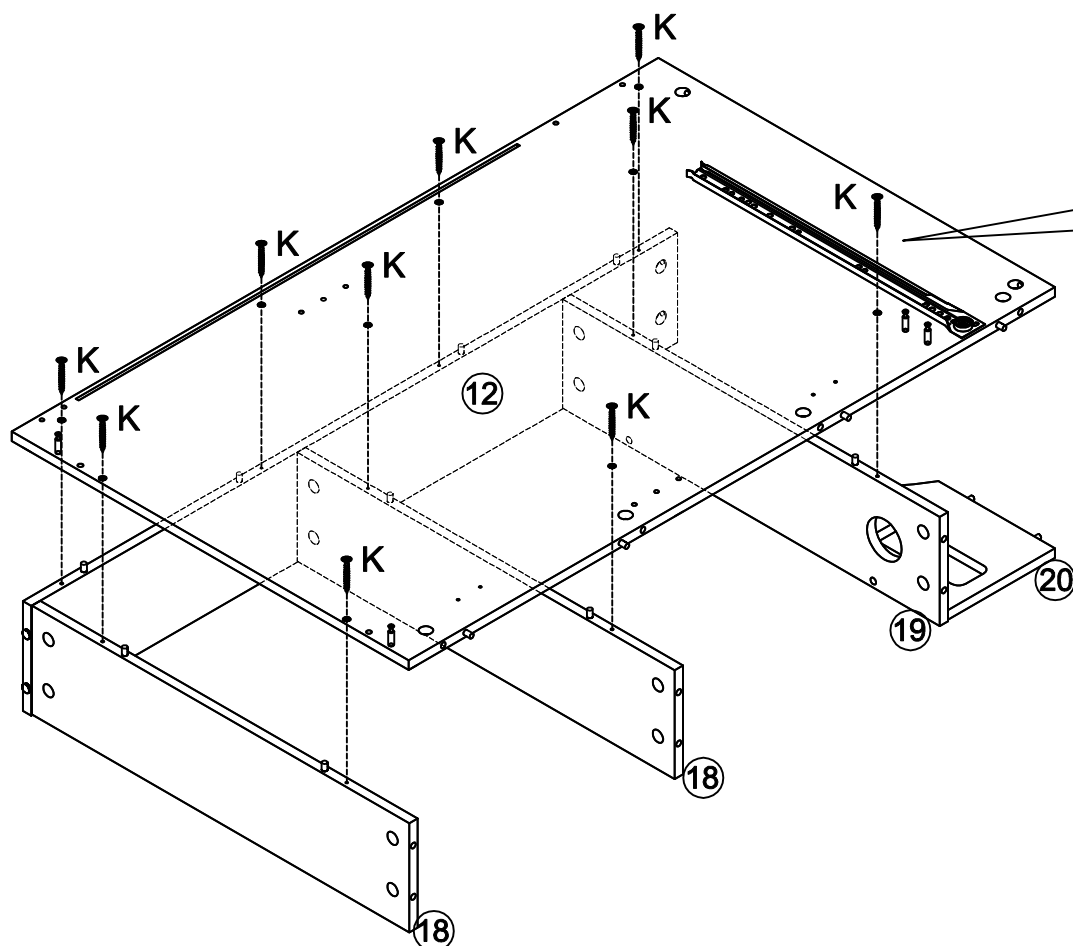


K	x10
	
M4x35mm	

 12

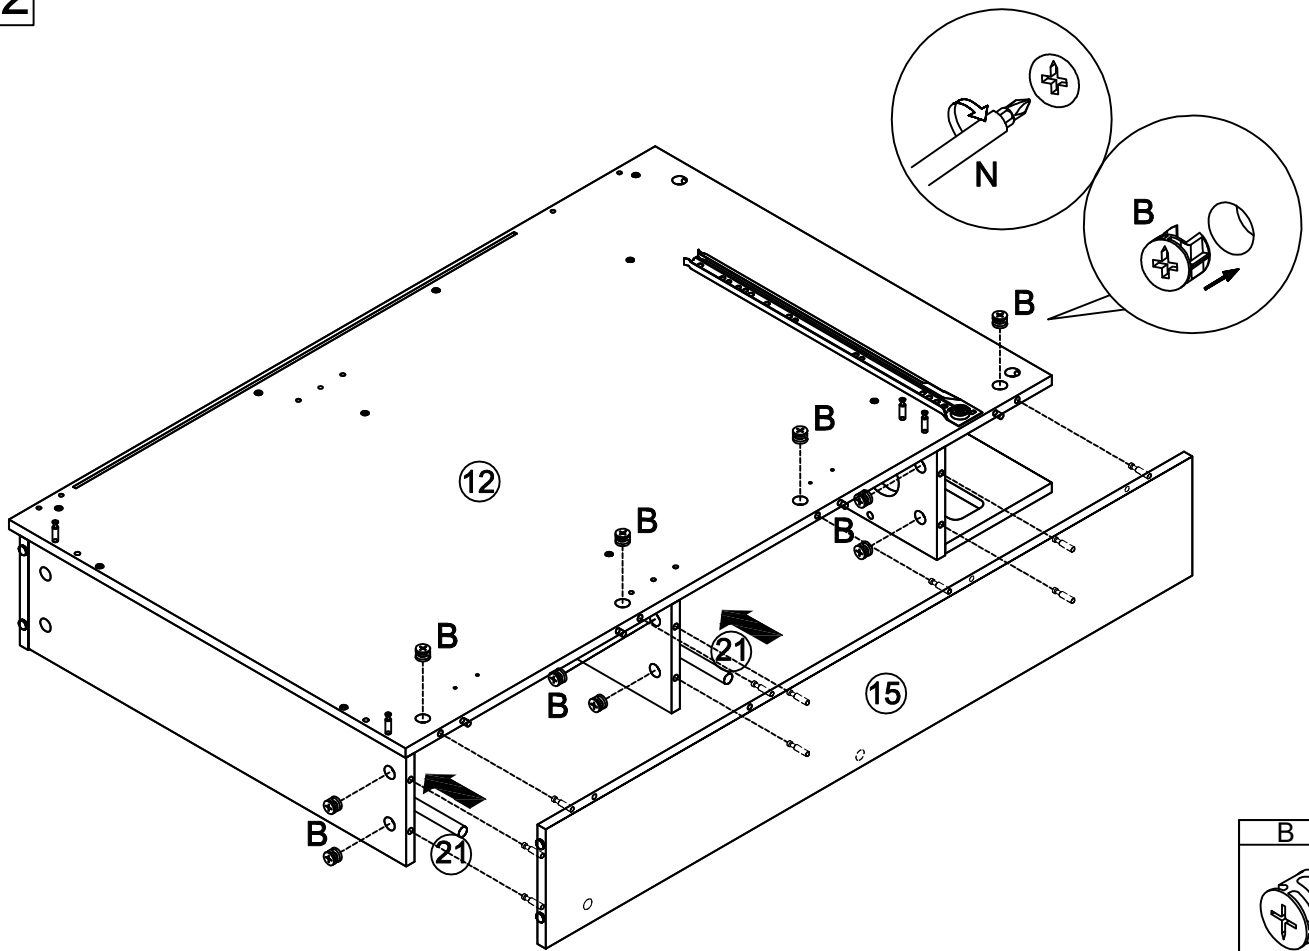


B	x10
	
Ø15x10mm	

 13

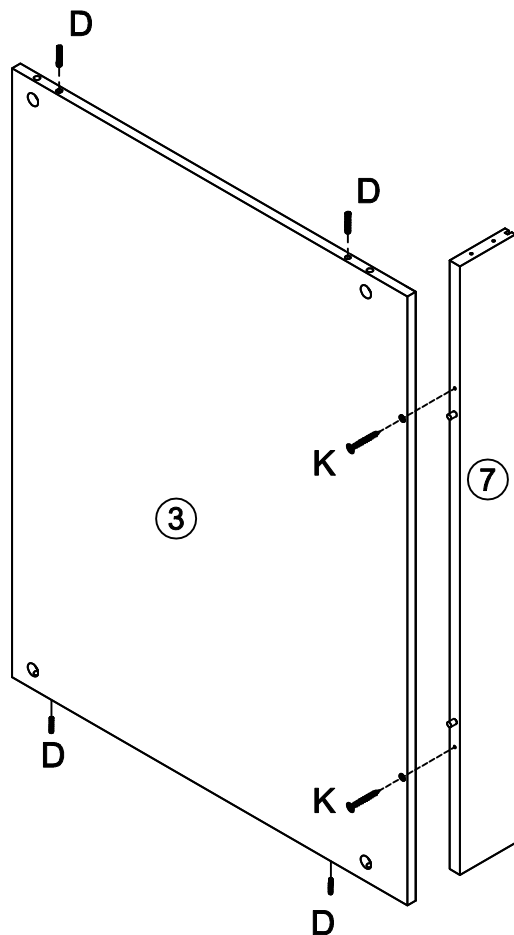

D	x4
	
Ø6x30mm	
K	x2
	
M4x35mm	

 
14

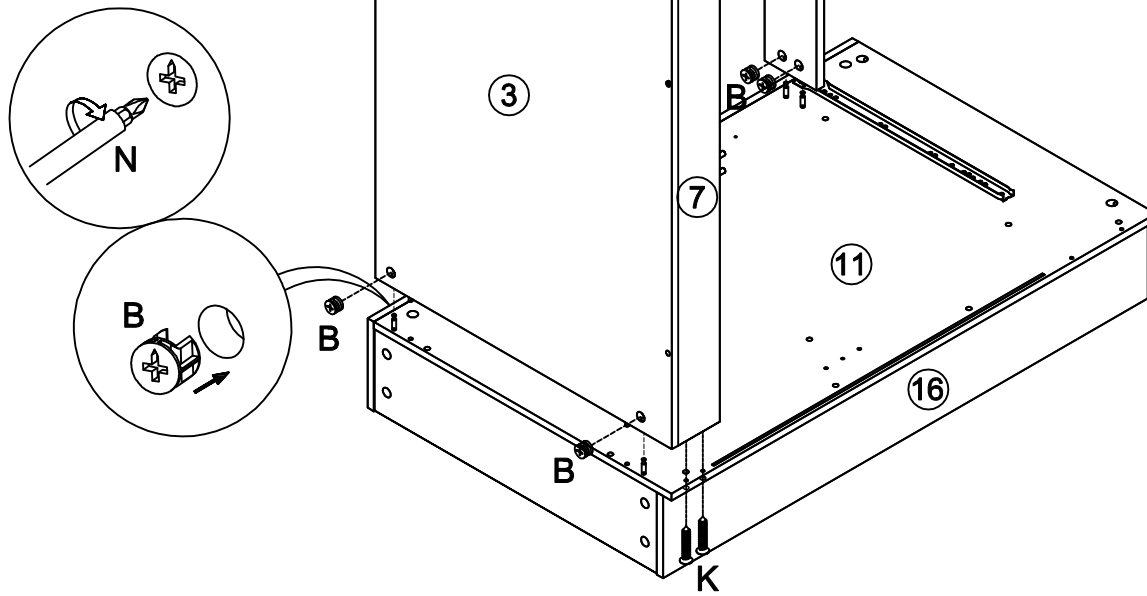

B	x4
	
Ø15x10mm	

K	x2
	
M4x35mm	

 
15

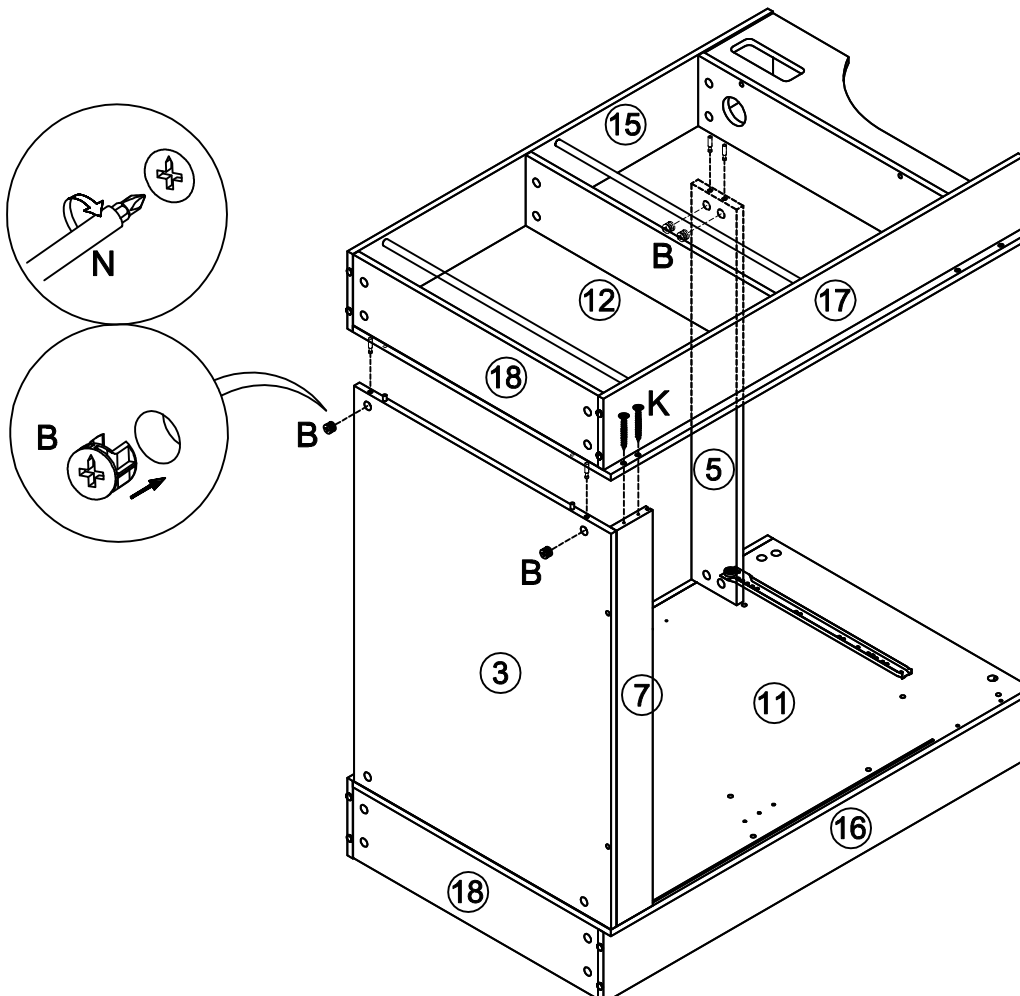


B	x4
	
Ø15x10mm	

K	x2
	
M4x35mm	

 
16

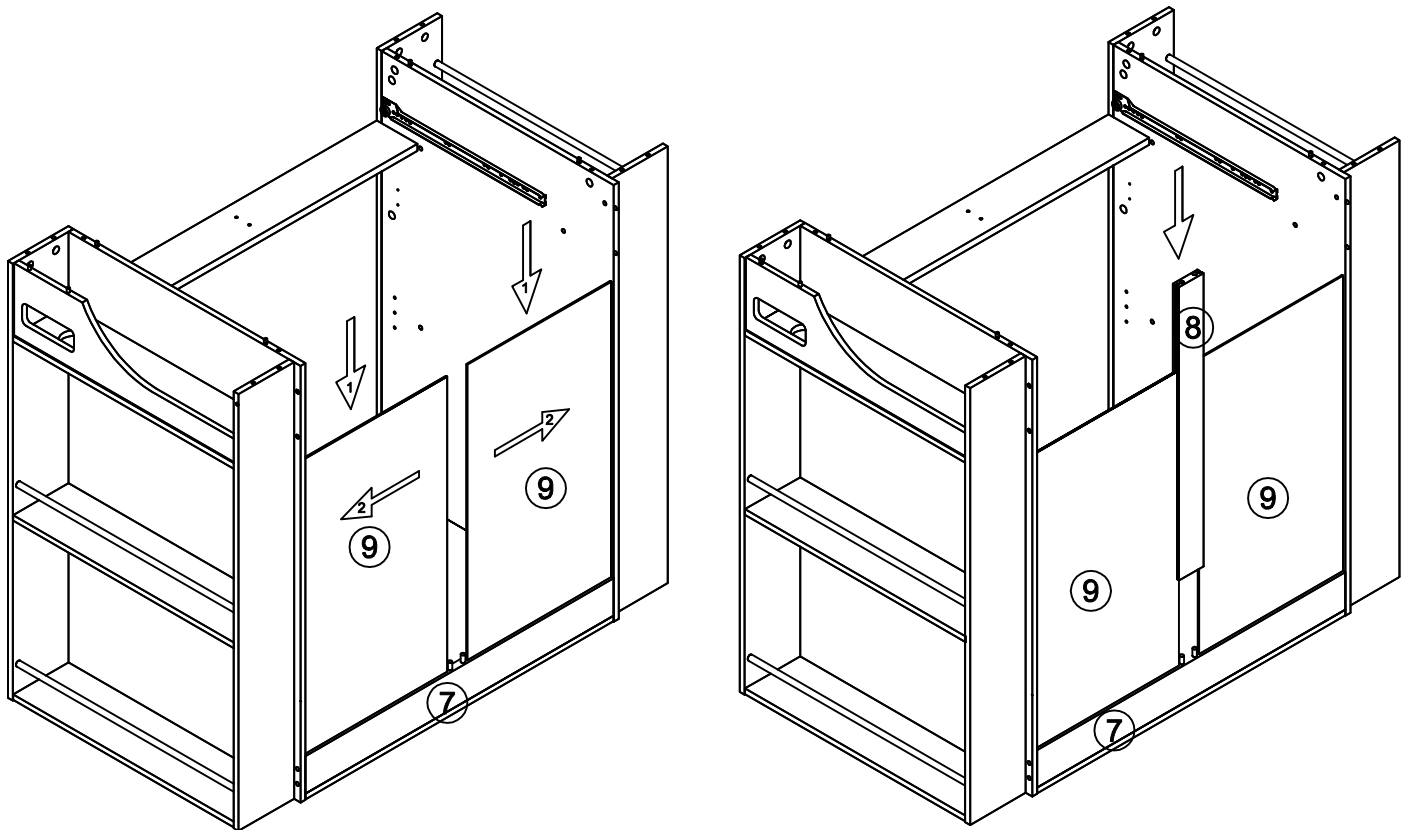


17

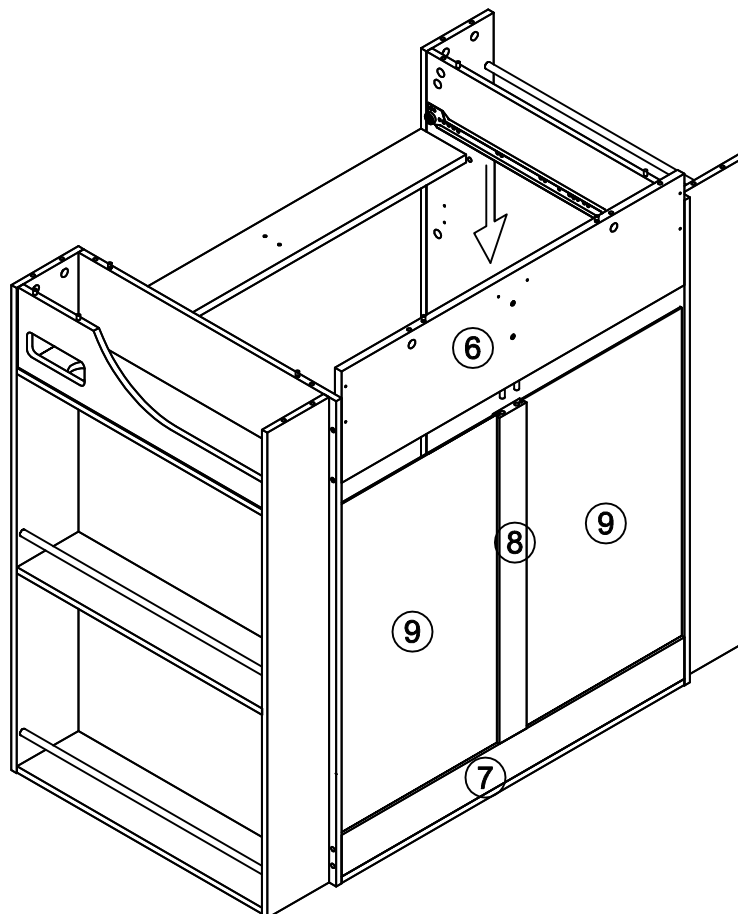 


18

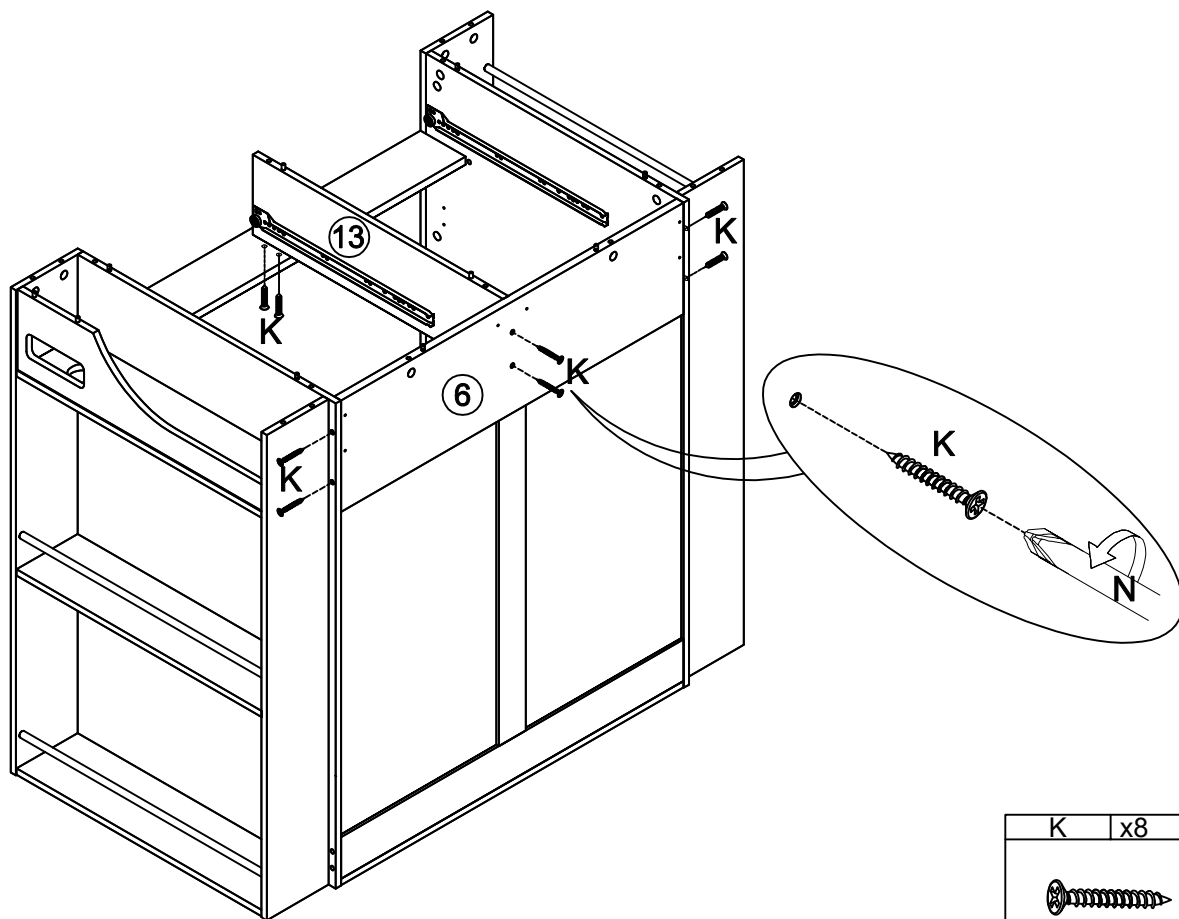 

 
K	x8
	
M4x35mm	

 19

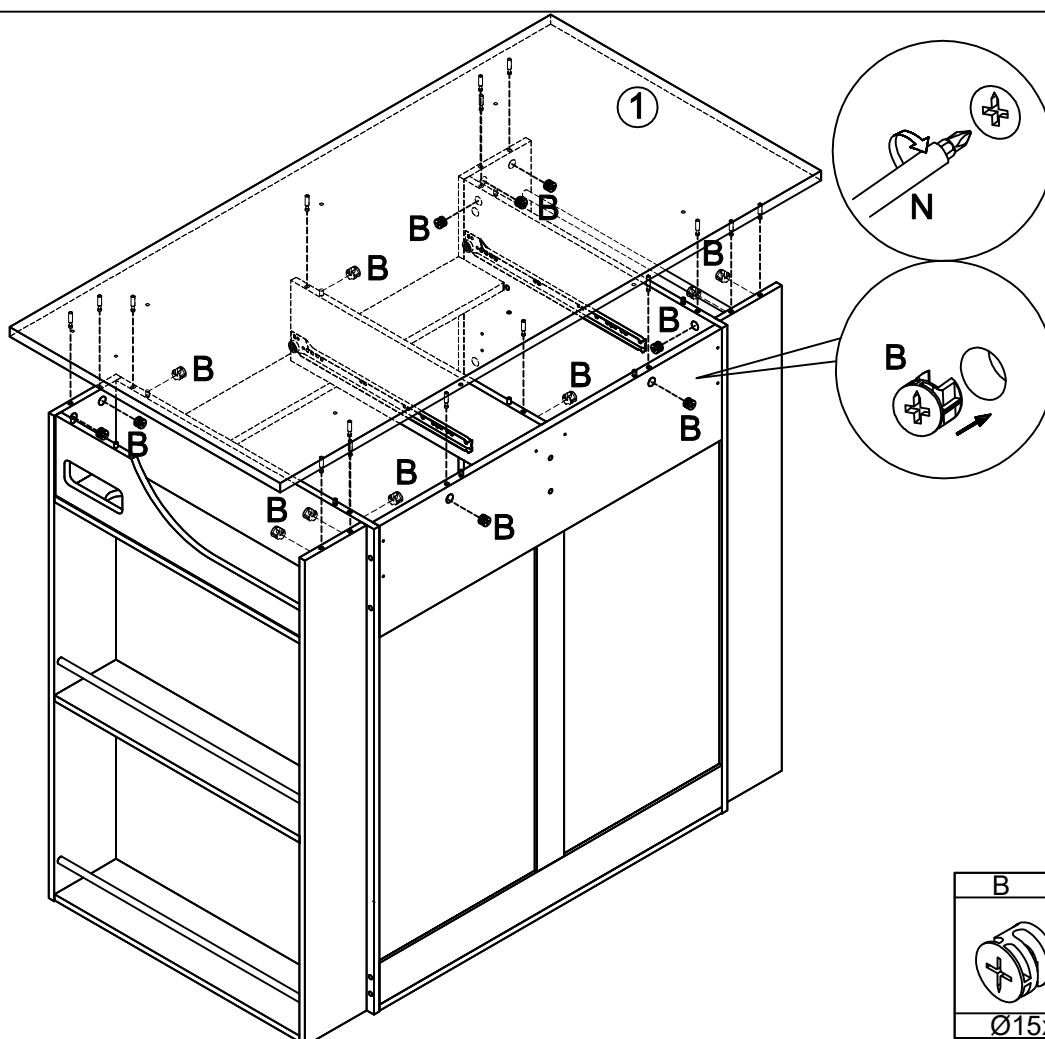


B	x16
	
Ø15x10mm	

 
20

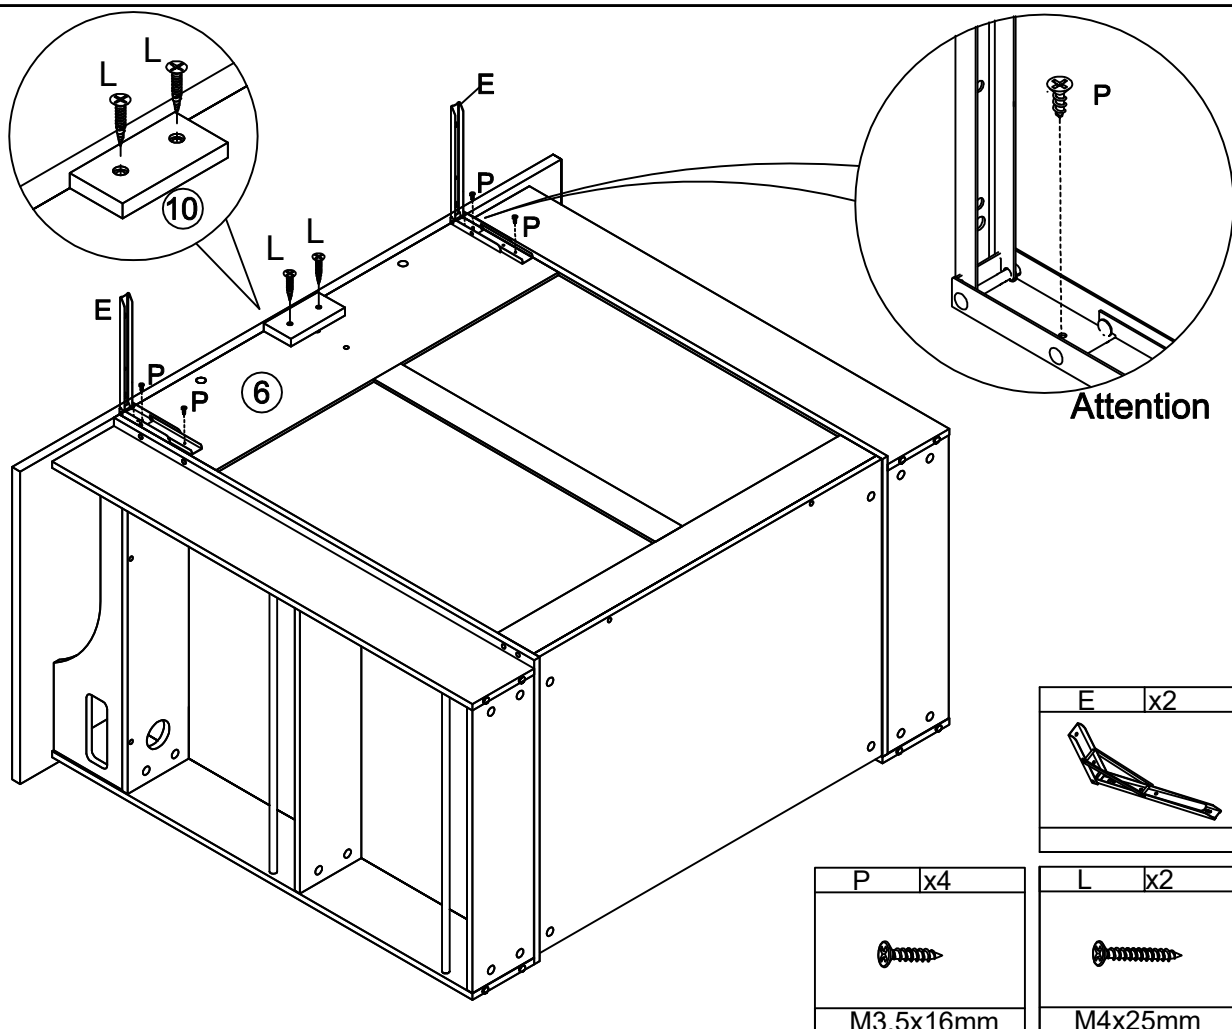


21

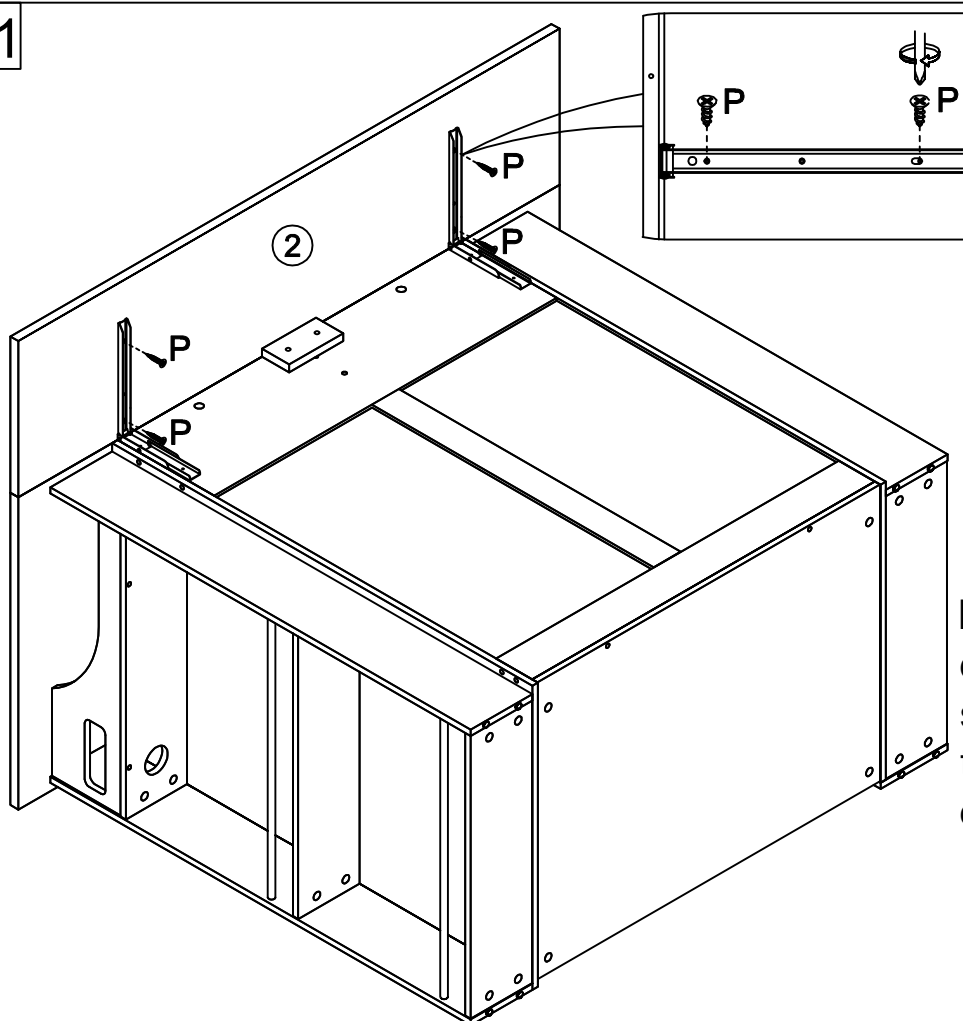 


 
! Attention
Note: Press and hold with your thumb.

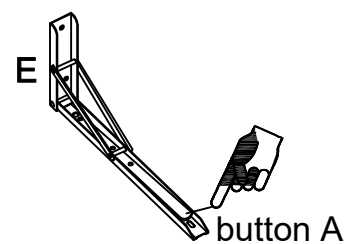

 
Note: 1. While holding down the A key, lift it up slightly, then press it down to make the No. 2 board extend and retract

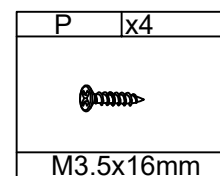


22

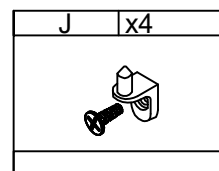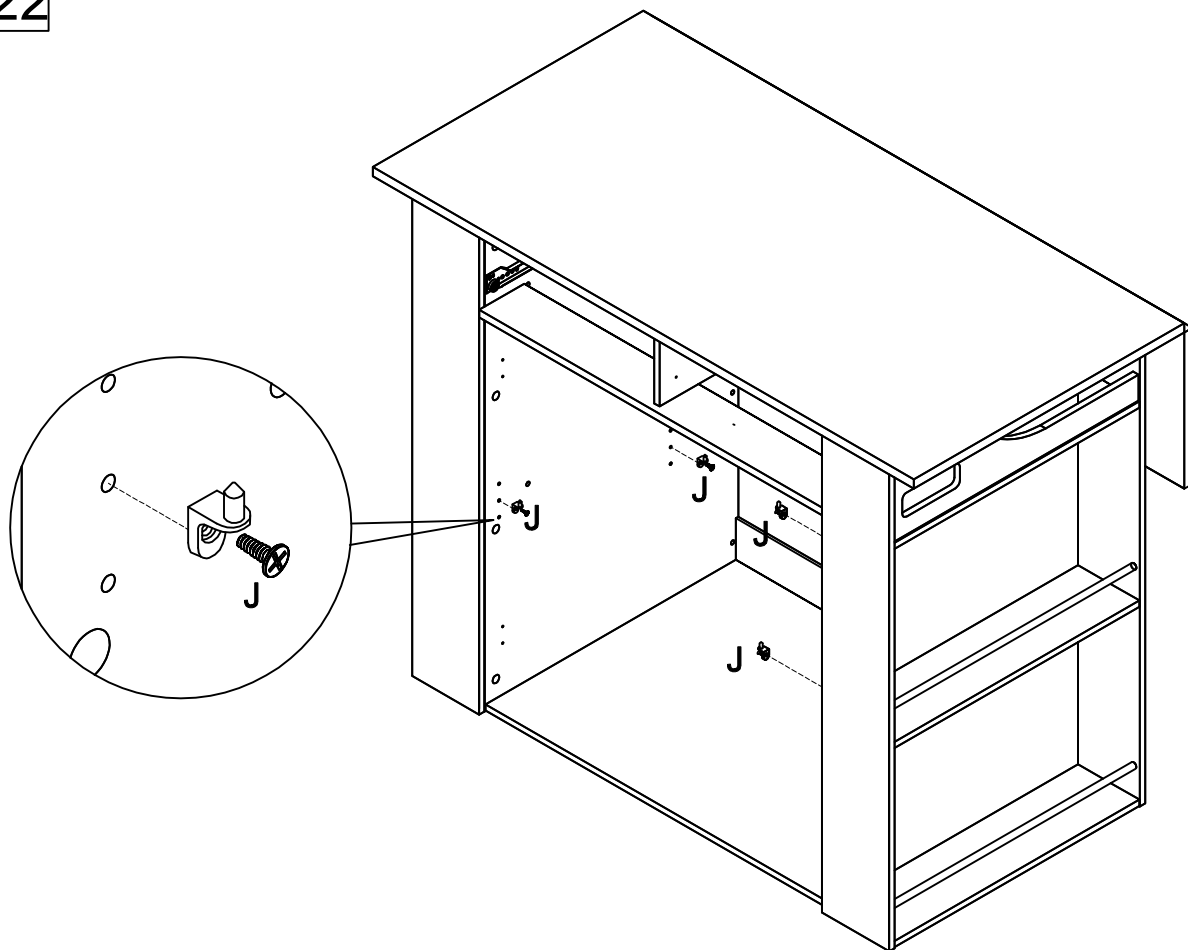  

23

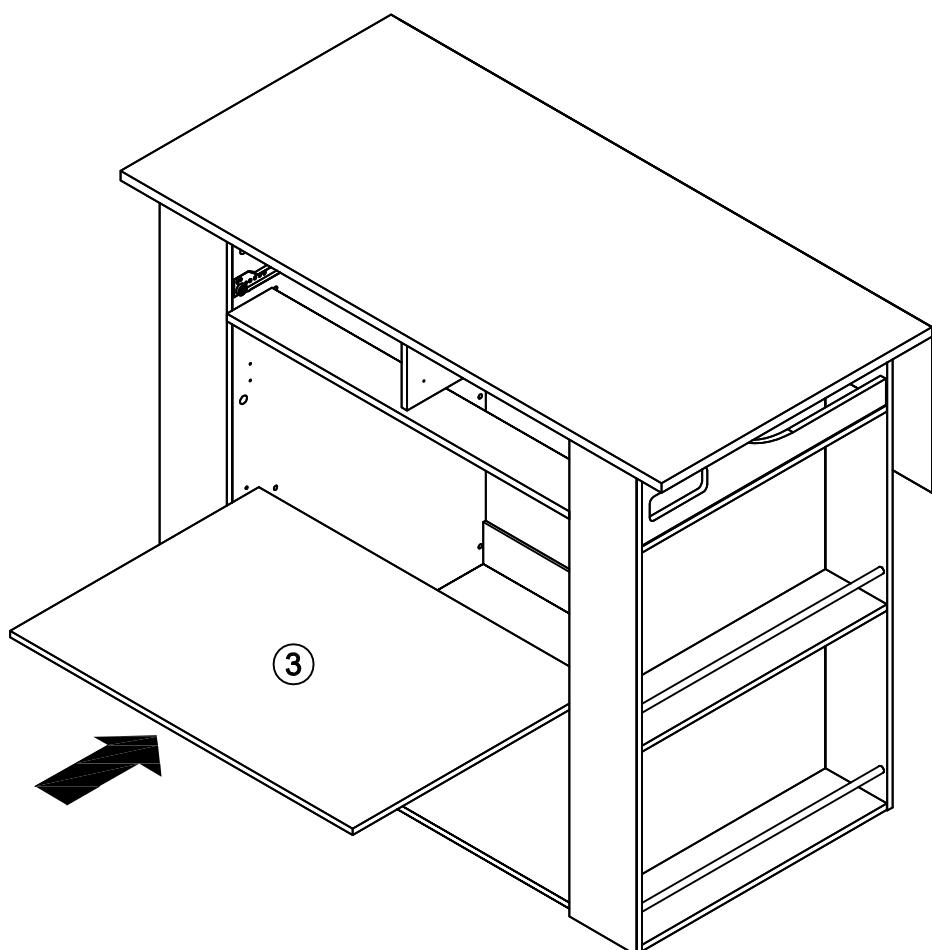 


24

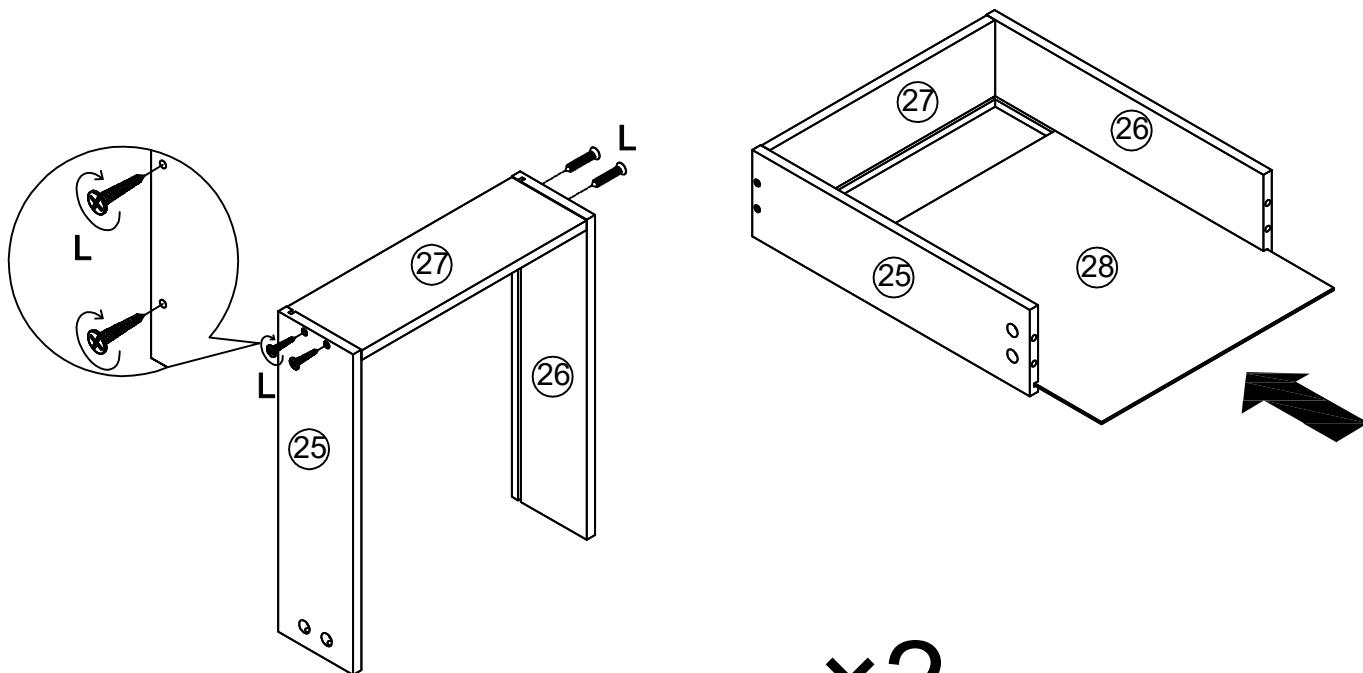 

×2


L	x8
	
M4x25mm	

 25

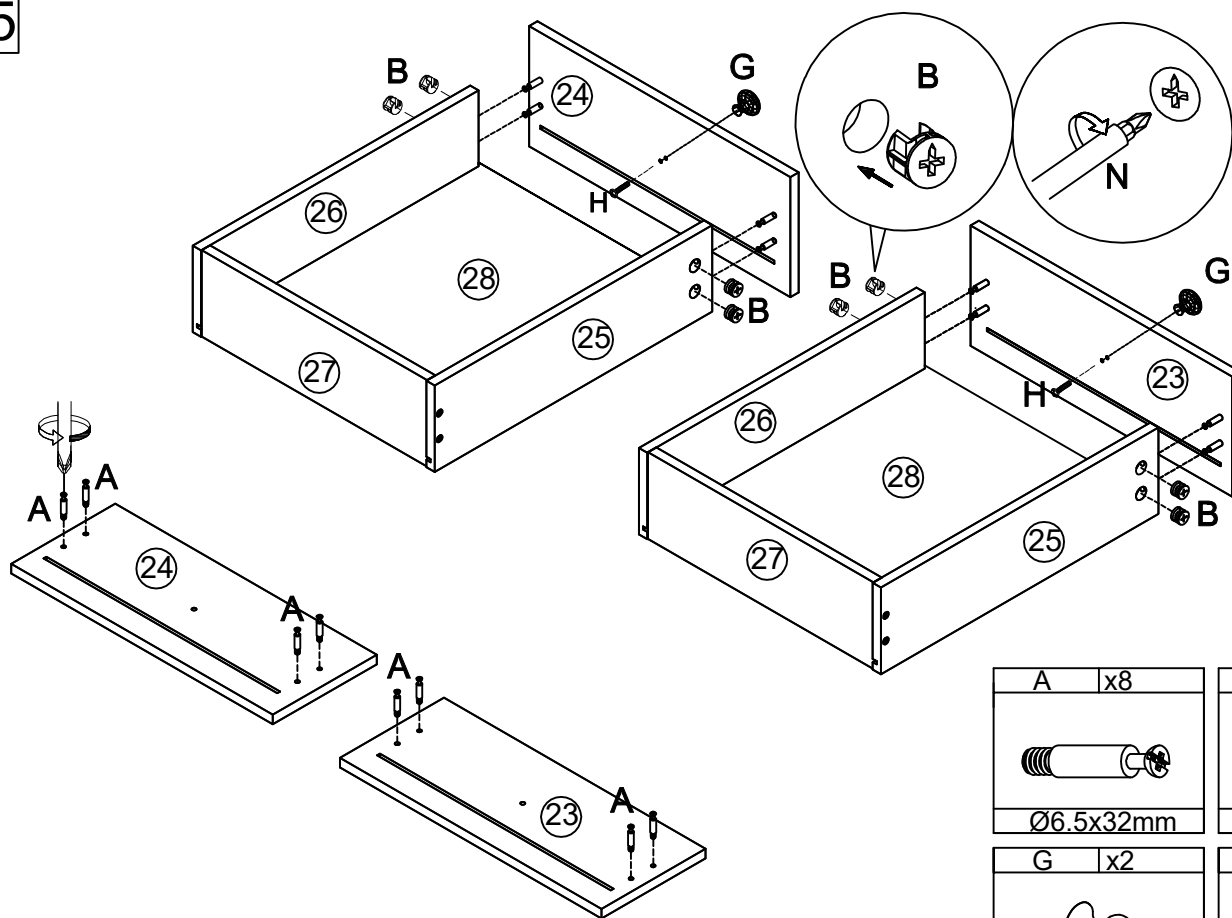



A	x8	B	x8
			
Ø6.5x32mm		Ø15x10mm	
G	x2	H	x2
			
		M4x16mm	

 26

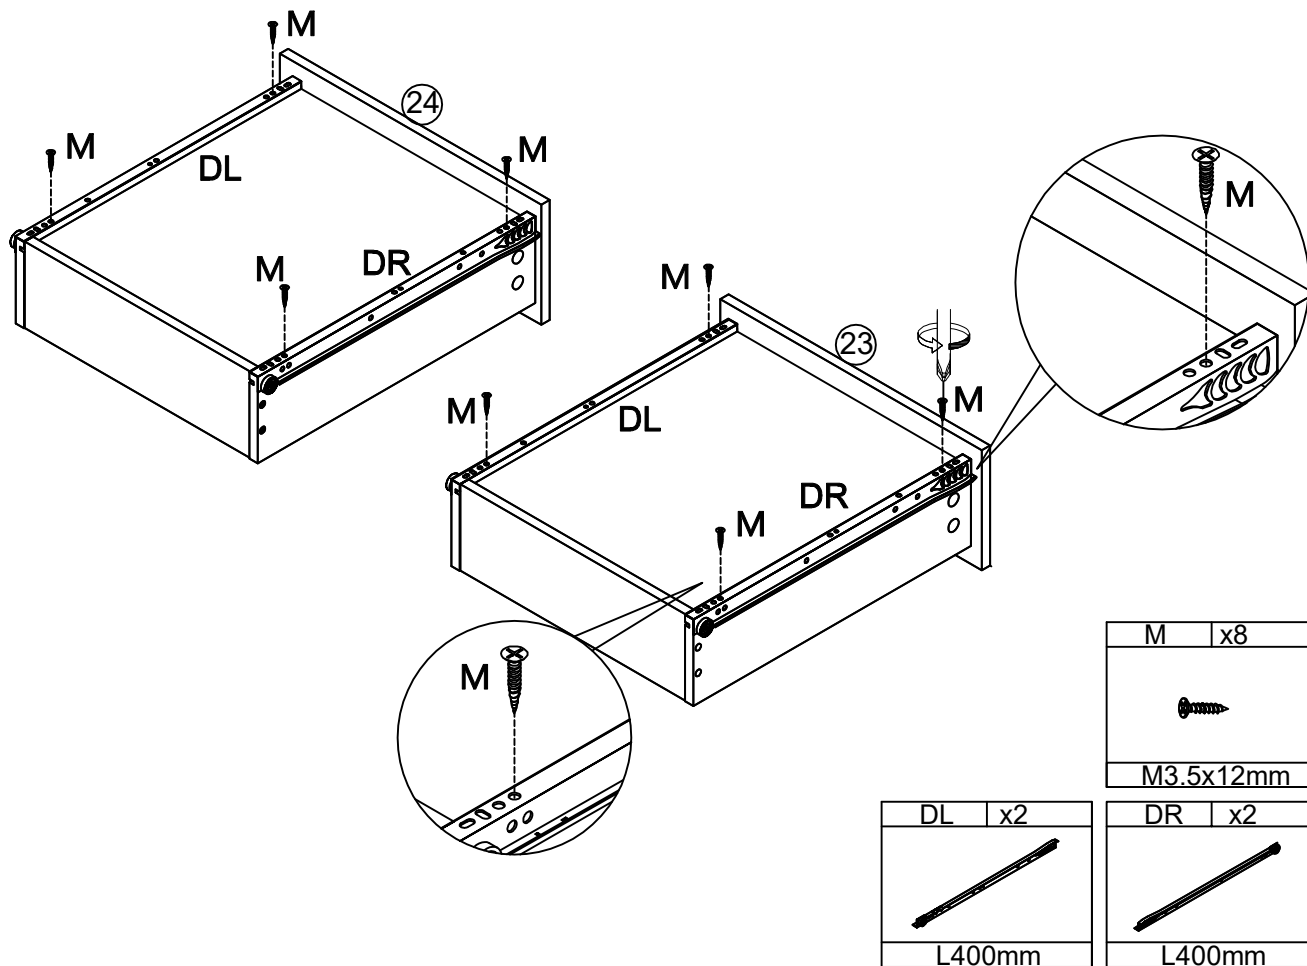

27

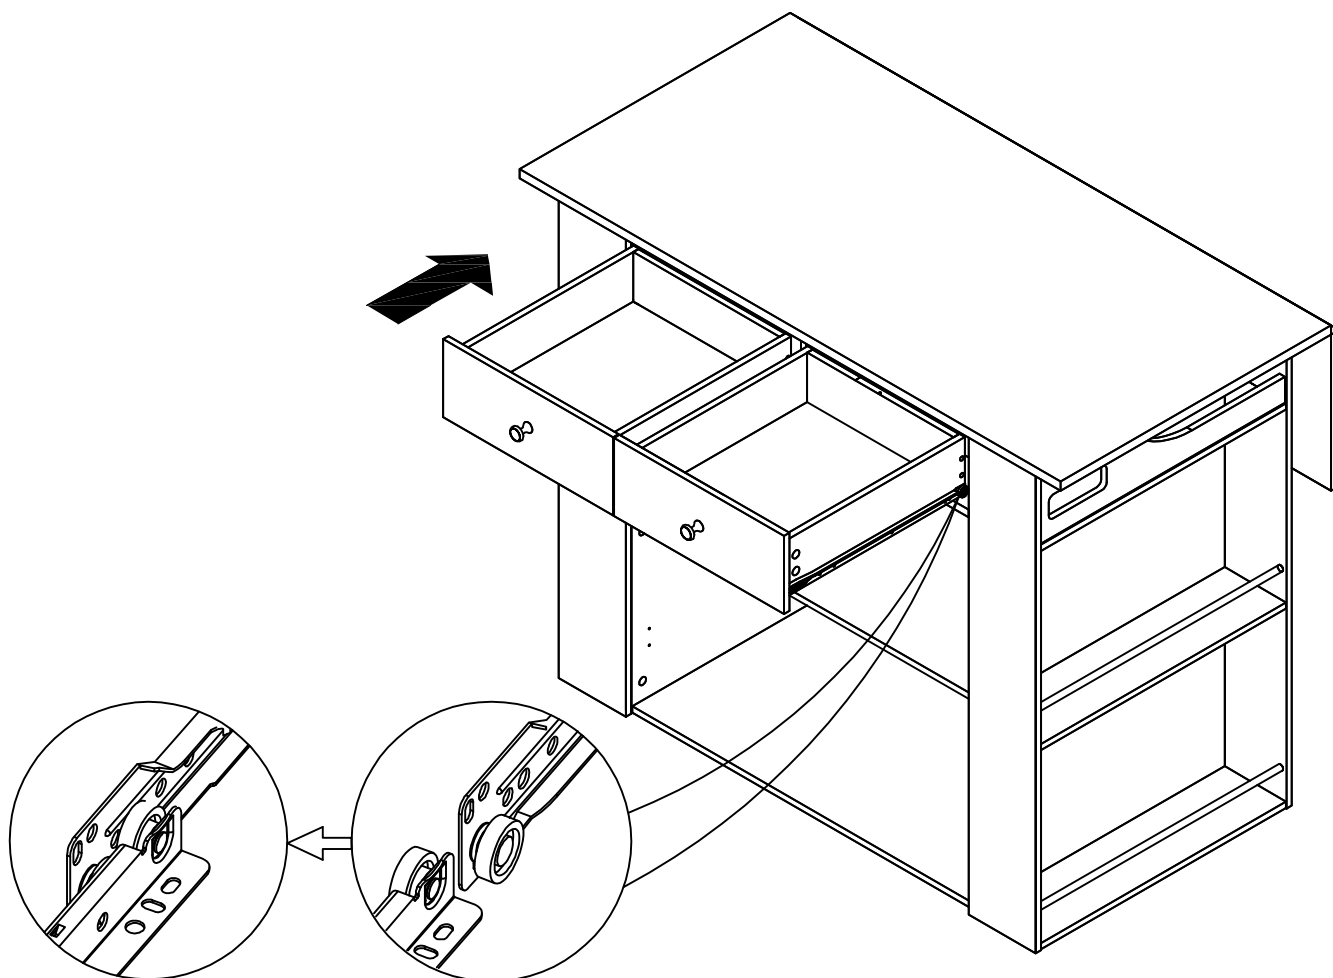 


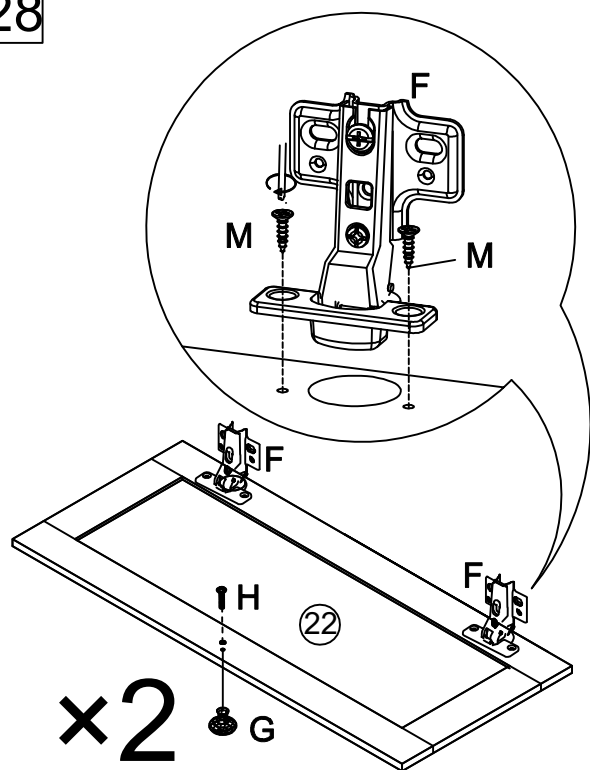 


Note: After the door panel is installed, if the gap of the door is too large or too small, you can adjust this screw to adjust the gap of the door.

3. Adjust this screw to make the door go up or down


 
2. Adjust this screw to make the door forward or backward

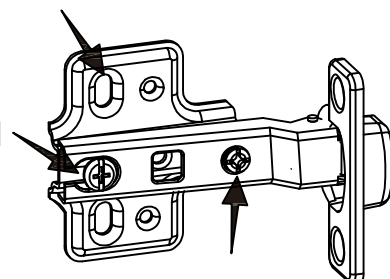

 
1. Adjust this screw to make the door turn left or right

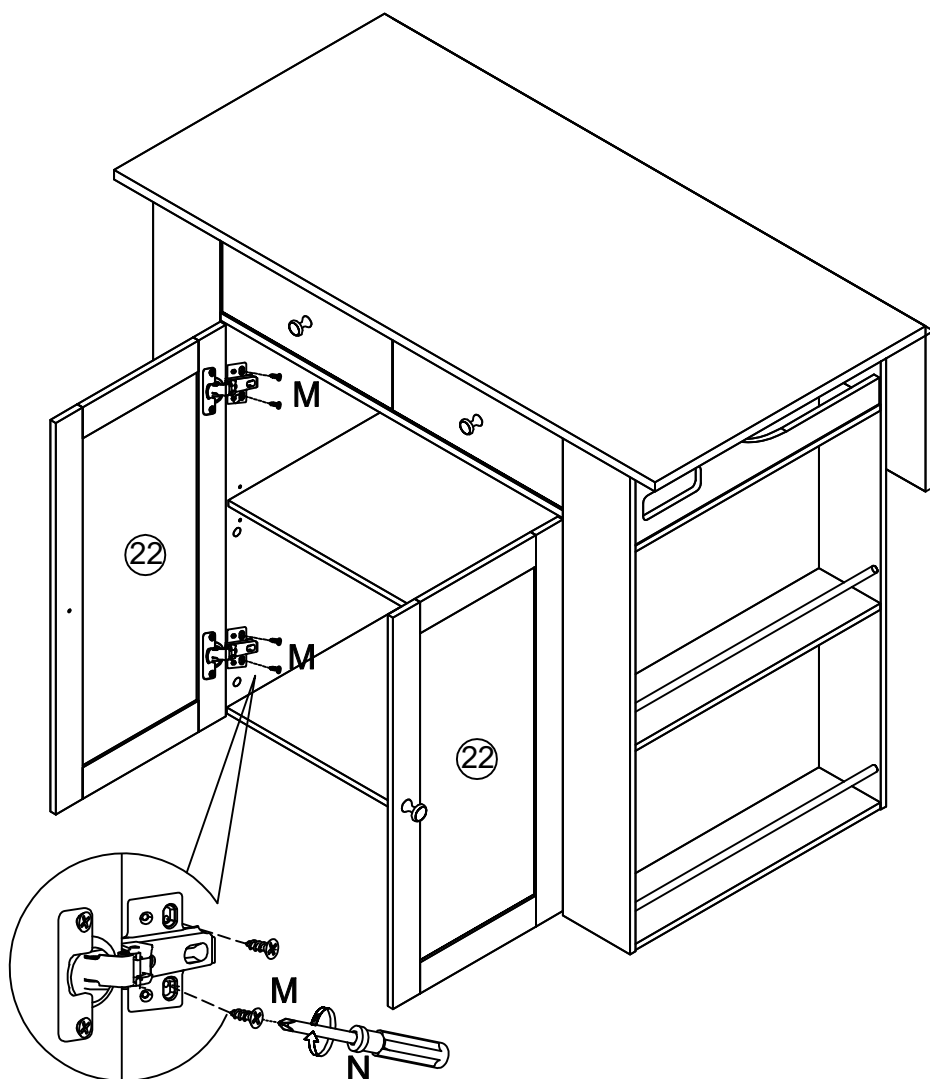

F	x4	G	x2
H	x2	M	x16
M4x16mm		M3.5x12mm	

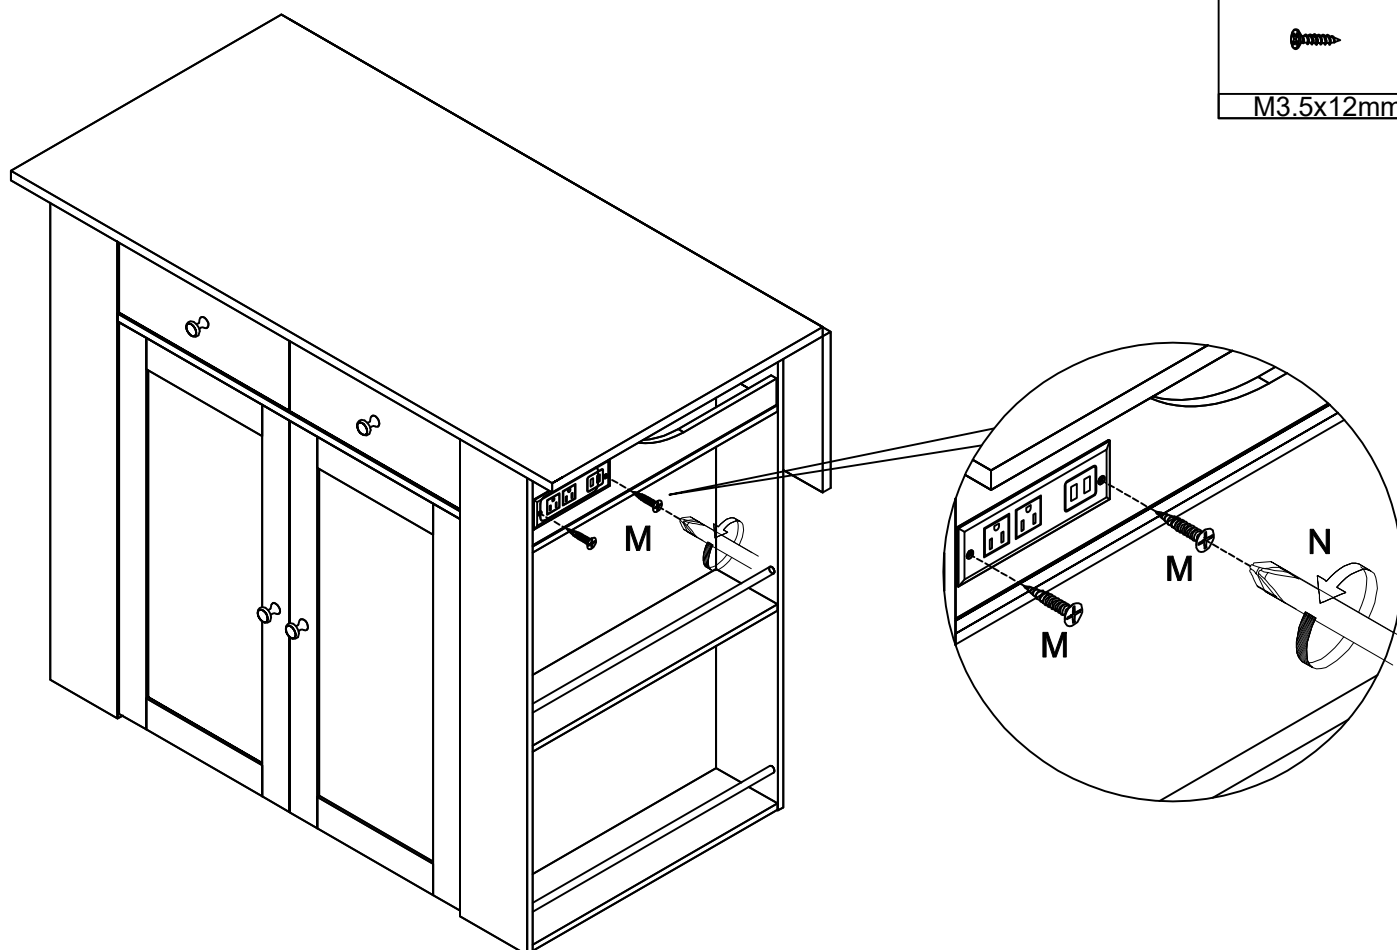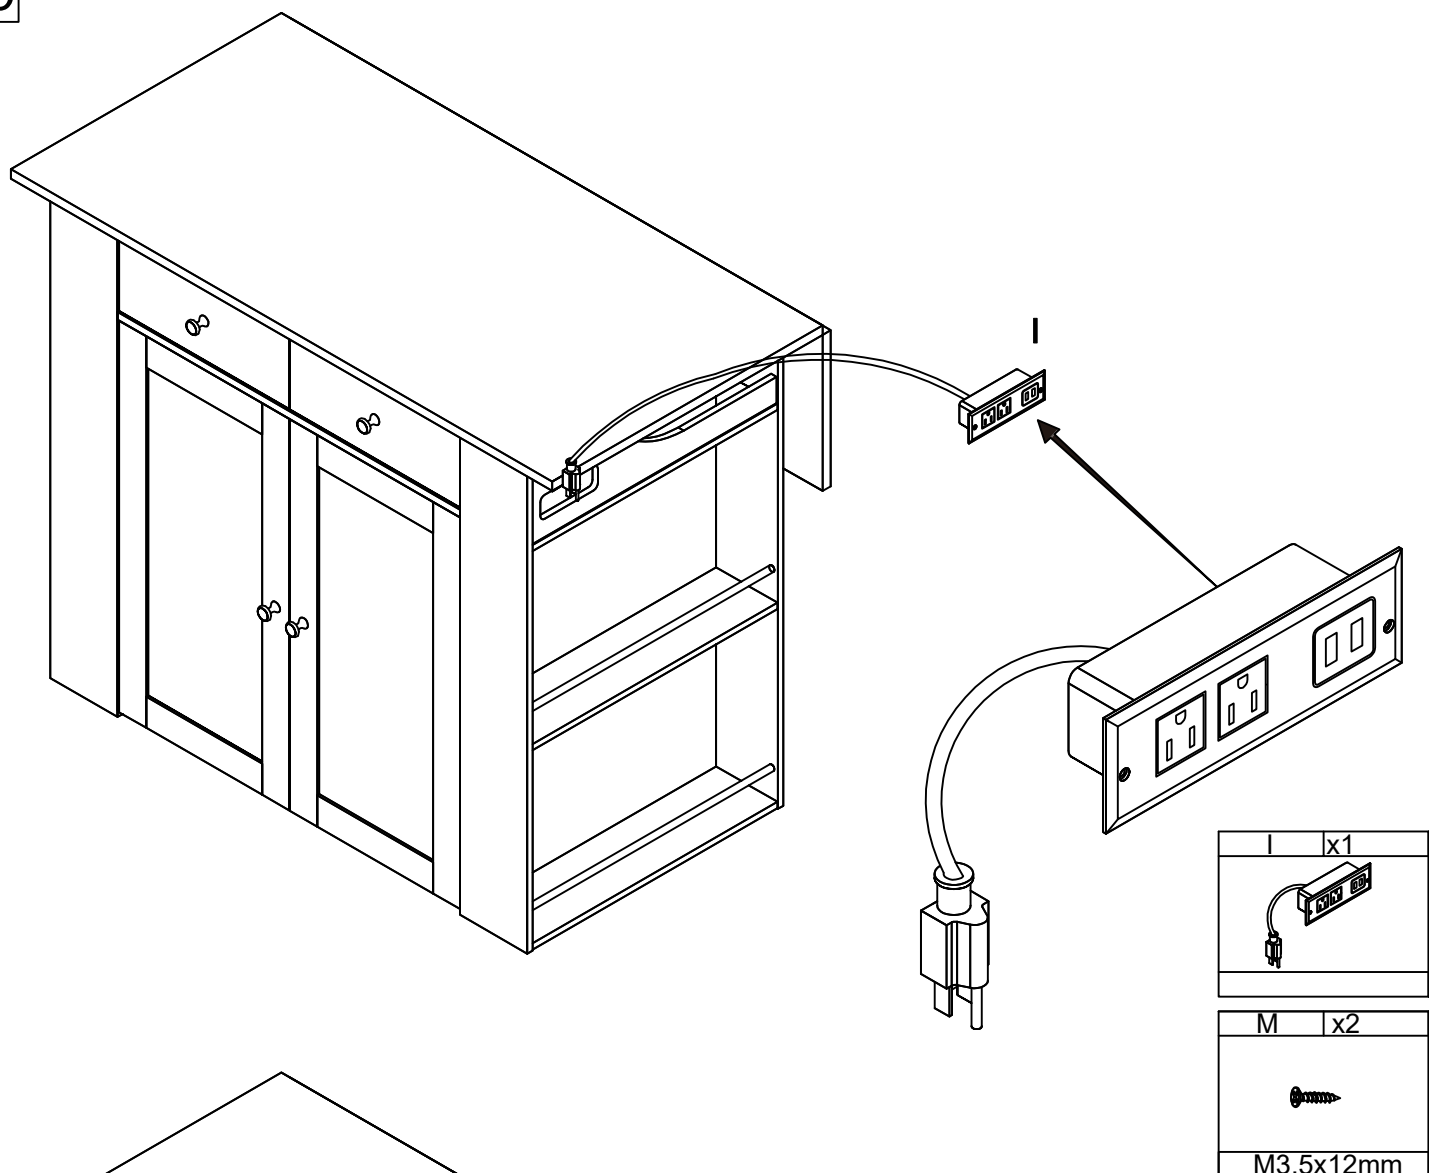  


30

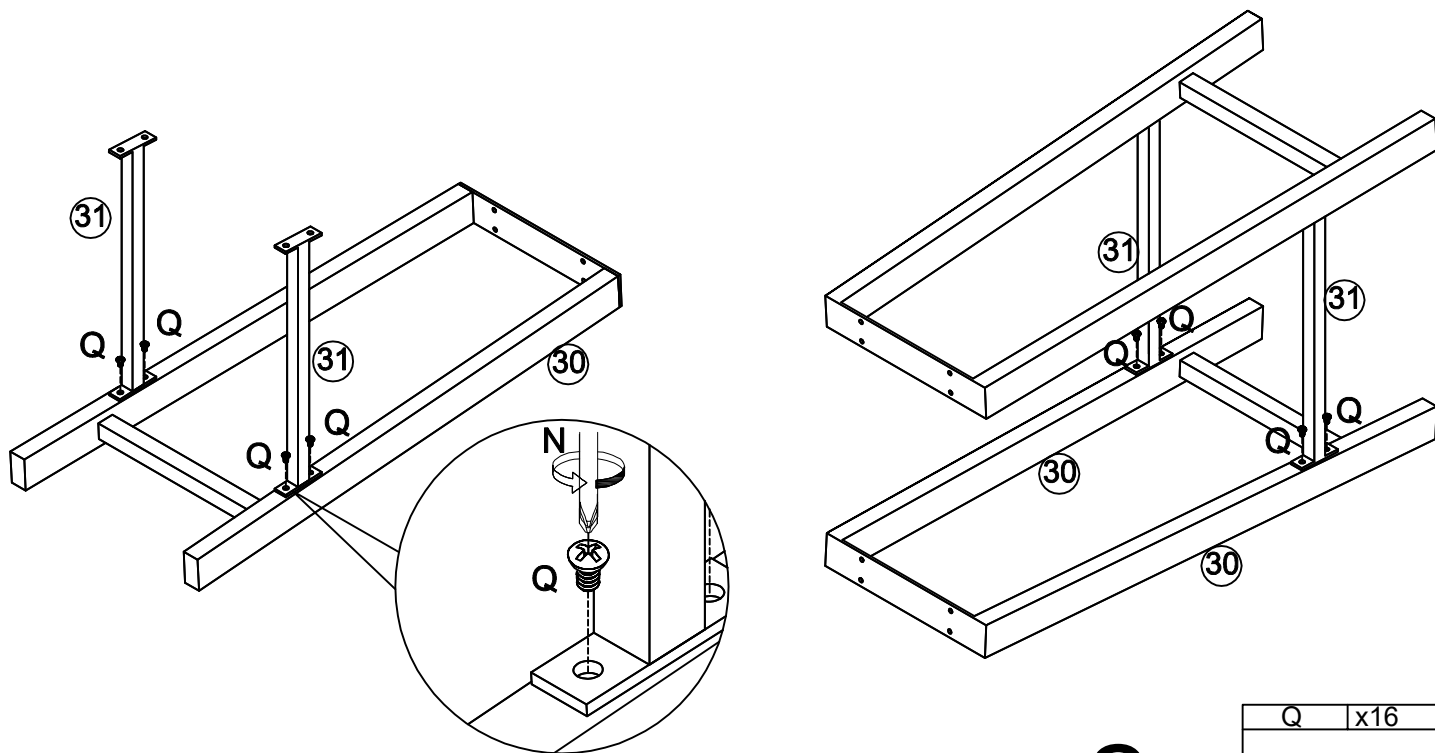 

x2

Q	x16
	
M6x15mm	

 32

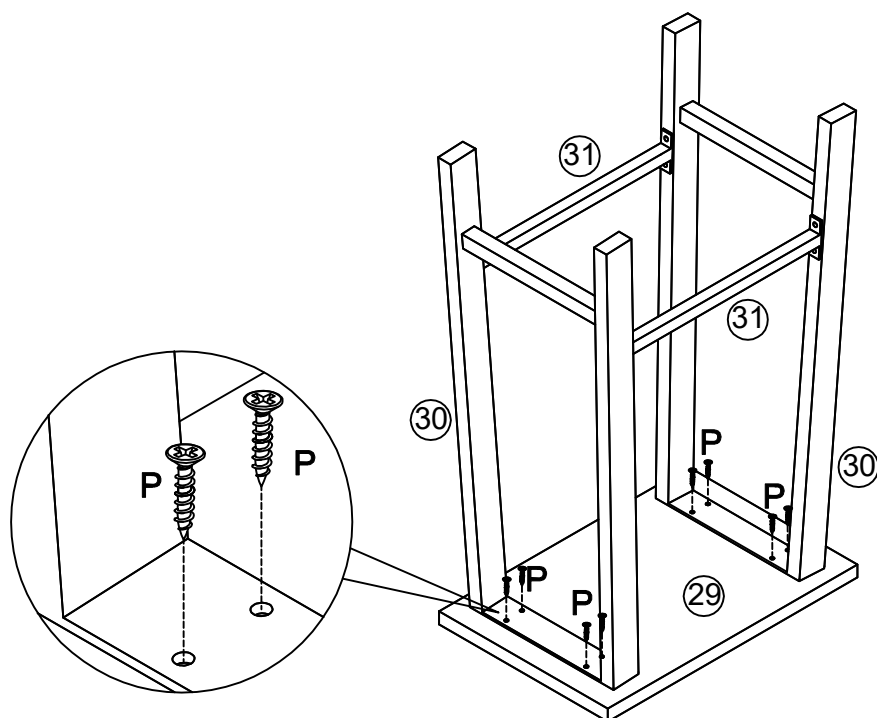

x2

P	x16
	
M3.5x16mm	