





**ASSEMBLY INSTRUCTION**  
**ROUND DINING TABLE TOP**  
**DINING TABLE BASE**

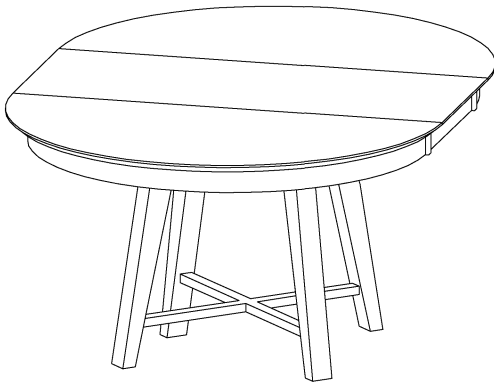

4) Assembly is completed.

**IMPORTANT NOTES :**

- . Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children.

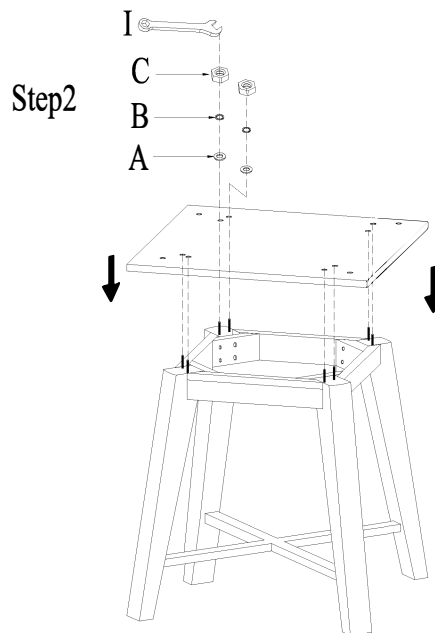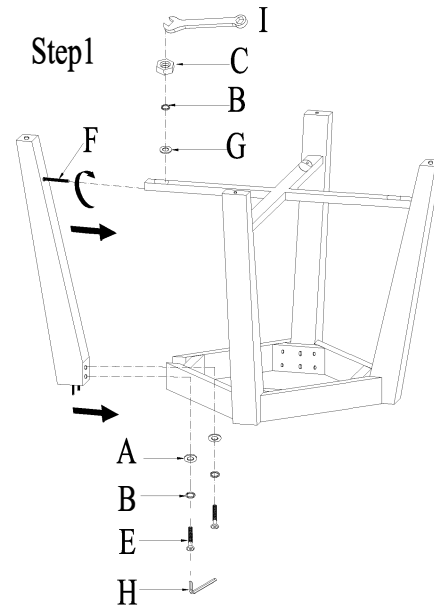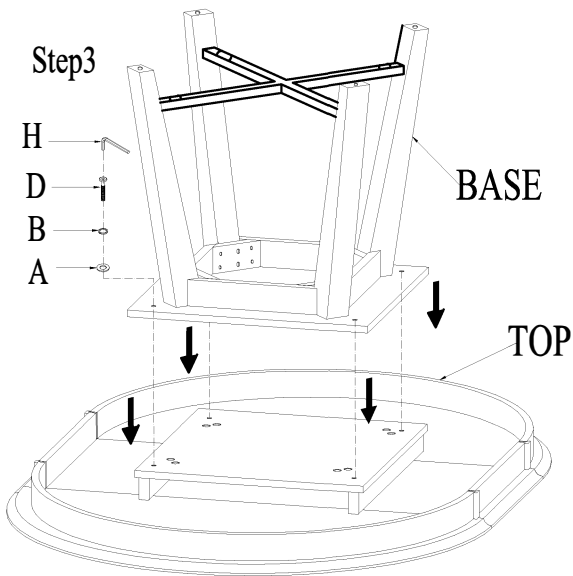

NO.	Dimension	Shape	Quantity
A	Flat Washer Ø5/16"*19mm		20pcs
B	Lock Washer Ø5/16"		24pcs
C	Nuts 5/16"		12pcs
D	Bolt 5/16*35mm		4pcs
E	Bolt 5/16*60mm		8pcs
F	Thread Rod 5/16"*88mm		4pcs
G	Flat Washer Ø5/16"*16mm		4pcs
H	Allen Key 4mm		1pc
I	Wrench 12mm		1pc