


5843
Product
instruction
insert

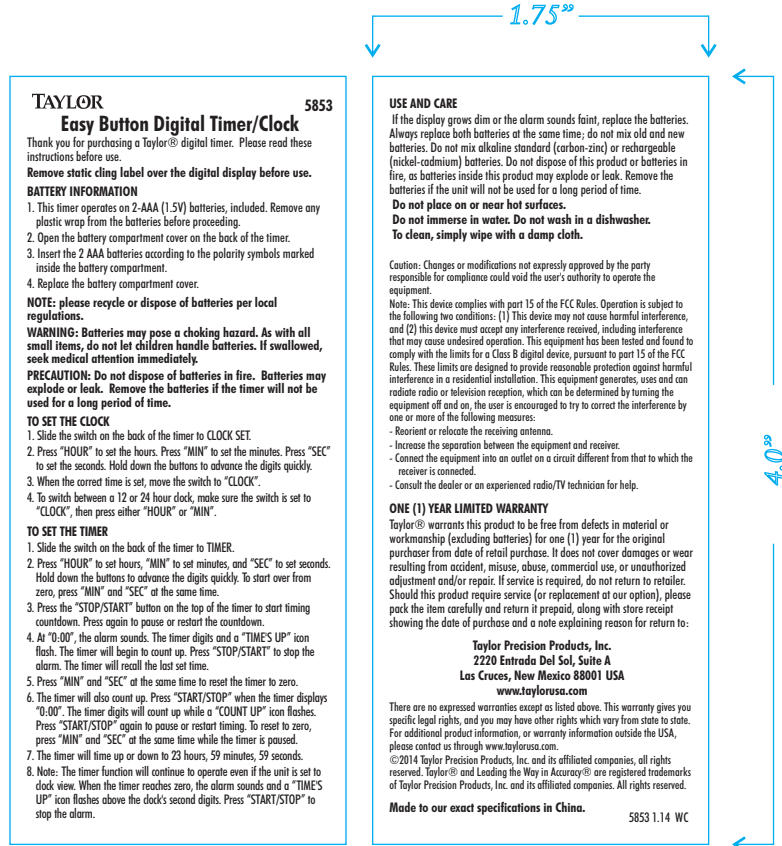

TAYLOR 5853

Easy Button Digital Timer/Clock

Thank you for purchasing a Taylor® digital timer. Please read these instructions before use.

Remove static cling label over the digital display before use.

BATTERY INFORMATION

1. This timer operates on 2-AAA (1.5V) batteries, included. Remove any plastic wrap from the batteries before proceeding.
2. Open the battery compartment cover on the back of the timer.
3. Insert the 2 AAA batteries according to the polarity symbols marked inside the battery compartment.
4. Replace the battery compartment cover.

NOTE: please recycle or dispose of batteries per local regulations.

WARNING: Batteries may pose a choking hazard. As with all small items, do not let children handle batteries. If swallowed, seek medical attention immediately.

PRECAUTION: Do not dispose of batteries in fire. Batteries may explode or leak. Remove the batteries if the timer will not be used for a long period of time.

TO SET THE CLOCK

1. Slide the switch on the back of the timer to CLOCK SET.
2. Press "HOUR" to set the hours. Press "MIN" to set the minutes. Press "SEC" to set the seconds. Hold down the buttons to advance the digits quickly.
3. When the correct time is set, move the switch to "CLOCK".
4. To switch between a 12 or 24 hour clock, make sure the switch is set to "CLOCK", then press either "HOUR" or "MIN".

TO SET THE TIMER

1. Slide the switch on the back of the timer to TIMER.
2. Press "HOUR" to set hours, "MIN" to set minutes, and "SEC" to set seconds. Hold down the buttons to advance the digits quickly. To start over from zero, press "MIN" and "SEC" at the same time.
3. Press the "STOP/START" button on the top of the timer to start timing countdown. Press again to pause or restart the countdown.
4. At "0:00", the alarm sounds. The timer digits and a "TIMES UP" icon flash. The timer will begin to count up. Press "STOP/START" to stop the alarm. The timer will recall the last set time.
5. Press "MIN" and "SEC" at the same time to reset the timer to zero.
6. The timer will also count up. Press "START/STOP" when the timer displays "0:00". The timer digits will count up while a "COUNT UP" icon flashes. Press "START/STOP" again to pause or restart timing. To reset to zero, press "MIN" and "SEC" at the same time while the timer is paused.
7. The timer will time up or down to 23 hours, 59 minutes, 59 seconds.
8. Note: The timer function will continue to operate even if the unit is set to dock view. When the timer reaches zero, the alarm sounds and a "TIMES UP" icon flashes above the dock's second digits. Press "START/STOP" to stop the alarm.

USE AND CARE

If the display grows dim or the alarm sounds faint, replace the batteries. Always replace both batteries at the same time; do not mix old and new batteries. Do not mix alkaline standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Do not dispose of this product or batteries in fire, as batteries inside this product may explode or leak. Remove the batteries if the unit will not be used for a long period of time.

Do not place on or near hot surfaces.

Do not immerse in water. Do not wash in a dishwasher.

To clean, simply wipe with a damp cloth.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ONE (1) YEAR LIMITED WARRANTY

Taylor® warrants this product to be free from defects in material or workmanship (excluding batteries) for one (1) year for the original purchaser from date of retail purchase. It does not cover damages or wear resulting from accident, misuse, abuse, commercial use, or unauthorized adjustment and/or repair. If service is required, do not return to retailer. Should this product require service (or replacement at our option), please pack the item carefully and return it prepaid, along with store receipt showing the date of purchase and a note explaining reason for return to:

Taylor Precision Products, Inc.
2220 Entrada Del Sol, Suite A
Las Cruces, New Mexico 88001 USA
www.taylorusa.com

There are no expressed warranties except as listed above. This warranty gives you specific legal rights, and you may have other rights which vary from state to state. For additional product information, or warranty information outside the USA, please contact us through www.taylorusa.com.

©2014 Taylor Precision Products, Inc. and its affiliated companies, all rights reserved. Taylor® and Leading the Way in Accuracy® are registered trademarks of Taylor Precision Products, Inc. and its affiliated companies. All rights reserved.

Made to our exact specifications in China.

5853 1.14 WC

Front
of Insert

Back
of Insert

Date: 1/29/14
Designer: WWCII