
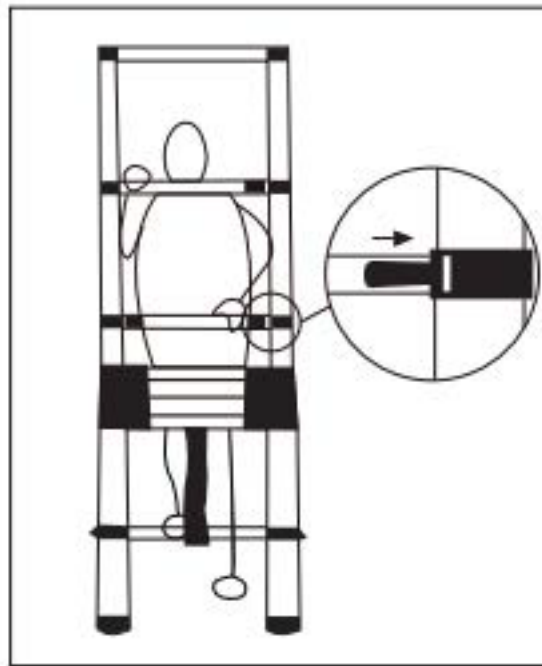


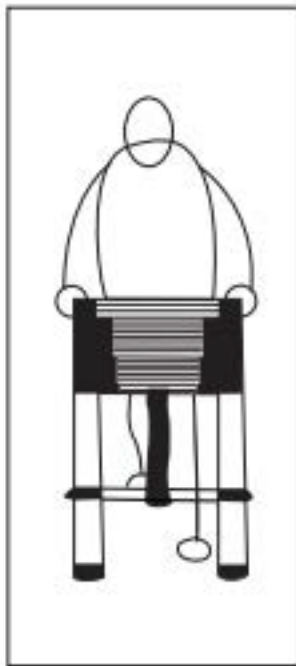


Partial extension of the ladder:

Place the ladder on a firm and level ground, move one foot on the lowest rung.

- Unfold the lowest rung and check if the buttons are locked. Repeat the process with each of the next higher rung, until the arms are completely extended.

Caution: Always check that all buttons are on the exact position "locked", before you climb on the ladder

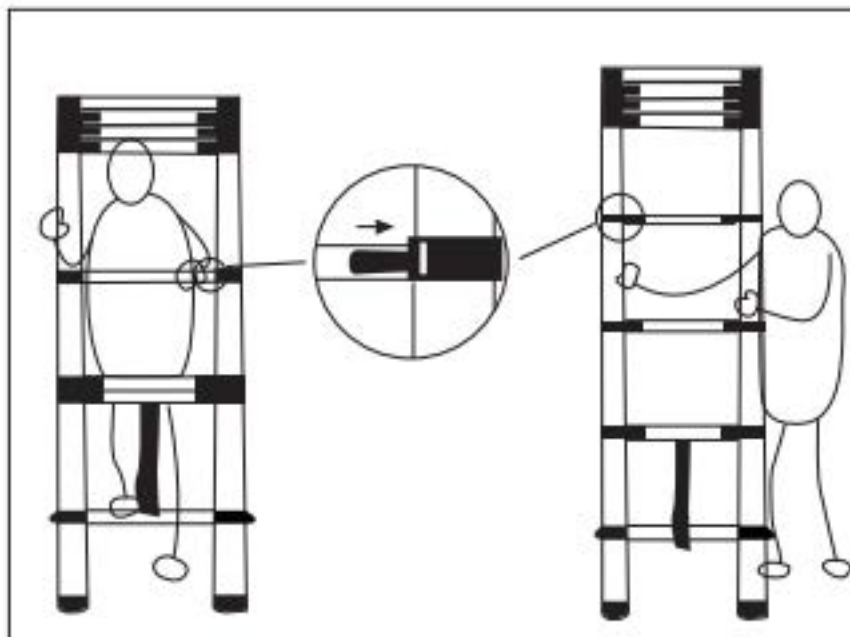

Shorten the Ladder:

- Place the ladder on a firm and level ground make that the lowest rung begin.
- Make sure the both buttons are unlocked.