



Alarm Clock

Instructions & Warranty

Warranty

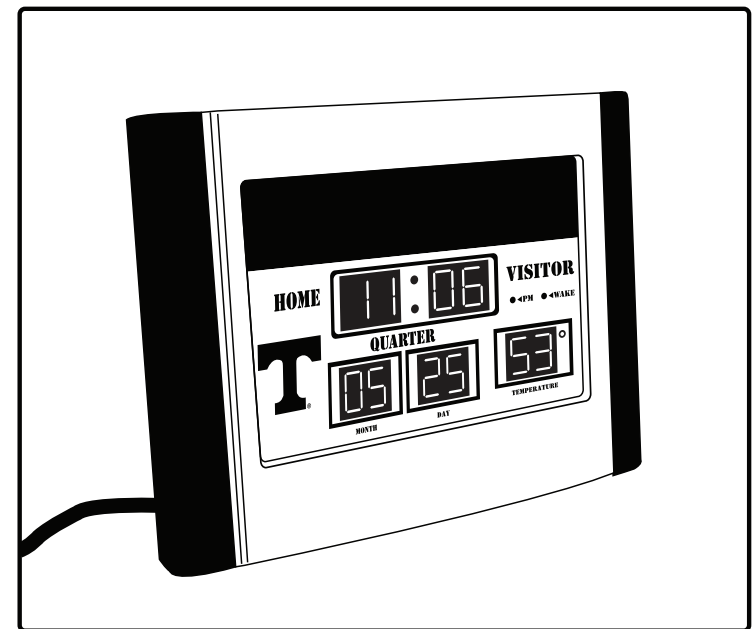

Instructions for Alarm Clock

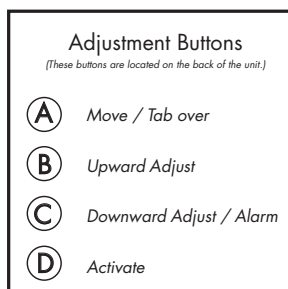

Setting Clock:

When setting the clock or alarm functions, follow all directions in order. If you are interrupted, you must start from the beginning.

1. **Set the year:** Push button A and the 4-digit year will flash. Adjust the year by using buttons B or C.
2. **Set the date:** Push button A and the month will flash. Adjust the month by using buttons B or C. Push button A again and the day will flash. Adjust the day by using buttons B or C.
3. **Set the time:** Push button A and the hour will flash. Adjust the hour by using buttons B or C. Push button A again and the minutes will flash. Adjust the minutes by using buttons B or C.
4. **Activate the unit:** Push button D to activate the clock.

Note: The temperature is pre-set and will adjust automatically.

Setting the hourly chime:

1. Press the B button once. (A small red indicator light on the back of the unit will light up.)

To deactivate this feature, press B once more.

If you want to stop this function while it is chiming, press B to stop the chiming and B again to deactivate the feature. The red indicator light on the back of the unit will turn off.

Setting the Alarm:

1. Push button C to enable the alarm function. (A1 will show in the temperature area.)
2. Push button A and the hour will flash. Adjust the hour by using buttons B or C.
3. Push button A again and the minutes will flash. Adjust the minutes by using buttons B or C.
4. Push button A again and the alarm time will be set.

(This unit has the capabilities of setting 8 alarm times. In order to set alarms A2-A8 repeat steps 1-4 before activating.)

5. Push button D to activate alarm settings.

When alarm sounds at the appointed time, press the D button to Snooze for 8 additional minutes; the Wake light in the front of the unit will blink.

Press the C button to stop the alarm sound without using the Snooze function.

Clearing the Alarm Settings:

1. Push button C to enable the alarm function. (A1 will show in the temperature area.)
2. Push button B to clear the alarm time. (- - : - - will show in the display.)

(This unit has the capabilities of setting 8 alarm times. In order to clear alarms A2-A8 repeat steps 1-2 before activating.)

3. Push button D to activate alarm settings.

Changing from the 12 to 24 hour time format:

1. Hold the B button down for 3 seconds.