
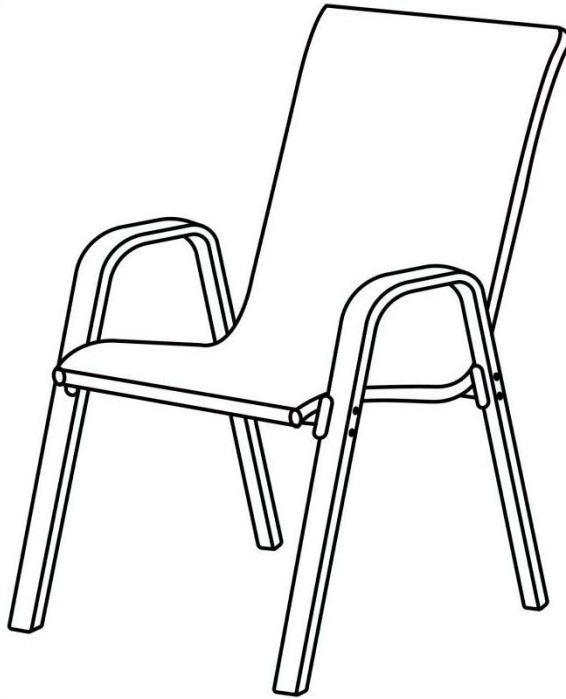




Stackable Dining Chair

Installation Instructions



Parts List

Accessories								
	A	1*4	B	1*4	C	2*4	D	2*4
Tools								
	M6*55mm	4*4	M6*75mm	4*4	E	4*4	F	8*4
								
	Wrench		Hexwrench					



Tips: Confirm all components are present before installation

Step 1: Unfold the Backrest

Unfold Part (A).


The **side with stitching** is the **back side** of the chair.

Make sure it faces the correct direction.

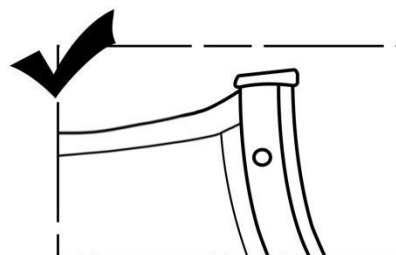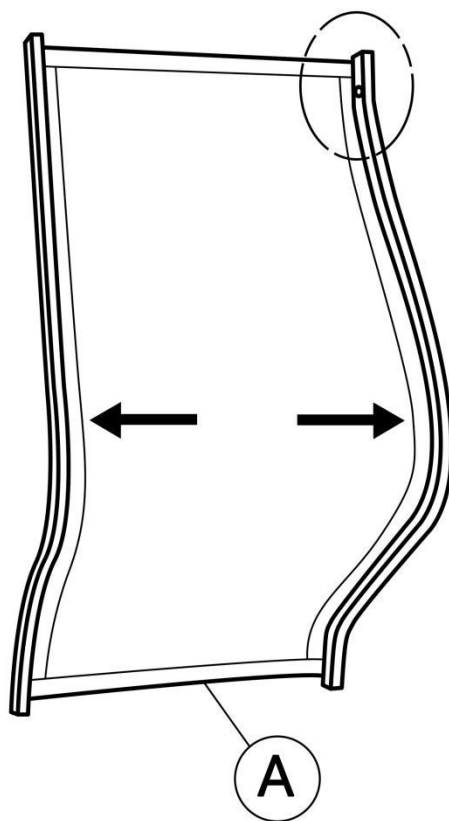

Correct version

The holes are facing inward

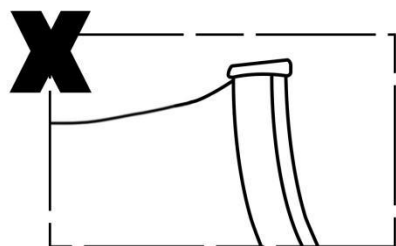


Wrong version

The holes are facing outward

Step 2: Install the Cross Bar

Insert one end of Part (B) into one hole of Part (A).


Press the lower part of the backrest to insert the other end.

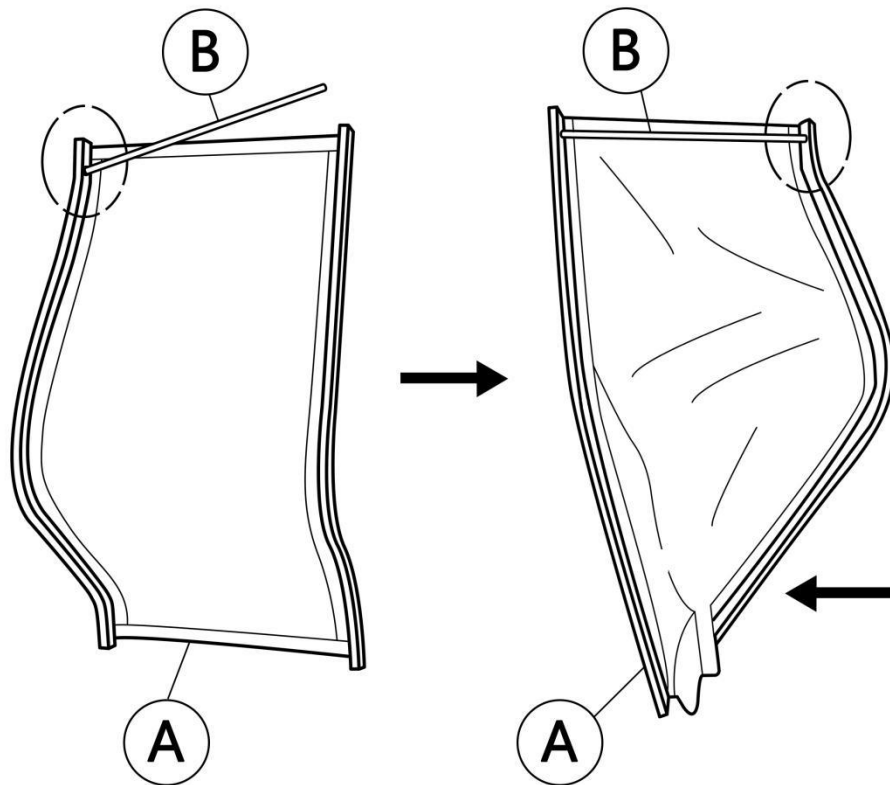

Step 3: Connect the Leg Support

Use 4 screws (M6×55mm)

to securely connect Part (D) with Part (C).

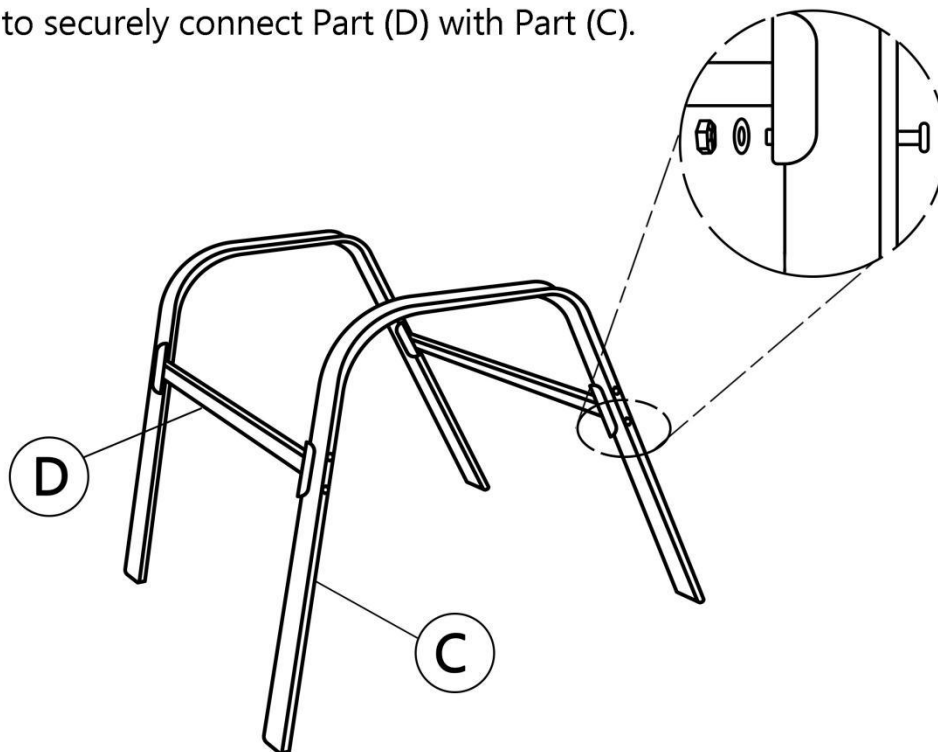


Note:

M6×55mm screws go into the lower holes of the legs.

After all parts are assembled, tighten the screws.

Step 4: Attach the Chair Legs to the Seat

Use 4 screws (M6×75mm) and 4 Part (E) to firmly attach Part (A) to Part (C).

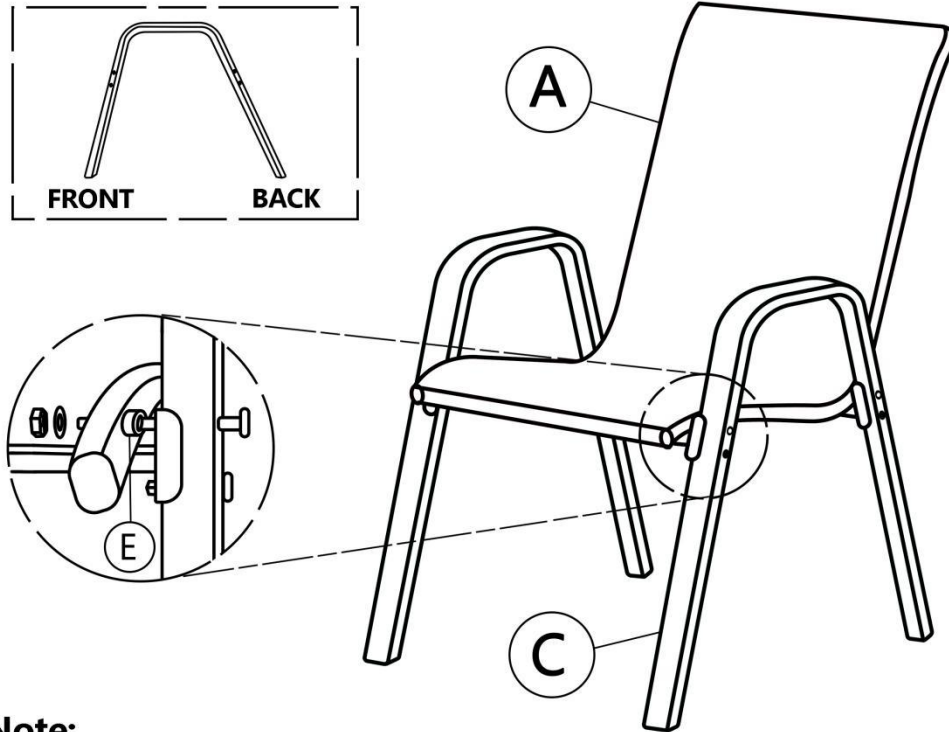


Note:


M6×75mm screws go into the upper holes of the legs.
After all parts are assembled, tighten the screws.

Step 5: Install the Screw Covers


Place Part (F) over each screw head to prevent scratches.

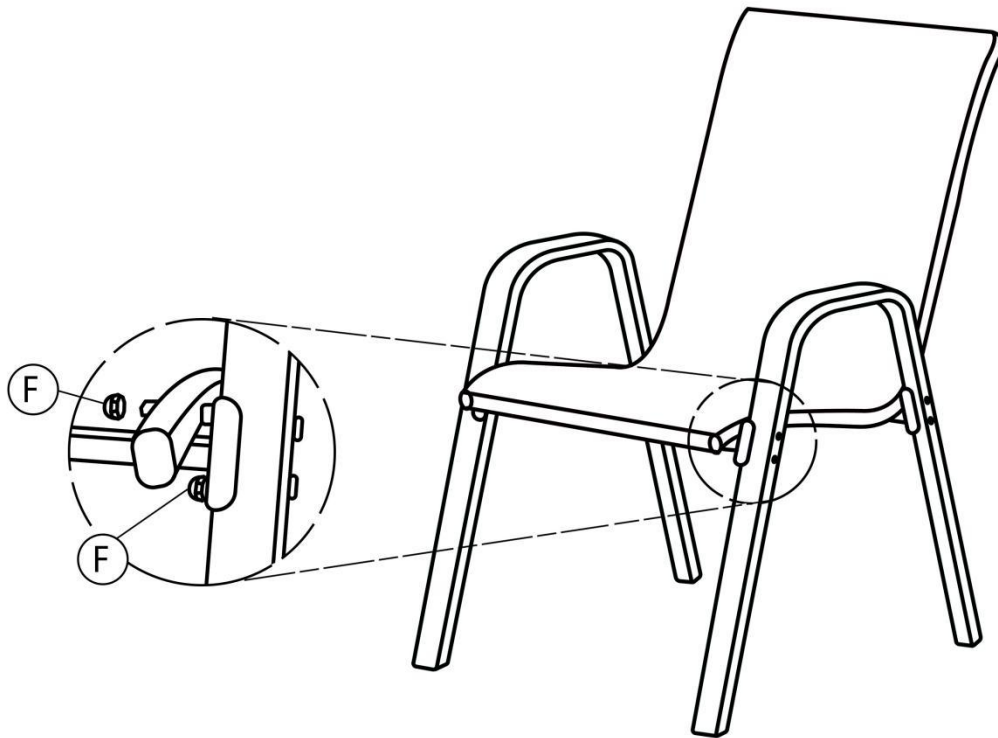

When Left Leg is Lifted

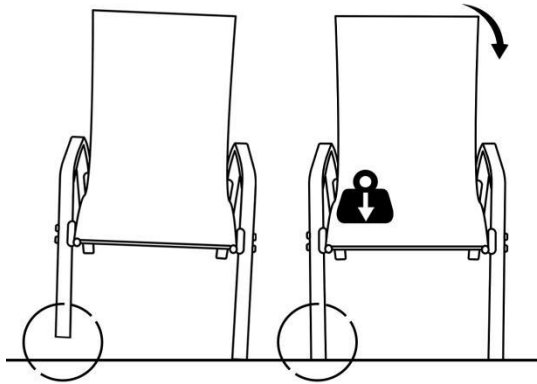

When Right Leg is Lifted

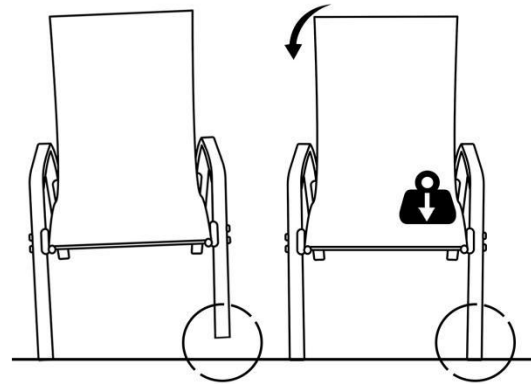

In rare cases, inaccurate screw tightening may cause the chair's legs to be uneven.

Solution:

- 1-Keep the other three legs flat and press down on the lifted side of the seat with your knee.
- 2-At the same time, pull the opposite backrest inward to realign the frame.