



VESTIL MANUFACTURING COMPANY

2999 North Wayne Street, P.O. Box 507, Angola, IN 46703

Telephone: (260) 665-7586 -or- Toll Free (800) 348-0868

Fax: (260) 665-1339

www.vestil.com e-mail: sales@vestil.com

OPERATION & SERVICE MANUAL

SL SERIES SEMI-ELECTRIC STACKER WITH MANUAL DRIVE & POWERED LIFT



Receiving instructions:

After delivery, IMMEDIATELY remove the packaging from the product in a manner that preserves the packaging and maintains the orientation of the product in the packaging; then inspect the product closely to determine whether it sustained damage during transport. **If damage is discovered during the inspection, immediately record a complete description of the damage on the bill of lading.** If the product is undamaged, discard the packaging.

NOTES:

1) Compliance with laws, regulations, codes, and non-voluntary standards enforced in the location where the product is *used* is exclusively the responsibility of the owner/end-user.

2) VESTIL **not liable** for any injury or property damage that occurs as a consequence of failing to apply either: a) the instructions in this manual; or b) information provided on labels affixed to the product. Neither is Vestil responsible for *any* consequential damages sustained as a result of failing to exercise sound judgment while assembling, installing, using or maintaining this product.

TABLE OF CONTENTS

Hazard identification: Explanation of Signal words	3
Safety Guide Lines	3
 General	4
Declaration of Conformity	4
Specification	5
 Safety Notes	6
Safety instructions	6
Üaè^Ç Áp[ç• Á.....	7
Ü^ { à[• ÁÜaè ^• Á.....	í
 Product description	8-9
Removing from the Pallet	10
 Operation	11
Operating Components	12
Operation Steps	13-16
 Maintenance and repair	17-24
 Parts Drawing & Parts List	25-33
 Label Placement	34
 Warranty	35

HAZARD IDENTIFICATION: explanation of signal words

This manual uses SIGNAL WORDS to indicate the likelihood of personal injuries, as well as the probable seriousness of those injuries, if the product is misused in the ways described. Other signal words call attention to uses of the product likely cause property damage.

The signal words used appear below along with the meaning of each word:



Identifies a hazardous situation which, if not avoided, **WILL** result in **DEATH** or **SERIOUS INJURY**. Use of this signal word is limited to the most extreme situations.



Identifies a hazardous situation which, if not avoided, **COULD** result in **DEATH** or **SERIOUS INJURY**.



Indicates a hazardous situation which, if not avoided, **COULD** result in **MINOR** or **MODERATE** injury.



Identifies practices likely to result in product/property damage, such as operation that might damage the product.

Each person who assembles, installs, uses, or maintains this product should read the entire manual **and fully understand the directions in advance**. **If after reading the manual you do not understand an instruction, ask your supervisor or employer for clarification, because failure to adhere to the directions in this manual might result in serious personal injury.**

SAFETY GUIDELINES

Vestil diligently strives to identify foreseeable hazards associated with the use of its products. However, material handling is inherently dangerous and no manual can address every conceivable risk. The end-user ultimately is responsible for exercising sound judgment at all times.



Electrocution might result if any part of the product contacts electrified wires. Reduce the likelihood of electrocution by applying **common sense**:

- DO NOT *contact* electrified wires with any part of this device, your body, or clothing.
- DO NOT use or store the product where contact with electrified wires is likely.
- Always inspect the usage area before using the product & implement precautions that account for conditions.



If this product is used improperly or carelessly, the operator and/or bystanders might sustain serious personal injuries or even be killed. To reduce the likelihood of injury:

• ***Failure to read and understand the entire manual before assembling, installing, using or servicing the product is a misuse of the product.***

- Read the manual to refresh your understanding of proper use and maintenance procedures.
- DO NOT attempt to resolve any problem(s) with the product unless you are both authorized to do so and certain that it will be safe to use afterwards.
- DO NOT modify the product in any way **UNLESS** you first obtain written approval from Vestil. Unauthorized modifications automatically void the Limited Warranty and might make the product unsafe to use.
- DO NOT exceed the maximum rated load (see Label 287 on product).
- Inspect the product before each use.

A. DO NOT use this product if the inspection reveals structural damage. Examples of structural damage include, but are not limited to, the following: 1) Cracked, broken or significantly deformed load-bearing members; 2) cracked welds; 3) missing or deformed safety chain/strap; 3) corrosion, severe wear, or other condition that affects the ability of the product to support weight or itself. Replace each part that fails to pass an inspection, and DO NOT use the product until it is fully restored to normal condition.

B. DO NOT use the product if any unusual noise or movement is observed. If a malfunction occurs, remove the unit from service and notify your supervisor & maintenance personnel about the issue.

- DO NOT use this device **UNLESS** all product labels (see "Label Placement Diagram") are readable and undamaged.



Proper use, maintenance, and storage are essential for this product to function properly.

- Always use this product in accordance with the instructions in this manual and consistent with any training relevant to machines, devices, etc. used in conjunction with this product.
- Keep the product clean & dry. Lubricate moving parts.
- FOR HYDRAULIC UNITS: Do not use brake fluid or jack oils in the hydraulic system. If oil is needed, use an anti-wear hydraulic oil with a viscosity grade of 150 SUS at 100°F, (ISO 32 cSt @ 40°C), or Dexron transmission fluid.
- Contact the manufacturer for MSDS information

GENERAL

Read and follow the instructions contained in this operating manual.

Only trained, well-informed personnel, who have been instructed in accordance with this operation manual, may use or work on the stacker.

Liability or guarantee is waived if:

- The instructions in this operating manual are not observed.
- The high-lift stacking truck is operated, cleaned or maintained incorrectly.
- Alterations to the functions are carried out without the consent of manufacturer.
- Original spare parts are not used.

Safety instructions

This chapter informs the user about residual dangers relating to the correct use of the products. It contains generally valid safety instructions which must be observed.

Safety instructions relating to specific actions or situations are listed prior to the respective action and/or description of the situation in the chapter.

Principles

This product complies with state-of-the –art technical standards and recognized safety regulations, but there are still dangers which may occur which must be considered.

Only operate the product in a perfect condition and observing the information contained in the operating manual.

The operator is responsible for integrating the product with as little risk as possible into his working environment. This obligation continues through every phase of the products lifespan, beginning at the planning stage. Residual dangers are to be minimized.

Only trained, competent personnel who have been instructed using the operating manual and the product are permitted to work with the truck.

The operating manual must be understood (responsibility, checking)

Declaration:

I have read this manual and, in particular, have taken note of the caution.

Name	Date	Signature

Specification

SPECIFICATION

		SL-63-AA/FF	SL-118-AA/FF	SL-137-AA
Capacity		2000 lbs.	2000 lbs.	2000 lbs.
Fork Lift Height		63"	118"	137"
Capacity		2000 lbs. @ 63"	1500 lbs (63"-118")	b)1500 lbs. @ (63-118") c)1000 lbs. @ (118-137")
Fork Dimension FF AA		42x5.9 x2 3/8" 42x4 x1 ¼"	42x5.9x2 3/8" 42x4 x1 ¼"	None 42x4 x1 ¼"
Overall Fork Width		26 ¾"	26 ¾"	26 ¾"
Ground Clearance		1"	1"	1"
Lowered Fork H. FF AA		3 ¼" 2 1/8"	3 ¼" 2 1/8"	None 2 1/8"
H. Overall Extended		81 7/8"	140"	159"
Head Dimension		29 1/8x19 5/8x37"	29 1/8x19 5/8x37"	29 1/8x19 5/8x37"
Loading Center		21"	21"	21"
Wheel Base FF AA		39 ¾" 40 ½"	39 ¾" 40 ½"	None 40 ½"
Turning Radius		51"	51"	51"
Steering Wheel		Φ7x2"	Φ7x2"	Φ7x2"
Front Wheel FF AA		Ø3x3 ¼" Ø4x2.9"	Ø3x3 ¼" Ø4x2.9"	None Ø4x2.9"
Overall Size FF AA		67 5/16x29 1/8x81 7/8" 66 1/8x29 1/8x81 7/8"	67 5/16x29 1/8x81 7/8" 66 1/8x29 1/8x81 7/8"	None 66 1/8x29 1/8x877/8"
Lift Speed	Load	2.74"/s	2.95"/s	3.18"/s
	Unload	4.84"/s	4.72"/s	4.41"/s
Lower Speed	Load (1 spd.)	2.42"/s	2.45"/s	2.3"/s
	Load (2 spd.)	4.5"/s	4.53"/s	5.4"/s
	Unload (1 spd.)	2.42"/s	2.45"/s	2.3"/s
	Unload (2 spd.)	4.2"/s	4.21"/s	5.4"/s
Lift Motor		12V/1.5KW	12V/1.5KW	12V/1.5KW
Amperage (Loaded)		165 amps.	165 amps.	177 amps.
Amperage (Unloaded)		65 amps.	105 amps.	107 amps.
Battery		12V/140Ah	12V/140Ah	12V/140Ah
Battery Charger		12VDC/5A	12VDC/5A	12VDC/5A
Weight FF AA		830 lbs. 870 lbs.	1020 lbs. 1070 lbs.	None 1140 lbs.
Width of Aisle		72"	72"	72"

FF: FIXED FORKS OVER SUPPORT LEGS

AA: ADJUSTABLE FORKS OVER ADJUSTABLE LEGS

Note: The load capacity is based on the situation when the center of the gravity is located at the center of length of forks. When the center of gravity of goods is out of the center of forks, the load capacity will be lessened compared to the center.

Receiving Instructions

Every unit is thoroughly tested and inspected prior to shipment. However, it is possible that the unit may incur damage during transit. If you see damage when unloading, make a note of it on the SHIPPER RECEIVER.

Remove all packing & strapping material, inspect for damage. IF DAMAGE IS EVIDENT, FILE A CLAIM WITH THE CARRIER IMMEDIATELY! Also, check fork size, type of power unit, etc., to see that the unit is correct for the intended application.

Warnings & Safety Instructions

Insure that all employees understand and follow the following instructions

- Read and understand the owner's manual before using or servicing the stacker.
- Do not use the stacker if any damage or unusual noise is observed.
- Improper use of this lift truck could result in injury and damage to load or equipment.
- Always watch the stacker and any load on it carefully when it is being used or moved.
- DO NOT load beyond rated capacity.
- DISTRIBUTE load evenly
- Avoid sudden stops or quick turns to prevent accidental tipping of the load.
- Load must be centered and evenly distributed on the forks.
- Park the truck on level surfaces and not in the way of other products
- When parked, lower the load fork completely.
- When parked, push E-switch push-button down.
- Do not perform any modifications to the stacker without the manufacturer's approval. Failure to receive authorization for changes to the equipment could void the warranty.
- Do not use brake fluid or jack oil in the hydraulic system. If oil is needed, use an anti-wear hydraulic oil with a viscosity grade of 150 SUS at 100°F, (ISO 32 @ 40°C), or a non-synthetic transmission fluid.
- Use only replacement parts either supplied or approved by the manufacturer.

Safety notes

Symbols and pictures

In addition to the text and illustrations, this operating manual contains various symbols which should draw attention to the safety requirements.

They generally have the following appearance:

Signal wording	Explanation
DANGER	Warning of an imminent danger! Non-observance cause death or serious injury
WARNING	Warning of a possibly incoming dangerous situation. Non-observance may cause death or serious injury.
CAUTION	Warning of a possibly incoming dangerous situation. May also be used for warnings of major damage to property.

Other definitions:

DIRECTION	Marks recommendations for use and other useful information. Does not warn of dangerous situations.
IMPORTANT	Warns of a harmful situation. Non-observance may cause damage to material.


USE SYMBOLS & PICTURES

	Possible danger to file and limb or machine!		Do not step onto when load is raised!
	Danger of crushing!		It is forbidden to ride on the truck!
	Do not reach into running motor!		Suspension points for transport of truck!
	Wear safety shoes		Important
	Wear helmet		Suspended load warning!

Product description

Designated use

- ❖ The stacker is designated for lifting, lowering and transportation of loads according to the specifications of the identification plate.
- ❖ The stacker is to be used on hard level surfaces.
 - To move the stacker between buildings, warehouses etc
 - The gradient of the slope must not be more than 10%
 - Make sure load is not loose or unstable.
 - Do not pick up loads on tips or forks or edge of platform.
 - Do not overload.
 - The road surfacing must be solid and have a good grip.
- ❖ Travel routes must offer sufficient load-bearing capacity for the loaded truck.
- ❖ The stacker is not suitable for continuous use in cool-houses!

Ambient conditions			
			
Temperature	From To	14 113	° F ° F
Degree of humidity		≤70	%
Permitted floor incline			
• Loaded		Max. 0.5	%
• Unloaded ¹		Max. 2.0	%
Dimensions and weights			
Mass (dead weight)	m	1058/1653	lbs



WARNING!

The user is responsible for determining the actual load bearing capacity of a high-lift stacking truck. This can depend on the user, the condition of both the floor and the high-lift stacking truck and the regularity of the maintenance intervals.

Product description

Signs on the Stacker



Removing from the pallet



CAREFUL

To pick up the unit only use overhead hoist, or forklift with sufficient carrying capacity & take into consideration the center of gravity of the unit. Use top crossmember to lift the equipment. Be careful of the stacker swinging once fully lifted off the pallet or skid. Remove the pallet or skid from below the lift & lower the stacker on the ground.

Refer to the identification plate for the weight of stacker.



Lifting belt specification— Use polyester lifting sling or nylon sling and hoist with a minimum of 2,000 lb. capacity.



DANGER

When unloading the truck, all personnel should be cleared from the area.

OPERATION

Visually inspect stacker for damaged and worn parts, before stacker is taken into operation. Authorized person should read and understand all instructions

The lifting truck is ready for immediate use once the packaging has been removed.

- ♦ The battery is full and charged.
- ♦ The hydraulic tank is full.
- ♦ The steering roller and the running rollers are equipped with bearings which do not require maintenance; all mast rollers are also free from maintenance.



Caution!

Pedestrian controlled industrial trucks may only be operated by persons who have been satisfactorily instructed in operating the truck and have proved their ability to operate the truck to the responsible representative of the operating company.

The first driving attempts should take place on level and spacious surfaces.

Recommendation:

The operator who is to maneuver the truck and is to control the lifting mechanism should be allowed to practice, when unloaded, until they can safely operate these functions.


Only then should they undertake the loading, transporting and unloading of load.



RAISE/LOWER LEVER


EMERGENCY STOP & ON/OFF SWITCH

OPTIONAL HAND CONTROL SWITCH

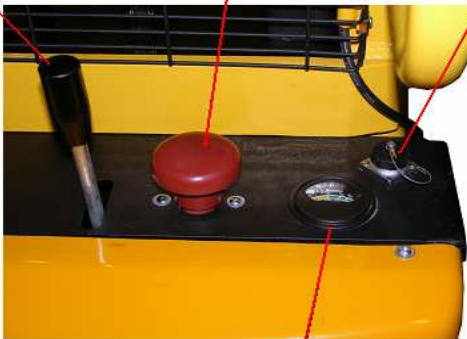

BATTERY CHARGE INDICATOR

Traveling

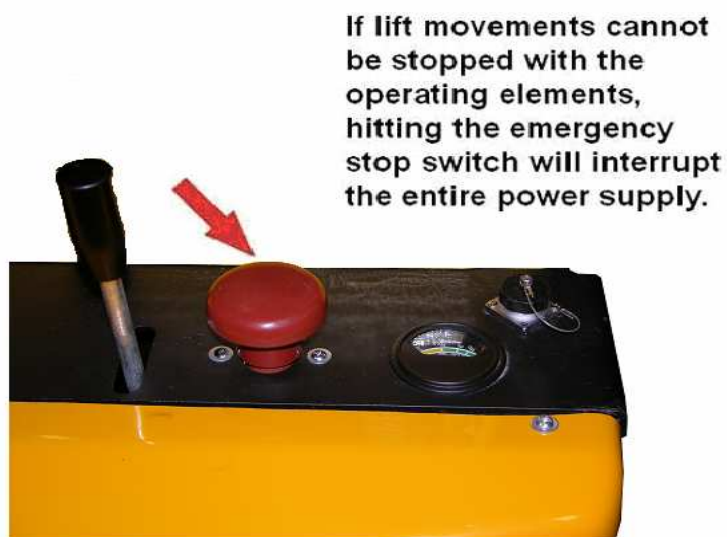


To raise and lower


The following are generally valid for the lifting and lowering procedure:

- The red operating button of the EMERGENCY STOP pushbutton must be pulled upwards
- Lifting and lowering movements are initiated by pushing & pulling a lever on the power unit.

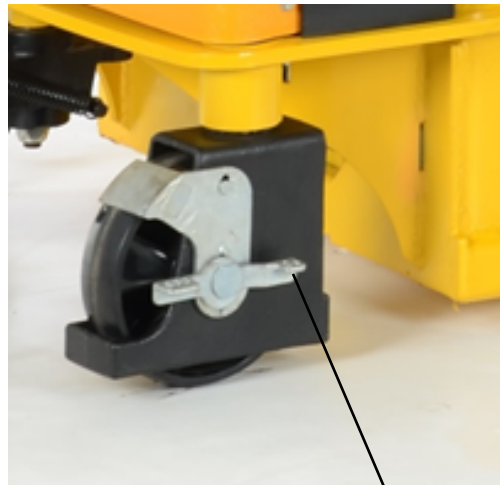

Operation**PARKING BRAKE****ON**

To activate the parking brake, press down on the brake pedal

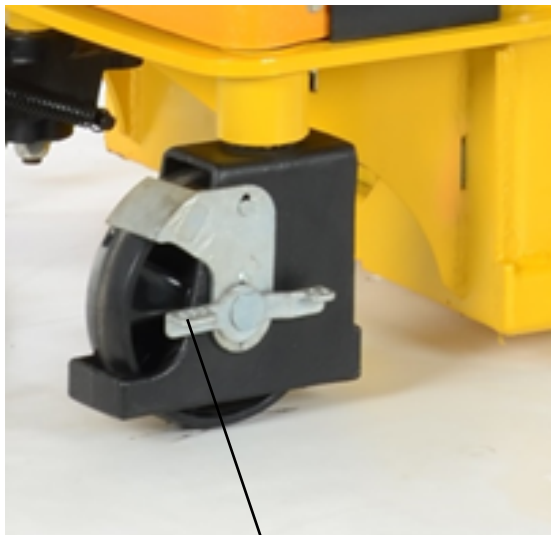**OFF**

To release the parking brake, press down on the brake pedal

Operation

Lifting the load



CAUTION!

- Before lifting a load to be transported, ensure that the load does not exceed carrying capacity of the stacker.
- The nominal carrying capacity and lifting heights can be viewed in the load diagram.
- Ensure that the load can be lifted up in a compact and stable manner. Slipping or falling of the load must be avoided.
- Load must not project into the lifting frame.
- Load must be centered and evenly distributed on the forks.
- The load must not extend more than 2" over the end of the forks.



Transporting the load



CAUTION!

- Raise the load slightly (3") above the ground to transport
- For safety reasons (view) transport only in a forward direction
- Only when lifting or lowering down the load it is permissible to move the stacker forward or in reverse with a raised load
- Lift up or lower down the loads on level surface
- When unloaded, move stacker only with forks lowered.



When stacker not in use

- Park the stacker on a level surface
- Lower down the forks completely
- Push down ON/OFF switch

Maintenance and repair

TROUBLESHOOTING GUIDE --

Warning: Before performing any task, always block drive wheel off of the ground.

Consult the factory for problems at time of installation, or for any problems not addressed below.

SL,

<u>Problem:</u>	<u>Possible cause(s):</u>	<u>Action:</u>
Unit will not charge	Charger malfunction	Verify output voltage on charger, will only get a reading when connected to batteries; should be approximately 28 volts.
	Bad batteries	Load test batteries
Unit will not raise; motor does not run	Loose wire	Verify 24 volts at coil when raise is pushed, if no voltage; trace wiring back to tiller head looking for voltage on each side of the connectors until the bad connection is found.
	Bad solenoid	If voltage is present at the solenoid and the unit does not rise, remove the two wires to the coil and measure the coil resistance. It should be around 19 ohms. If it's open, or shorted replace the solenoid.
	Upper limit switch out of adjustment	Bypass upper limit switch and see if the unit raises...DO NOT TAKE IT ALL THE WAY UP... If it does rise, verify the limit switch is normally closed and will open when activated. If the limit switch is ok, try to adjust the switch accordingly so that the units raise height is approximately 7 to 8"
	Blown fuse	Check fuses above motor controller
Unit will not raise; motor runs	Batteries discharged	Re-charge batteries
	Lower solenoid stuck on	Check to see if the lowering switch is stuck on. If it is, remove the tiller head via 3 screws on bottom and replace switch, or tap on switch to see if it can be freed up.
Unit will not lower	No hydraulic oil	Re-fill hydraulic oil
	Loose wire; bad coil	Verify 24 volts at coil when lower is pushed, if no voltage, trace wiring back to tiller head looking for voltage on each side of the connectors until the bad connection is found.
		If voltage is present at the coil and

	Upper limit switch out of adjustment	<p>the unit does not lower, remove the connector to the coil and measure the coil resistance. It should be around 39 ohms. If it's open, or shorted replace the coil.</p> <p>Loosen hydraulic line at pump to relieve pressure build up. Re-adjust limit switch so unit stops at 7 to 8 inches above the ground.</p> <p>Look for binding in chain or rollers</p>
Unit keeps blowing fuses when the raise lever is pressed	Shorted solenoid for motor raise	Remove the wire to the solenoid coil on the pump motor. Measure the resistance; it should be around 19 ohms. If it is nearly zero ohms replace the solenoid.
Lifting height is not longer achieved	Hydraulic oil level is too low	Re-fill hydraulic oil when forks are lowered.
Unit jerks when lifting	Air in the system	Open vent screw on the lift cylinder with forks lowered all the way down. Lift forks with vent screw open until oil is free from air bubbles. Close the vent screw
Forks raise, then drift down	Check valve or Solenoid valve leaking (contamination holding open the lowering valve or the check valve)	<p>Remove & inspect.</p> <ul style="list-style-type: none"> . Remove any load from the forks. . Remove the nut holding solenoid coil on the valve stem, and then unscrew the valve from the manifold. . Inspect the valve for contaminants, and the valve's o-rings and back -up washers for cuts, tears, and other damage. . With valve immersed in mineral spirits or kerosene, use a thin tool such as a small screwdriver or a small hex wrench to push the poppet in and out several times from the bottom end of the valve. The valve should move freely, about 1/16" from closed to open position. If it sticks in, the valve stem could be bent and will need to be replaced if it doesn't free up after cleaning. <p>Blow the valve off with a compressed-air gun while again pushing the poppet in and out.</p>

Instructions for Changing the Batteries, estimated time, 15 min.

READ ALL INSTRUCTIONS BEFORE PROCEEDING!

Only qualified personnel should work on this equipment!

Lock out all potential energy sources before attempting this installation; turn off the unit and remove the key.

Warning!

- ! Working with or near lead acid batteries is dangerous. Batteries contain sulfuric acid and produce explosive gases. A battery explosion could result in loss of eyesight or serious burns.
- ! Do not smoke or allow a spark or flame near batteries. Charge batteries in locations which are clean, dry, and well-ventilated. Do not lay tools or anything metallic on top of any battery. All repairs to a battery must be made by experienced and qualified personnel.
- ! When working with batteries, remove personal items such as rings, bracelets, necklaces, and watches. Batteries can produce enough energy to weld jewelry to metal, causing a severe burn.
- ! Always have fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.
- ! Operating the battery with a low battery voltage can cause premature motor contact failure.
- ! Do not expose the lift or charger to rain or adverse conditions.
- ! Replace defective cords or wires immediately.
- ! Check the battery's water level frequently if this applies to your battery type.
- ! Make sure the battery charger is unplugged from 115vac source.

Battery Charger Operating Instructions

Plug the charger into a standard 115V receptacle. If an extension cord must be used, keep it as short and as large as possible. A small cord will decrease the output of the charger due to the voltage drop in the line. This will increase the charging time. It can also cause the 115V cord to overheat.

When properly connected, the charge LED will indicate the status of charge current flowing to the battery, as follows: Power LED is always green when charger is plugged in. The status light is as follows:

Red only – the charger is providing full output to the battery.

Yellow – the charger is “topping off” the battery.

Green – the charger is providing a “float,” or maintenance, charge.

Remember to unplug the charger before moving the equipment. Failure to do so could cause damage to cords, receptacles and other equipment.

Troubleshooting:

If the unit does not operate, check all of the wiring connections to make sure they're both mechanically and electrically sound – specifically at the battery, and the motor.

A fully-charged lead acid battery in good condition at room temperature should read 12.65 volts. At 11.9 volts it is considered to be fully discharged and in need of charging. When checking battery voltage, wait at least 1\2 hour after the charger has been turned off before checking the battery's voltage.

If the batteries aren't being charged by the charger, check the output charger fuse. Verify fuse is good with an ohmmeter, or close visual (ohm meter best). Fuse is a 10Amp 250 Volt; GBD 10A. If it is good, check the battery's state of charge with a voltmeter. The charger must be connected to the battery in order to read the output voltage of the battery charger. Depending on the state of charge of the batteries, the voltage should be somewhere around 27 to 28 volts dc.

If it is determined the batteries are dead, and need replaced, change the batteries.

Tools Required:

14mm wrench, or crescent wrench

Regular flat bladed screw driver

Maintenance and repair

(A) BEFORE EACH USE INSPECT FOR THE FOLLOWING:

- 1) Frayed wires
- 2) Oil leaks
- 3) Pinched or chafed hoses
- 4) Damage or structural deformation to the structural members, the cylinder brackets, etc.
- 5) Unusual noise or binding, or evidence thereof.
- 6) Proper functioning of all limit switches, including those on the perimeter pinch point guard (if applicable)
- 7) Load chain, check for mechanical damage, check for play (slack in chain)
- 8) Battery, keep the surface of battery clean and dry. Make sure battery is secured against slipping

(B) INSPECT MONTHLY FOR:

- 1) The oil level. Oil should be 1-1/2" to 2" below the reservoir's fill hole with the lift in the fully raised position
- 2) Worn or damaged hydraulic hoses and electrical wires
- 3) Pivot point wear
- 4) Roller's looseness and wear
- 5) Integrity of retaining rings on all the rollers and at all pivot points
- 6) Looseness, wear, or damage to the front rollers & drive wheel, bearings, mounting hardware, or surface material
- 7) Proper functioning of any hand-or foot-operated mechanisms
- 8) Proper water level in the battery
- 9) Unusual noises or movement during operation
- 10) All the information, safety, and wearing labels being in place and in good condition
- 11) The need to clean off dirt and debris

(C) YEARLY INSPECTIONS

- 1) The oil should be changed if the oil darkens, becomes gritty, or turns a milky color (indicating the presence of water). Replace with anti-wear hydraulic oil with a viscosity grade of 150sus at 100°F, (ISO 32 at 40° C). Ex:AW 32 or HO 150 hydraulic oil, or a non-synthetic transmission fluid. You may use a synthetic transmission fluid if you flush the system with the synthetic fluid before filling the reservoir.
- 2) Check chain and chain connections for any mechanical damage
- 3) Clean upright channels and mast rollers, & grease slightly.
- 4) Check magnetic brake travel, & if necessary change brake rotor
- 5) Check carbon brushes for any wear in the lift motor, & if necessary change carbon brushes.

Maintenance and repair

Maintenance and care of the load chains

In normal use the load chains should be re-lubricated every 250 operating hours; in the event of heavy soiling, moisture and very high prolonged loading, re-lubrication should be effected after 100 operating hours. If subject to corrosive media the chain should be cleaned and lubricated immediately.

Chain lubrication, chain conservation

Flyer chains are correctly lubricated and are in a perfect state if:

The chain is free of exterior soiling.

When touching the chain, your finger is wetted with oil. This assures that the lubrication of the chain links is sufficient.

Type of lubricant

A low-viscosity mineral – machine – or engine oil or synthetic oil should be used. The viscosity of the lubricating oil is to selected so that it remains low viscose at all ambient temperatures encountered.

Under normal temperature conditions, lubricating oils with a viscosity of SAE 20 to SAE 40 would be appropriate.

Lubricating methods

The lubricant can be applied by means of brush, paint brush or also using compressed air spray devices. When using spray cans, please make sure the following basic requirement is fulfilled:

- After the thinner has vaporized, a viscosity conforming to the above-mentioned recommendation (type of lubricant) must be met.

Cleaning the chain

If operation leads the chain to suffer so heavily from soiling that the penetration of the lubricating oil cannot be guaranteed, the chain must be cleaned.

This is only to be effected with paraffin derivatives such as diesel fuel, petroleum, cleaner's naphtha etc.

Do not clean with steam injectors, cold cleaners or even corrosive and acidic substances. They can directly lead to chain damage.

If the chains have to be cleaned with steam injectors, please contact our customer service.

Maintenance and repair

◆ Chain inspections

Chains used in stackers should be inspected at least once a year or every three months if exposed to severe contamination or high continuous loading stress.

We recommend that attention be paid to the following points:

1. Unusual noise
2. Surface rust
3. Linkage rust
4. Stiff links
5. Distorted pins
6. Loose link pins
7. Damage
8. Broken link plates
9. Broken pins
10. Contamination
11. Stretching

Even with the optimum amount of lubrication, it is impossible to prevent a chain from stretching.

Wear extends only to that part of the chain which is led over the chain sprocket/guide sprocket. Thus, when checking for wear, only check the area need be inspected.

According to the regulations currently in force, a chain is deemed to be worn if it has stretched by 3%.

If safety issues are particularly critical or a potential hazard is dependent on a single chain, we consider it necessary to replace it if it is stretched by even 2%.

Measuring procedure

To measure elongation through wear, that part of the chain which runs over the chain sprocket/guide sprocket must be positioned in the stretched area. With the aid of a measuring rod, measure a section approximately 1 meter in length. The number of divisions in the measured area, multiplied by the chain divisions, gives the nominal measurement. The length extending beyond this measurement represents the wear, which is limited to a maximum of 3% over the nominal length.

An elongation through wear of 3% is reached if 33 links of the chain in use measure the same length as 34 links of a new chain.

◆ Chain replacement

If two chains are used as a pair on the affected machine, both should always be changed at the same time.

The installation and removal of chains should be carried out with all the care appropriate to any item of safety equipment.

Chains may only be repaired by authorized specialist personnel.

We do not recommend the lengthening of safety-type lifting chains, since the inserted chain link will not have been pre-stretched.

Our product liability will be invalidated if a repaired chain is assembled from sections bearing different silver label numbers.

Maintenance and repair

◆ Temporary lay-up

If, for operating reasons, the stacker is laid up for more than two months, the following instructions are to be carried out:

- * Place the stacker on blocks so that all the wheels are raised from the floor.
In this way, they will be prevented from becoming permanently misshapen.
- * Clean the stacker thoroughly.
- * It may be necessary to support the lifting gear in a suitable manner, so as to relieve any stress on the load chains.
- * Check the hydraulic fluid level, replenish if necessary.
- * Grease the stacker thoroughly.
- * Clean all bright and moving parts with a thin film of oil and grease respectively.
- * Store the stacker in a dry, frost-proof, dust-free place.
- * Do not use plastic sheeting to cover the stacker otherwise condensation could form under it.

Additional operations for vehicles with integral electrical systems


- * Disconnect the batteries from the stacker electrical system.
- * Charge the batteries.
- * Clean the top of the battery case and terminals.
- * Grease the terminals lightly with terminal grease.
- * Check the electrolyte level, top up if necessary (not applicable to maintenance-free or gel batteries).
- * Recharge the batteries every 90 days; gel batteries every 6 months.
- * Spray a suitable contact spray on unattached electrical contacts.

Return to service after a lay-up


- * Thoroughly clean and grease the stacker.
- * Remove the film of protective grease.
- * Check the hydraulic fluid tank and hydraulic fluid for condensation, if necessary carry out a fluid change.
- * Inspect hydraulic hose lines for brittleness.
- * Test the functions of the vehicle, particularly the safety equipment.

PARTS DRAWING & PARTS LIST

Electric wiring diagram

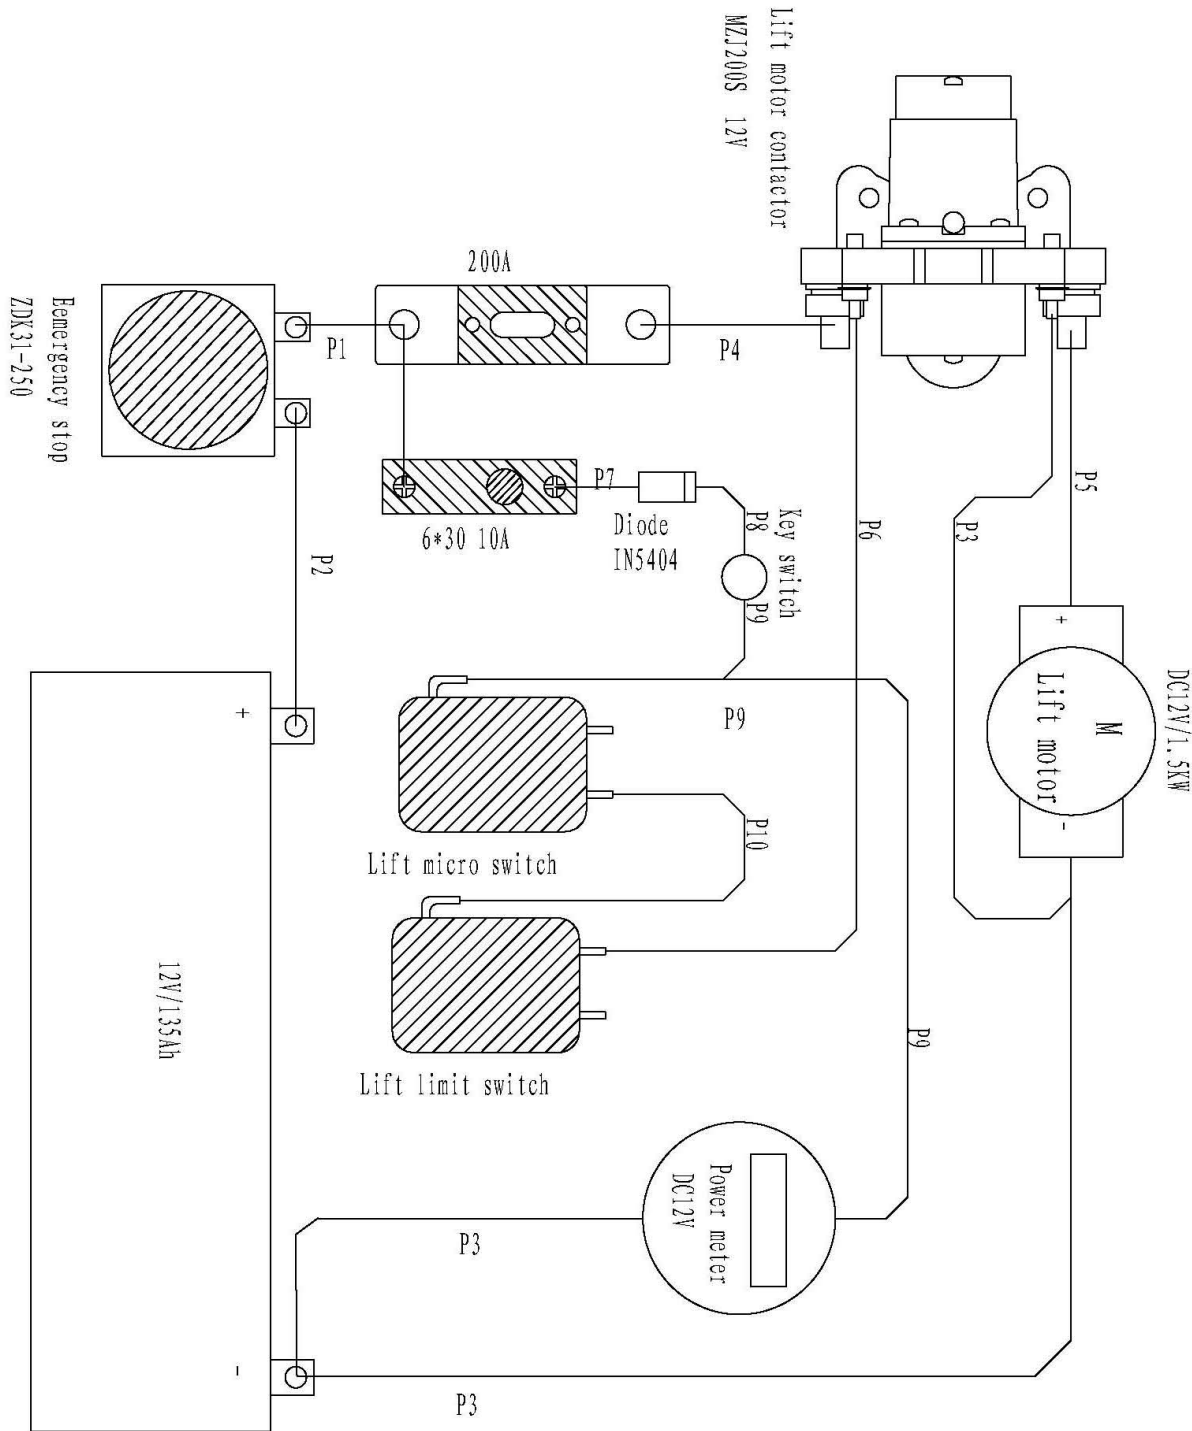


Electric circuit diagram and component list

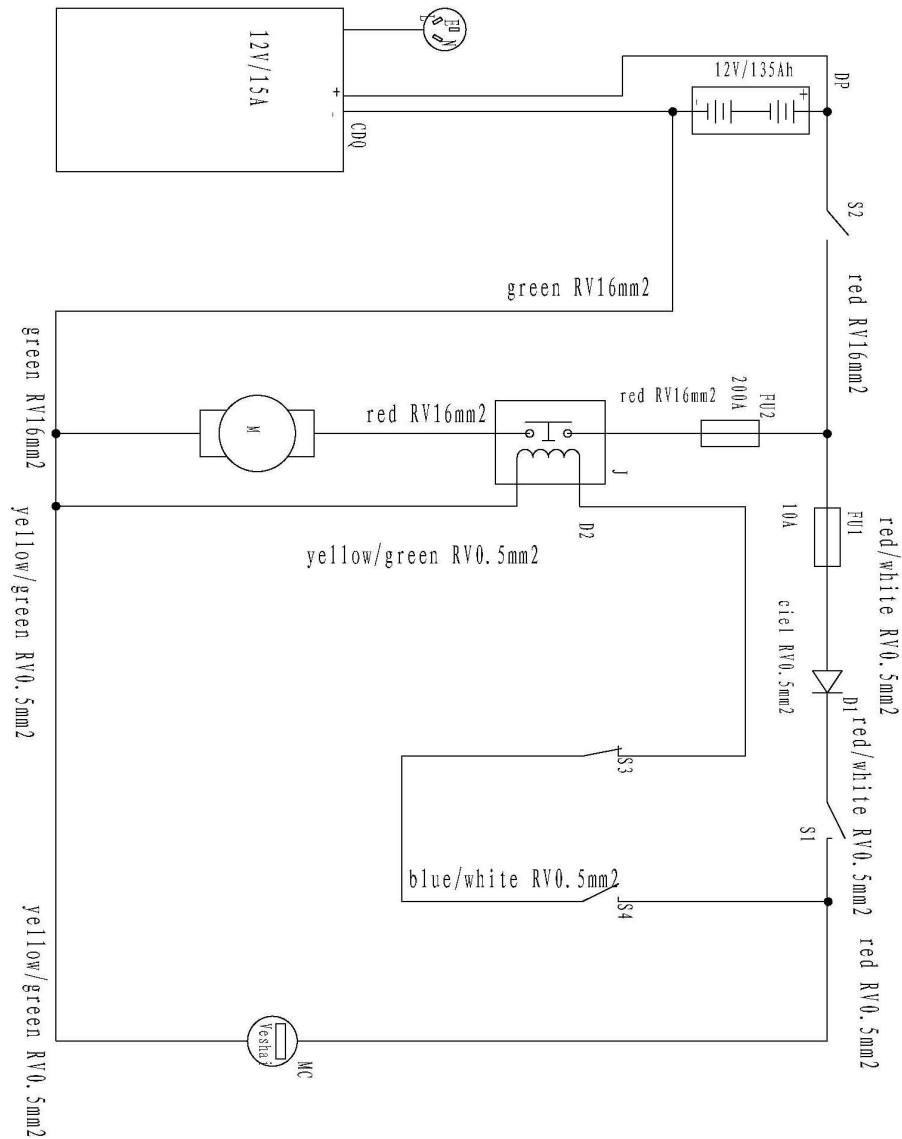

NO	Name	Code	Specification	Qty
1	Power meter	MC	DC12V	1PC
2	Lift motor	M	DC12v/1.5KW	1PC
3	Battery	DP	12V/135Ah	1PC
4	Lift motor contactor	J	MZJ200S 12V	1PC
5	Control circuit fuse	FU1	FS-10 10A	1PC
6	Hydraulic circuit fuse	FU2	200A	1PC
7	Key switch	S1	JT-001	1PC
8	Emergency stop	S2	ZDK31-250	1PC
9	Lift limit switch	S3	TM1703	1PC
10	Lift micro switch	S4	YBLXW-5/11M	1PC
11	Diode	D1	IN5404	1PC
12	Diode	D2	IN4007	1PC
13	Battery charger	CDQ	12V/15A	1PC

Hydraulic circuit diagram

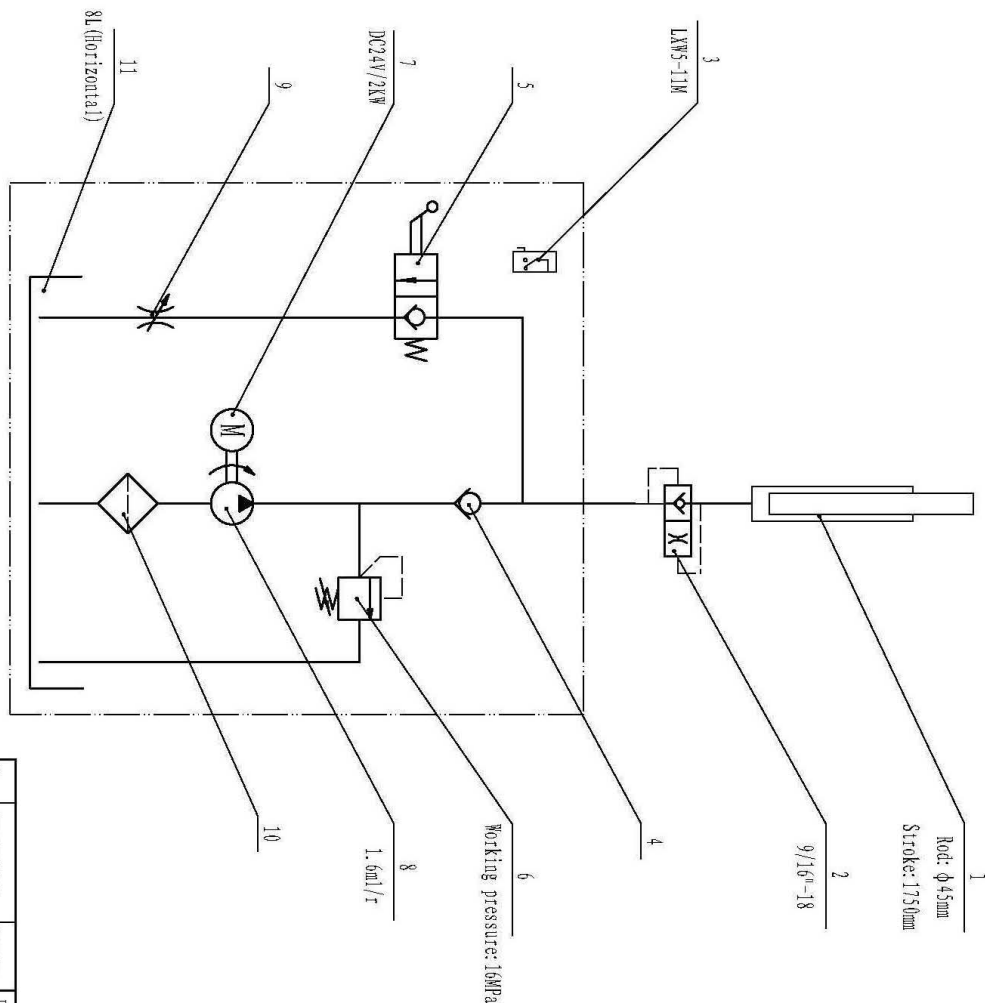


ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	Lift cylinder	7	DC Motor
2	Velocity valve	8	Pump
3	Microswitch	9	Flow control valve
4	Check valve	10	Filter
5	Manual valve	11	Tank
6	Relief valve	12	

Rev.	Approved Date	Remarks	DRMMN	Qin xiang pei	Checked Liu jing song	Veshtai Handing Equipment Co., Ltd.
			DESIGNED		SCALE	
					TITLE	
					DRAWING NO.	
					ISSUED DATE	Hydraulic circuit
					NO	VH-B5-100/35
						2007/07/10

Parts drawing

Assembly Explode Drawing

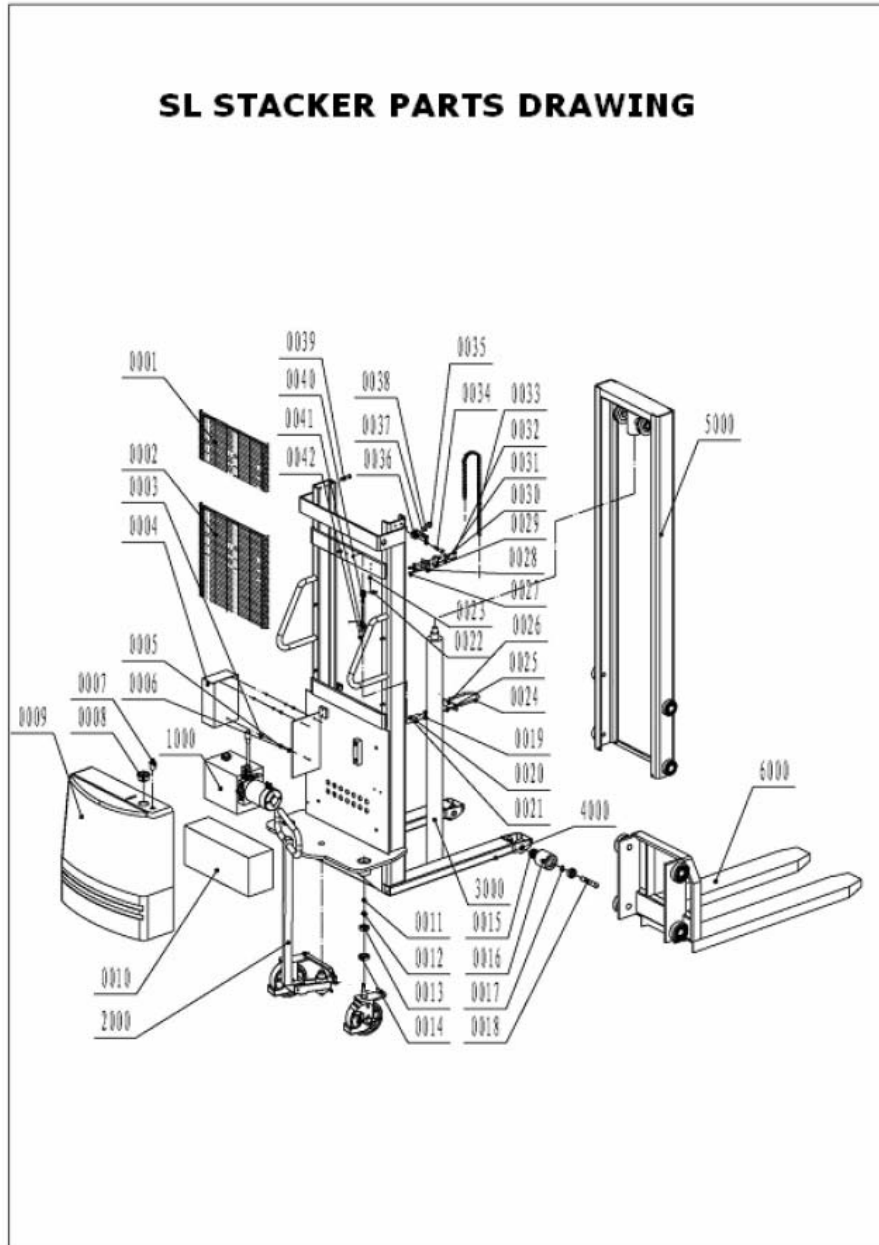

Parts list


Assembly component list

No.	code	name	Qty.	mark
0001	BS-100/35-000001	net	1	
0002	BS-100/35-000002	net2	1	
0003	GB95-2000	pain washer	3	
0004		charger	1	
0005	GB93-1987	spring washer 6	3	
0006	GB818-2000	pan head screw	3	
0007		key switch	1	
0008		meter	1	
0009	BS-100/16-000003	cover	1	
0010		battery 12V135Ah	1	
0011	GB/T812-1988	nut M20	2	
0012	GB/T858-1988	washer 20	2	
0013	GB/T297-94	bearing 30304	2	
0014	GB/T276-94	ball bearing	2	
0015	GB/T276-94	ball bearing	4	
0016	BS-100/16-400002	front wheel	2	
0017	GB/T894-86	spring washer	2	
0018	BS-100/16-400001	pin	2	
0019	GB/T41-2000	hex nut M10	3	
0020	GB/T923-1988	nut M10	2	
0021	GB5782-2000	bolt M10×40	1	
0022	GB/T882-1986	pin	2	
0023	GB/T91-2000	split cotter pin	4	
0024	BS-100/16-000001	cylinder clip	1	
0025	BS-100/16-000002	press block	1	
0026	GB95-2002	plain washer	2	
0027	GB/T818-2000	screw M6×12	2	
0028	GB/T41-2000	hex nut	1	
0029	BS-100/35-000003	natch	1	
0030		upper limit switch	1	
0031	GB95-2002	plain washer	2	
0032	GB819.1-2000	screw	2	

No.	code	name	Qty.	mark
0033	GB/T6074-97	chain	2	
0034	GB/T848-1985	plain washer	2	
0035	JH1620	bearing	1	
0036	BS-100/35-015003	adjust bolt	2	
0037	GB/T41-1986	hex nut	2	
0038	BS-100/35-015002	little wheel	2	
0039	GB/T5782-2000	bolt	2	
0040	MS-100/25-000005	shaft	2	
0041	GB95-2002	plain washer	2	
0042	GB/T41-2000	hex nut	4	
1000	BS-100/16-610000	power unit	1	
2000	BS-100/16-100000	turning assembly	1	
3000	BS-100/35-400000	cylinder assembly	1	
4000	BS-100/35-100000	main frame	1	
5000	BS-100/35-300000	inner mast assembly	1	
6000	BS-100/35-200000	fork assmebly	1	


Parts drawing & Parts list

Inner mast drawing

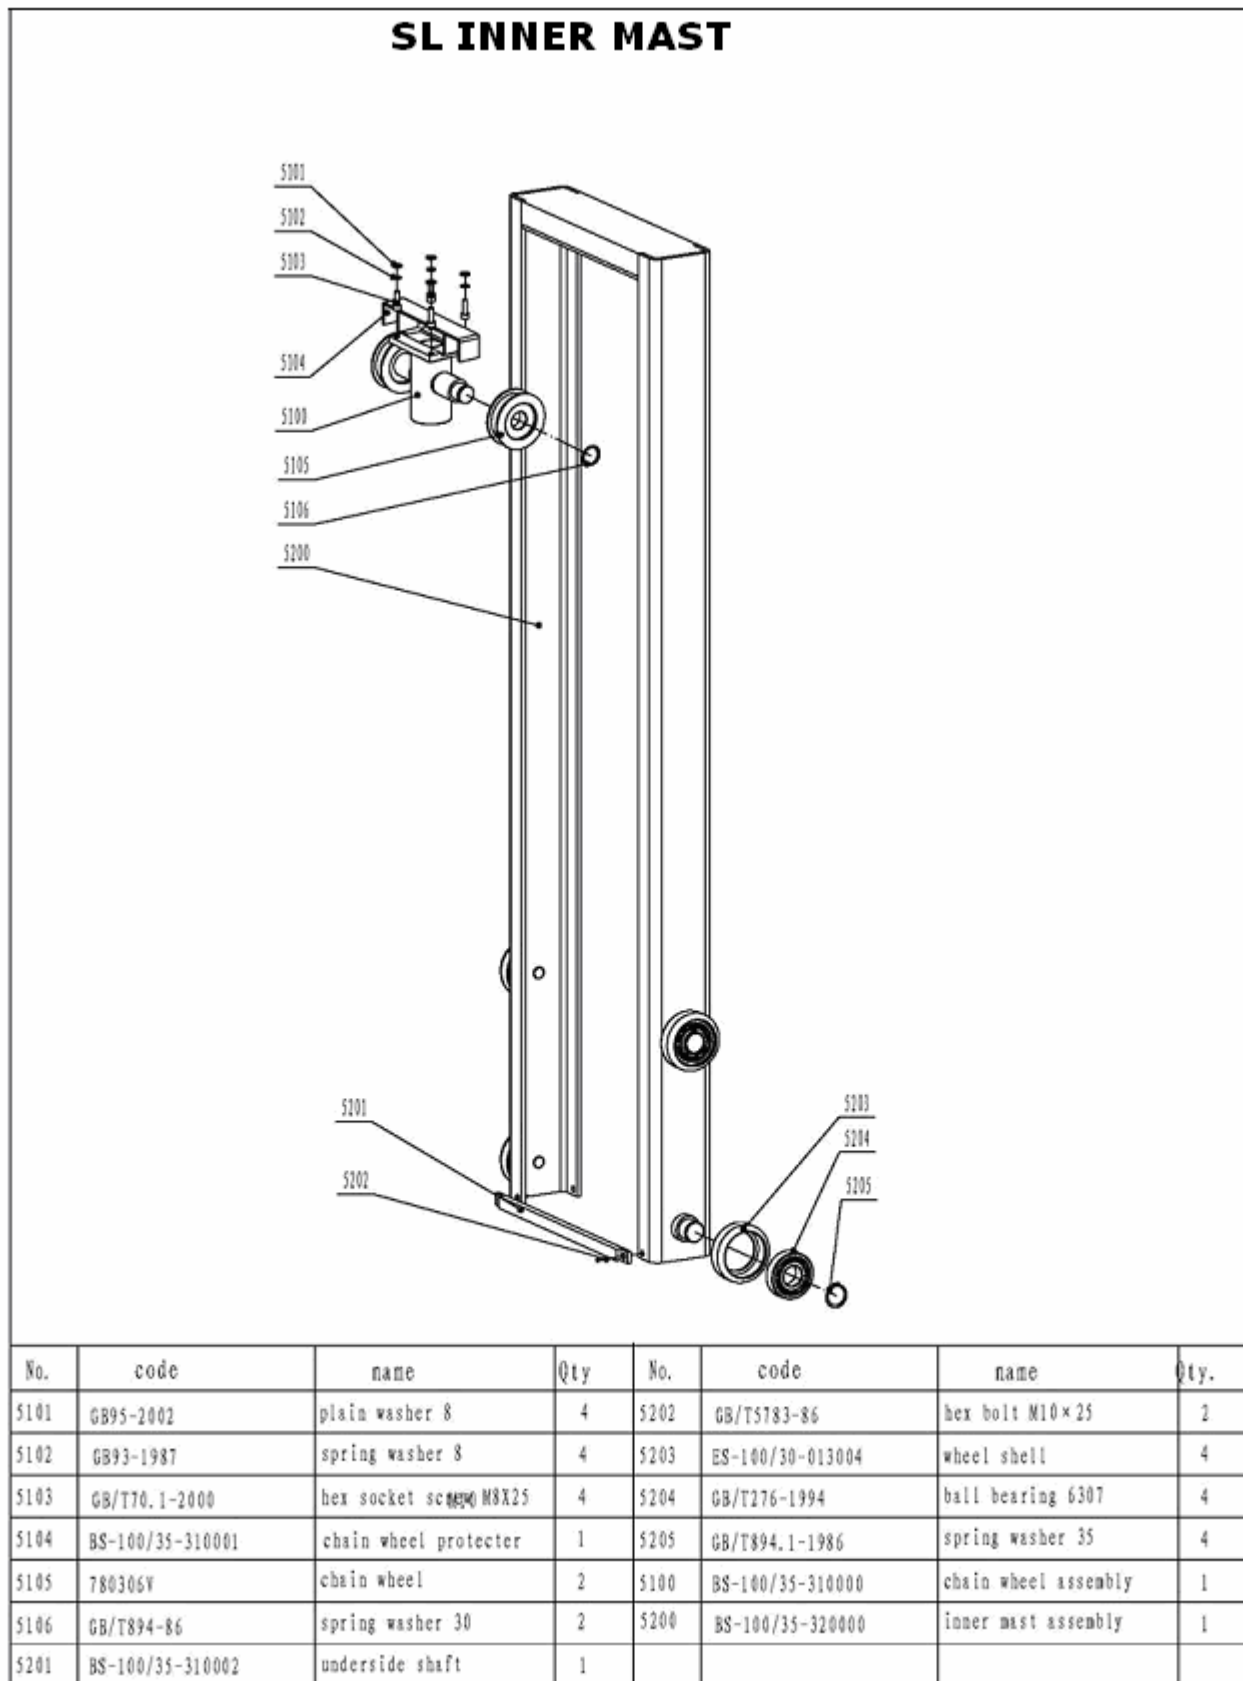

Parts drawing & Parts list


Fork drawing

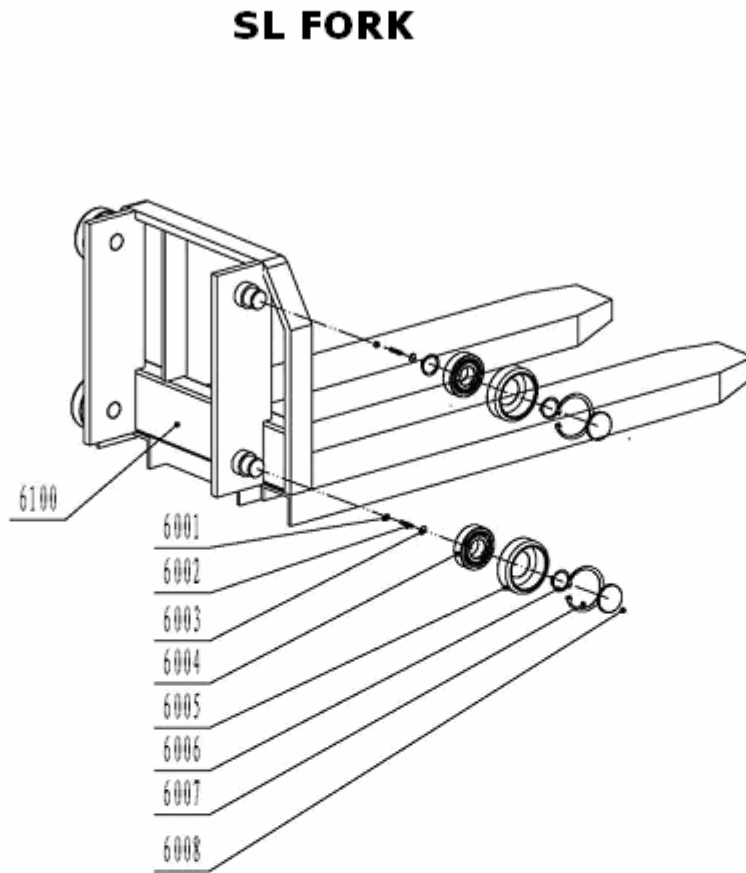

No.	code	name	Qty.
6001	GB/T41-2000	hex nut M6	4
6002	GB/T78-2000	hex socket screw with cone point M6×30	4
6003	PWS(J)-100/35-020004	middle tag	4
6004	GB/T276-1994	ball bearing 6307	4
6005	BS-100/35-200002	wheel shell	4
6006	GB/T894.1-86	spring washer 35	4
6007	GB/T893.1-86	spring washer 80	4
6008	PST-100/16E-030007	block	4
6100	BS-100/35-210000	fork assembly	1

Parts drawing


Steering assembly drawing

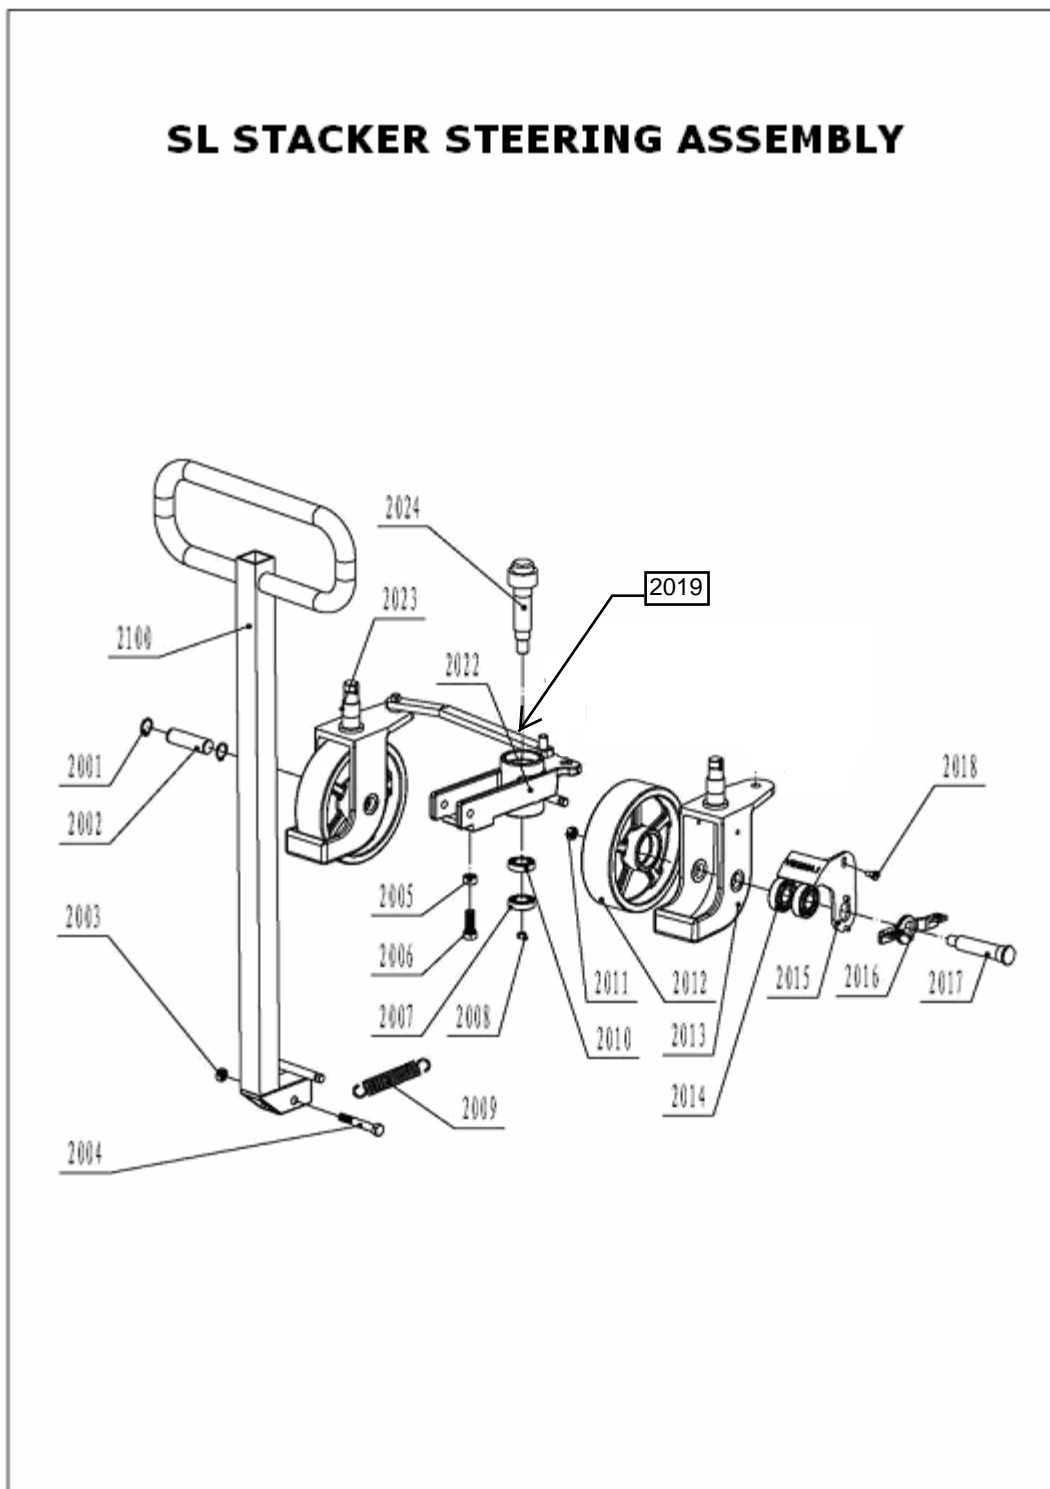

Parts list

Steering assembly component list

No.	code	name	Qty.	mark
2100	BS-100/16-110000	handle	1	
2001	GB894.1-86	spring washer	2	
2002	BS-100/16-100002	pin	1	
2003	GB/T889-86	hex nut M10	1	
2004	GB/T5780-86	hex nut M10×70	1	
2005	GB/T6170-86	hex nut M12	1	
2006	GB/T5783-86	hex bolt M12×30	1	
2007	GB/T276-94	ball bearing 6204	1	
2008	GB/T889-86	hex nut M16	1	
2009	BS-100/16-100005	spring	2	
2010	GB/T276-94	ball bearing	2	
2011	GB/T889-86	hex nut	1	
2012	BS-100/16-100011	back wheel	2	
2013	BS-100/16-100012	skid frame	1	
2014	GB/T276-94	ball bearing	4	
2015	BS-100/16-100008	skid	1	
2016	BS-100/16-100010	pedal	1	
2017	BS-100/16-100007	pin	1	
2018	BS-100/16-100009	screw	1	
2019	BS-100/16-100003	shaft	1	
2020	GB/T91-86	slip cotter pin	4	
2021	BS-100/16-100001	pin	4	
2022	BS-100/16-100006	tuning weld	1	
2023	BS-100/16-100013	back wheel frame	1	
2024	BS-100/16-100016	steer axes	1	

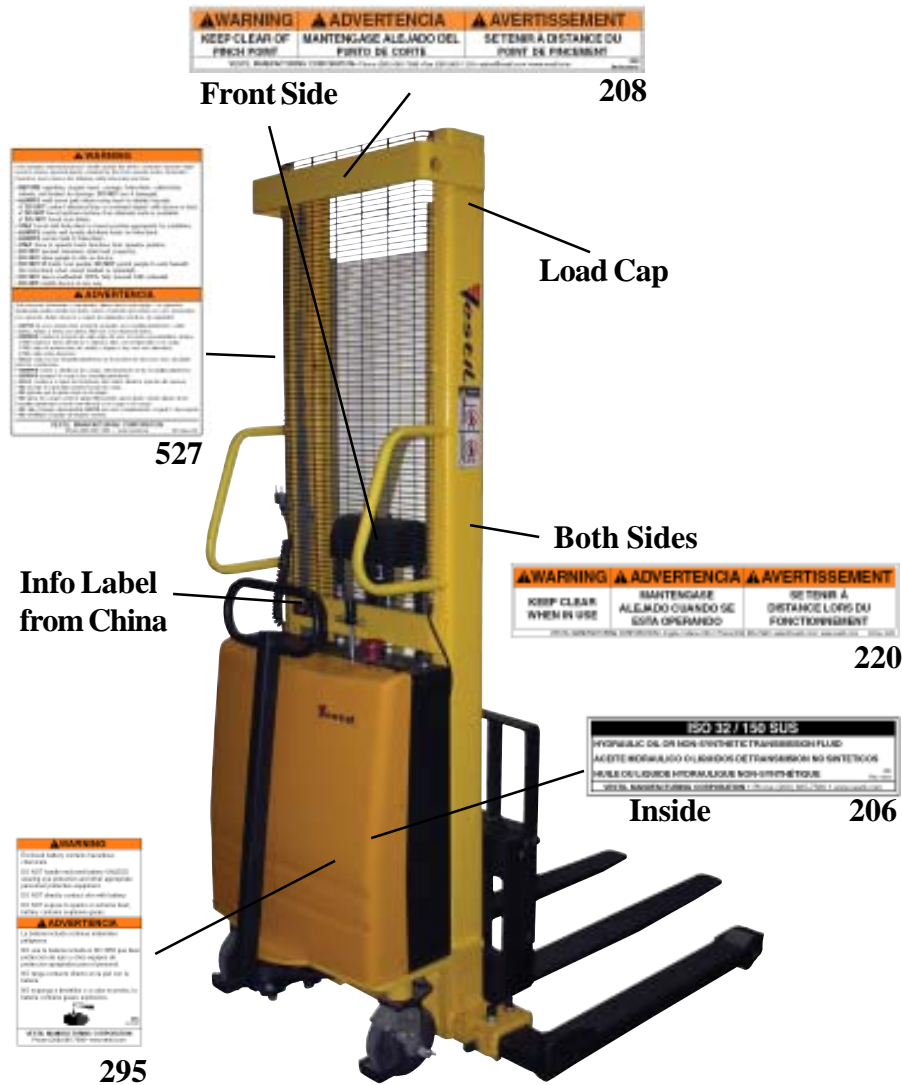

STACKER

LIMITED WARRANTY

Vestil Manufacturing Corporation ("Vestil") warrants this product to be free of defects in material and workmanship during the warranty period. *Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.*

Who may request service?

Only a warrantee may request service. *You are a warrantee if* you purchased the product from Vestil or from an authorized distributor AND Vestil has been fully paid.

What is an "original part"?

An original part is a part used to make the product as shipped to the warrantee.

What is a "proper request"?

A request for warranty service is proper if Vestil receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

Mail
Vestil Manufacturing Corporation
2999 North Wayne Street, PO Box 507
Angola, IN 46703

Fax
(260) 665-1339
Phone
(260) 665-7586

Email
sales@vestil.com

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

What is covered under the warranty?

After Vestil receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, Vestil may require you to send the entire product, or just the defective part or parts, to its facility in Angola, IN. The warranty covers defects in the following *original* dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in *original* parts that wear under normal usage conditions ("wearing parts"), such as bearings, hoses, wheels, seals, brushes, and batteries.

How long is the warranty period?

The warranty period for original dynamic components is 1 year. For wearing parts, the warranty period is 90 days. The warranty periods begin on the date when Vestil ships the product to the warrantee. If the product was purchased from an authorized distributor, the periods begin when the distributor ships the product. Vestil may, at its sole discretion, extend the warranty periods for products shipped from authorized distributors by *up to* 30 days to account for shipping time.

If a defective part is covered by the warranty, what will Vestil do to correct the problem?

Vestil will provide an appropriate replacement for any *covered* part. An authorized representative of Vestil will contact you to discuss your claim.

What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
 - Product misuse;
 - Negligent operation or repair;
 - Corrosion or use in corrosive environments;
 - Inadequate or improper maintenance;
 - Damage sustained during shipping;
 - Collisions or other incidental contacts causing damage to the product;
 - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from Vestil. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

Do any other warranties apply to the product?

Vestil Manufacturing Corp. makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.

