









INSTALLATION

Product Manual


Version: GKF510077US-00-26A-HB

Installation Instructions

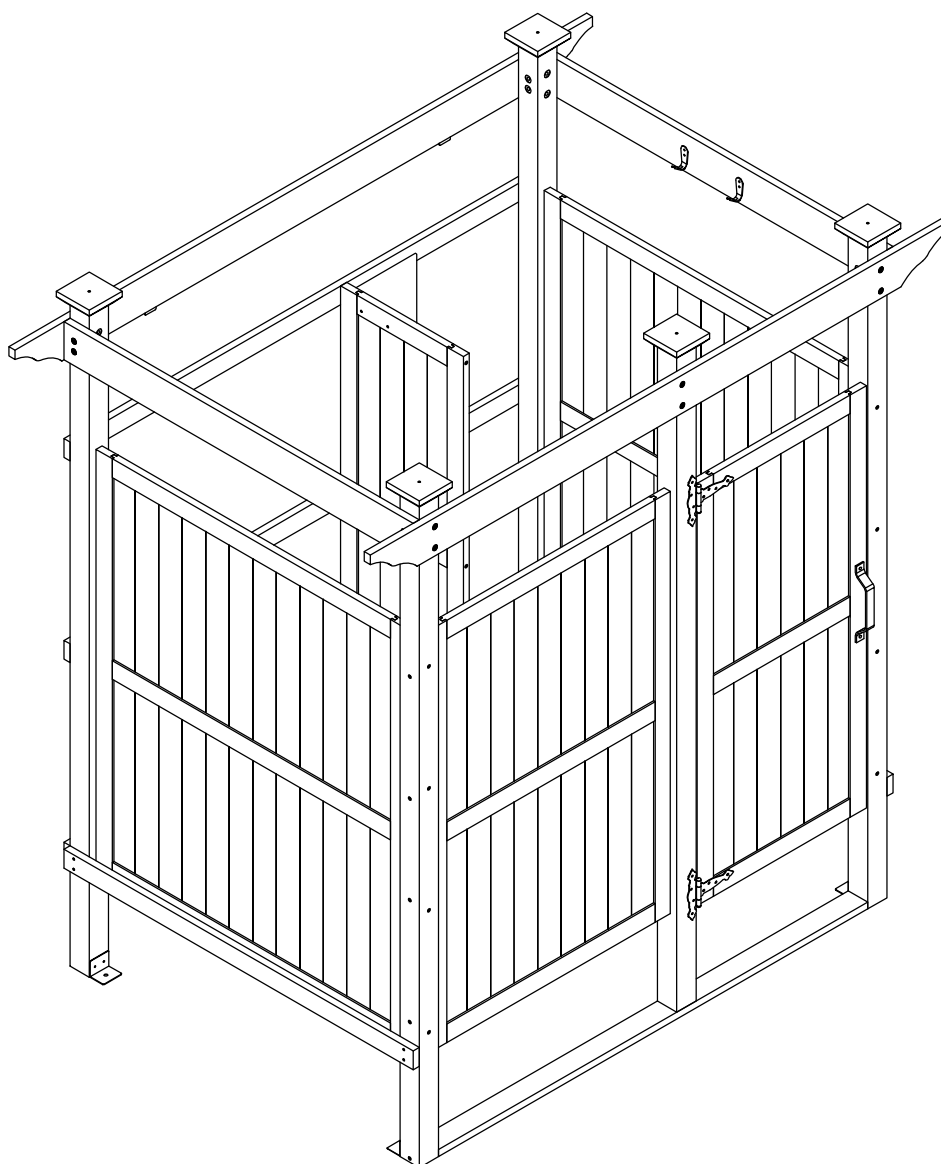


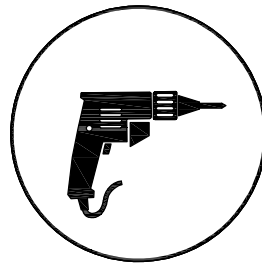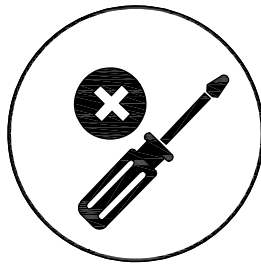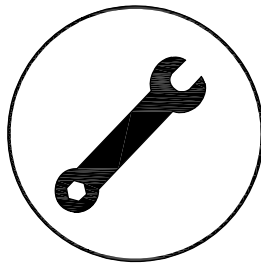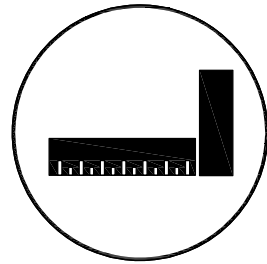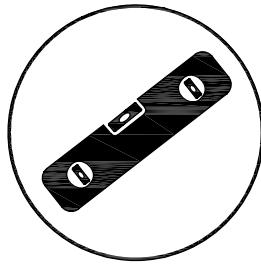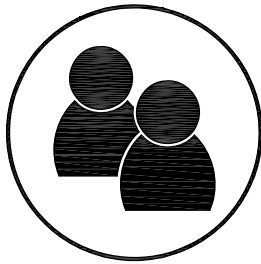

Icons and their uses you will see throughout this manual

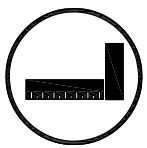

You will need to make sure that your assembly is square before tightening your bolts.

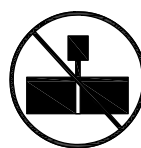


This icon warns you to not over tighten your bolts. This is to prevent structural damage and also splintering your wood.



For proper assembly you will need to ensure that your structure is level before proceeding to the next step.




This icon will show you what drill attachments are needed. For this example you will need a Phillips head attachment .

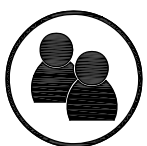

Some steps in the assembly process will require an extra set of hands. Make sure you have a helper available.




This size of the open-end wrench on these icons should correspond to the size of the nut.




Wood Components (Not to Scale)


BOX 1/2

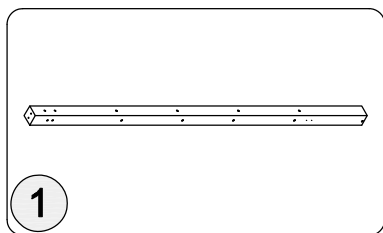


Front left column
Qty:1

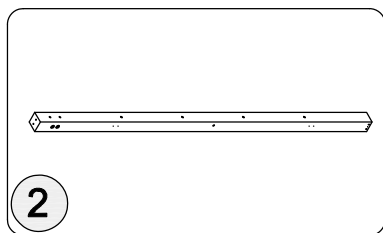


Front right column
Qty:1

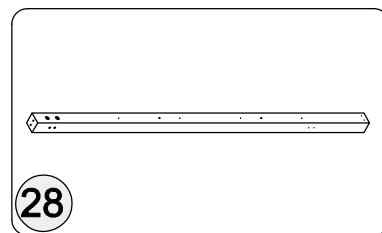


rear left column
Qty:1

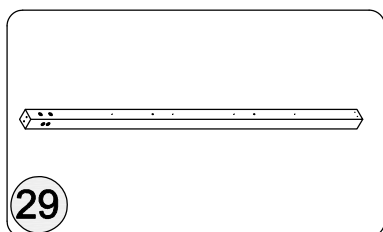


Rear right column
Qty:1

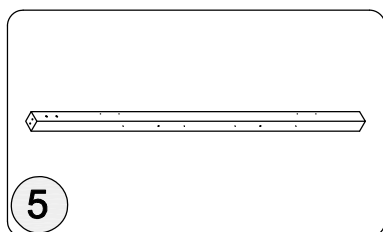


Front middle column
Qty: 1

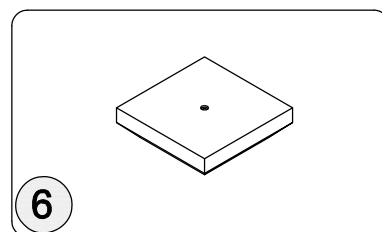


Top cube
Qty: 5

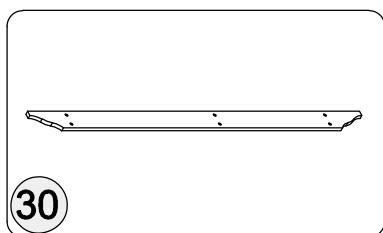


Front cross beam
Qty:1

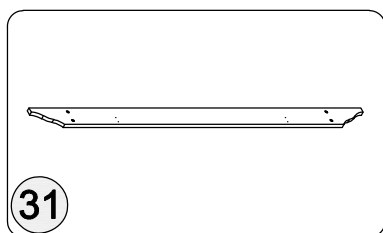

Rear cross beam
Qty: 1

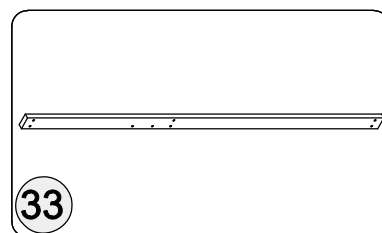


rear pull strap
Qty: 3

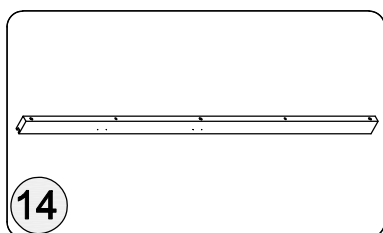

Front left bar
Qty:1




Manual



Wood Components (Not to Scale)


BOX 2/2

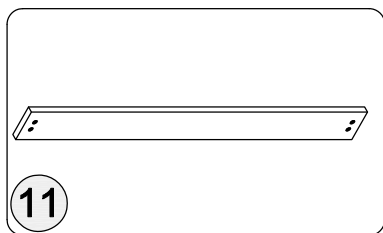

11

side beam


Qty: 2

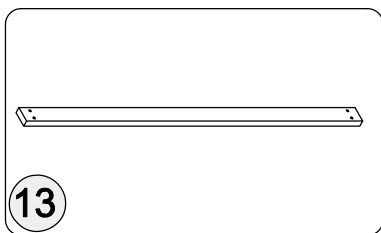

13

Connecting rod


Qty: 2

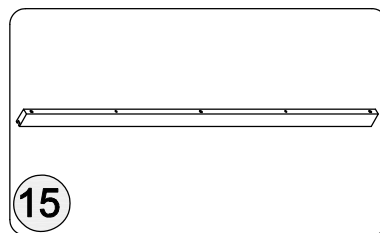

15

Front right bar


Qty: 1

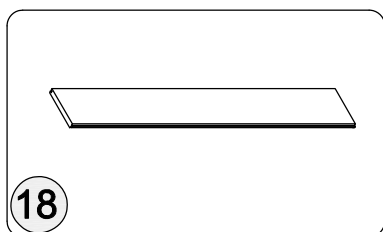

18

Core block


Qty: 86

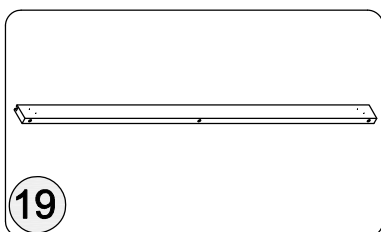

19

Left of the door


Qty: 1

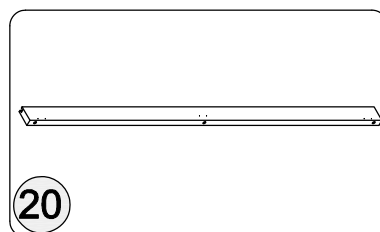

20

Right of the door


Qty: 1

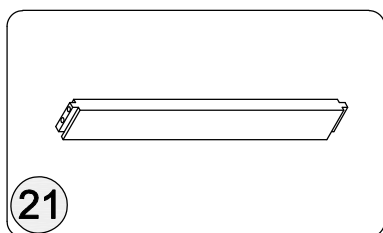

21

door header


Qty: 2

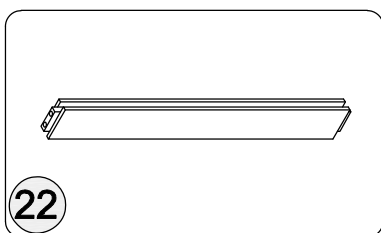

22

Mid-line


Qty: 1

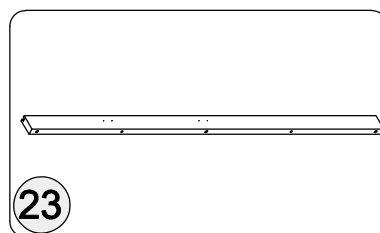

23

Left plate left strip


Qty: 1

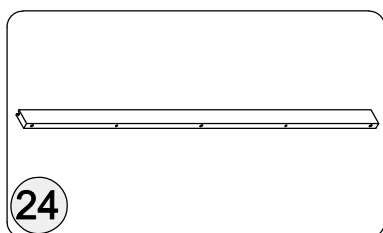

24

side slat


Qty: 3

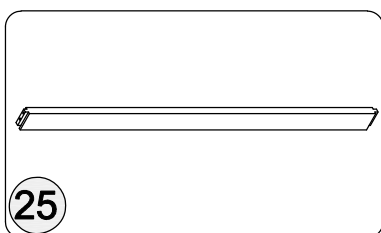

25

Side panel cross bar


Qty: 4

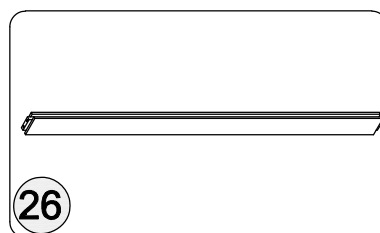

26

Mid-line


Qty: 2

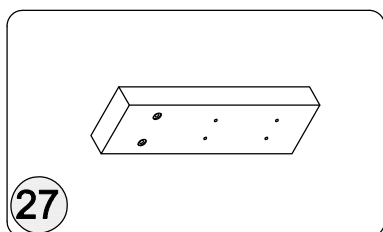

27

Thickening strip


Qty: 4

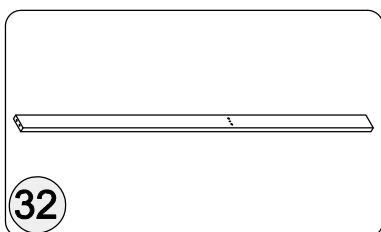

32

Front bottom bar


Qty: 1

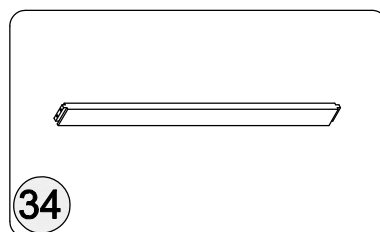

34


Horizontal bar

Qty: 2



Wood Components (Not to Scale)


BOX 2/2

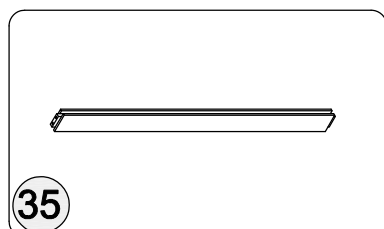

35

Mid-line


Qty: 1

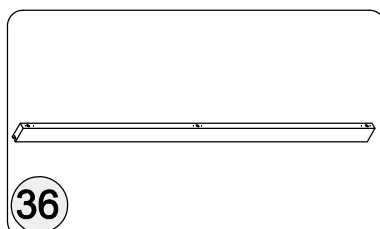

36

Left side bar


Qty: 1

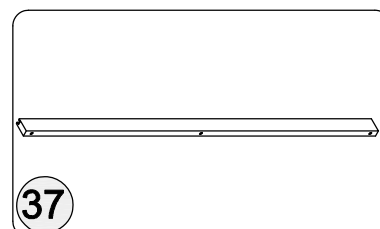

37

Right side bar


Qty: 1

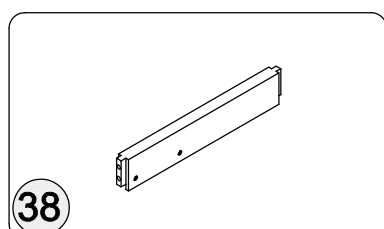

38

Top horizontal bar


Qty: 1

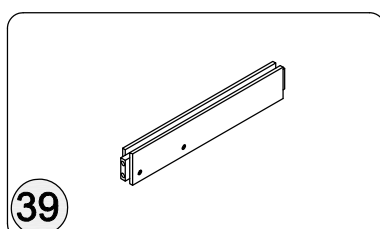

39

Middle horizontal bar


Qty: 1

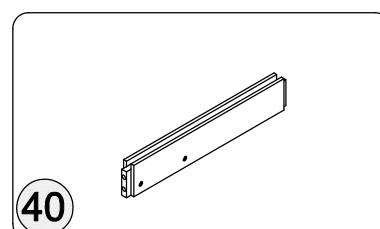

40

Bottom horizontal bar


Qty: 1

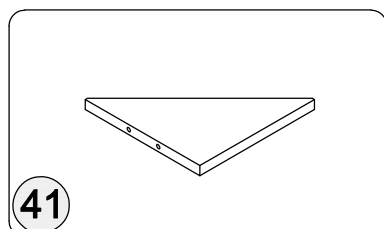

41

Triangle layer board


Qty: 1

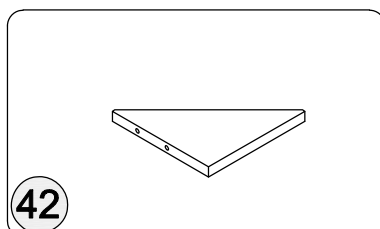

42

Triangle layer board

Qty: 2












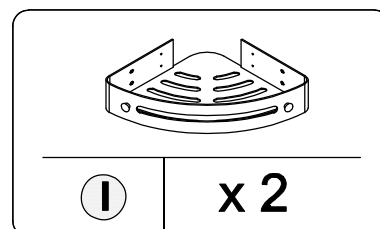



I

x 2


Basket

Hardwares

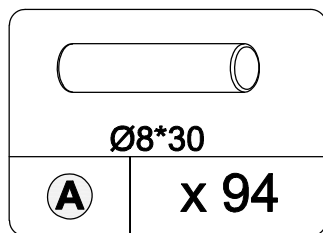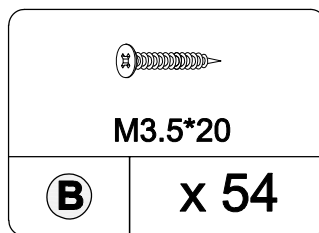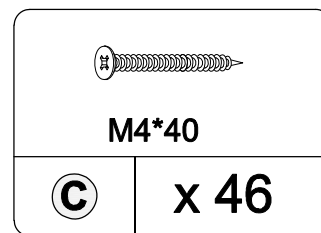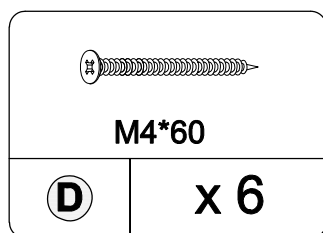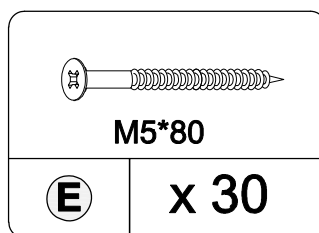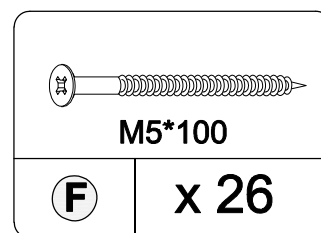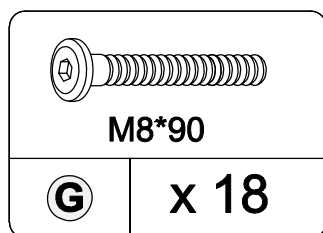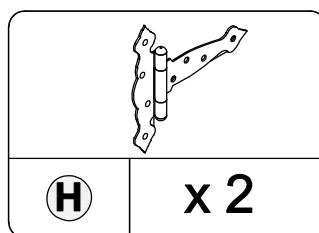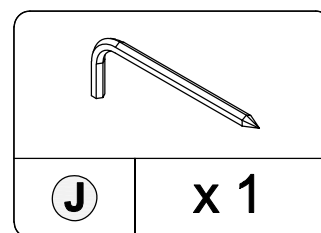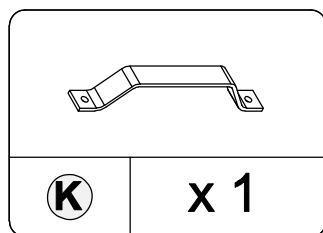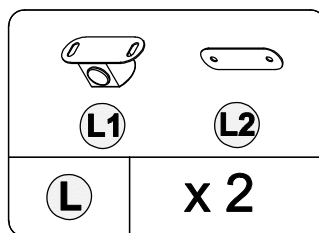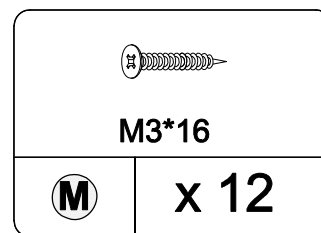
Hardware Components

Wooden tenons

Screw

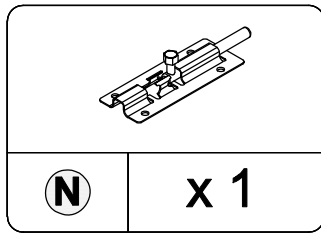Screw

Screw

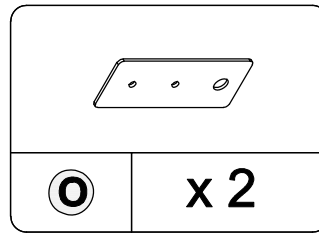Screw

Screw

screws

Hinge

Hex key

Lam door

Door stopper

Screw




Hardware Components




plug




iron sheet

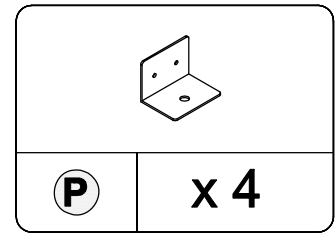


connect iron sheet

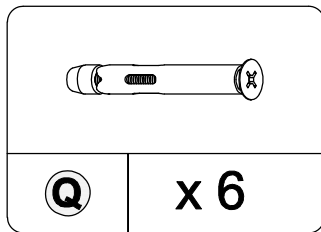

Earth screw

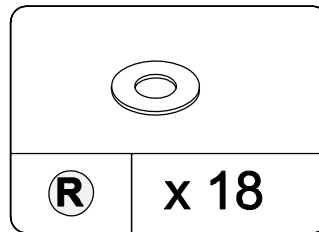


Flat washer

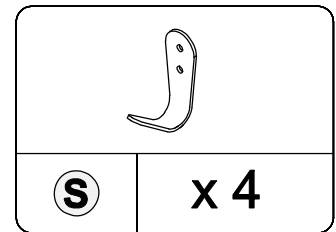

Hook


Installation of front left frame

Step 1

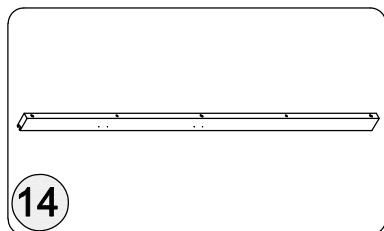


14

Front left bar
Qty:1

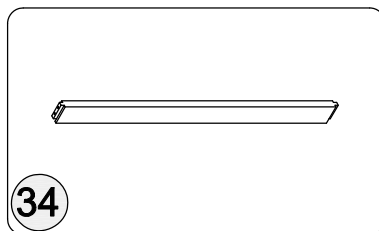

34

Horizontal bar
Qty: 2


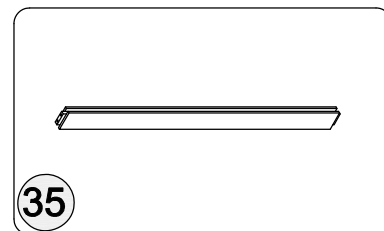



35

Mid-line
Qty: 1



1. Note that there are lead holes on component 14
2. Components 34 , 35 , 14 are connected using hardware A

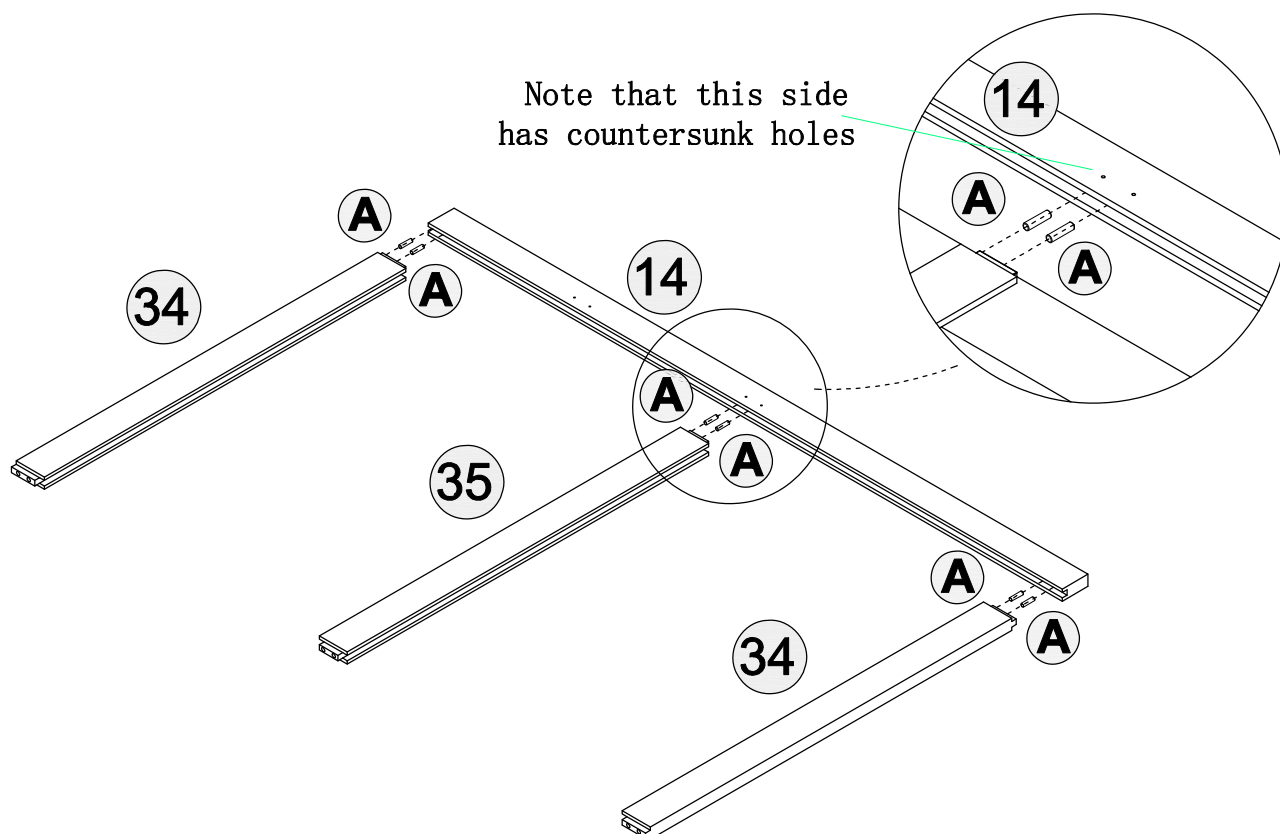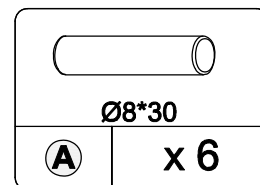

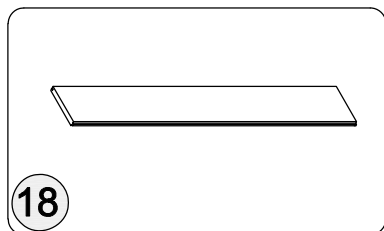

18

Core block

Qty: 2





M5*80

E

x 3

1. Put component 18 into the slot, adjust it appropriately, and install it with hardware E

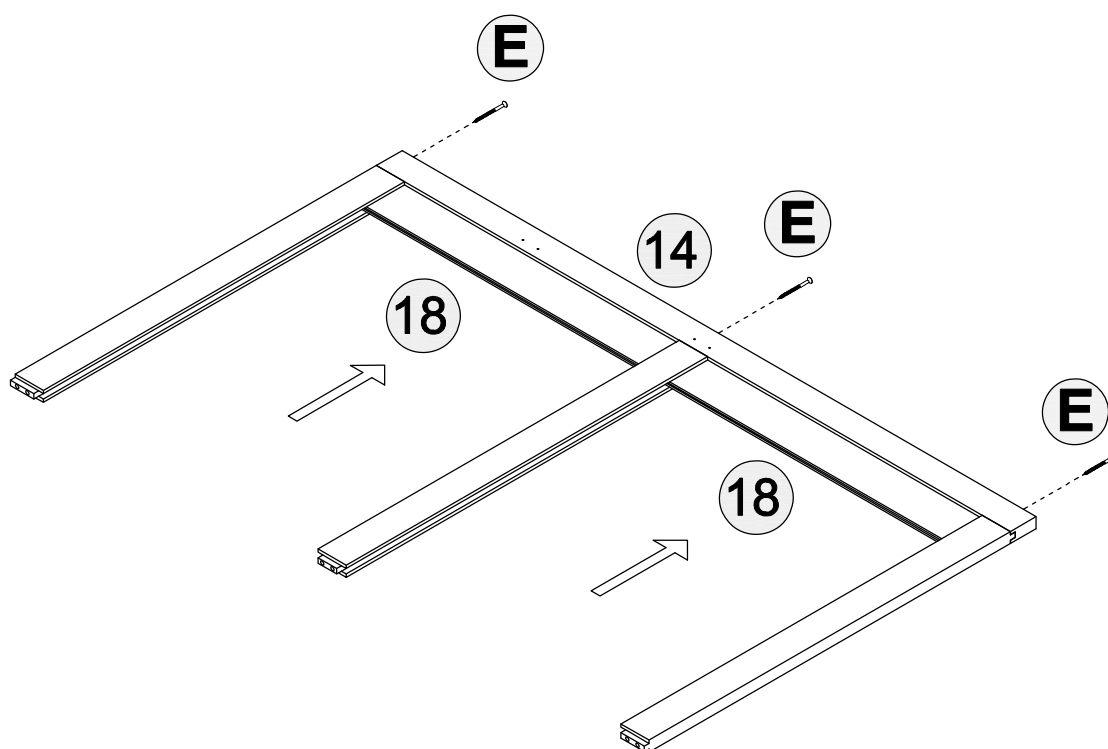

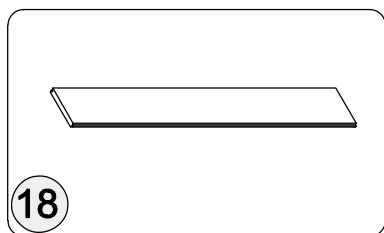



18

Core block


Qty: 16

1. Place component 18 in sequence, aligning the slots neatly

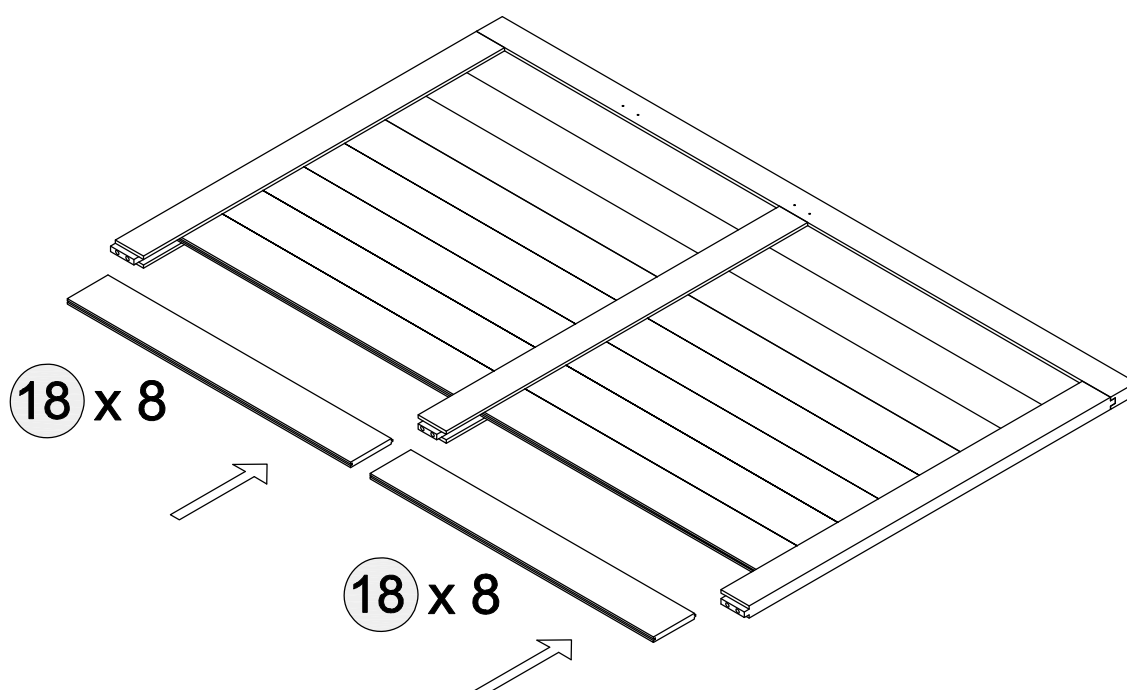

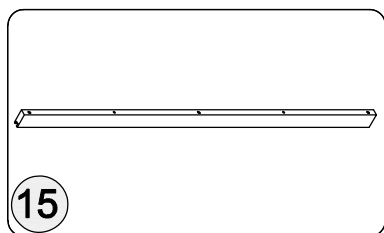

Front right bar
Qty: 1



Ø8*30

A

x 6





M5*80

E

x 3

1. Connect with hardware A first, then install with hardware E

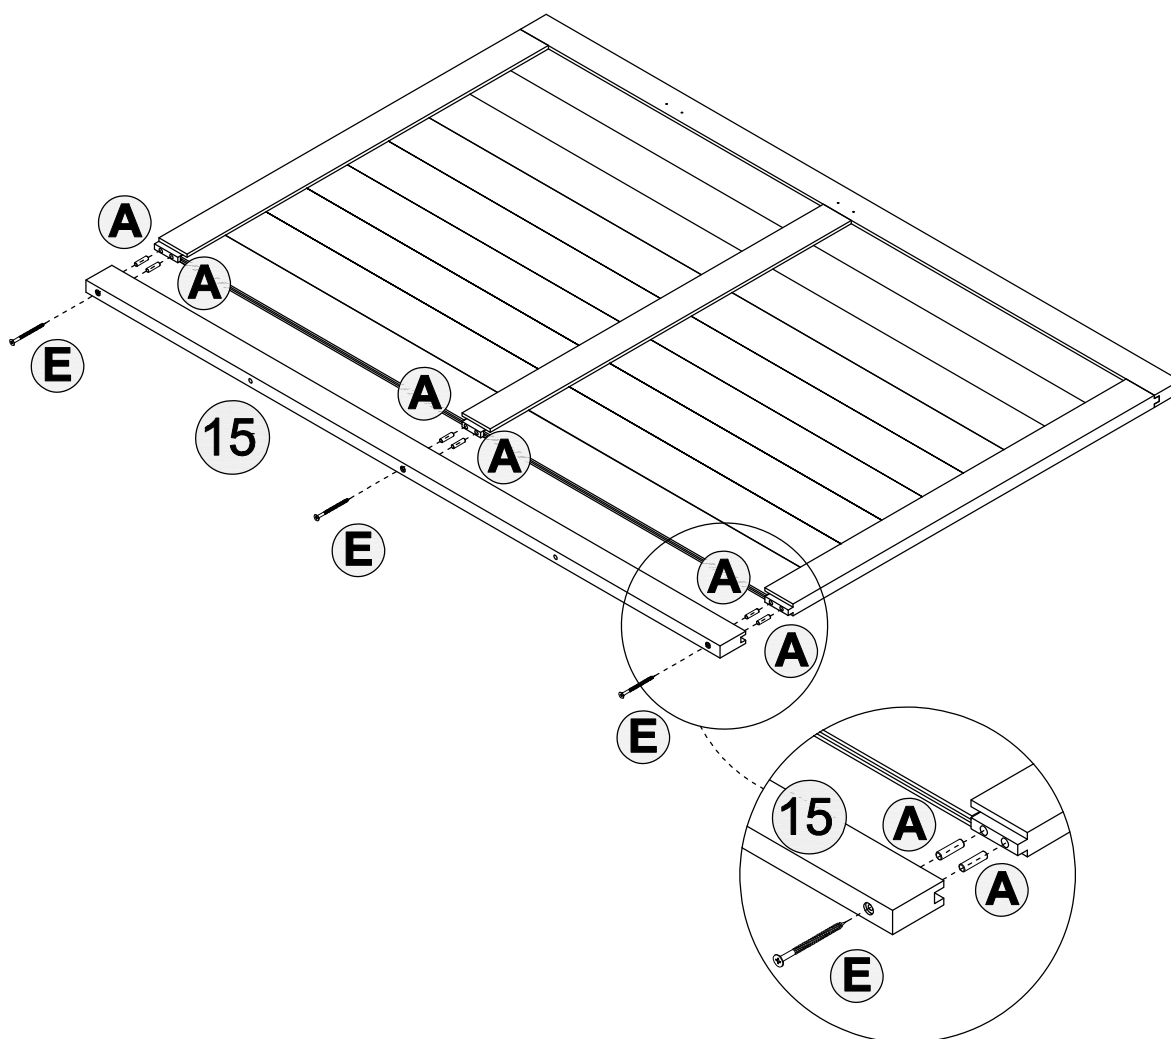

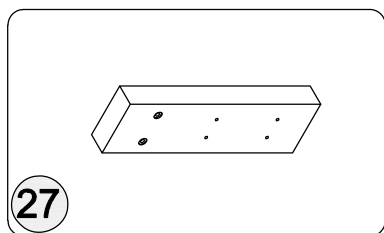

27

Thickening strip

Qty: 2





M4*40

C

x 4


1. Use hardware C to pass through component 27 and install the lead holes properly

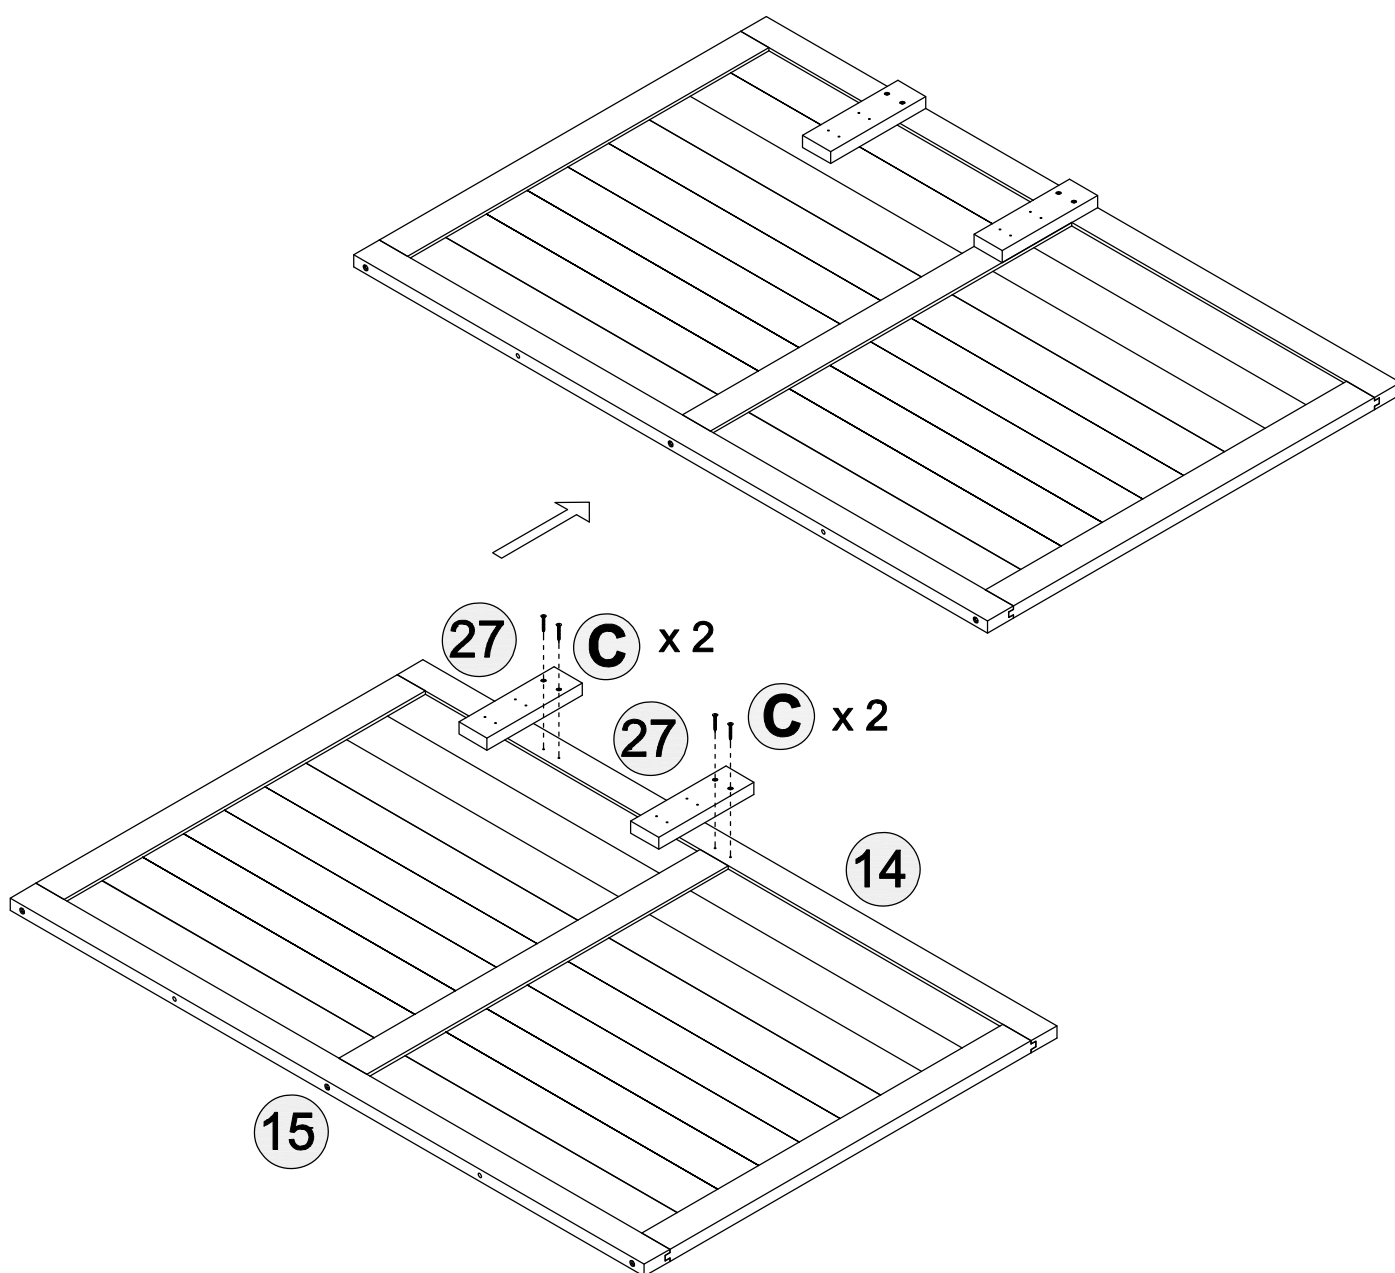

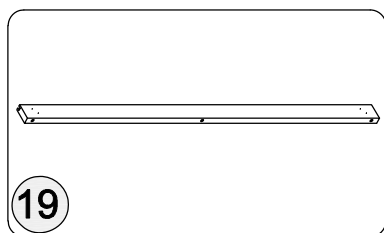


19

Left of the door
Qty:1

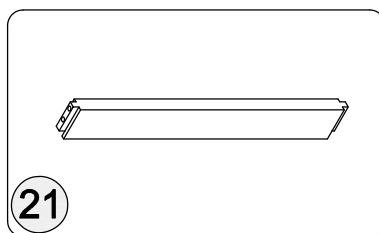

21



door header
Qty: 2

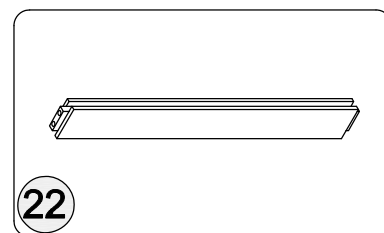


22


Mid-line
Qty:1

- ⚠ 1. Note that the lead hole of component 19 is facing upwards
2. Components 21 ,22 ,19are connected using hardware A

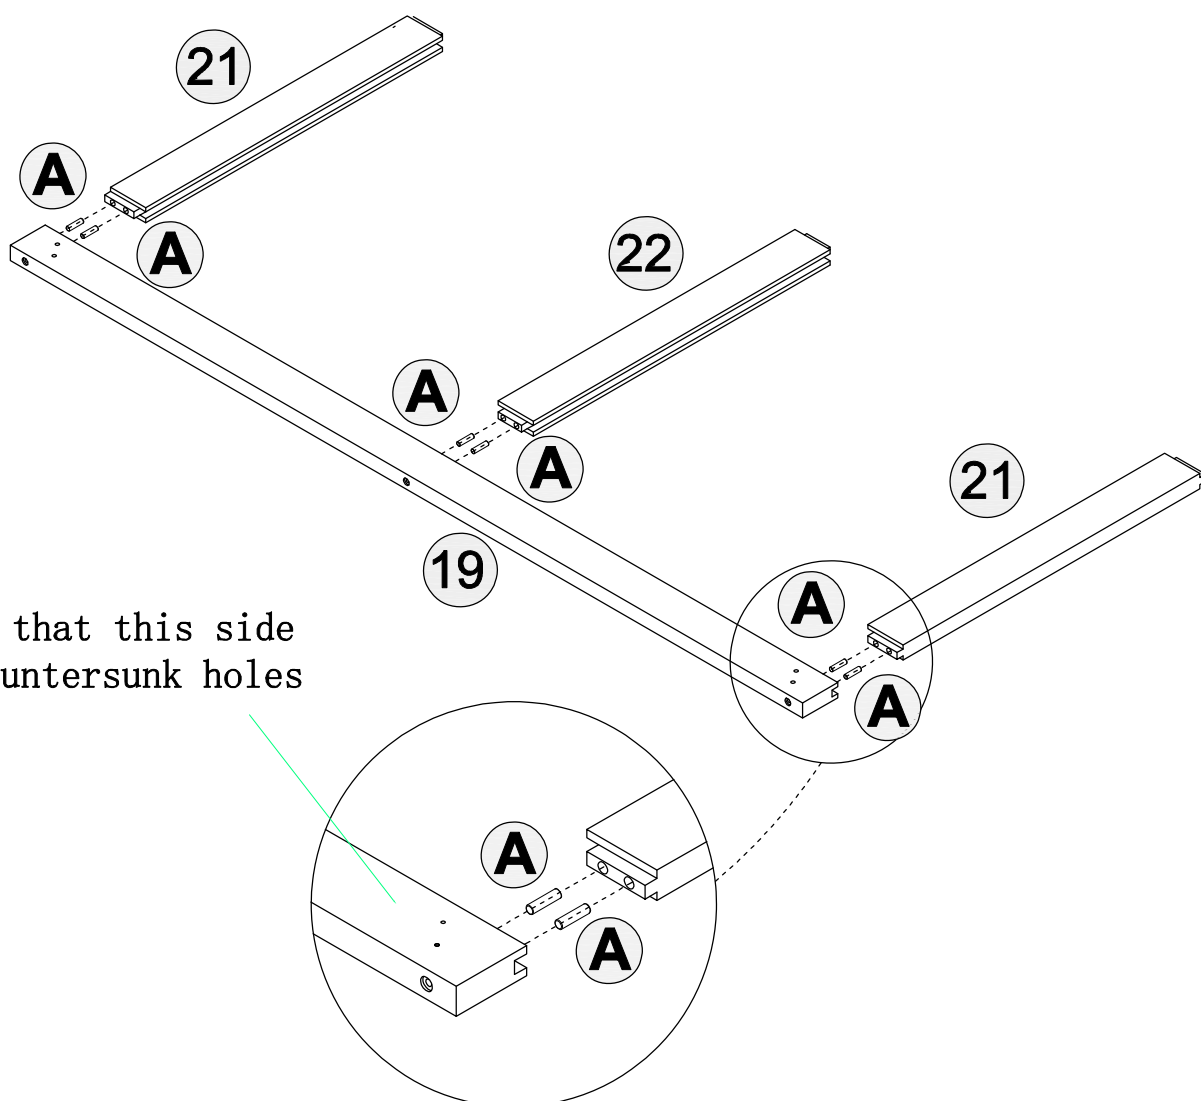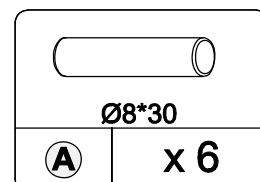


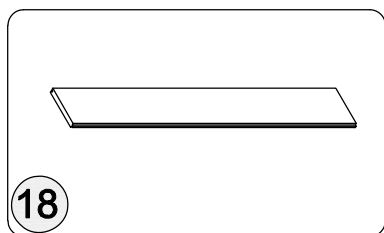


Core block
Qty: 2

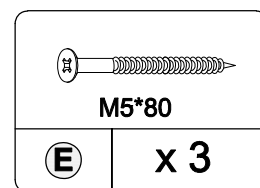

1. Put component 18 into the slot, adjust it appropriately, and install it with hardware E

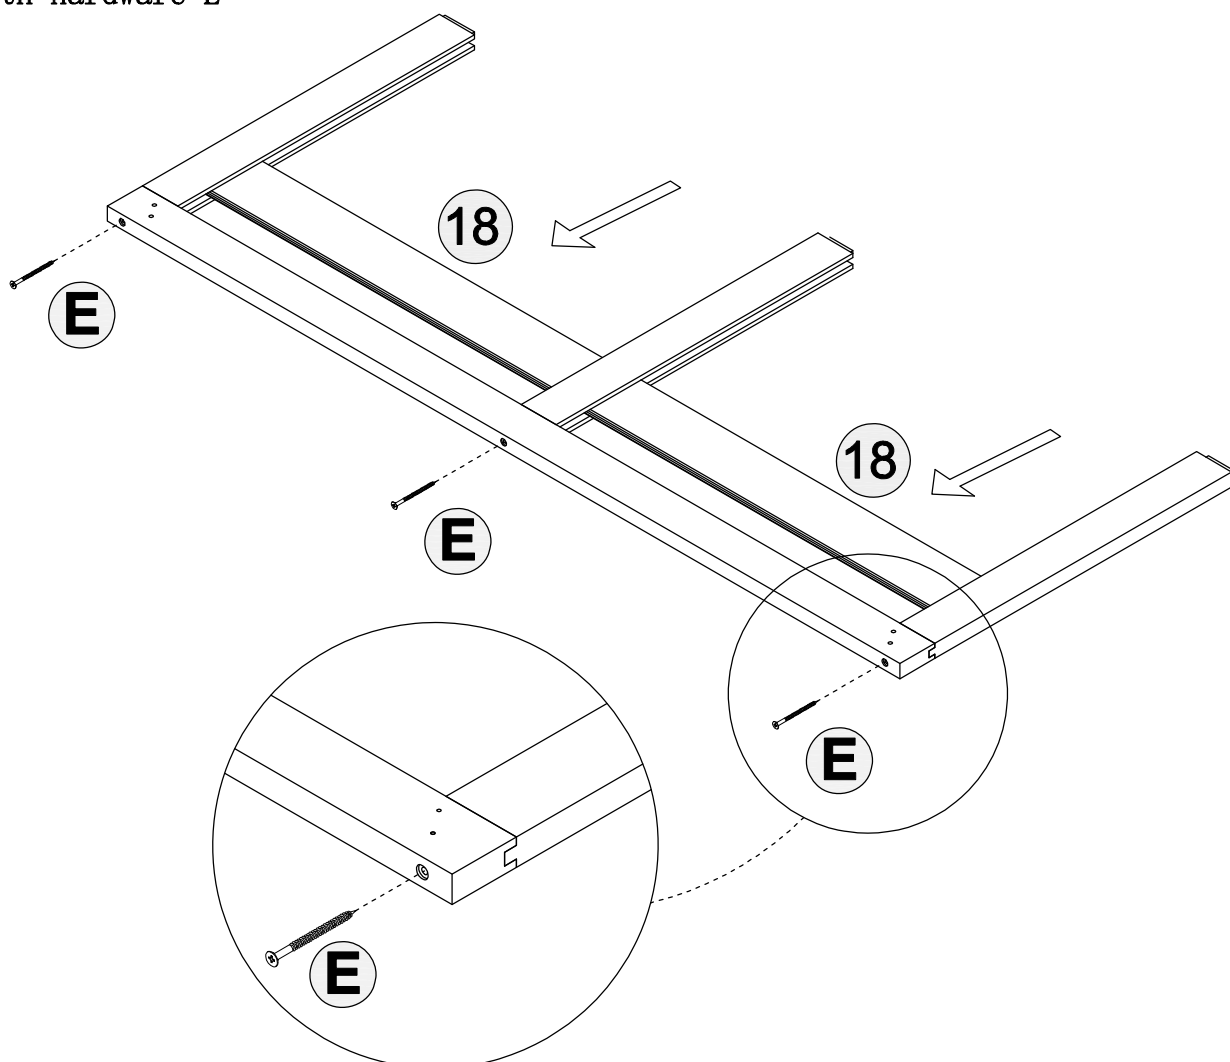

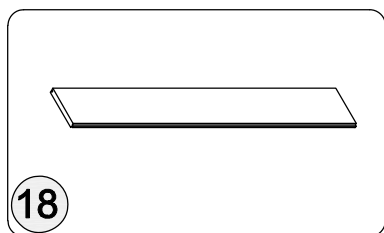



18

Core block



Qty: 10

1. Place component 18 in sequence, aligning the slots neatly

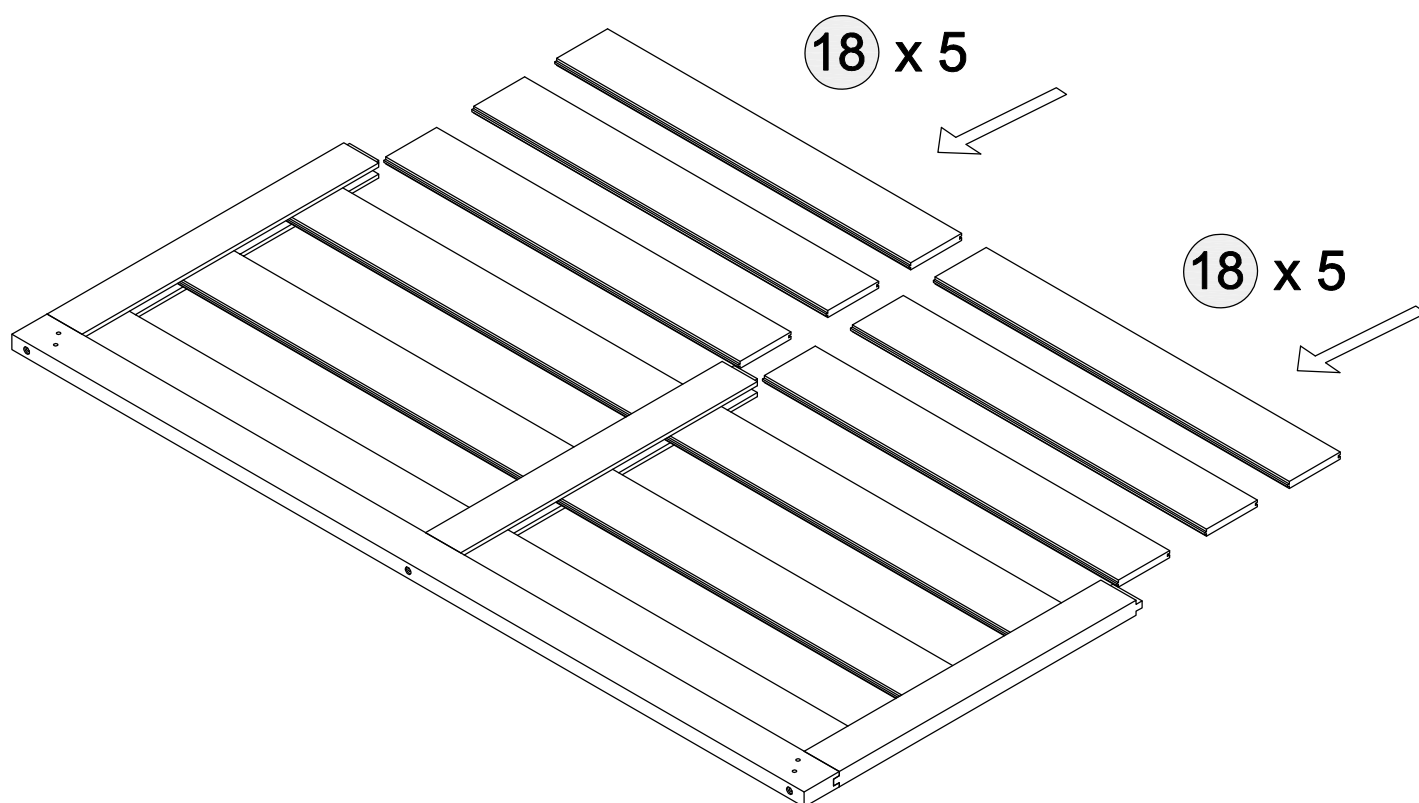


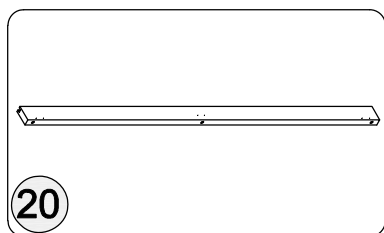


Right of the door
Qty:1

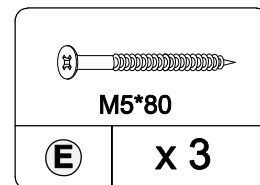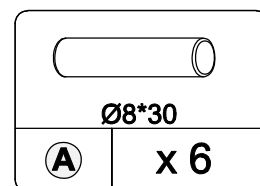





1. Connect with hardware A first, then install with hardware E


⚠ 2. Note that there are lead holes on component 20

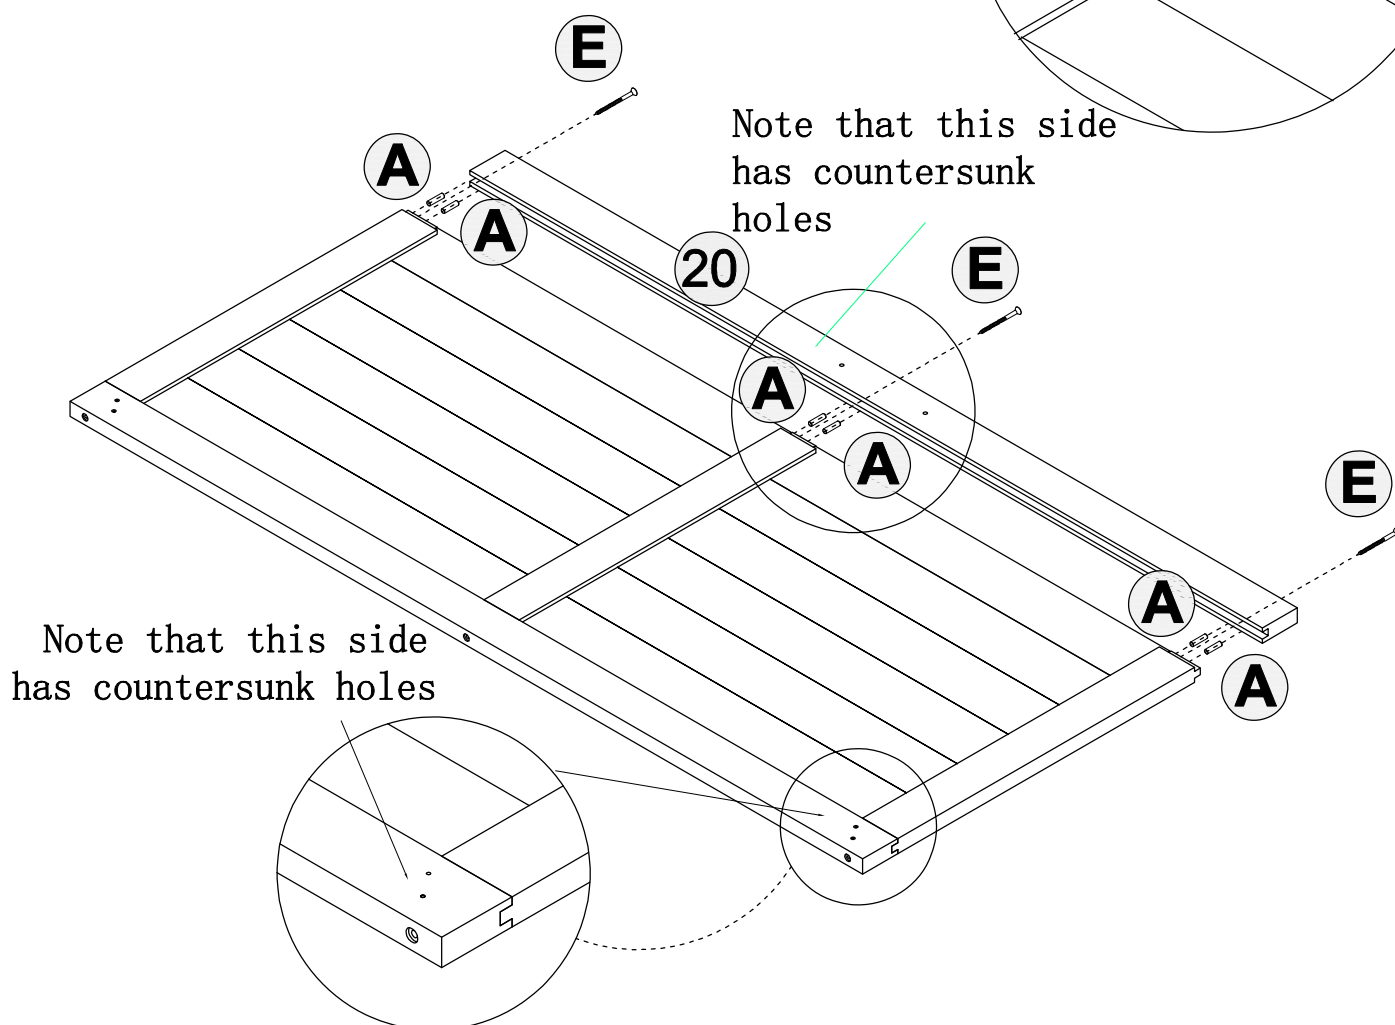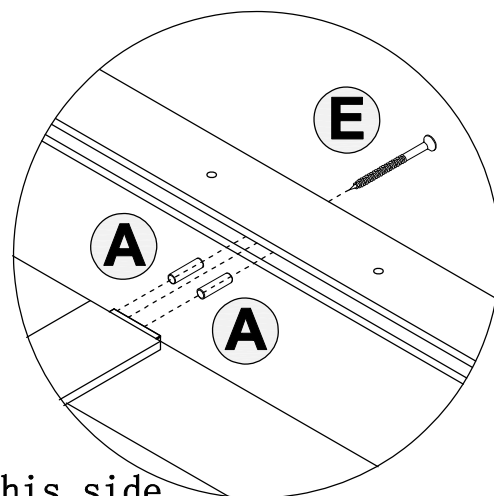

1. Pre-install the hardware B for the pilot hole, and then install the other holes of the hardware B.

⚠ 2. Please note that the hole positions of the pilot holes must be aligned

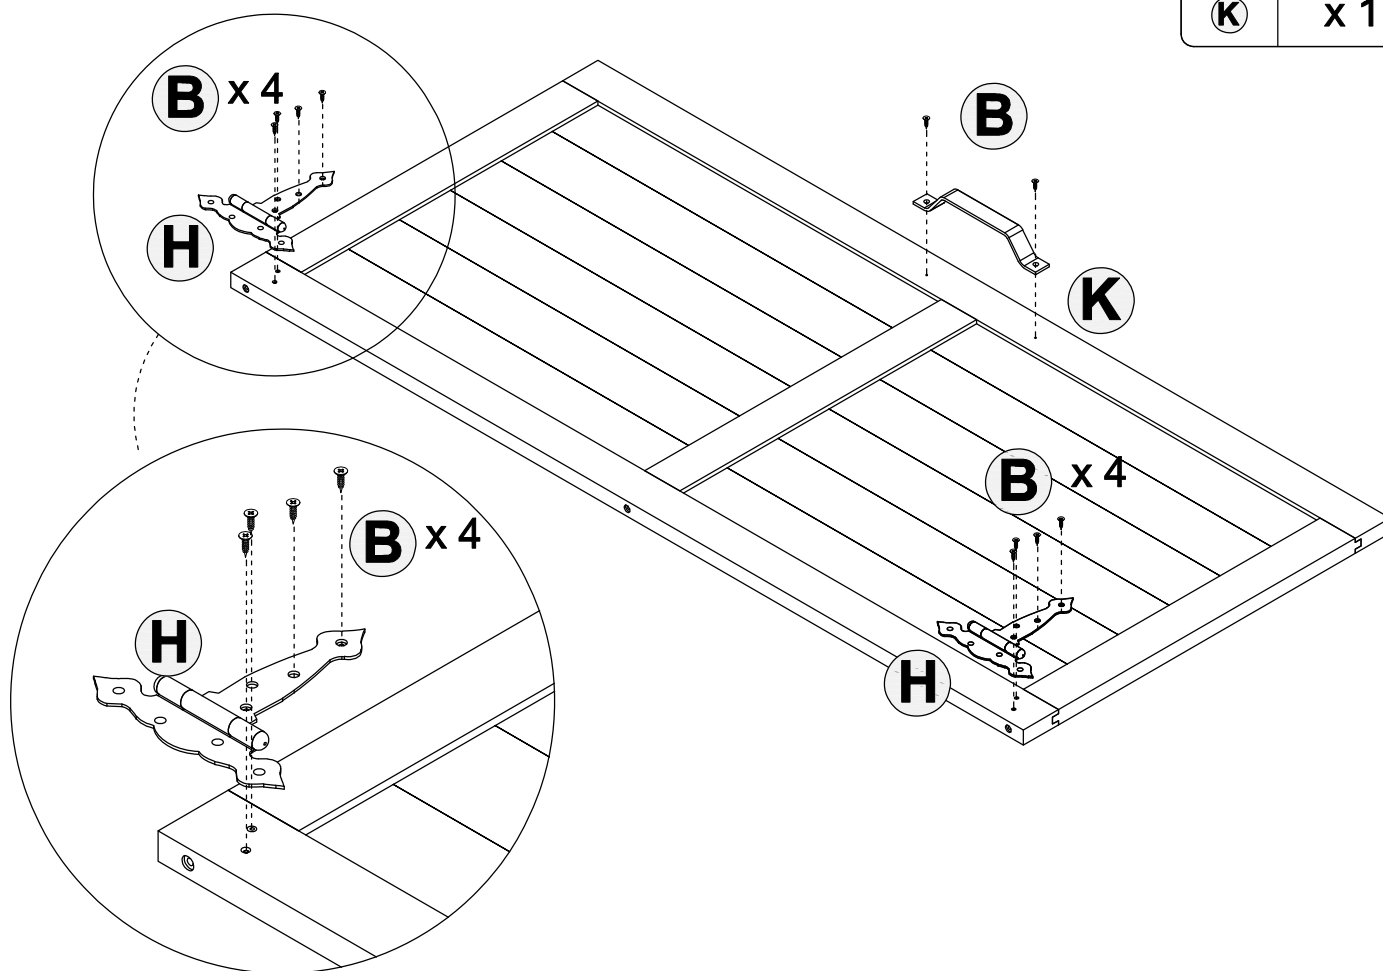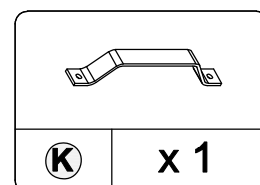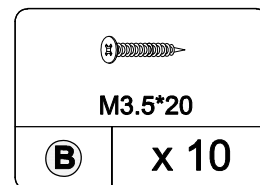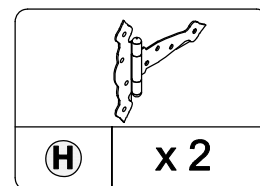


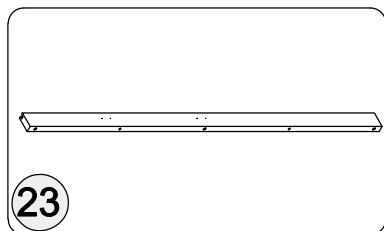

23

Left plate left strip


Qty:1

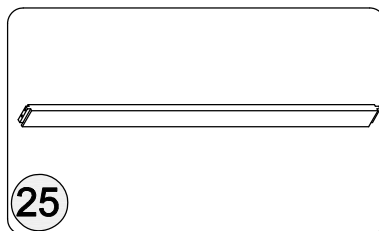

25

Side panel cross bar

Qty: 2

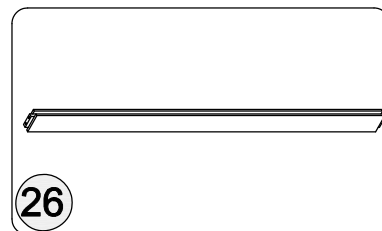

26



Mid-line


Qty: 1



1. Note that there are lead holes on component 23

2. Components 23 ,25 ,26 are connected using hardware A

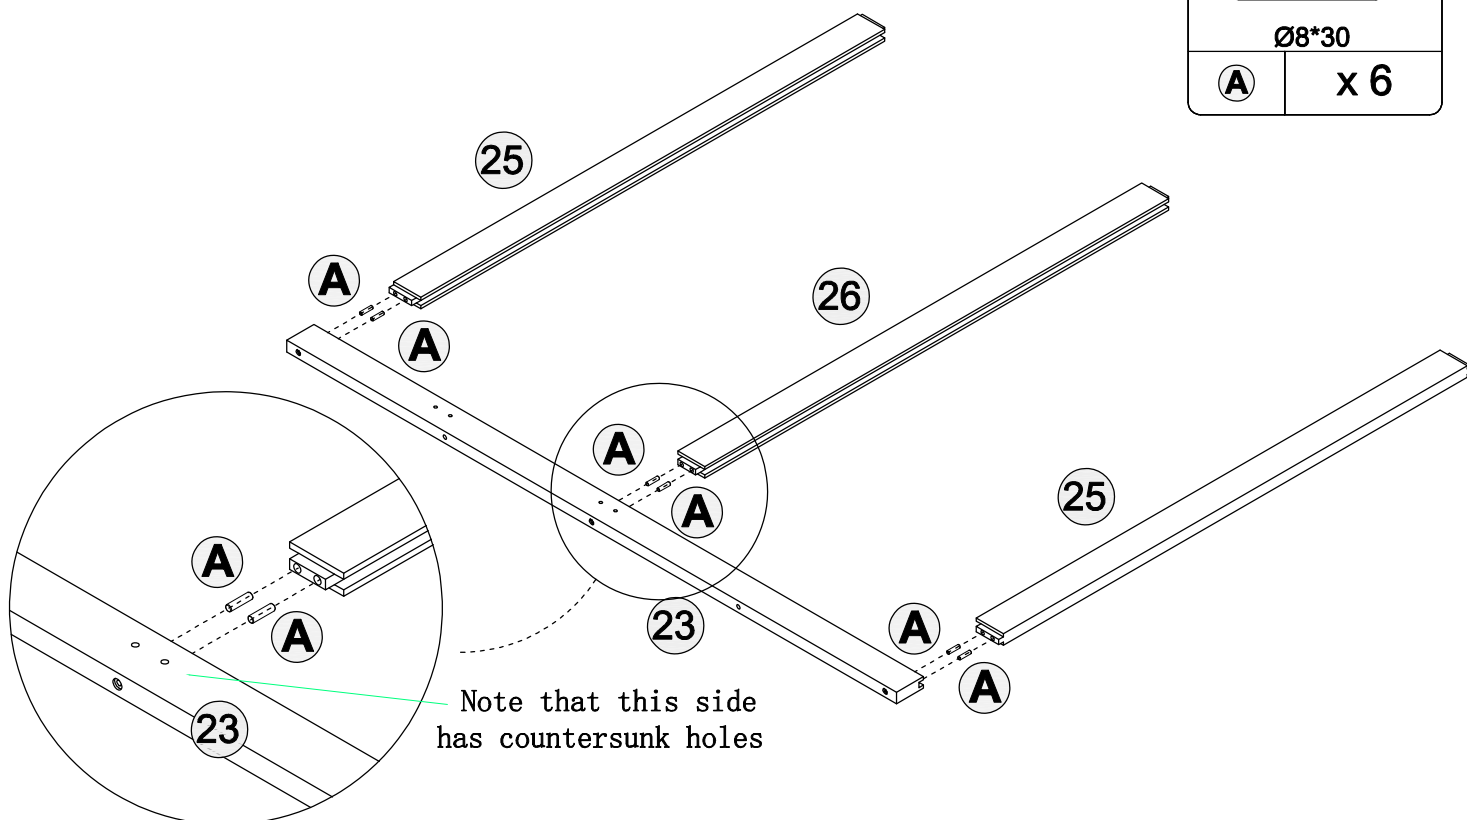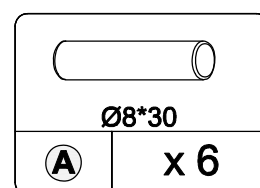

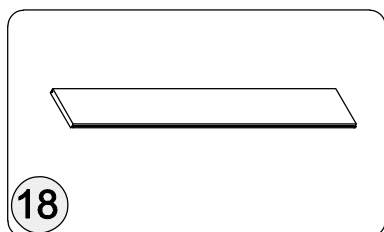

18

Core block

Qty: 2





M5*80

E

x 3


1. Put component 18 into the slot, adjust it appropriately, and install it with hardware E

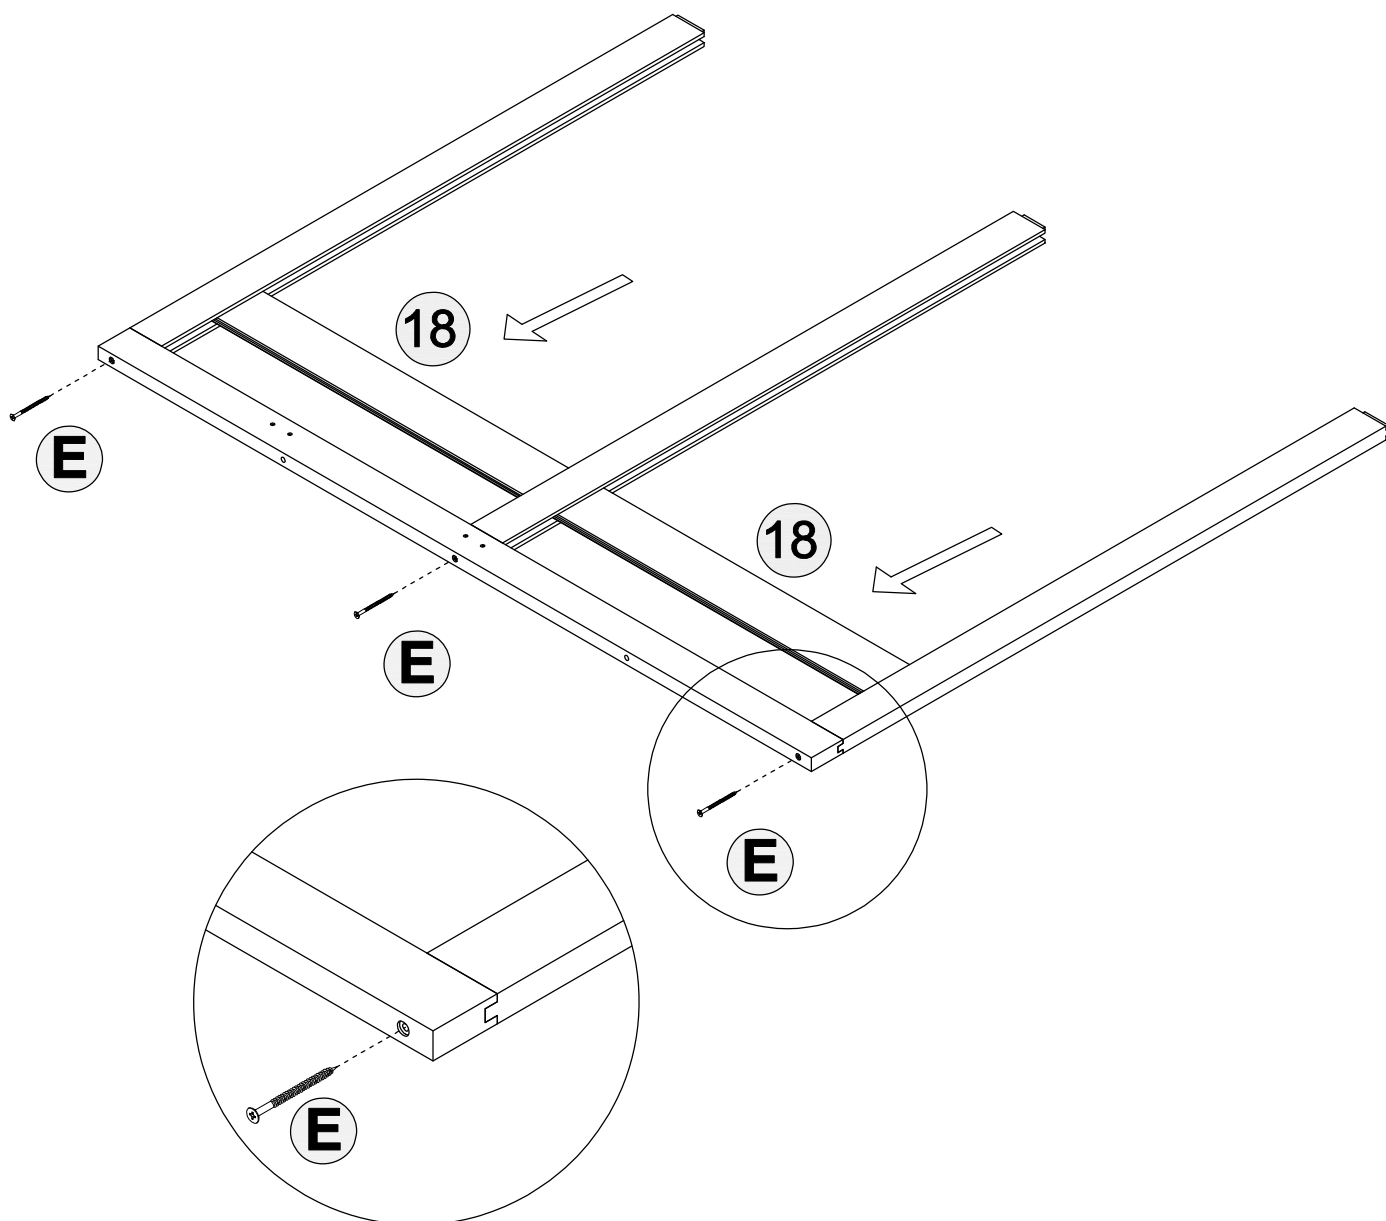


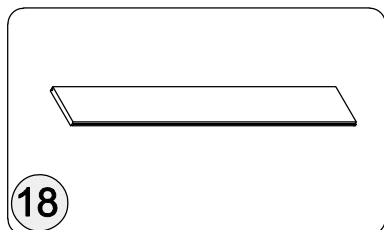

Core block
Qty: 22



1. Place component 18 in sequence, aligning the slots neatly

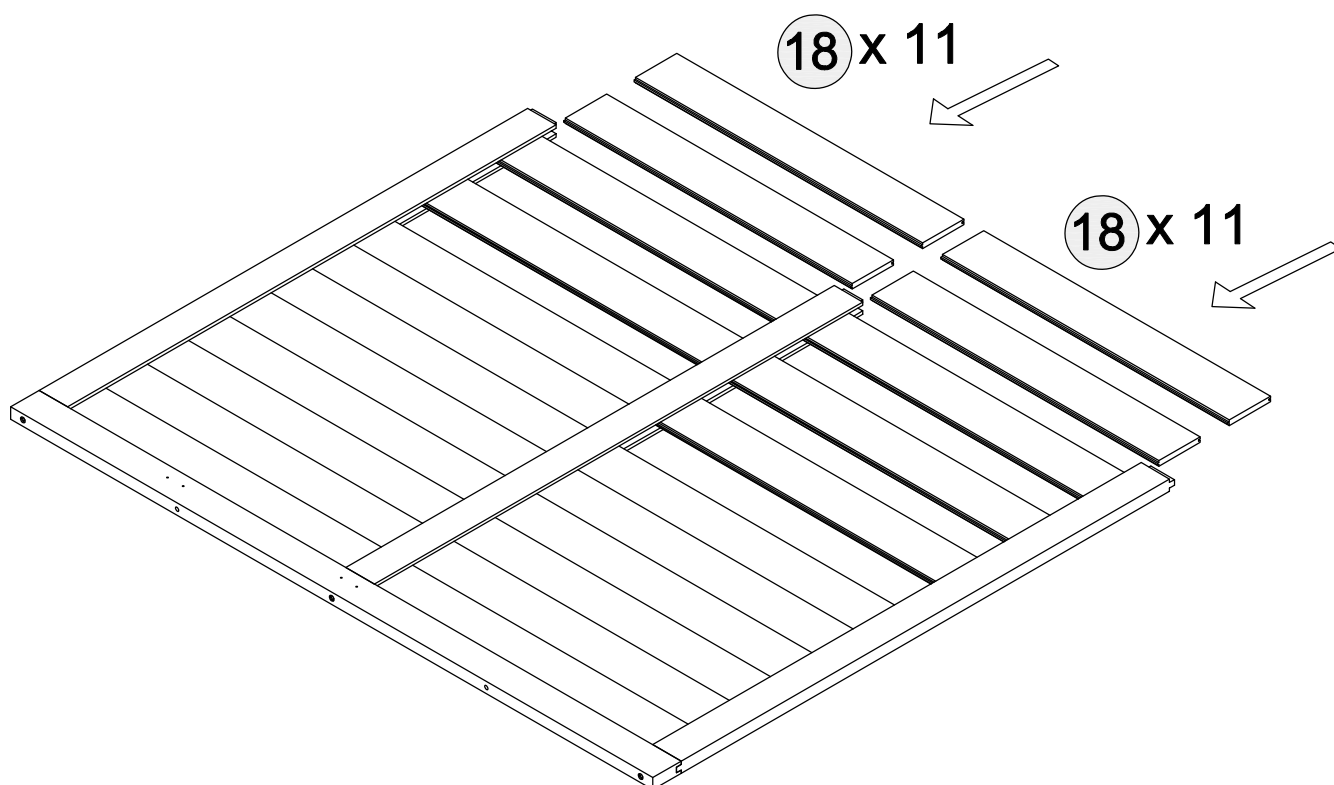

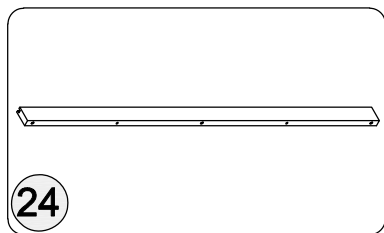



side slat

Qty: 1

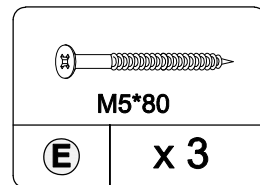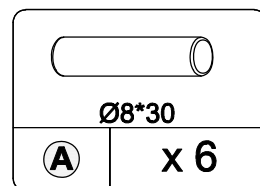

1. Connect with hardware A first, then install with hardware E

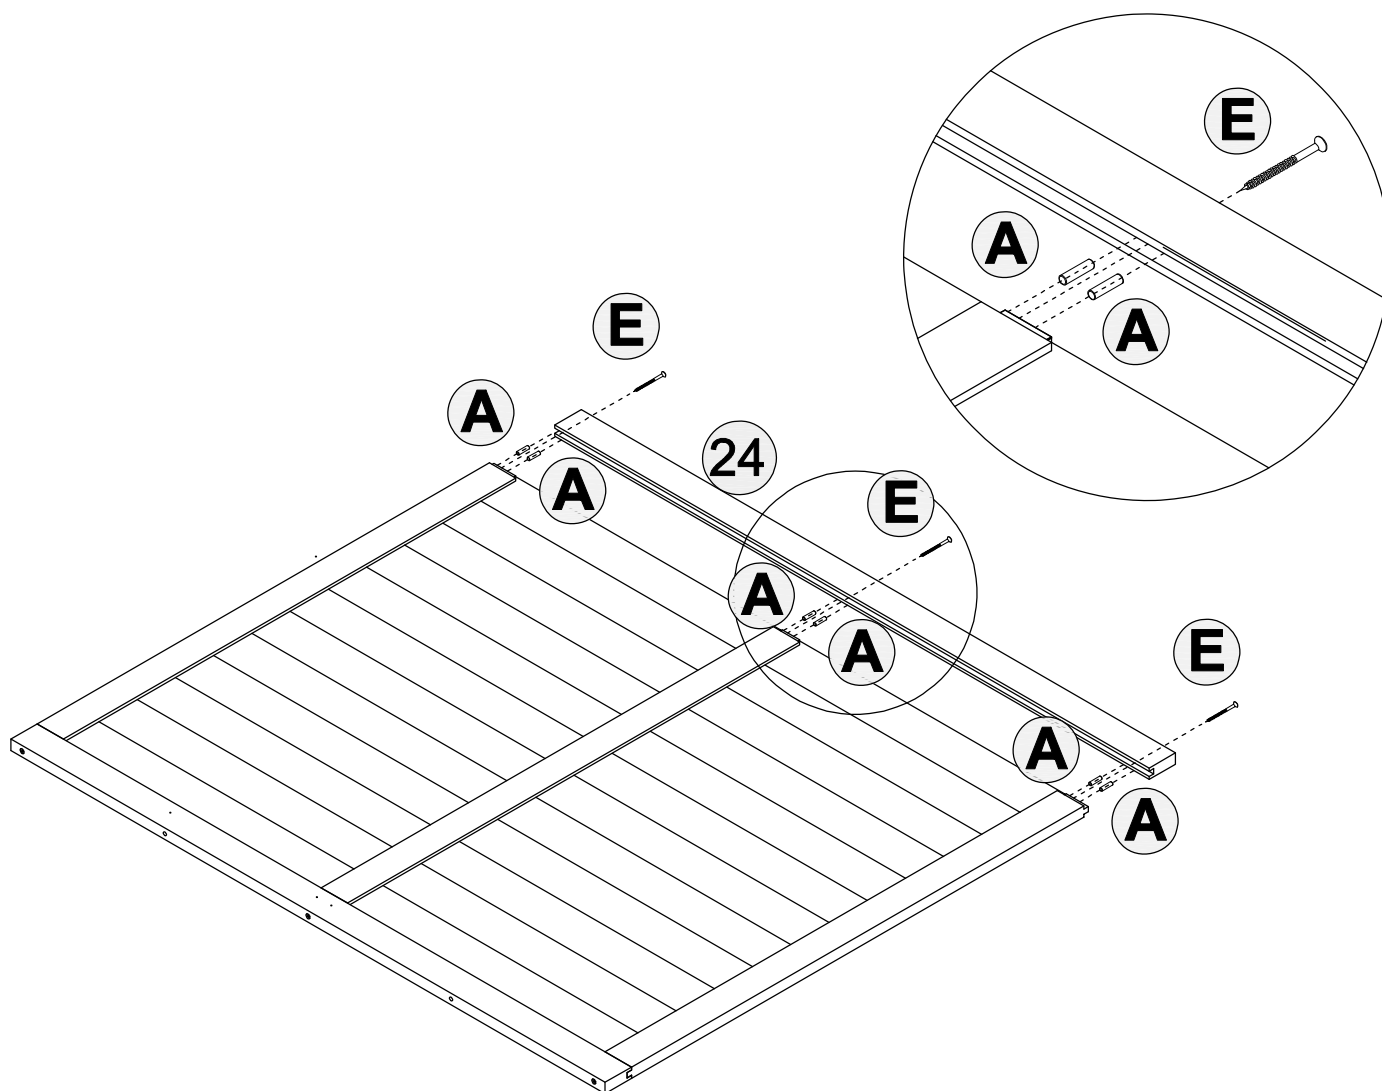

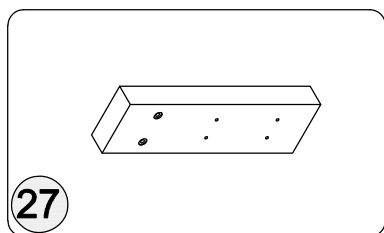

27

Thickening strip

Qty: 2





M4*40

C

x 4

1. Use hardware C to pass through component 27 and install the lead holes properly

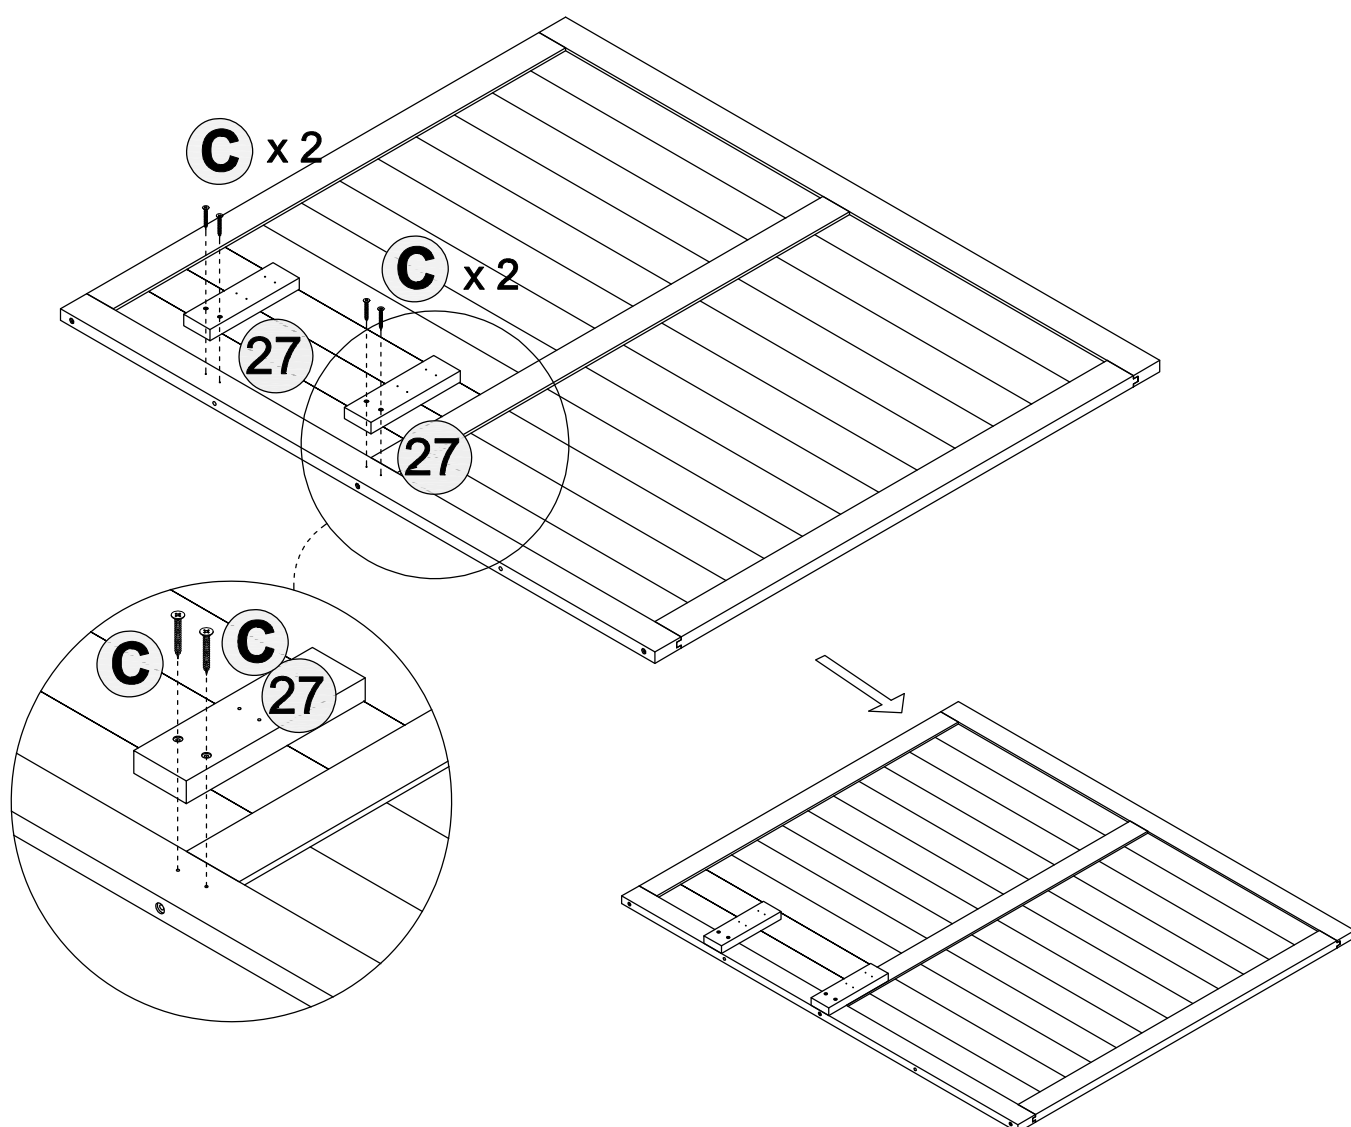


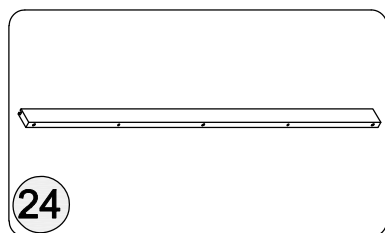

24

side slat


Qty: 1

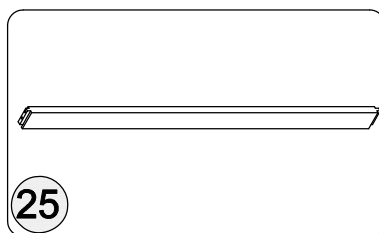

25

Side panel cross bar

Qty: 2


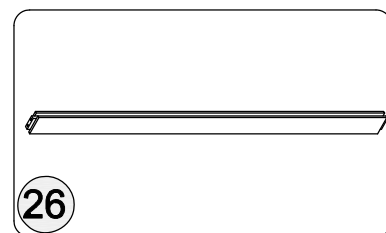



26

Mid-line

Qty: 1

1. Components 24 , 25 , 26 are connected using hardware A

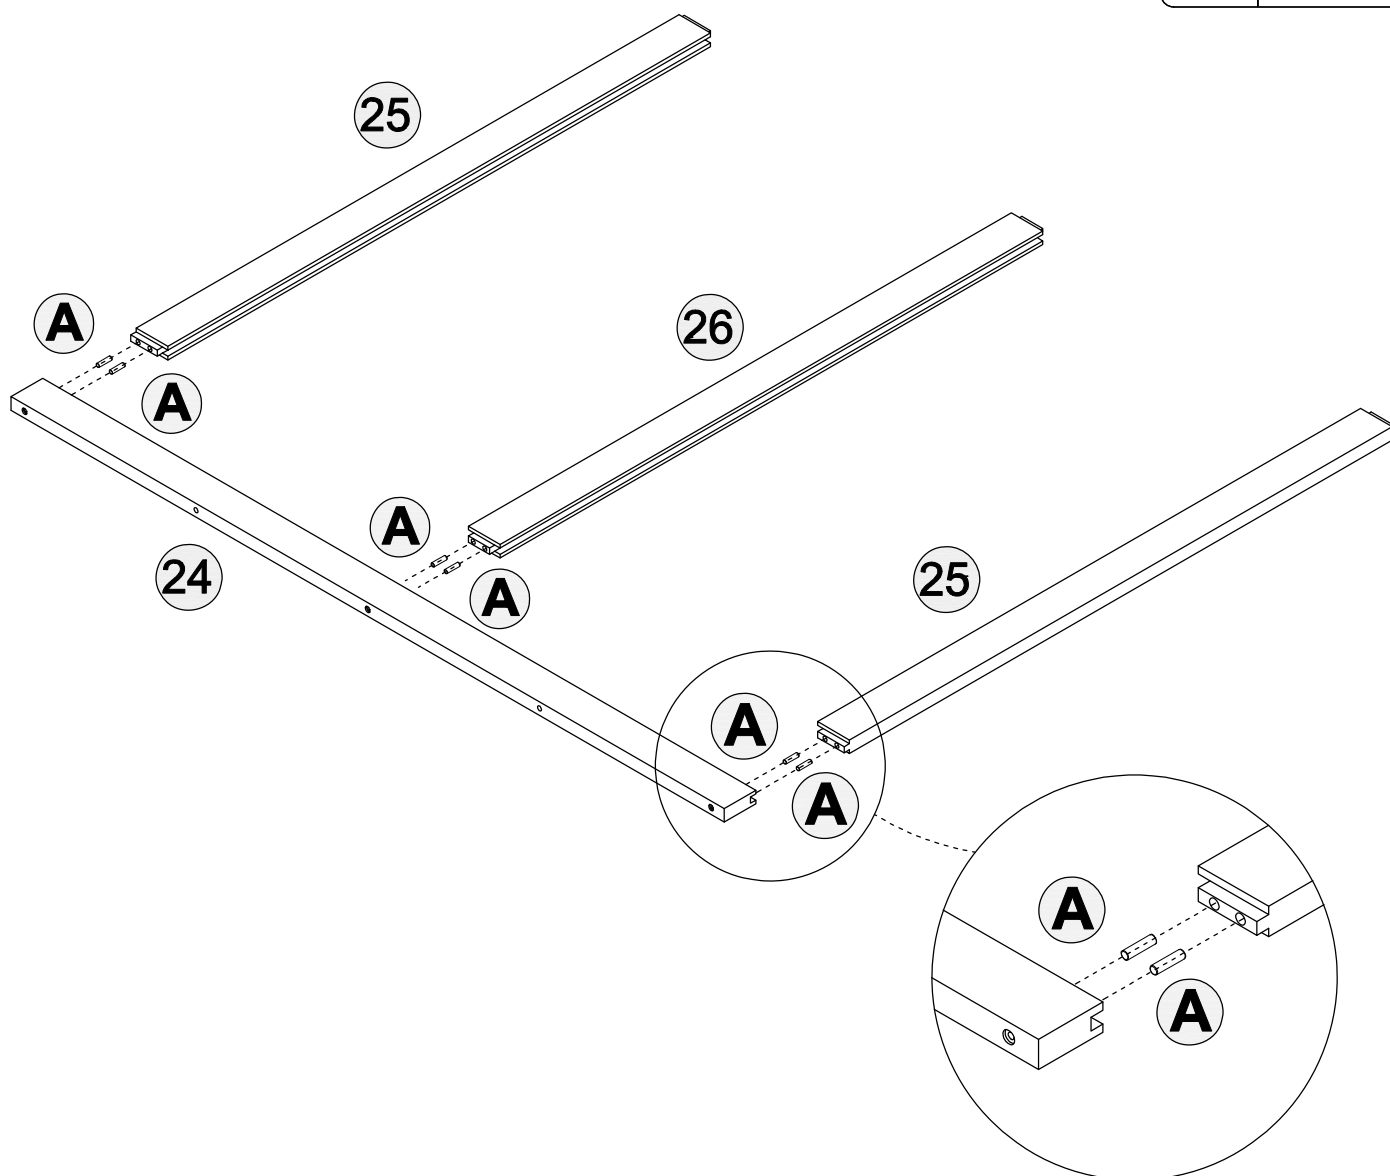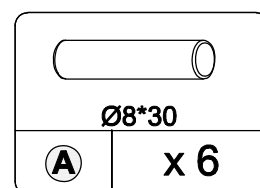

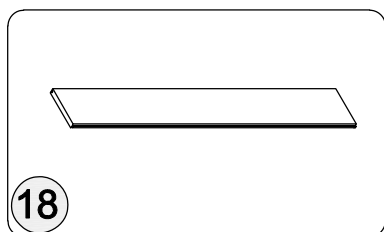

18

Core block

Qty: 2





M5*80

E

x 3


1. Put component 18 into the slot, adjust it appropriately, and install it with hardware E

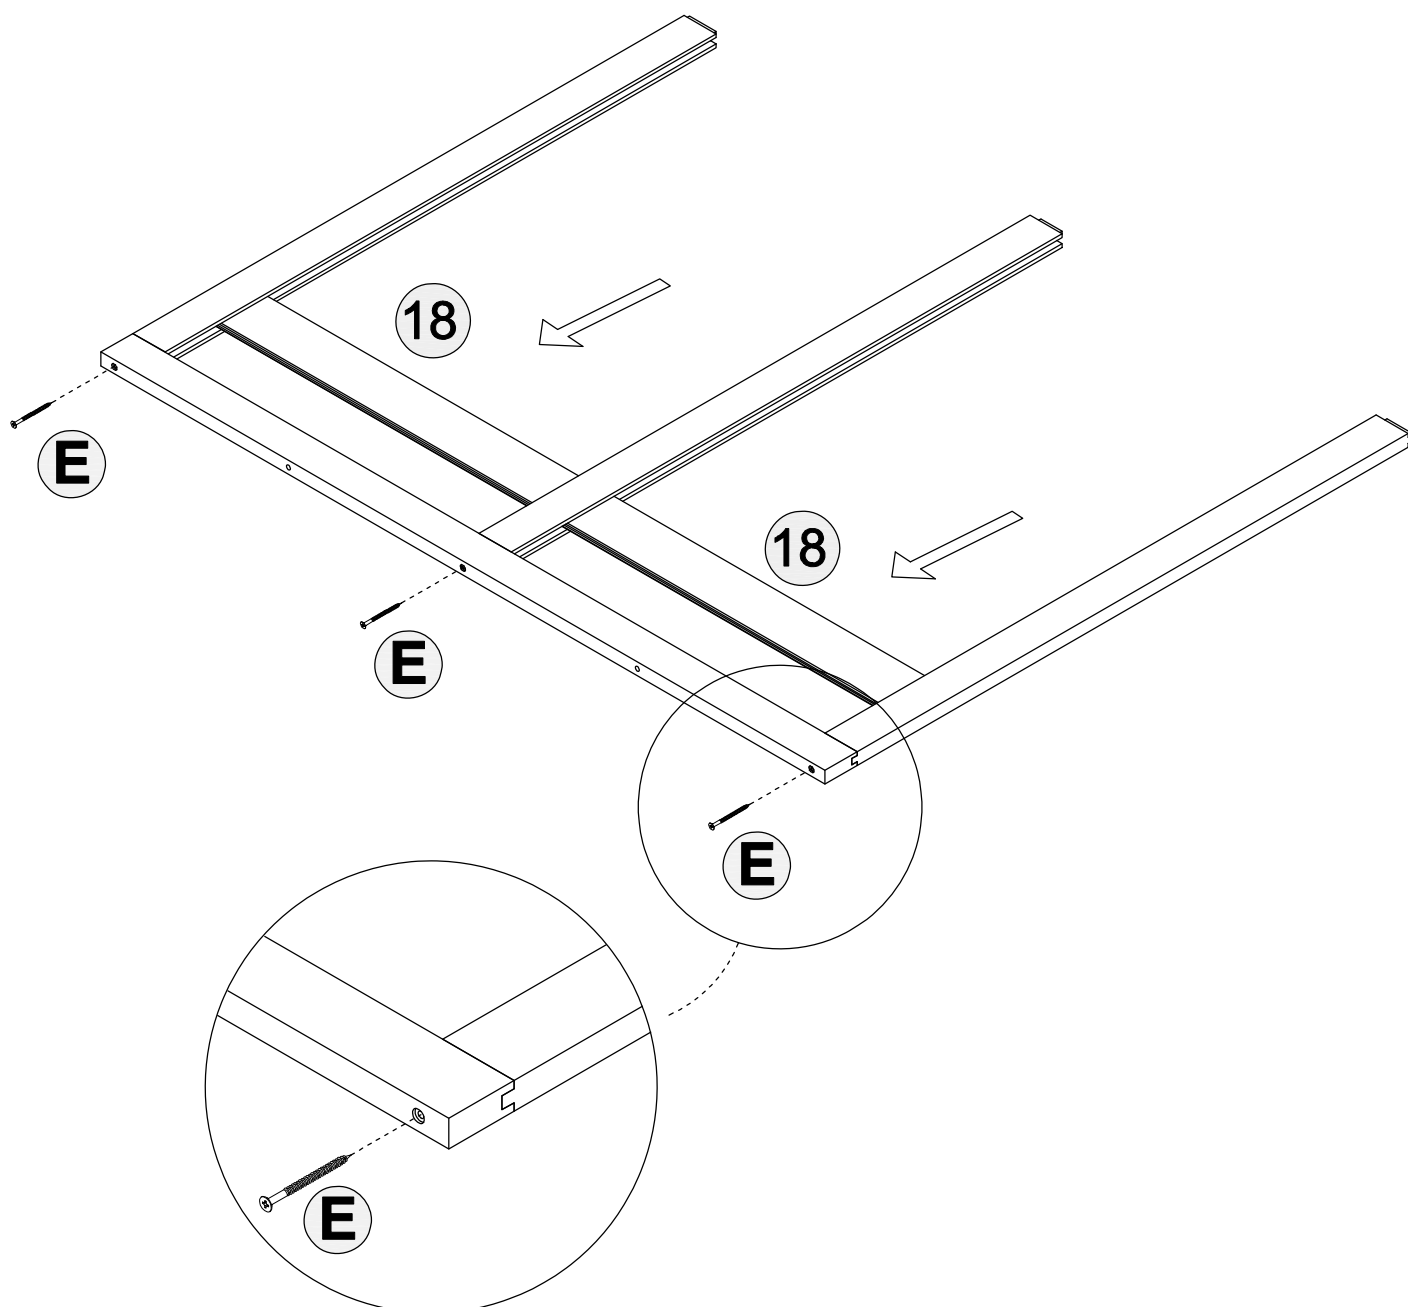


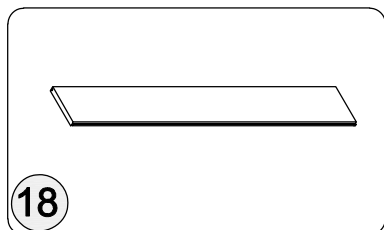

Core block
Qty: 22



1. Place component 18 in sequence, aligning the slots neatly

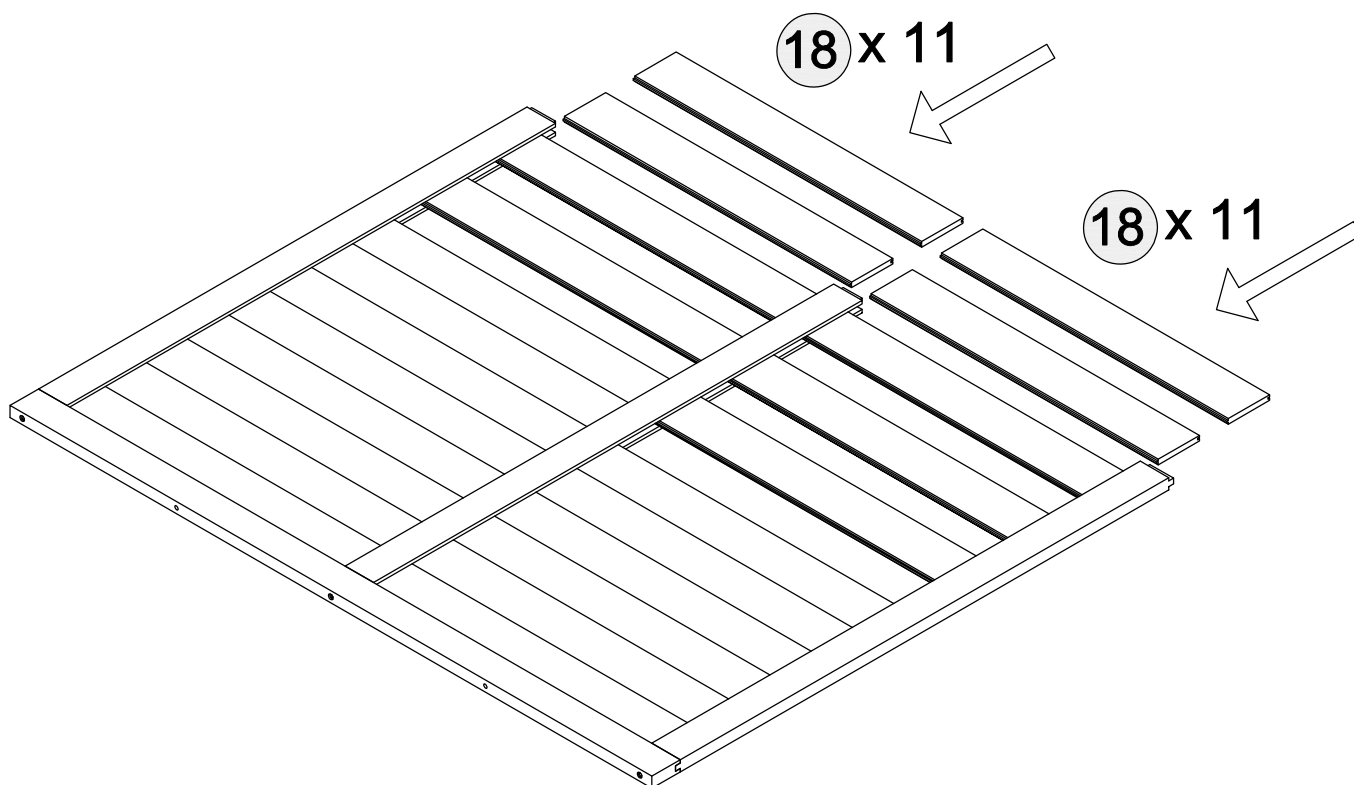

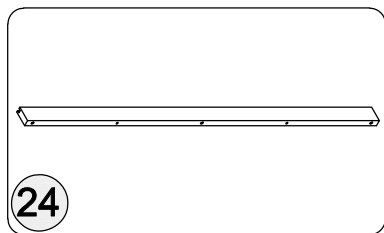



side slat

Qty: 1

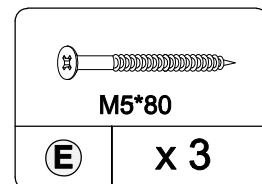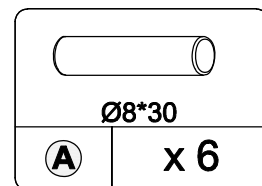


1. Connect with hardware A first, then install with hardware E

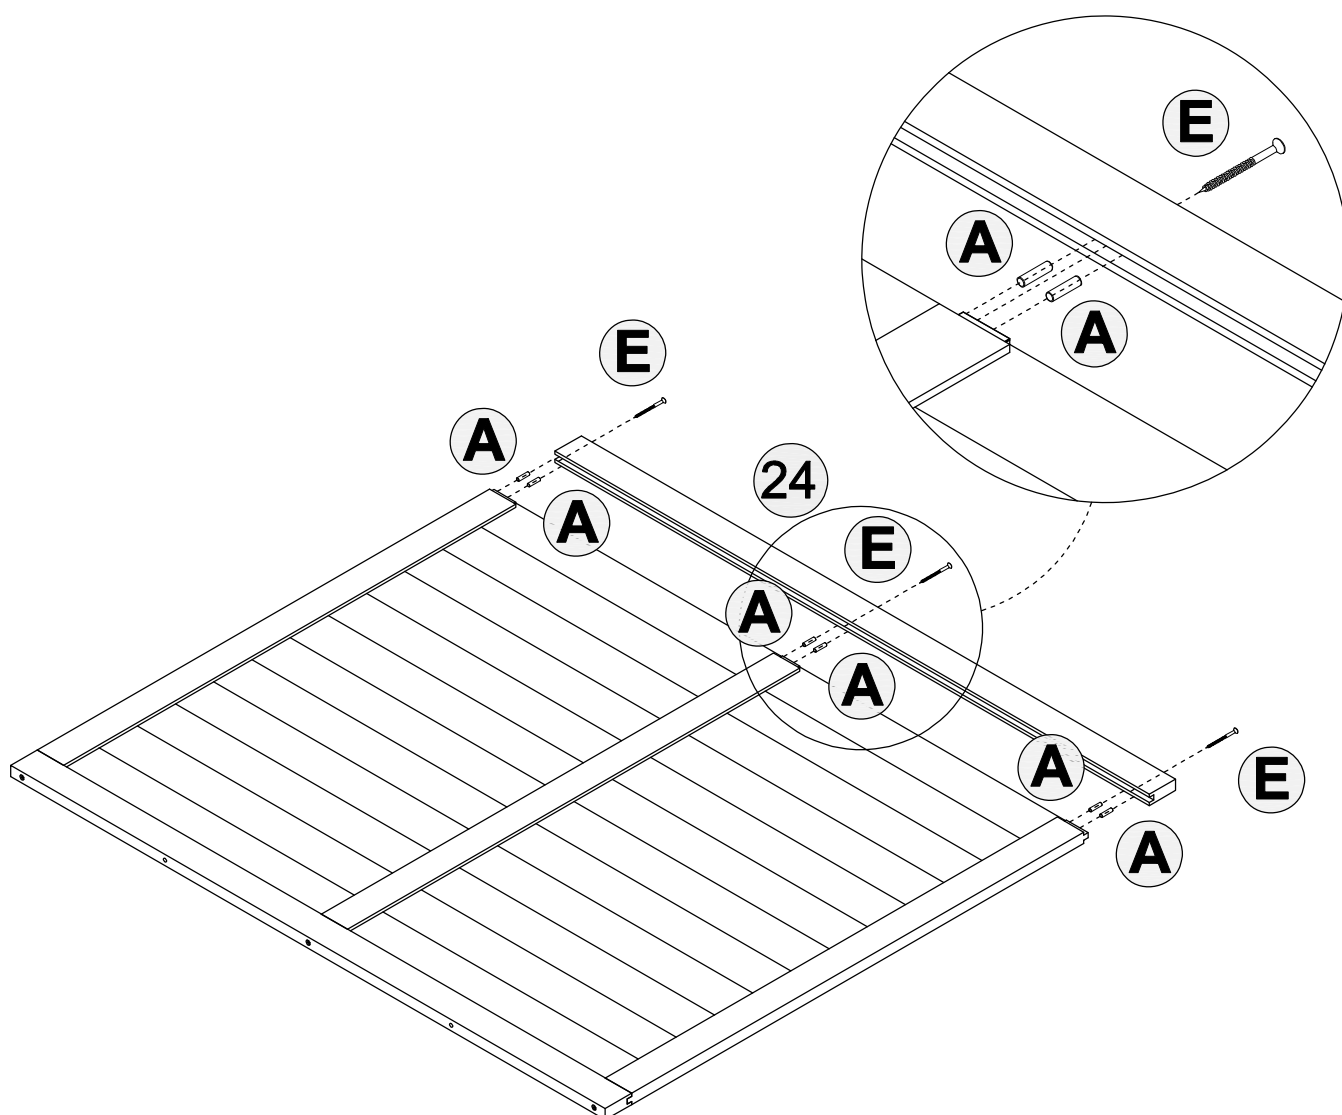


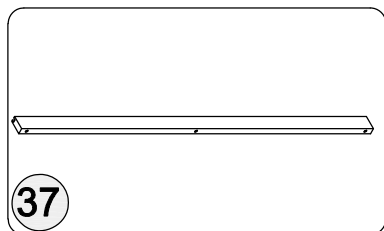


Right side bar
Qty: 1

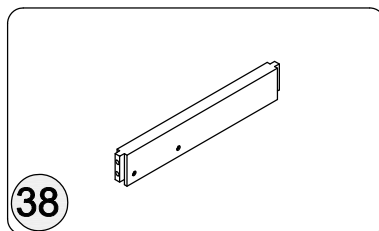


Top horizontal bar
Qty: 1

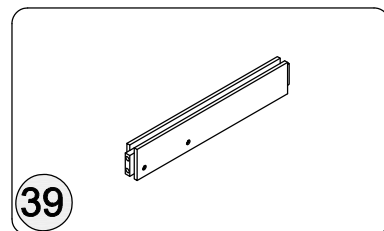


Middle horizontal bar
Qty: 1

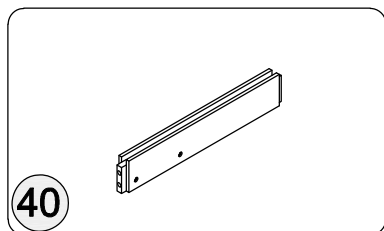


Bottom horizontal bar
Qty: 1

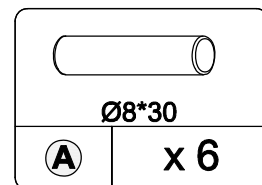

1. Pay attention to the positions of holes 38, 39, and 40 on components
2. Connect with hardware A

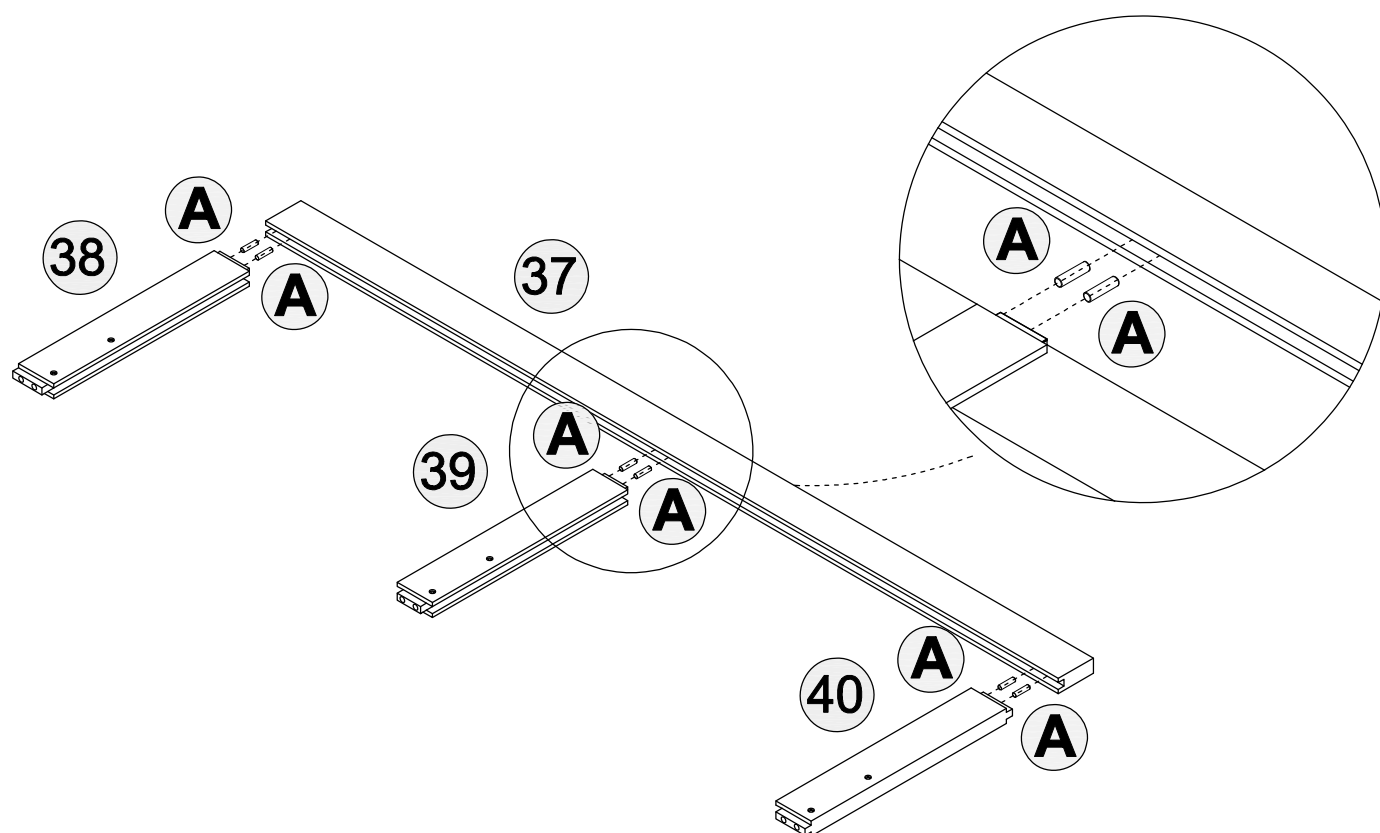

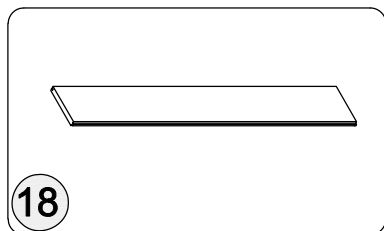

18

Core block

Qty: 2





M5*80

E

x 3

1. Put component 18 into the slot, adjust it appropriately, and install it with hardware E

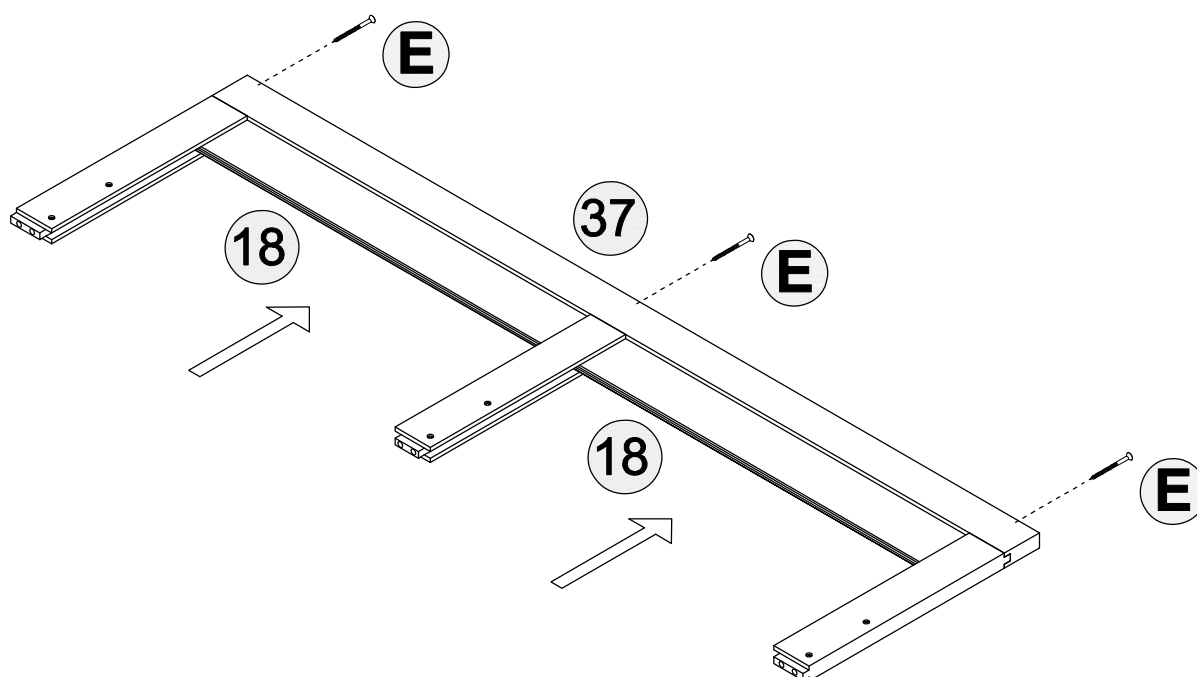

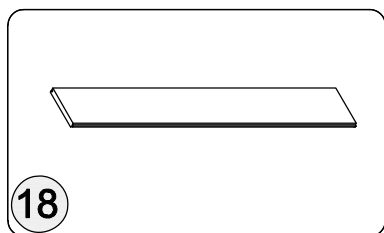



18

Core block


Qty: 6

1. Place component 18 in sequence, aligning the slots neatly

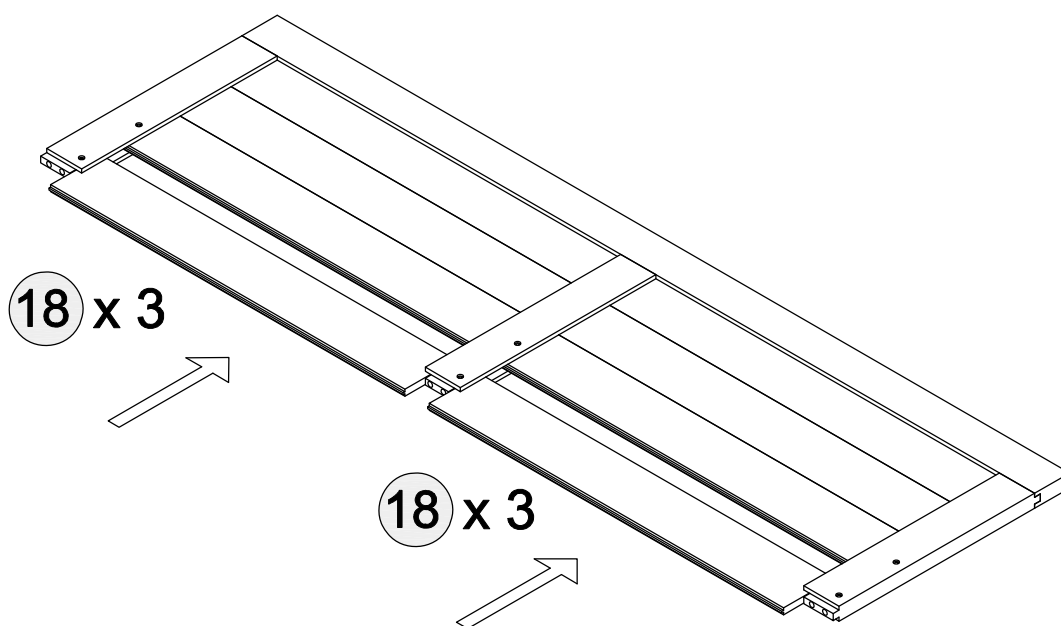

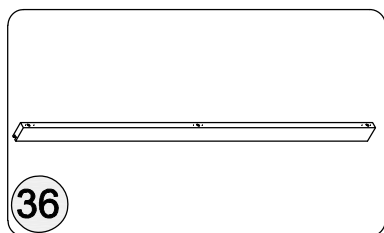

Left side bar
Qty: 1



Ø8*30

A

x 6






M5*80

E


x 3

1. Connect with hardware A first, then install with hardware E

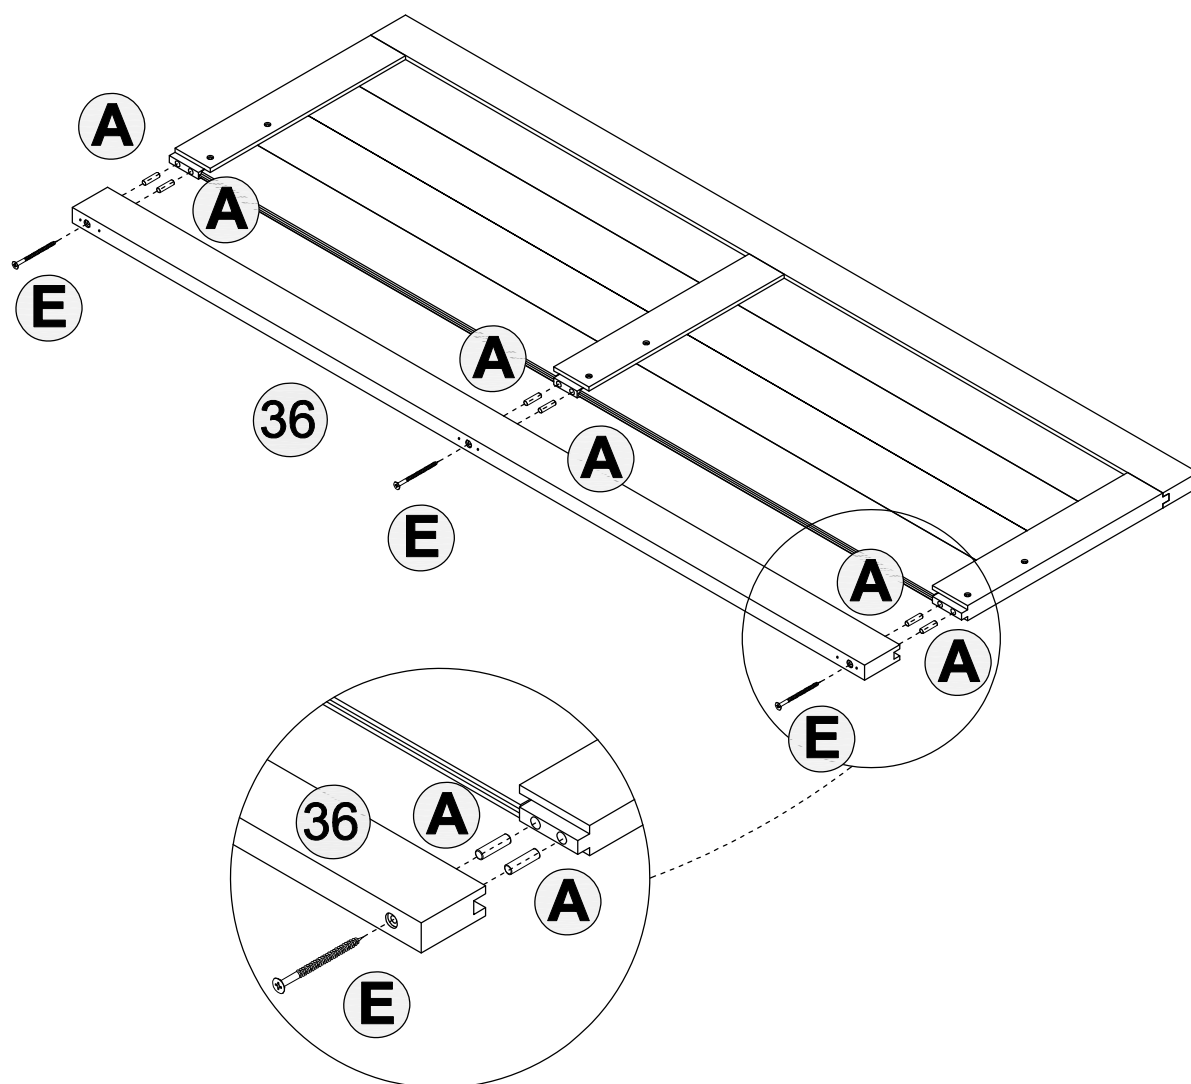


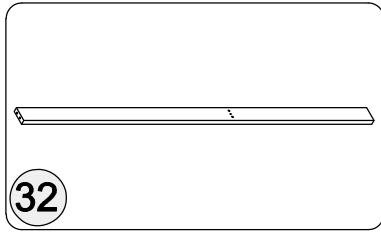


Front bottom bar
Qty: 1

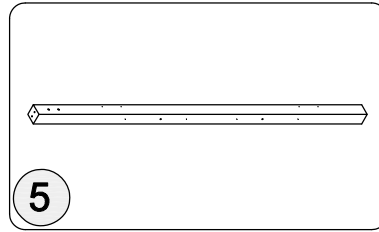

Front middle column
Qty: 1

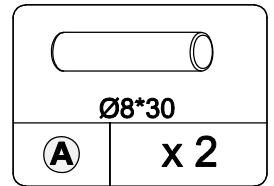


x 2

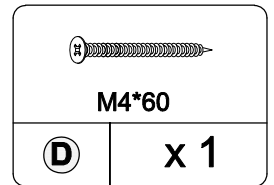




x 1


1. Connect with hardware A first, then install with hardware D
- ⚠ 2. Pay attention to component 5 with screw holes and small holes on top

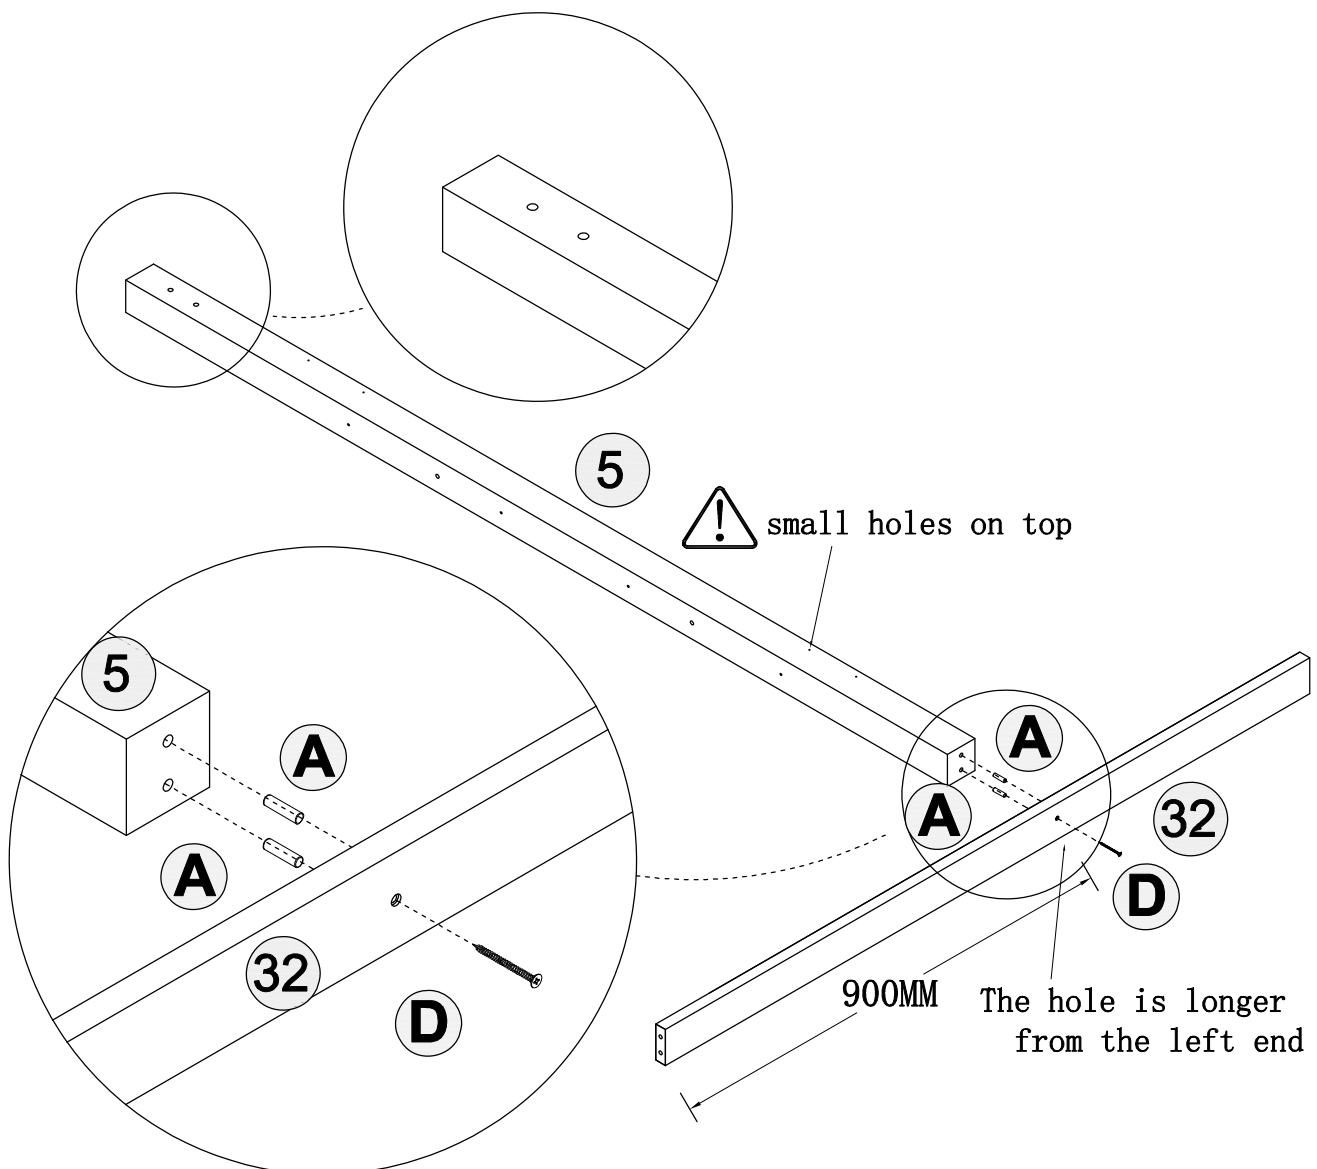


1. Connect with hardware A first, then install with hardware F

⚠ 2. Please note that component 27 is installed behind component 14

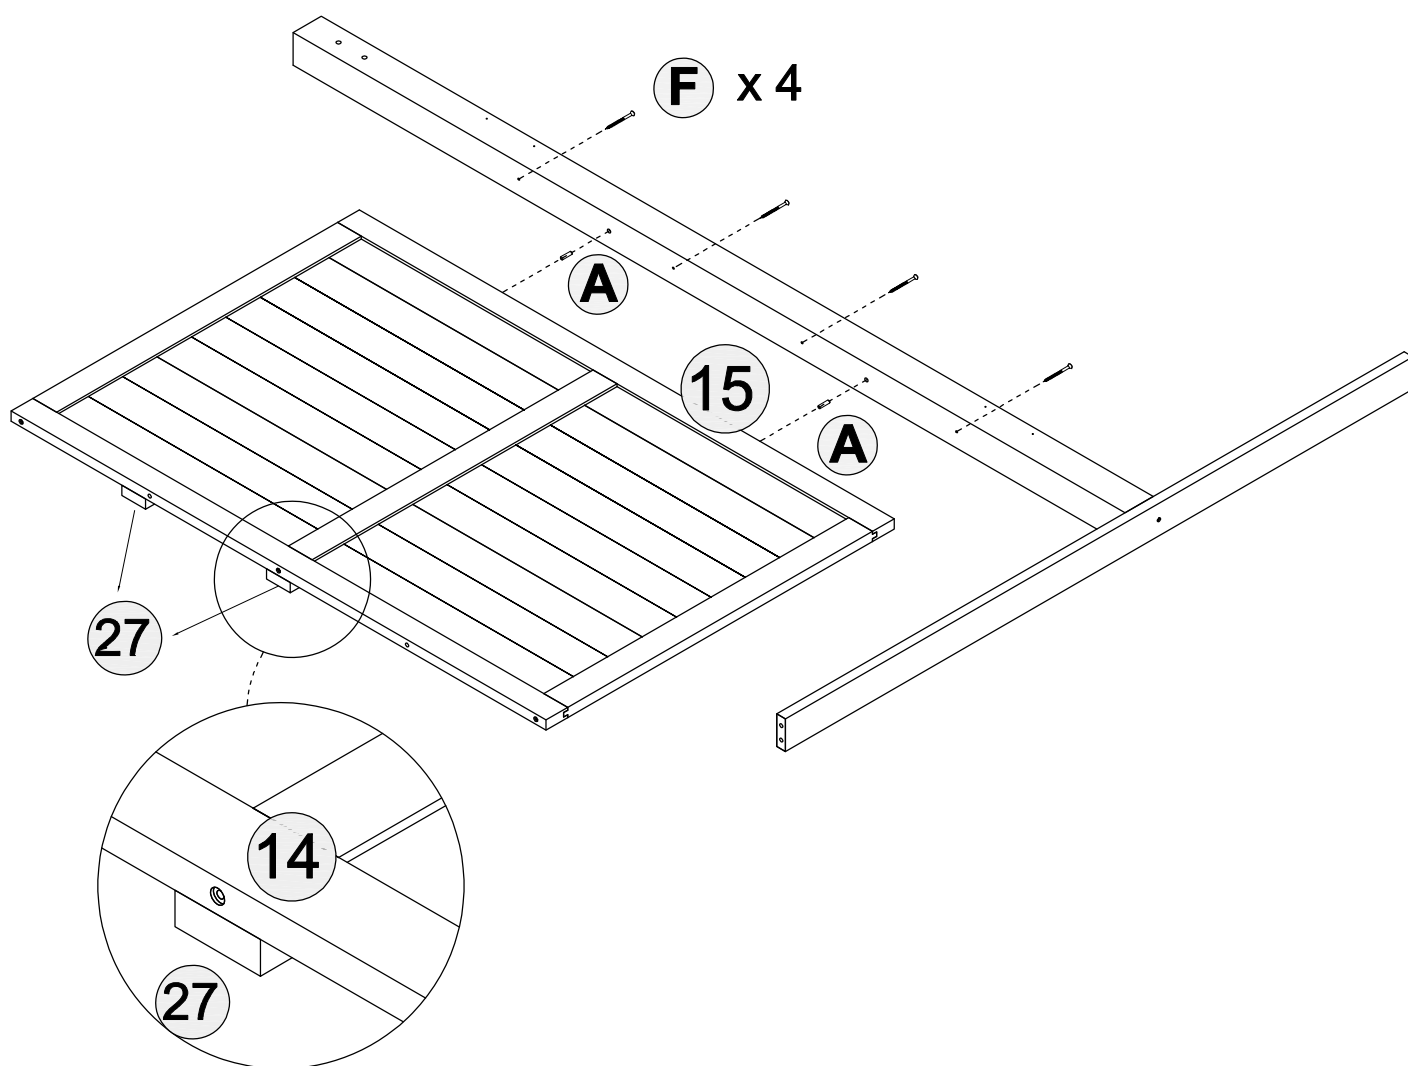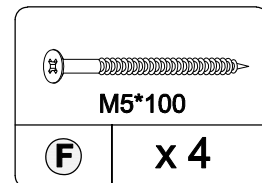
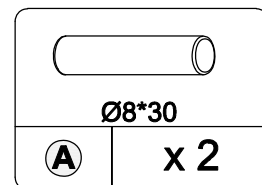


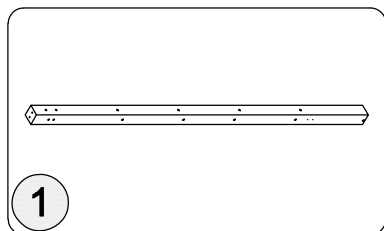


Front left column
Qty:1

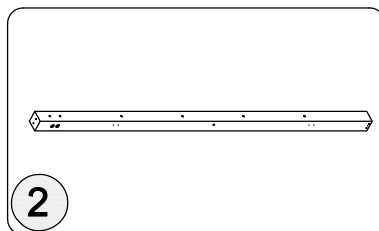


Front right column
Qty:1

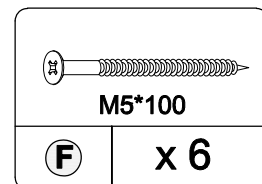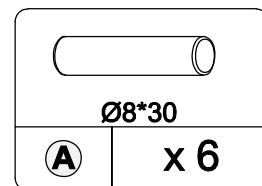

1.Connect with hardware A first, then install with hardware F

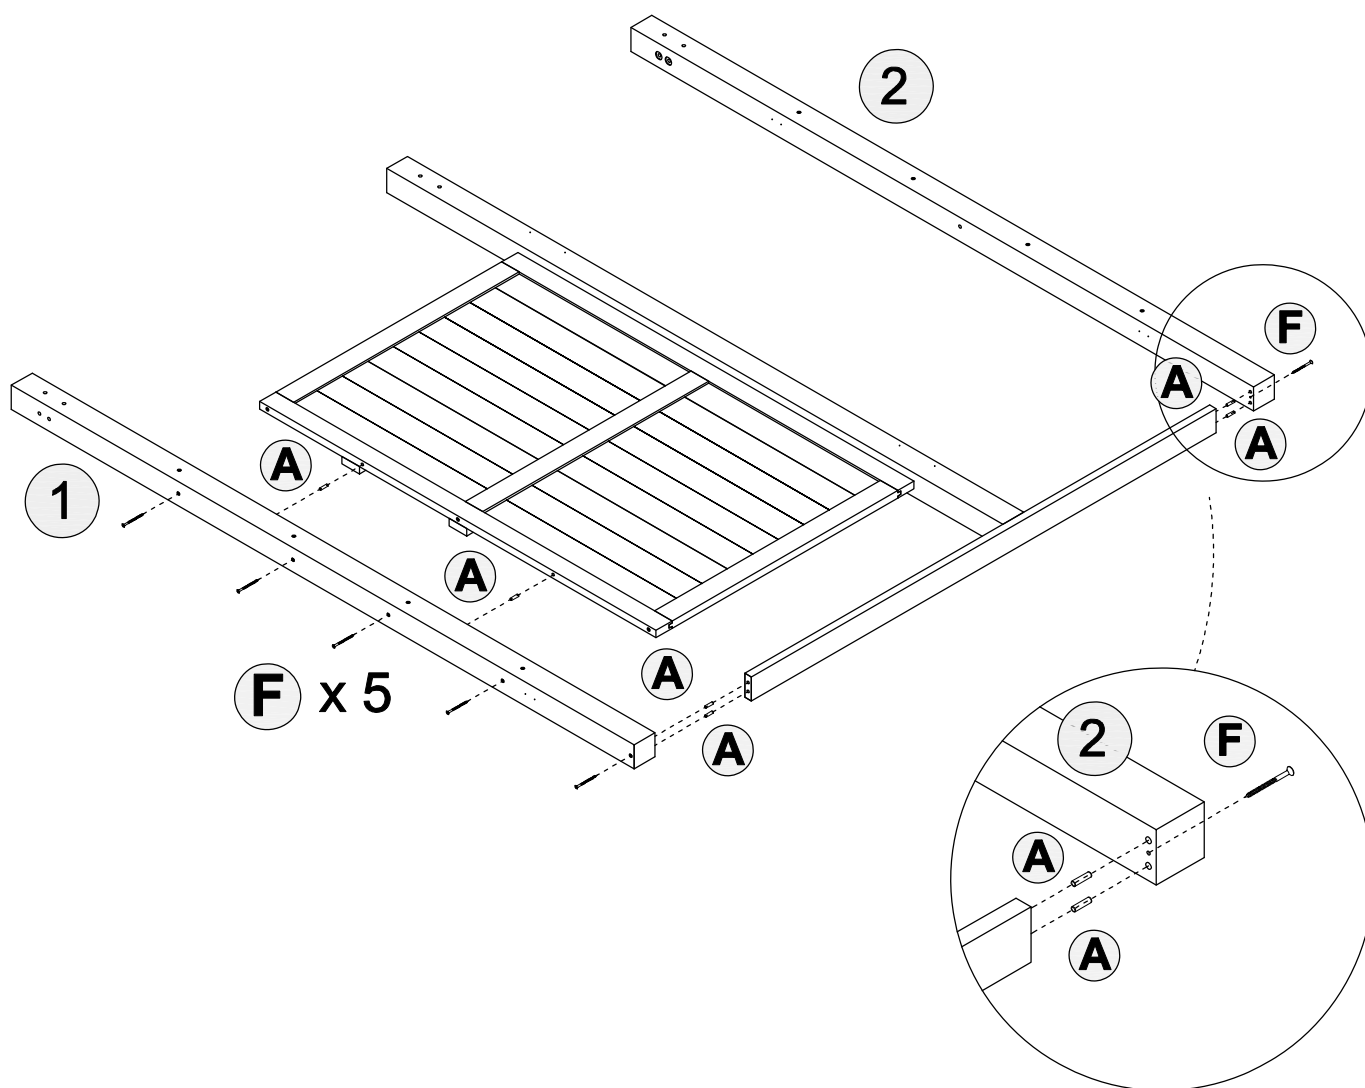

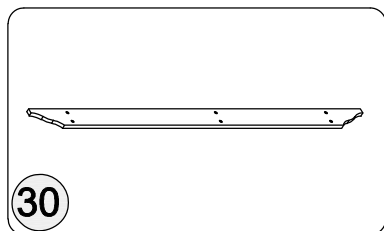

Front cross beam
Qty:1



M8*90

G

x 6



R


x 6



J


x 1

1. Thread hardware G through hardware R, and then use tool hardware J to install component 30

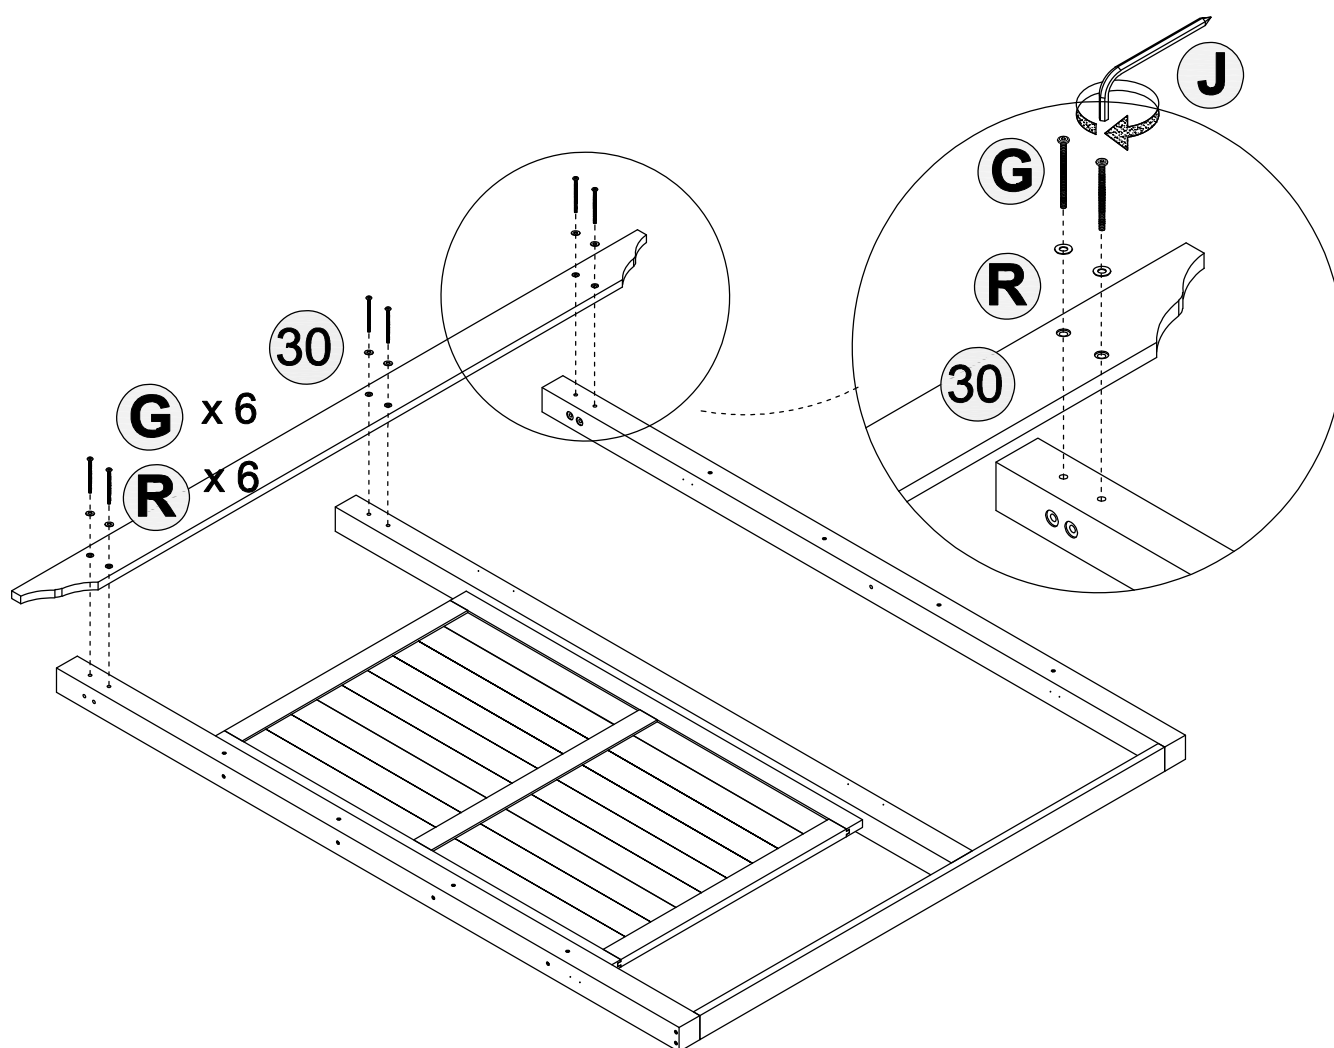


Top block installation

Step 28

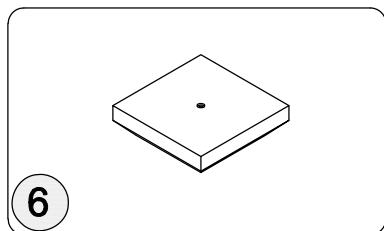

Top cube

Qty: 3



Ø8*30

A

x 6





M4*60

D

x 3


1. Connect with hardware A first, then install with hardware D

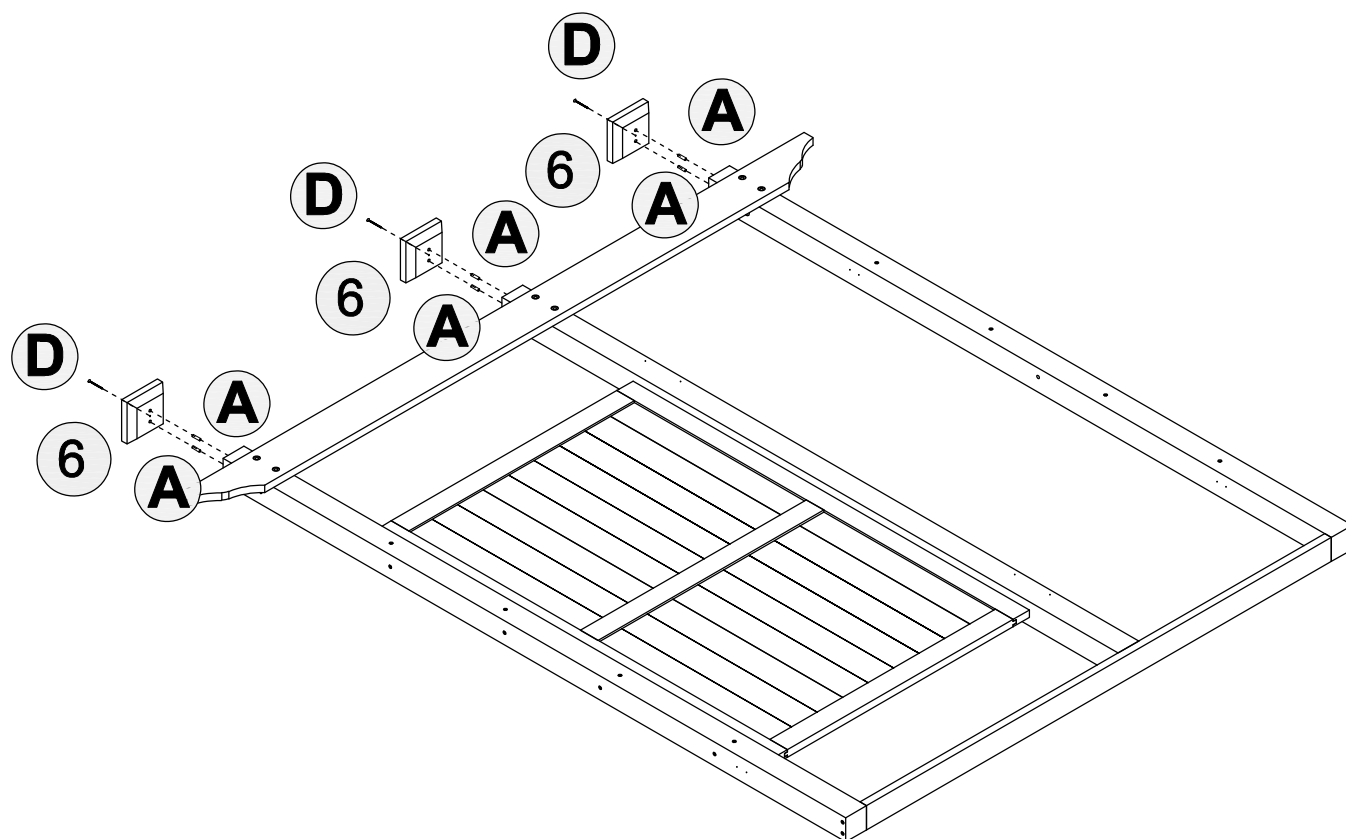

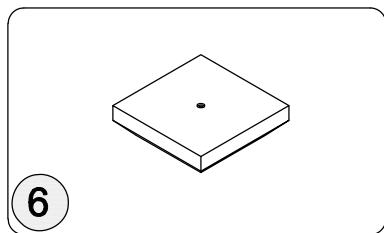


Top cube

Qty: 2

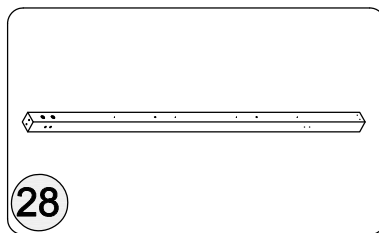

rear left column




Qty:1


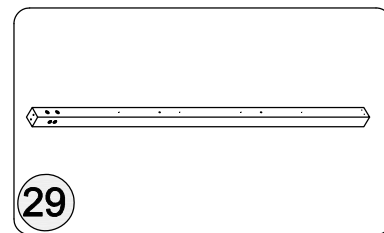


Rear right column


Qty:1



1. Connect with hardware A first, then install with hardware D

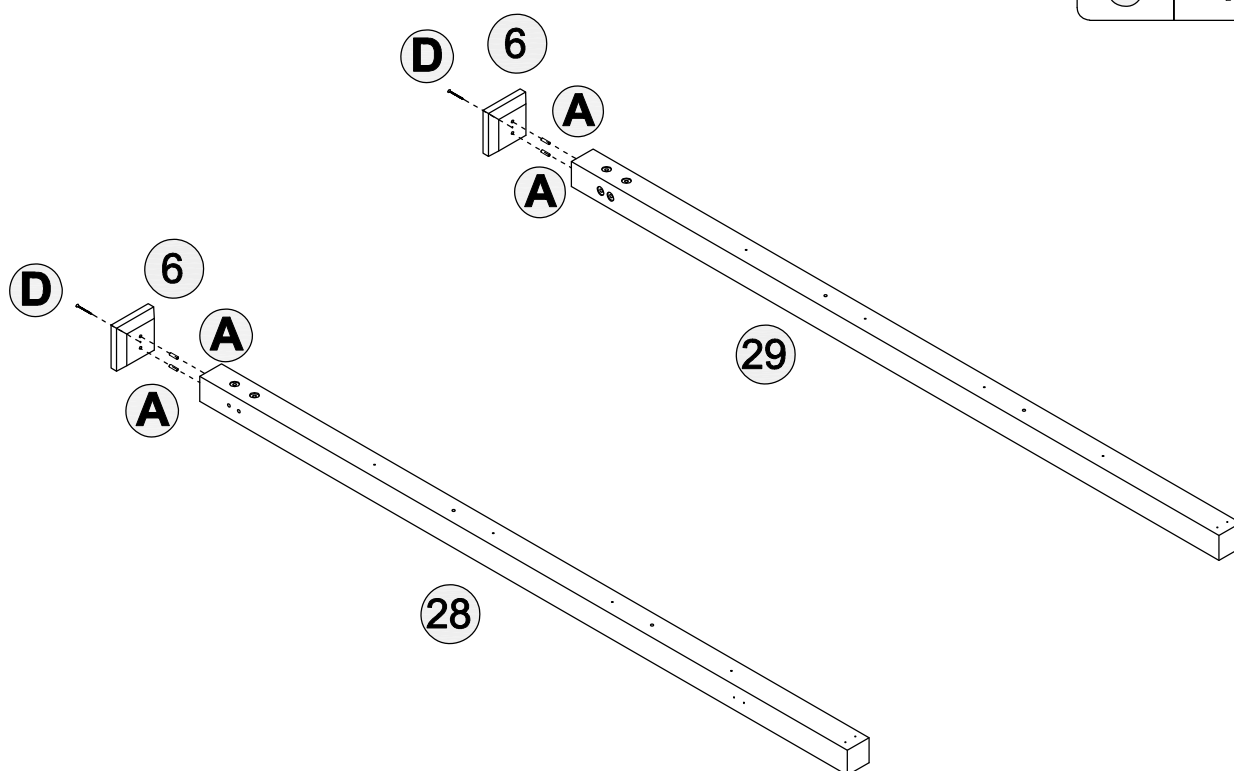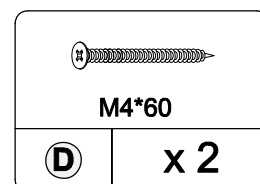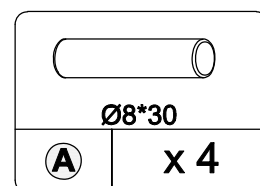

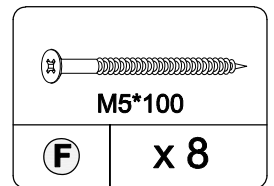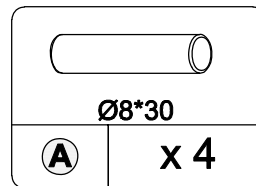



1. Connect with hardware A first, then install with hardware F
2. Two people are required to operate to prevent falling and damage

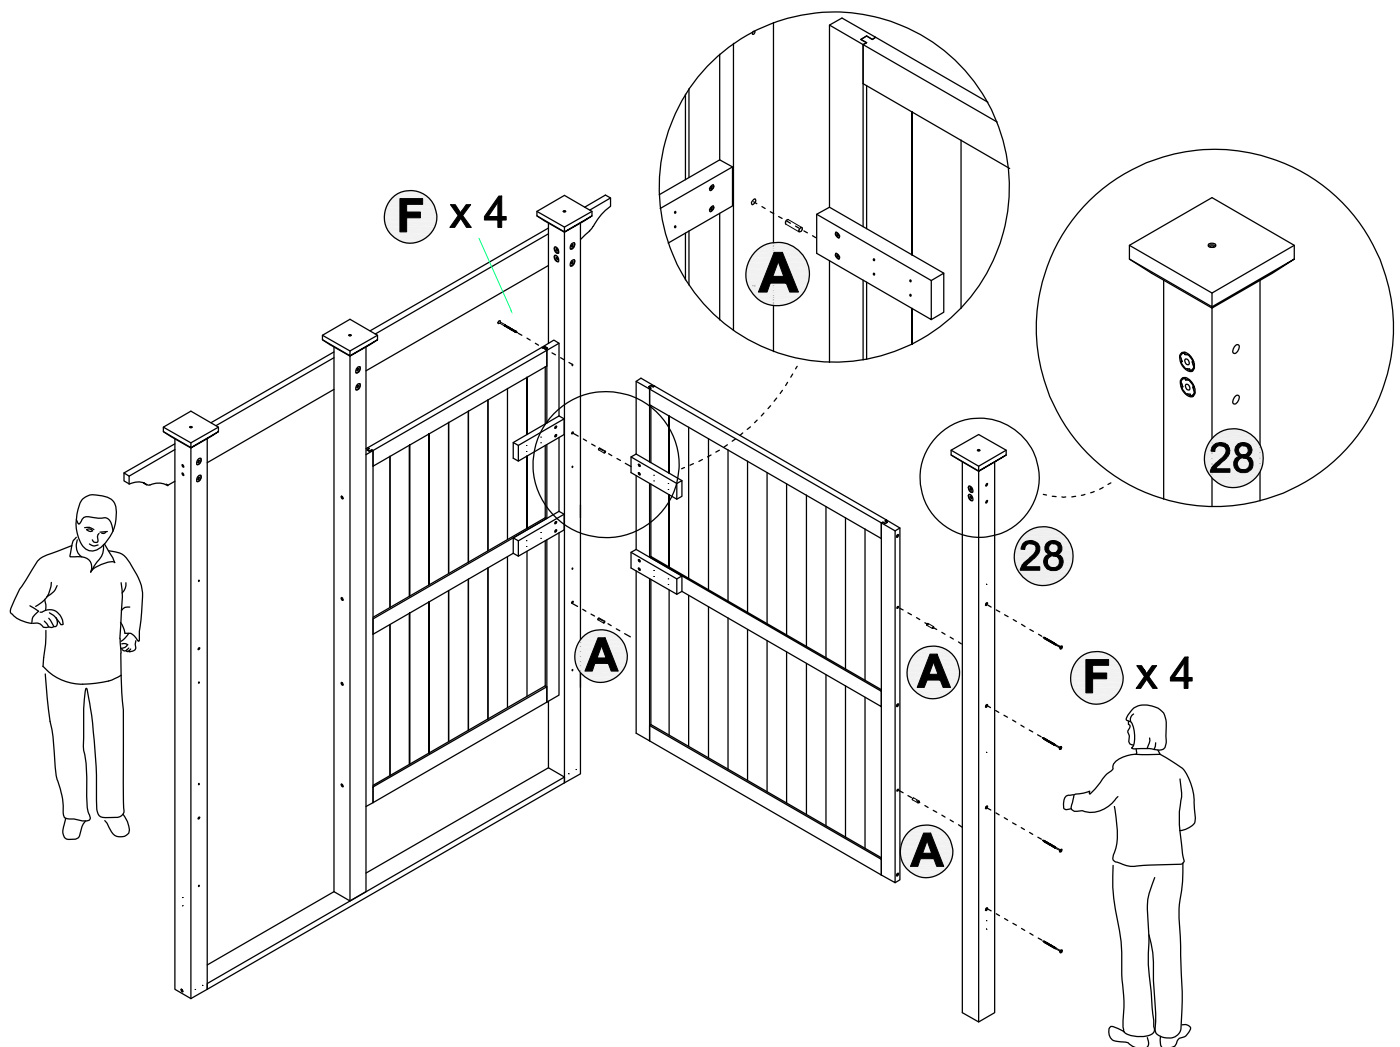

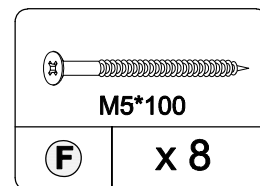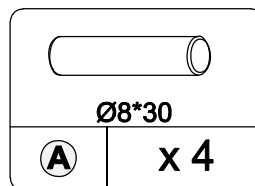

1. Connect with hardware A first, then install with hardware F
2. Two people are required to operate to prevent falling and damage

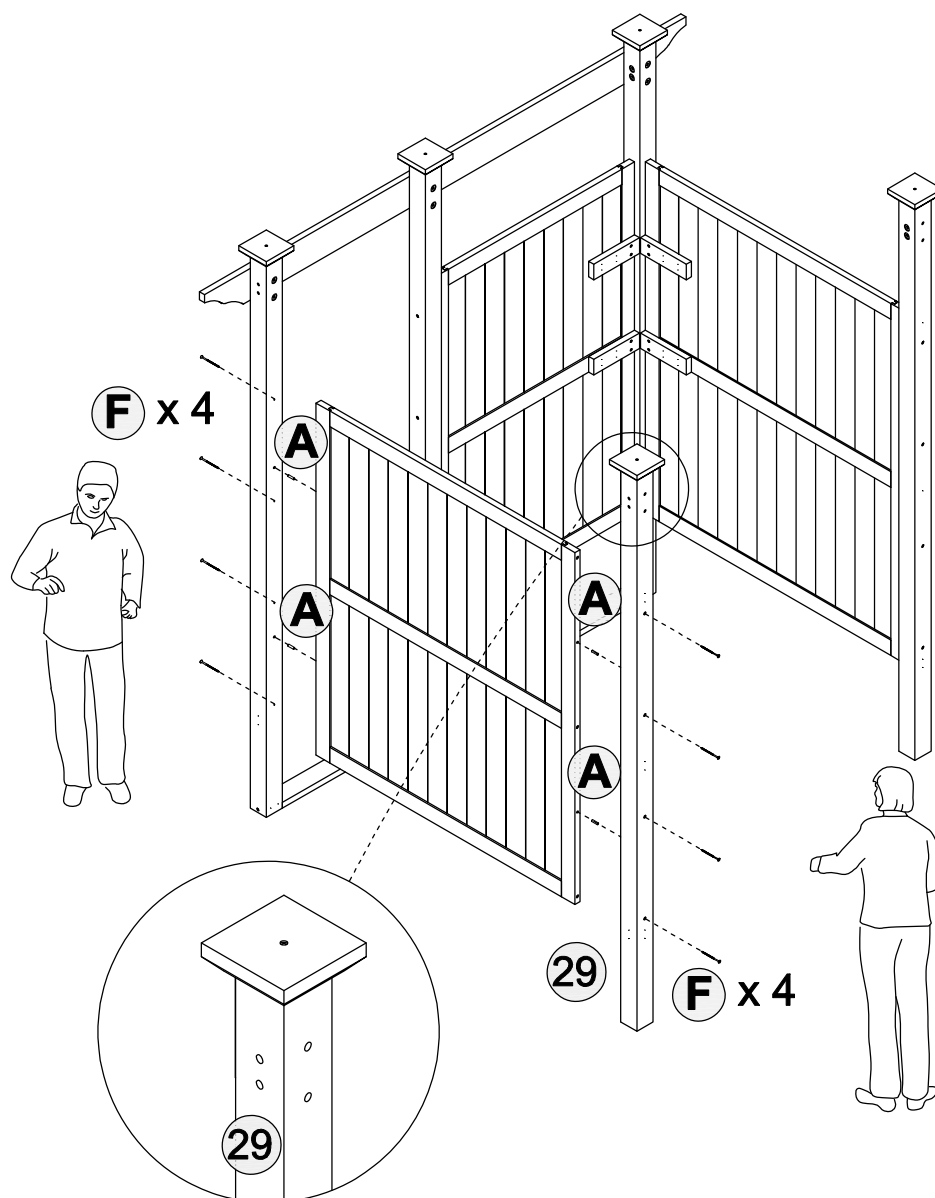

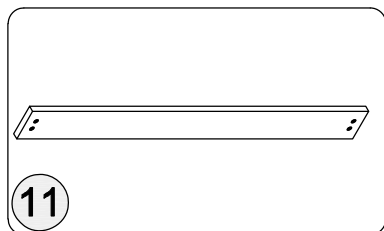

side beam

Qty: 2



M8*90





x 8



x 8

1. Thread hardware G through hardware R, and then use tool hardware J to install component 11

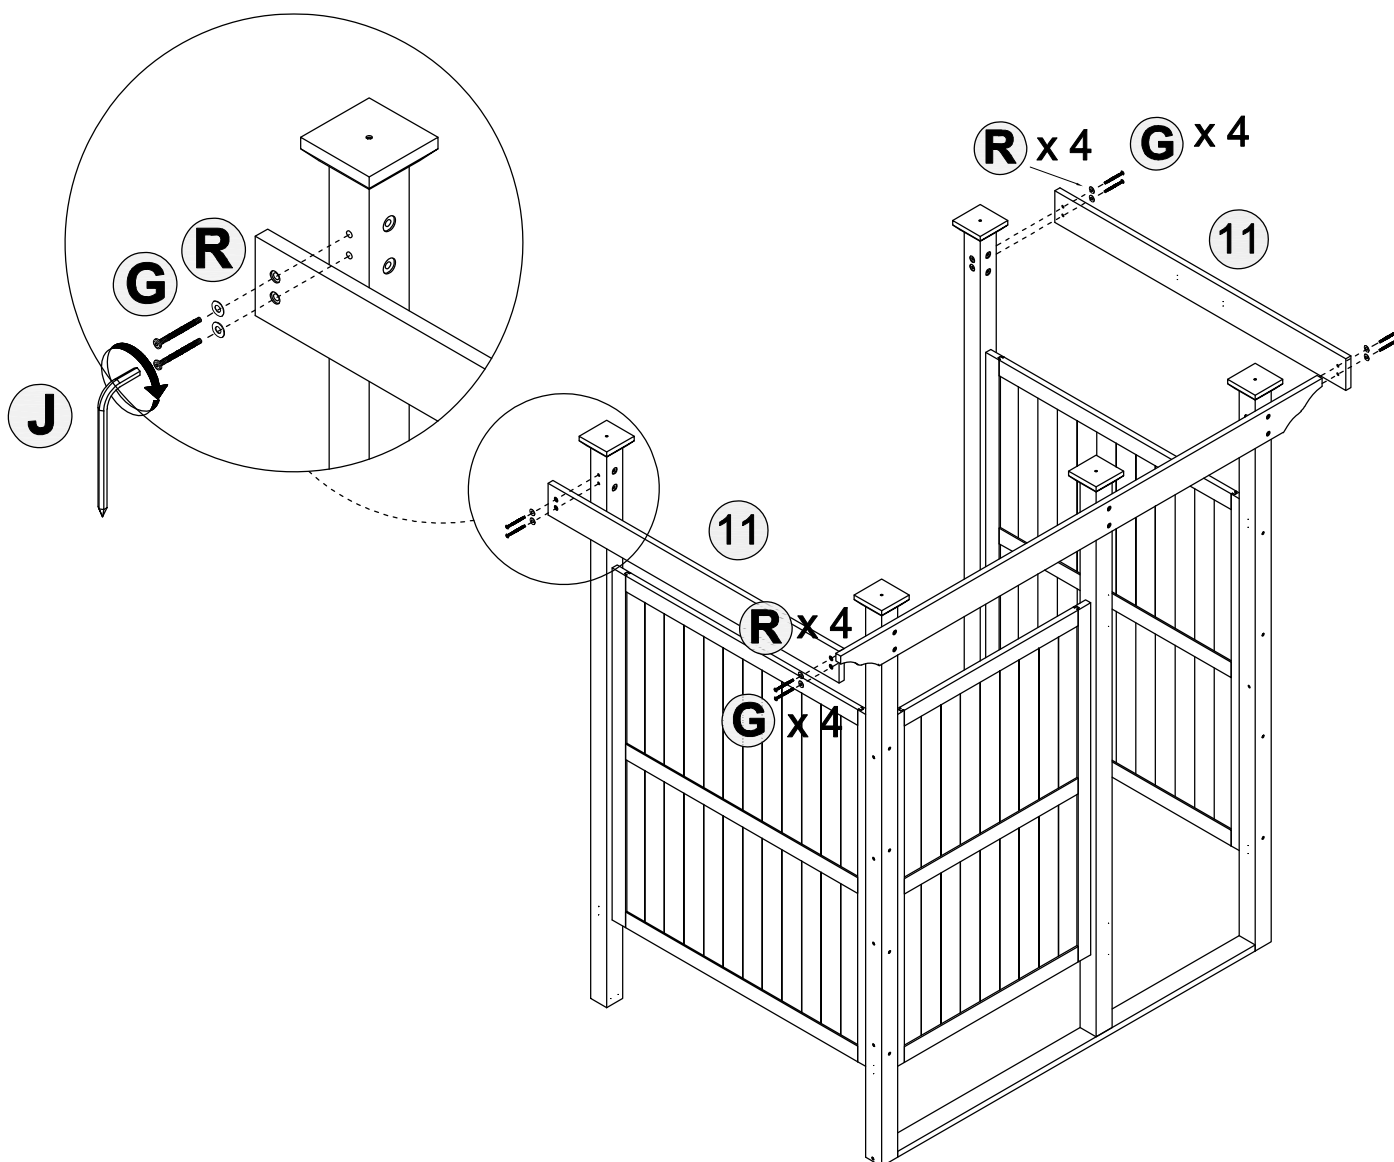

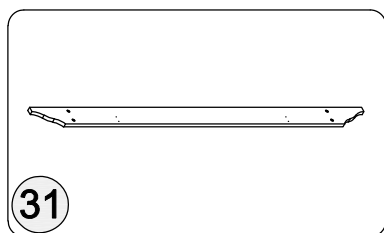

Rear cross beam
Qty: 1



M8*90

G


x 4




R

x 4

1. Thread hardware G through hardware R, and then use tool hardware J to install component 8

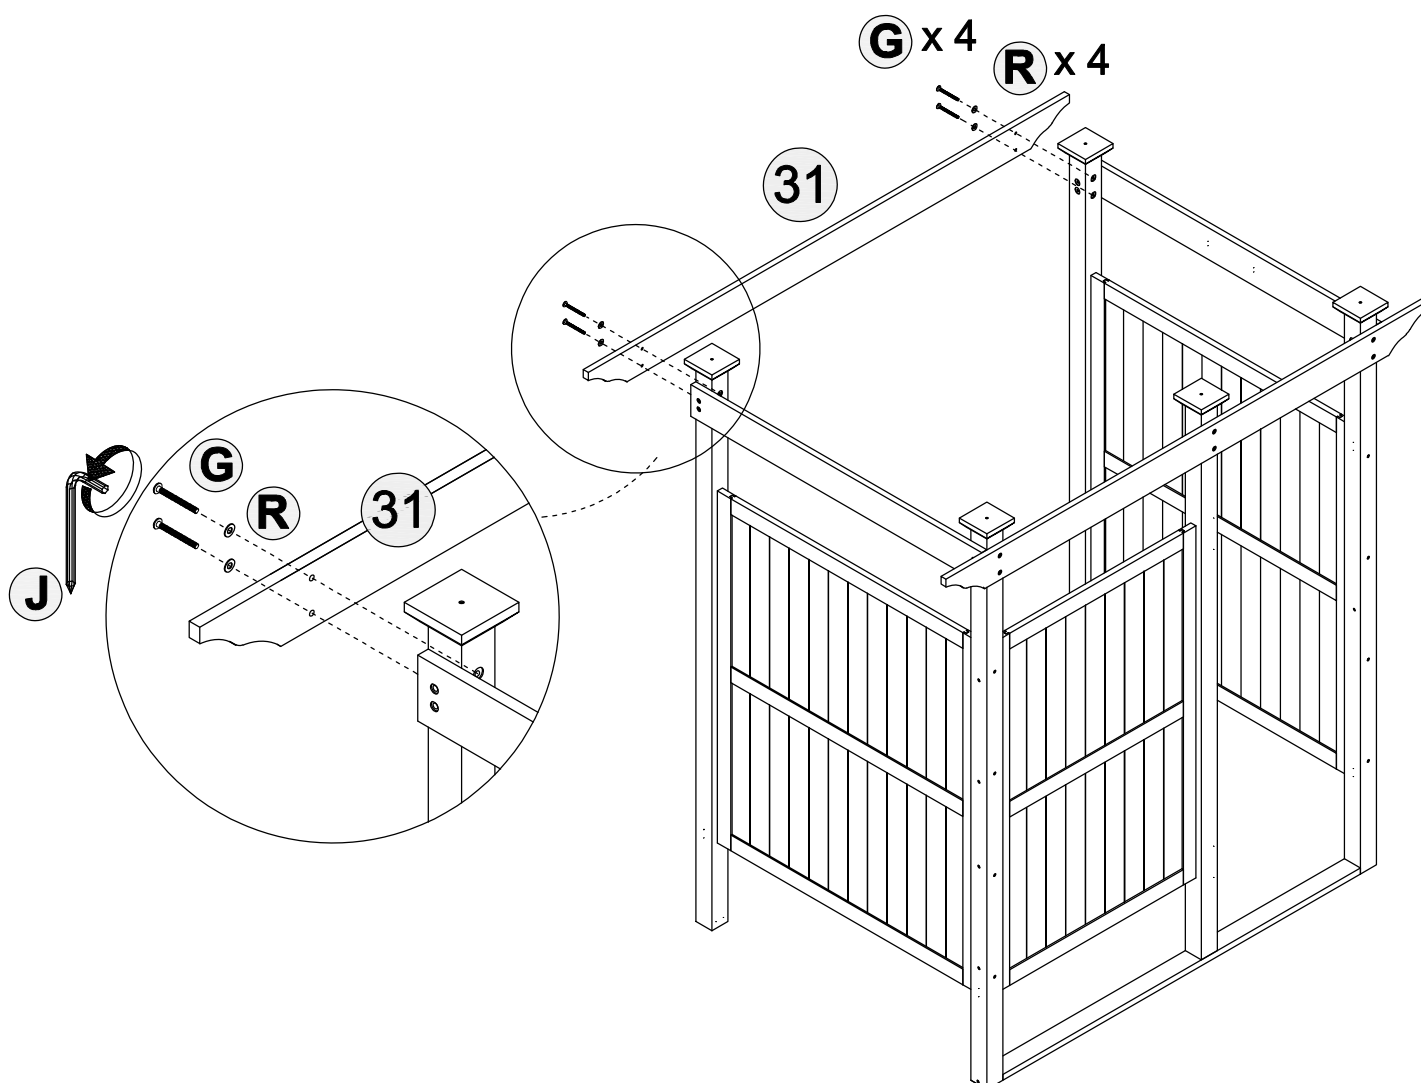

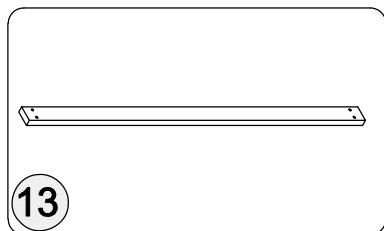

Connecting rod
Qty: 1





M4*40

C

x 4

1. Use hardware C to pass through component 13 and install it towards the lead hole

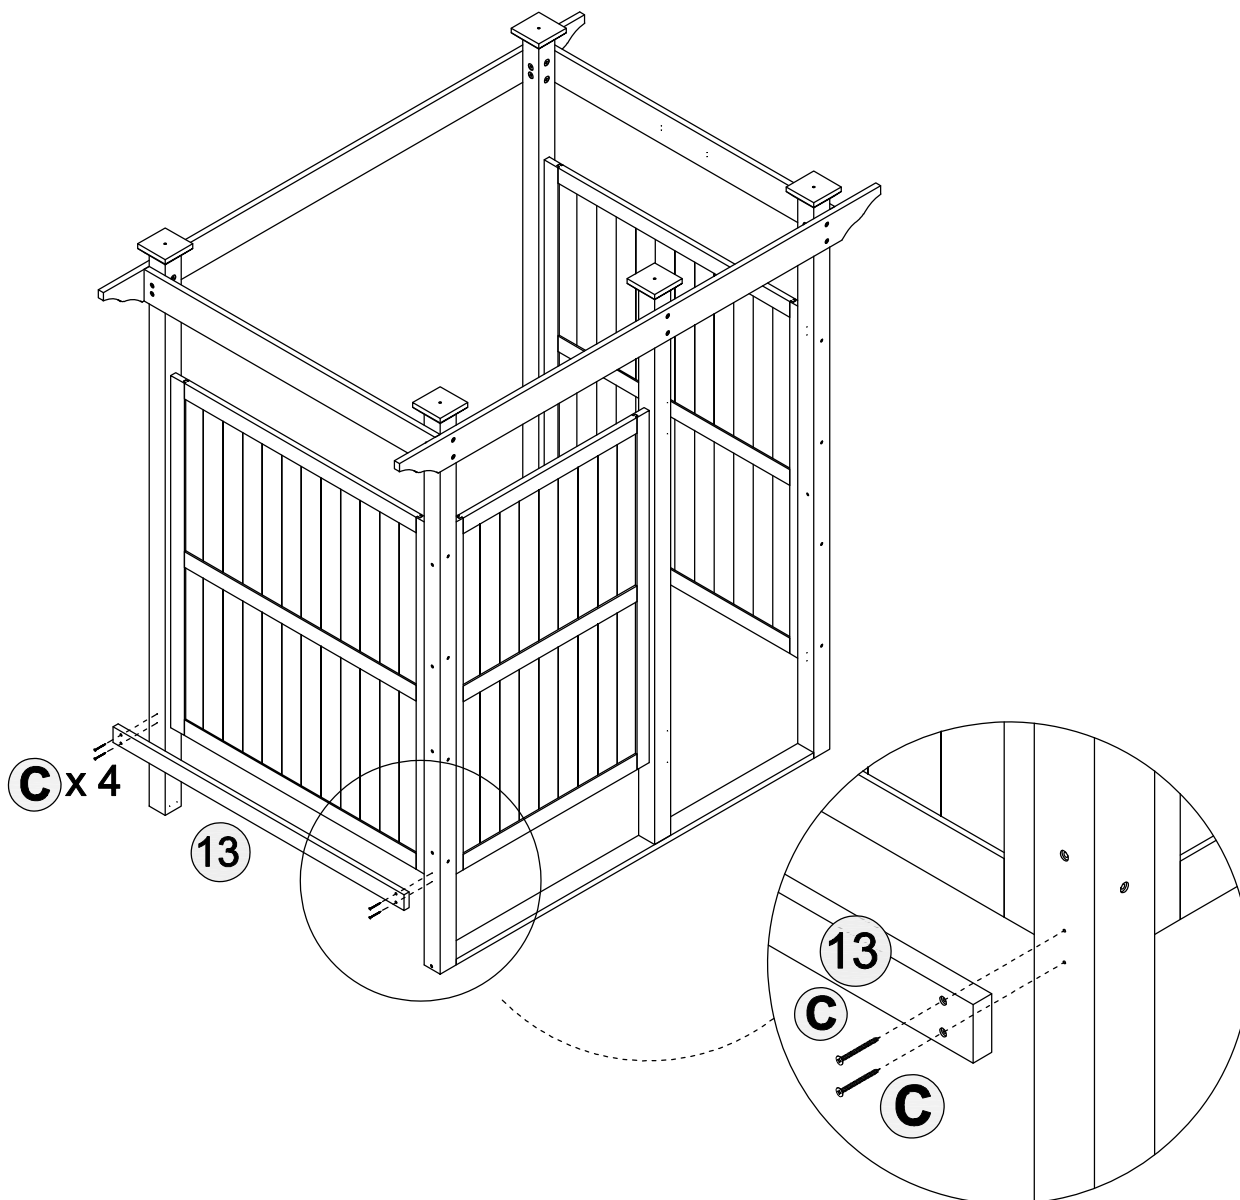

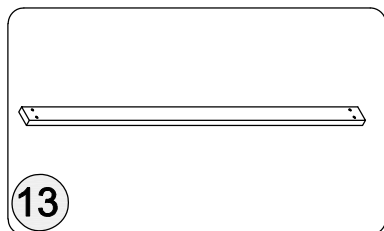

13

Connecting rod

Qty: 1





M4*40

C

x 4

1. Use hardware C to pass through component 13 and install it towards the lead hole

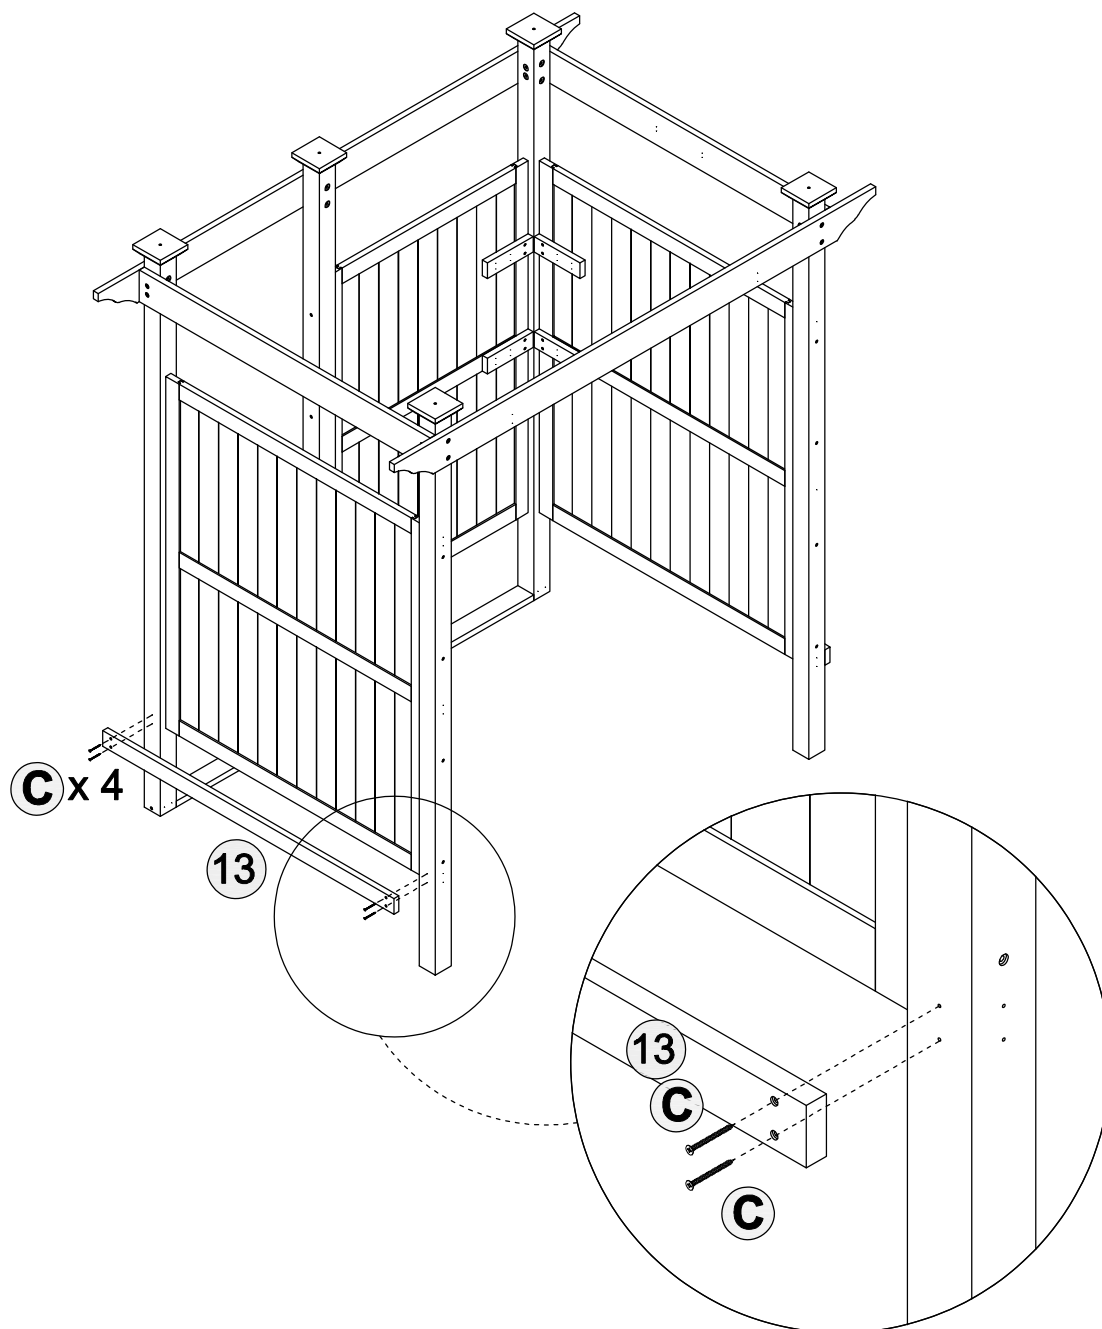

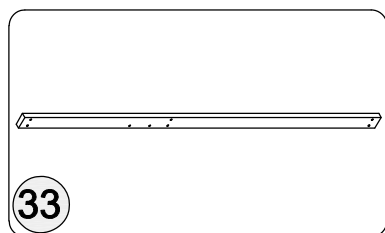

rear pull strap
Qty: 3





M4*40

C


x 12

1. Use hardware C to pass through component 33 and install it towards the lead hole


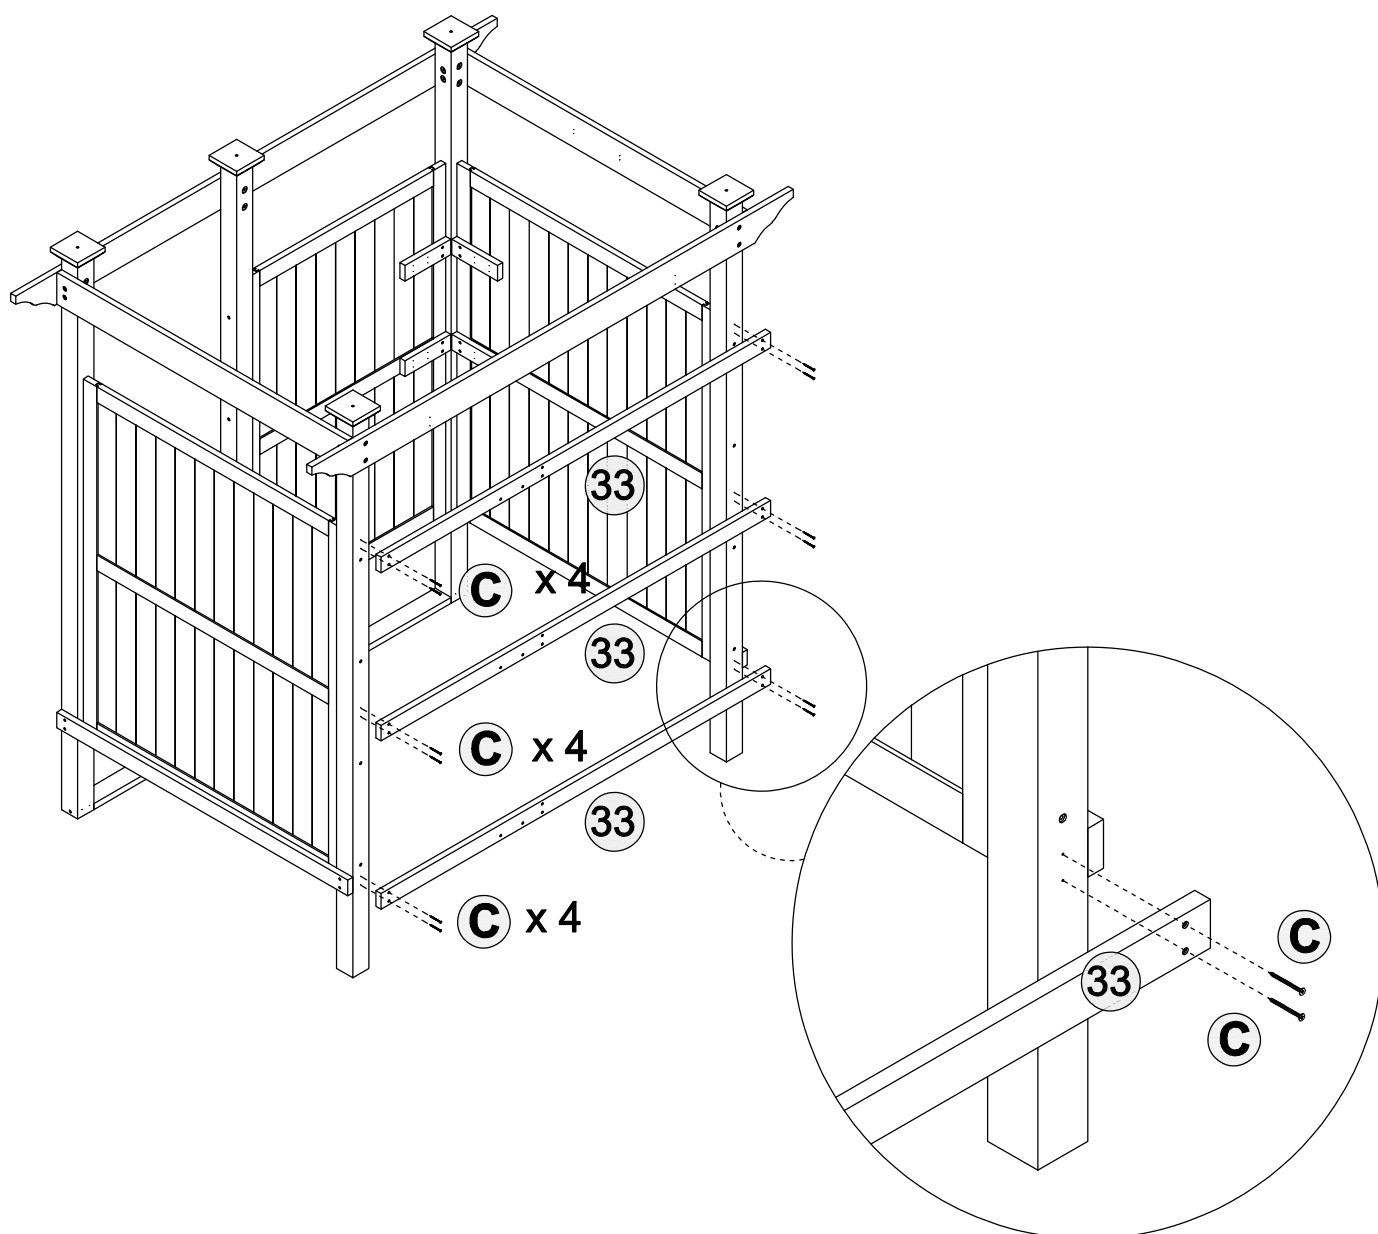


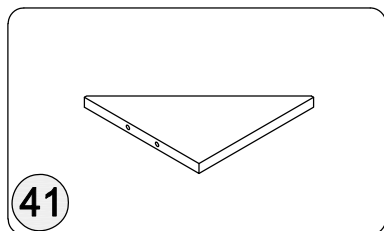



Triangle layer board
Qty: 1

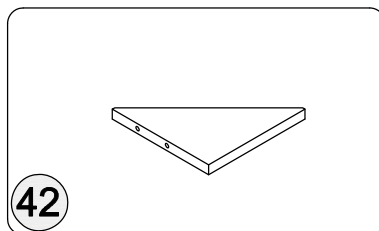

Triangle layer board
Qty: 2

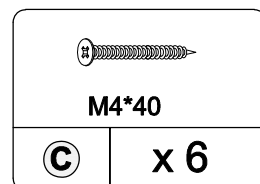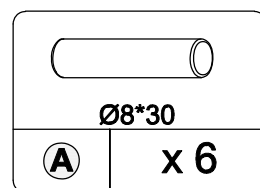

1. Connect with hardware A first, then install with hardware C

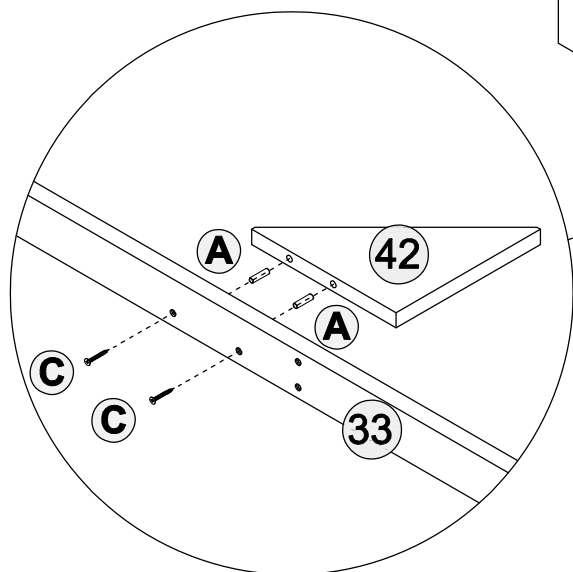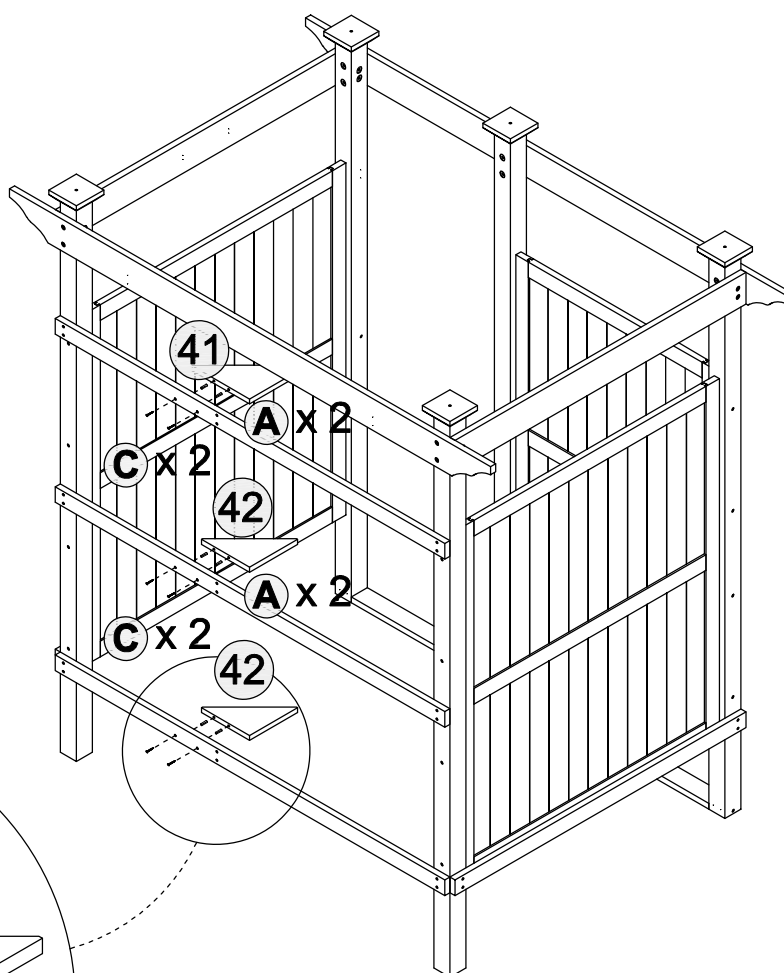




M4*40

C

x 6

1. Use hardware C to pass through component 33 and install it towards the lead hole

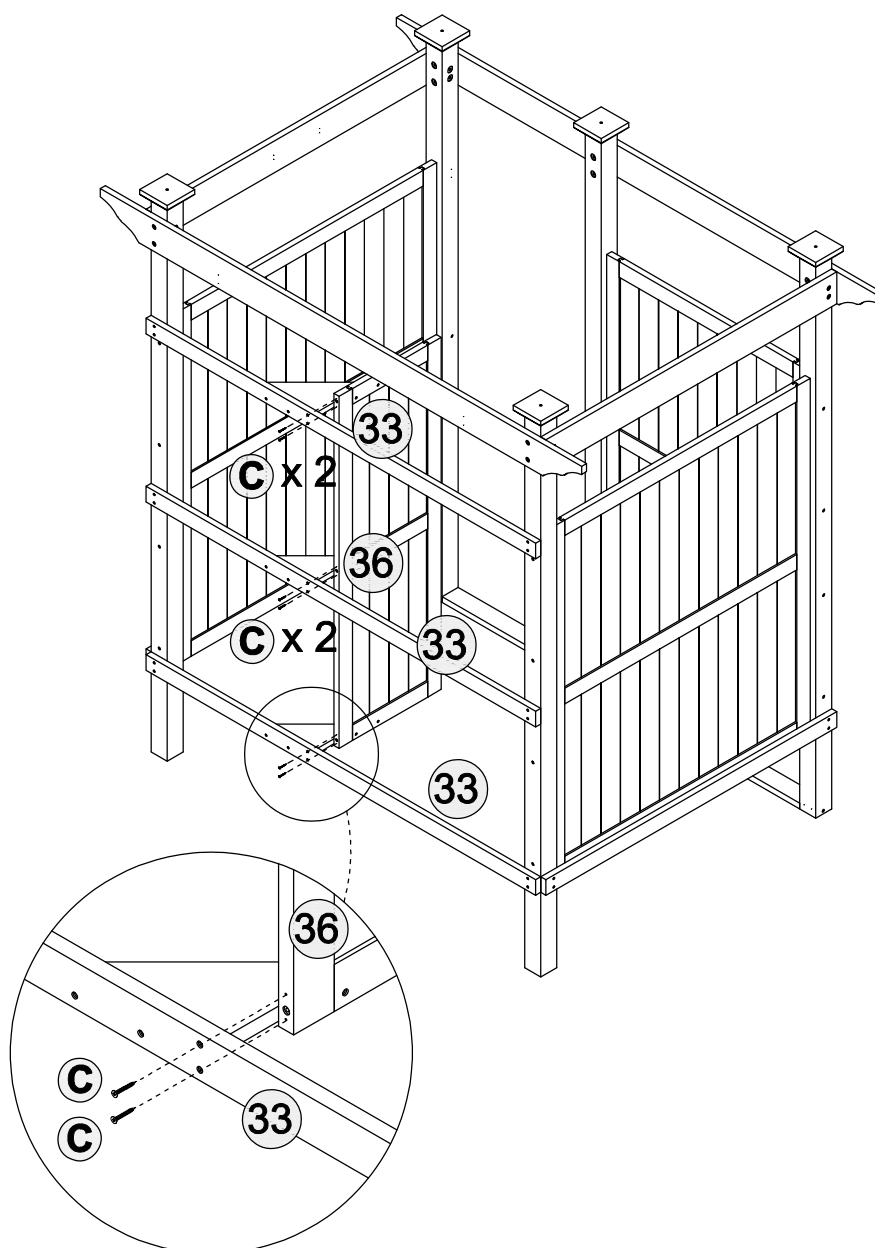




M4*40

C

x 6

1. Install with hardware C

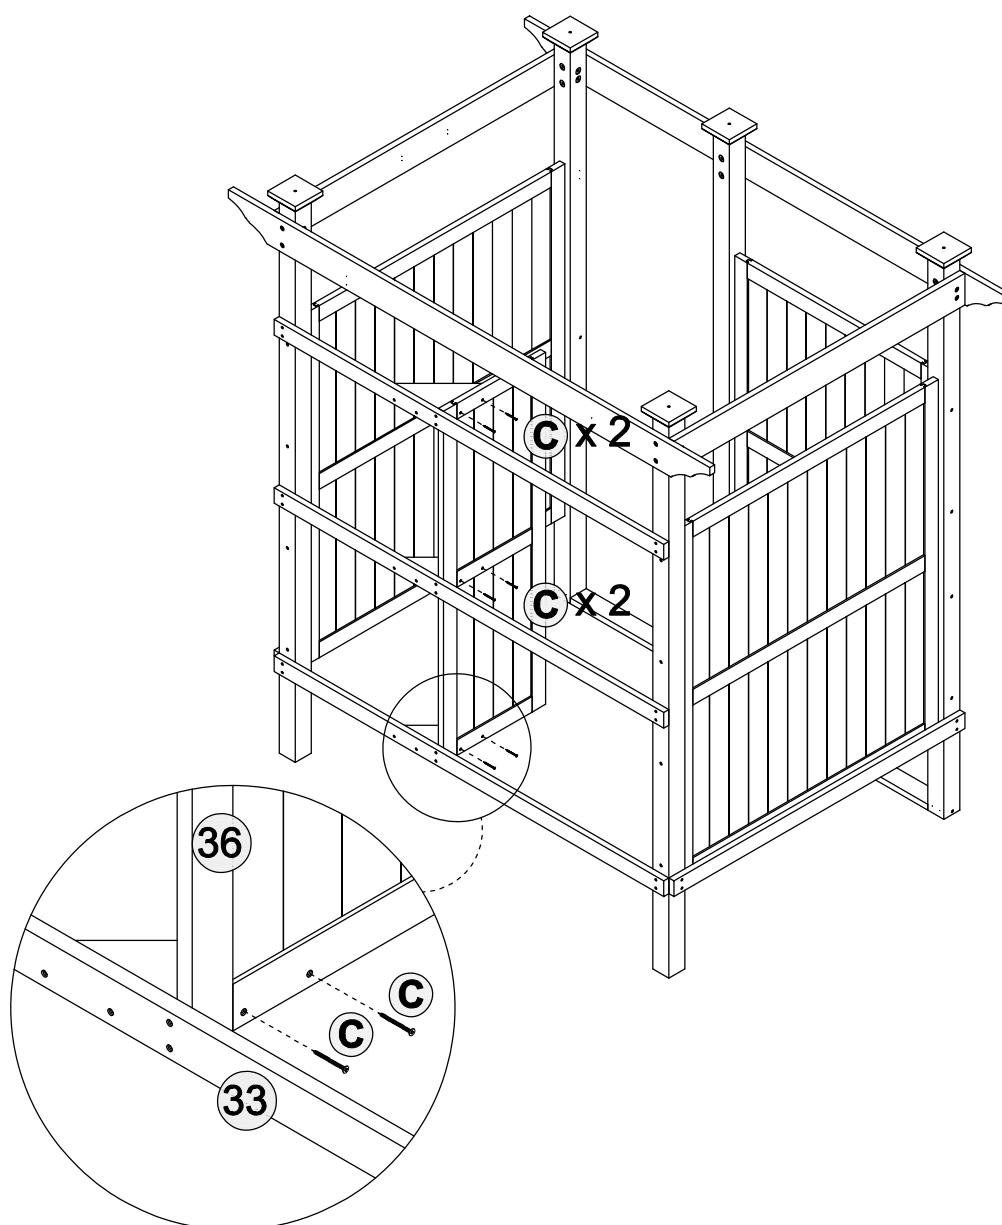

1. Use hardware B to pass through Hardware I and install it towards the lead hole



I



x 2



M3.5*20

B

x 16

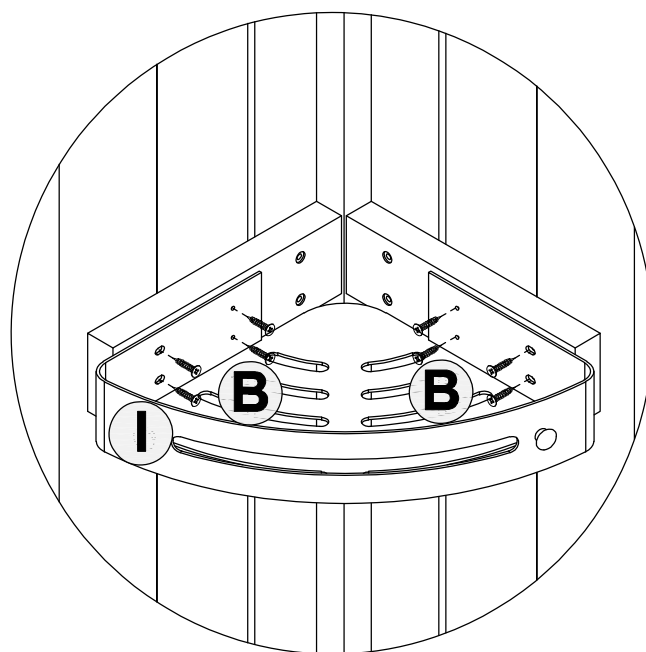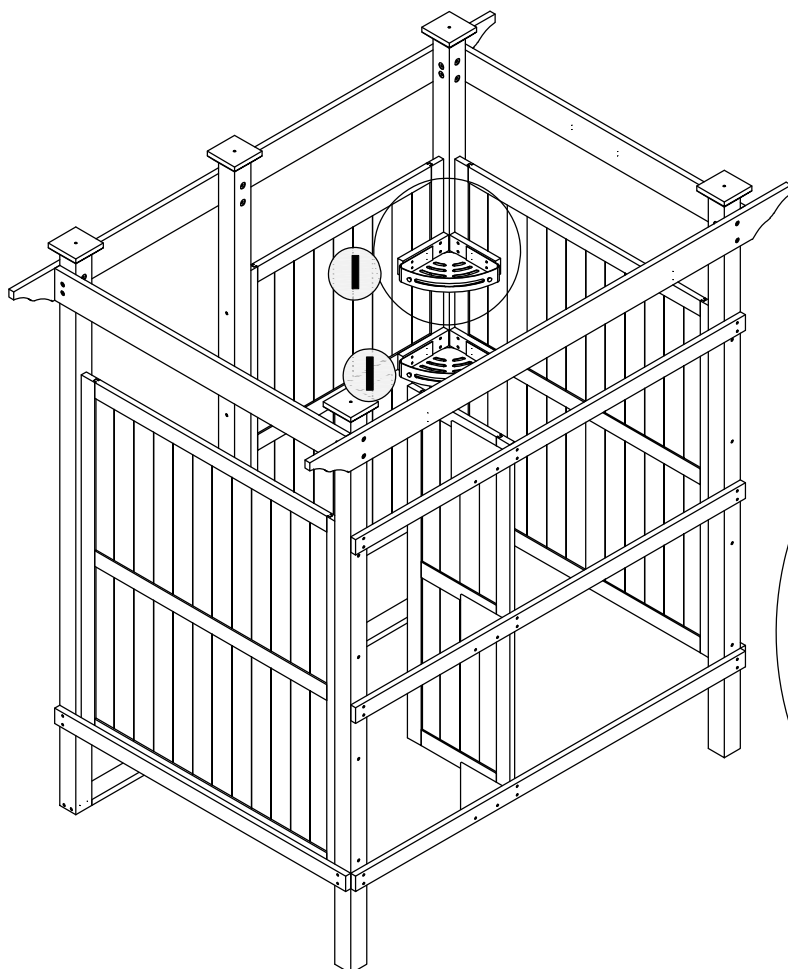





M3.5*20


B

x 8


1. Pre-install the hardware H for the pilot hole, and then install the other holes of the hardware H.

 2. Please note that the hole positions of the pilot holes must be aligned




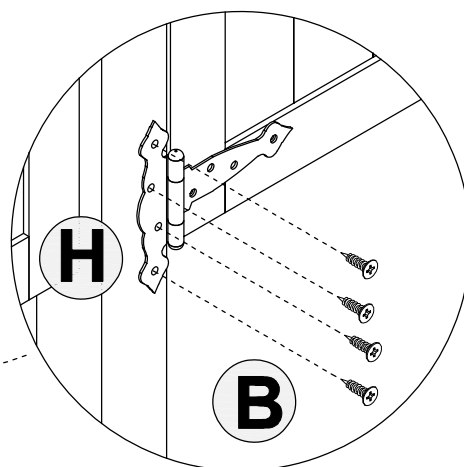
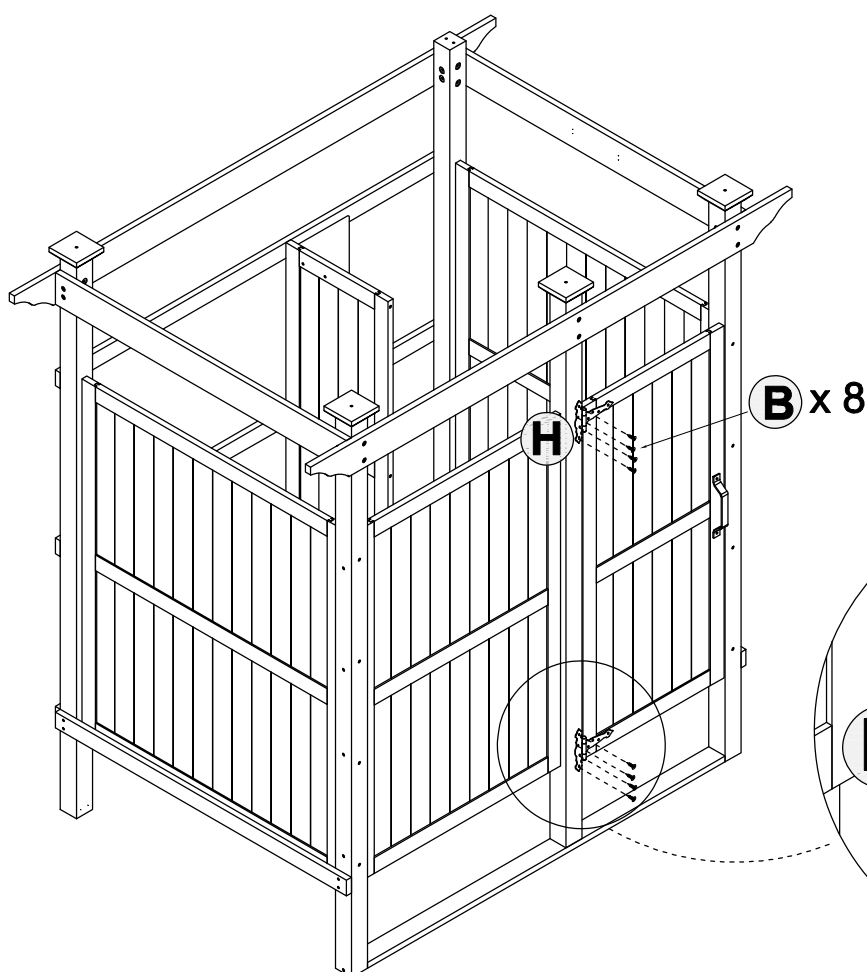



 L1 L2		 M3*16		 N	
L	x 2	M	x 12	N	x 1

1. Open the door and install it on the back of the door
- ⚠ 2. Pre-install the hardware N for the pilot hole, and then install the other holes of the hardware N.
3. Please note that the hole positions of the pilot holes must be aligned





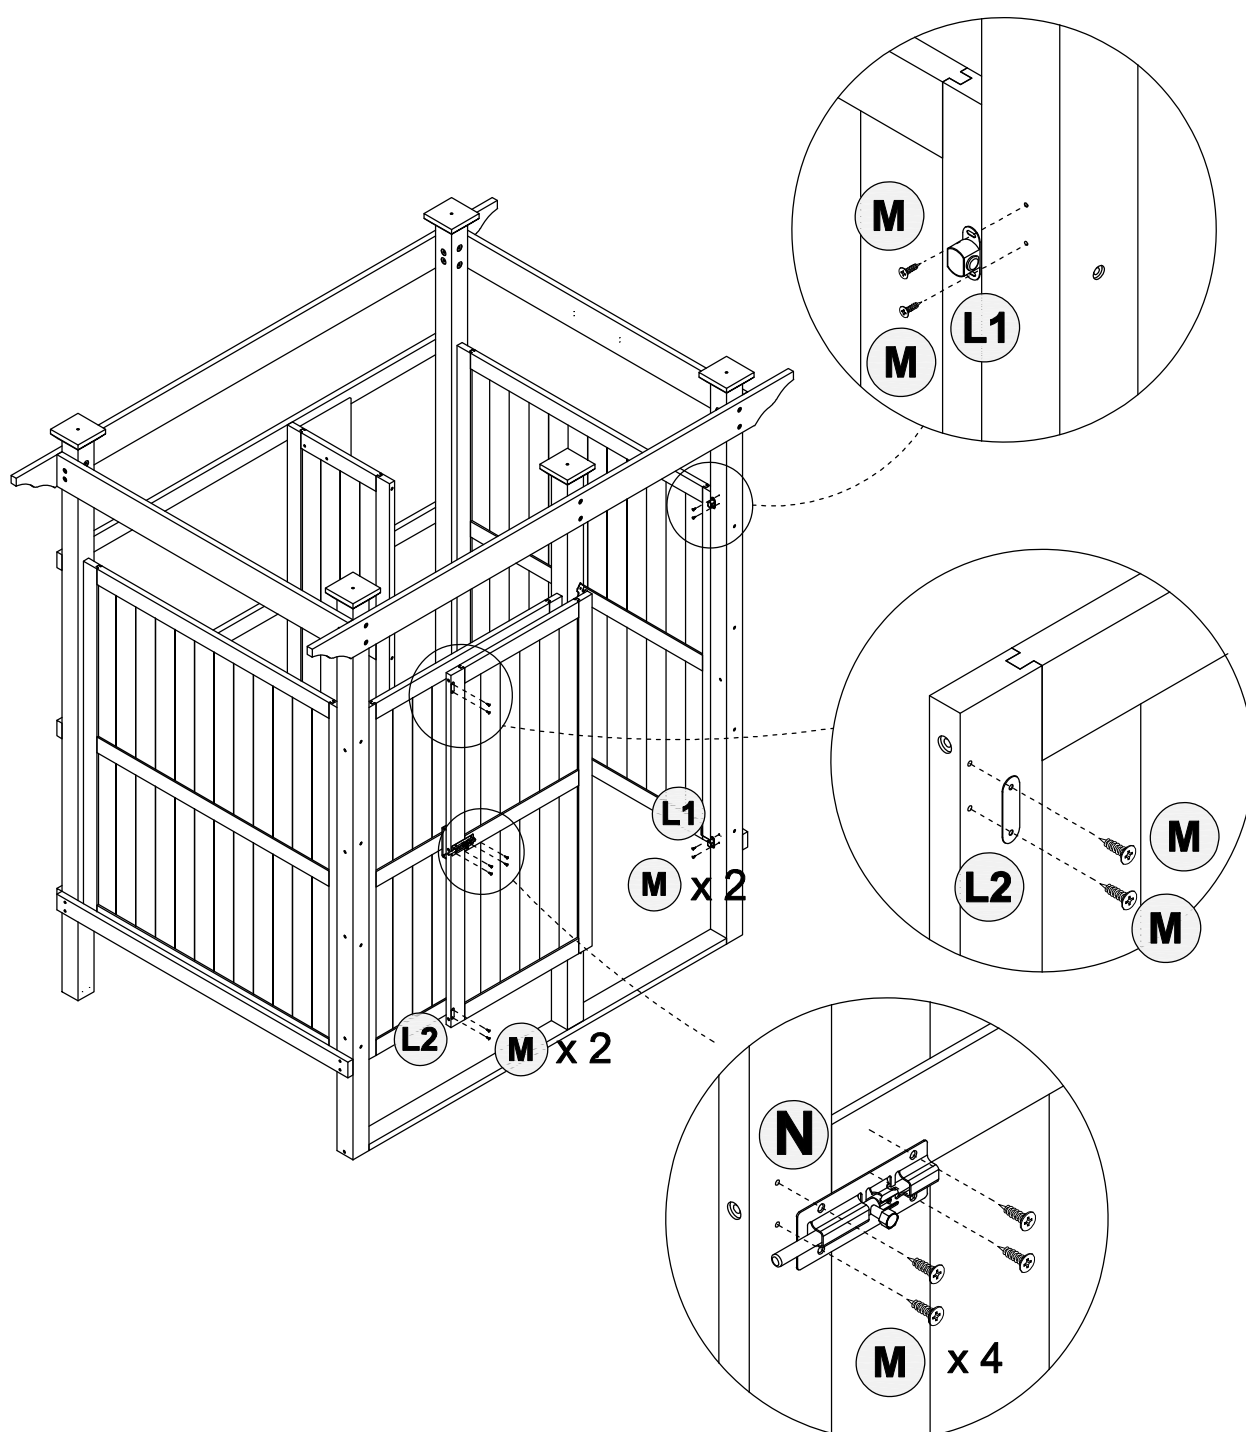


1. Use hardware B to pass through Hardware O and install it towards the lead hole
2. Use hardware Q to pass through Hardware O and Installed on the wall

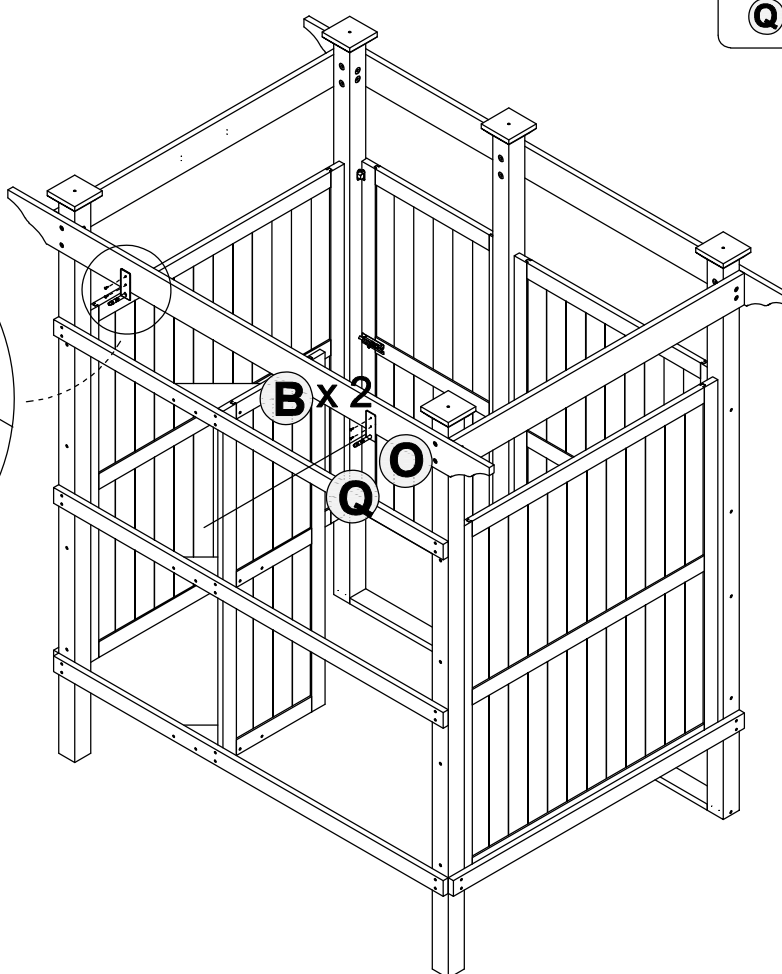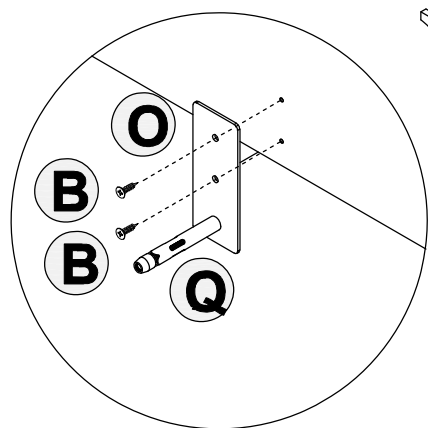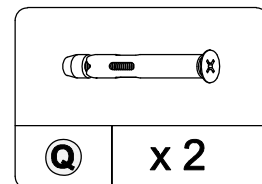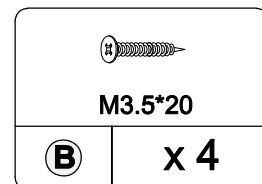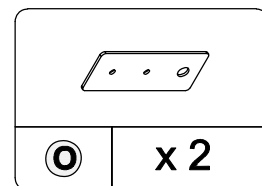




1. Use hardware B to pass through Hardware S and install it towards the lead hole
2. Use hardware B to pass through Hardware P and install it towards the lead hole
3. Use hardware Q to pass through Hardware P and Installed underground

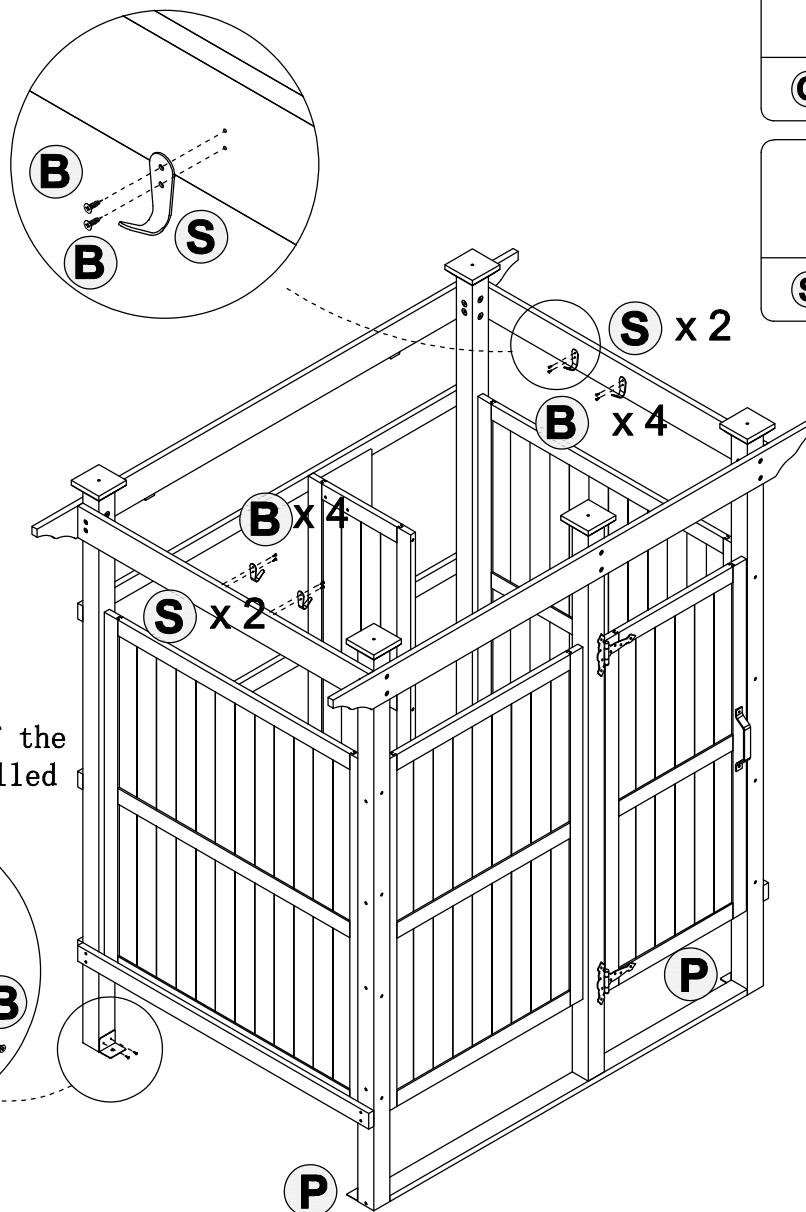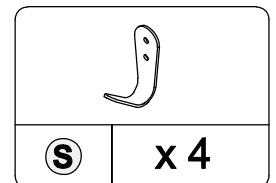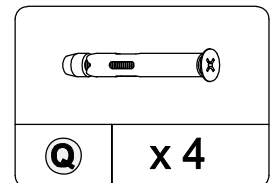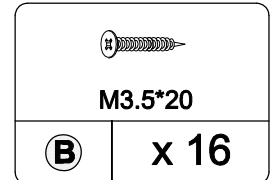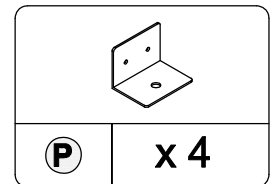

The inner side of the four feet is installed

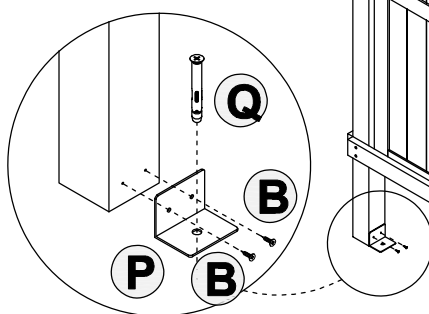

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068
208-820-0799