



Assembly Instructions







Caution : You must read this before you proceed

Push Back Chair

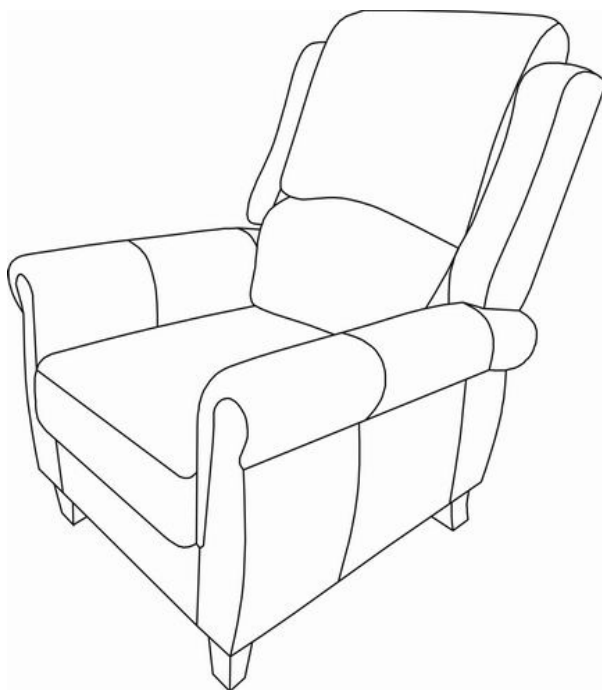

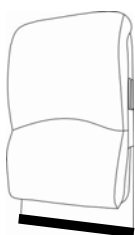
Parts List

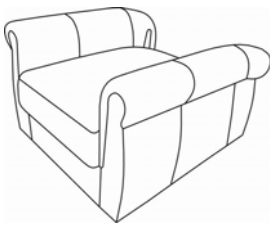Label	Picture	Description	QTY
A		Chair Backrest	1

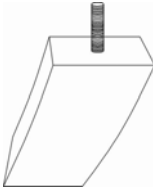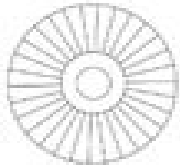B		Chair Base with Footrest	1
C		Left Wing (Labelled C)	1
D		Right Wing (Labelled D)	1
E		Front Leg	2
F		Hind Leg	2
Hardware			
Label	Picture	Description	QTY
①		Gasket	7

Assembly Preparation

Before Beginning Assembly:

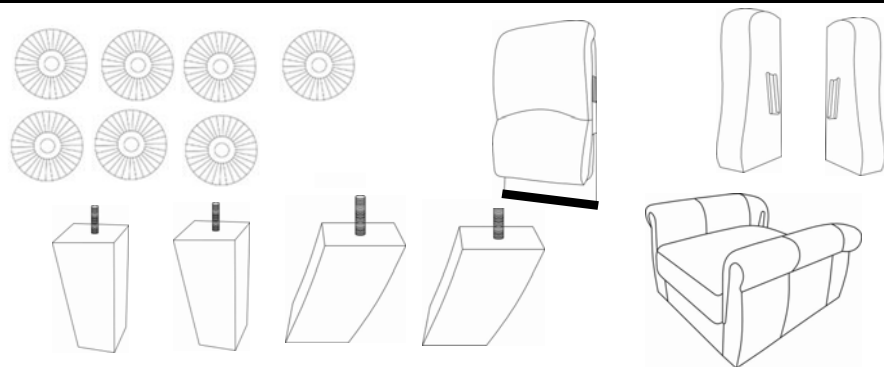

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Parts Introduction

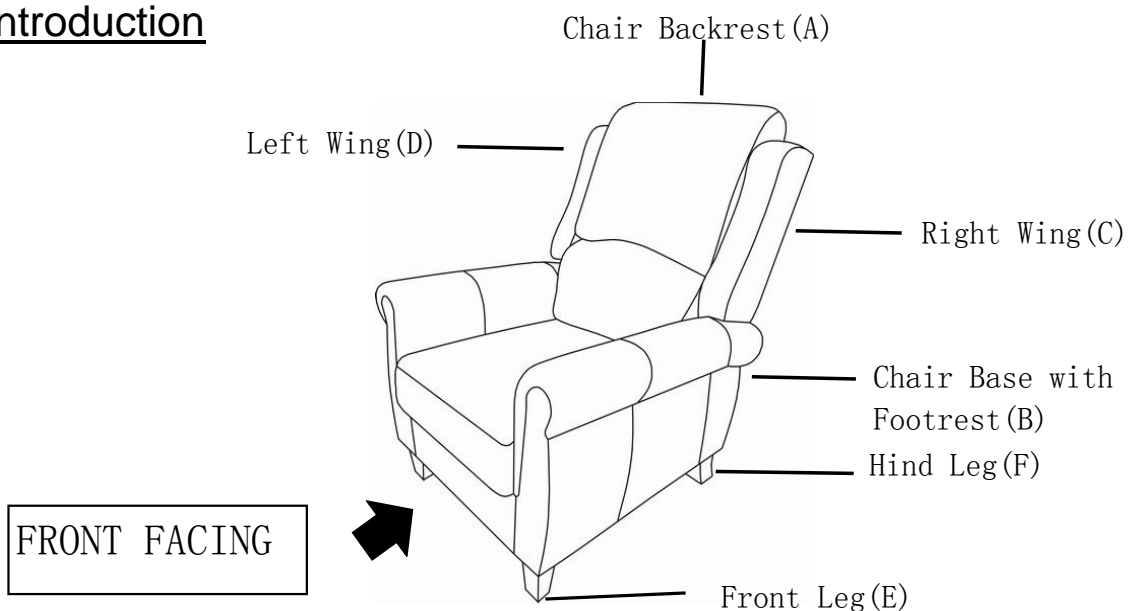


This Push Back Chair has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Reclining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.

Step 1

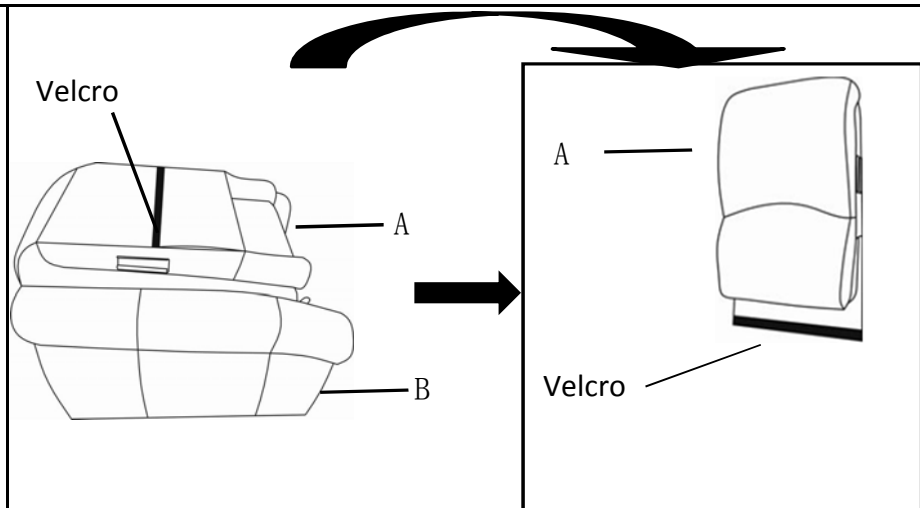


Take out the Chair Backrest(A) from Chair Base with Footrest(B).

Step 2

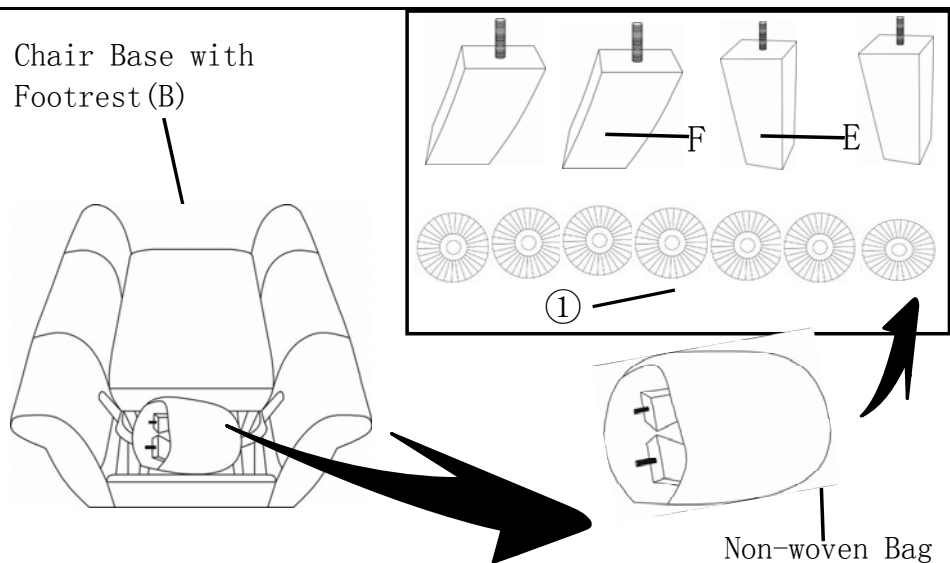

Place the Chair Base with Footrest(B) on a clean, non-marring surface.
Lay Chair Backrest(A) and non-woven bag aside.
Open the non-woven bag and take out the Legs and Gasket.


Step 3

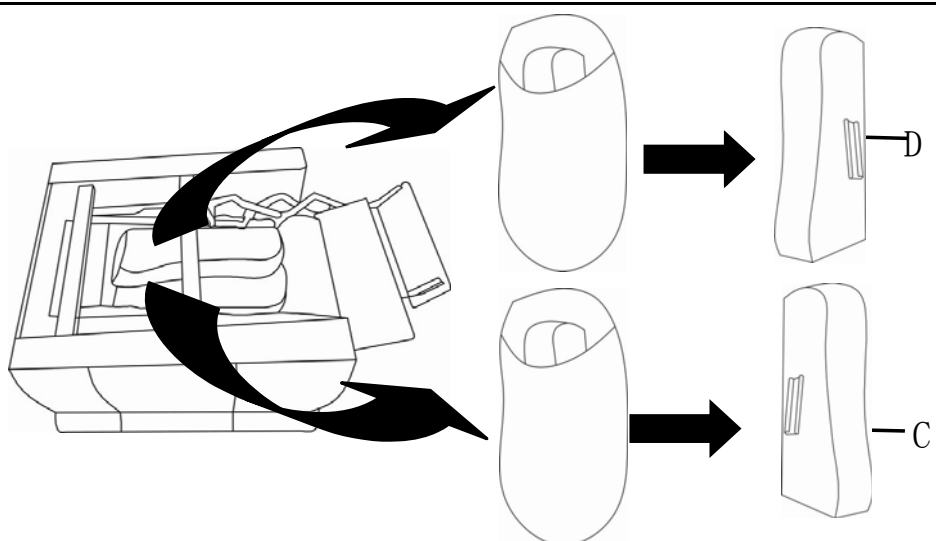

Turn the Chair Base with Footrest(B) upside down on a clean, non-marring surface.

Take out 2 non-woven bags with Wings inside from the bottom of the mechanism. Then take out the Wings from non-woven bags.

Step 4

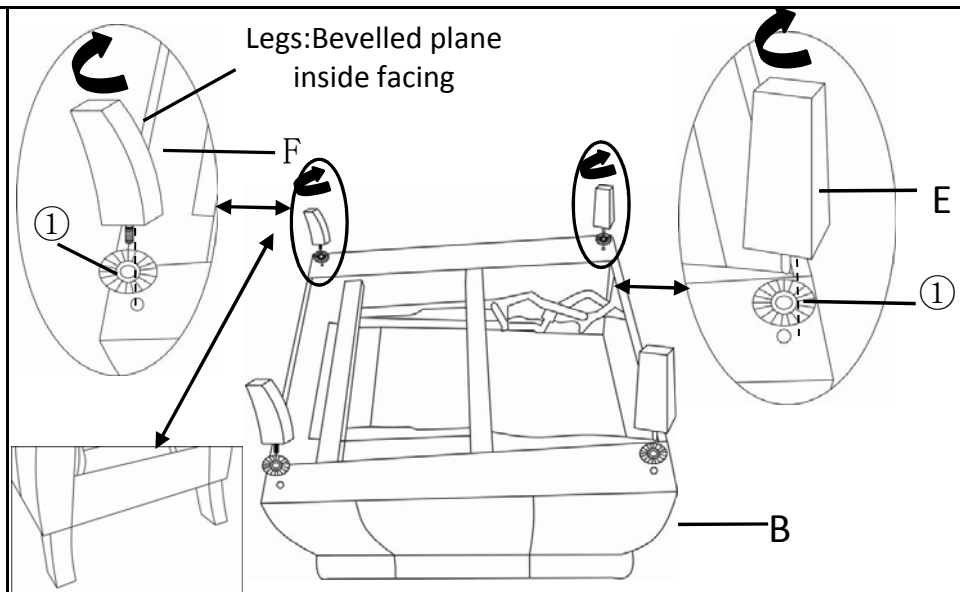

Keep the Chair Base with Footrest(B) in the same position. First, install the Front Leg(E) at the bottom of the Chair by placing one Gasket(1) on the threaded stem.

Then insert threaded stem into the threaded mounting position at the corner of the Chair.


Tighten by turning the Leg clockwis, DO NOT OVER TIGHTEN.

Repeat the same step to install the remaining three Legs(E) .

Take care of the shape of the Legs and ensure they are in the correct postions.

Note: The use of Gaskets are OPTIONAL and are especially useful to help alleviate slight wobbleness. Some Legs may need more than one gasket whilst some legs may not need any.

Step 5

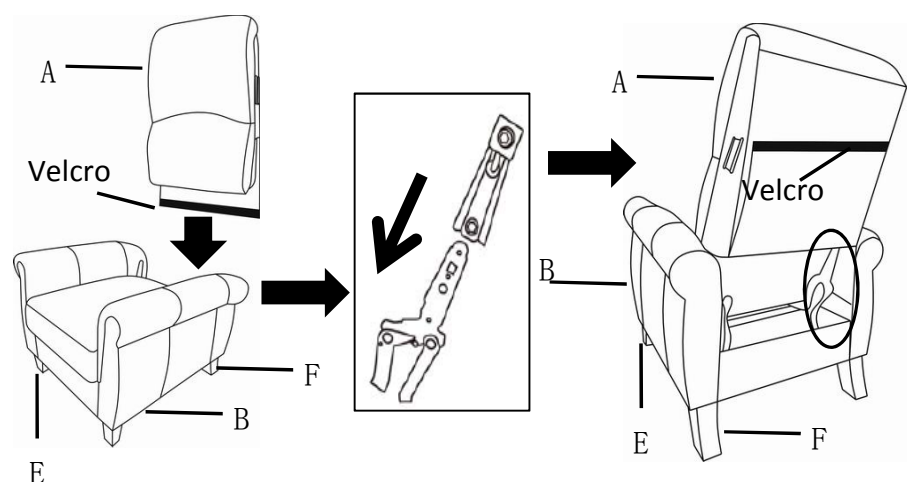


With assistance from your adult partner, hold up the fully assembled backrest , stand behind the chair.

Insert the small metal arms on the sides of the Chair Backrest into the prefabricated slide lock gadget on the Chair Base as shown above.

Firmly but gently, push the Chair Backrest downwards until the **Backrest is fully slotted and locked into position.**

Step 6

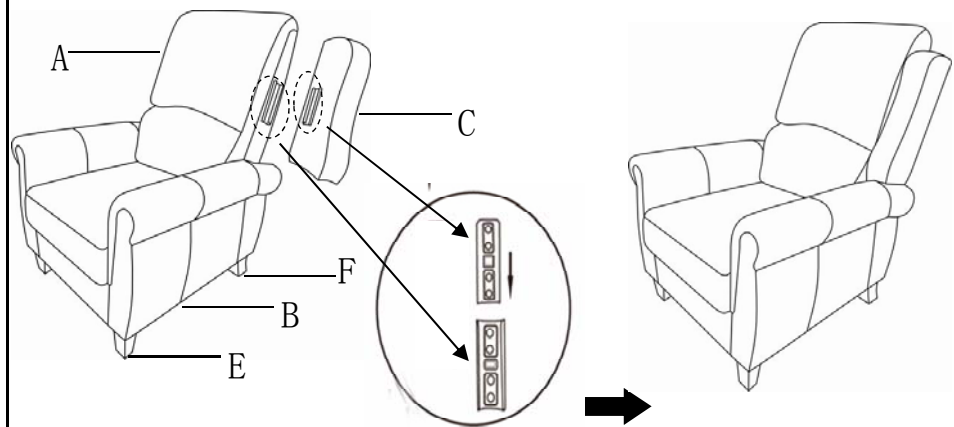


Position the Chair Backrest(A) on it's left side.

Align the mounting brackets of the Left Wing(C) with those on the left side of Chair Backrest(A).

Then slide Left Wing(C) forward by hand to make sure it locks into the position as shown in the picture.

Step 7

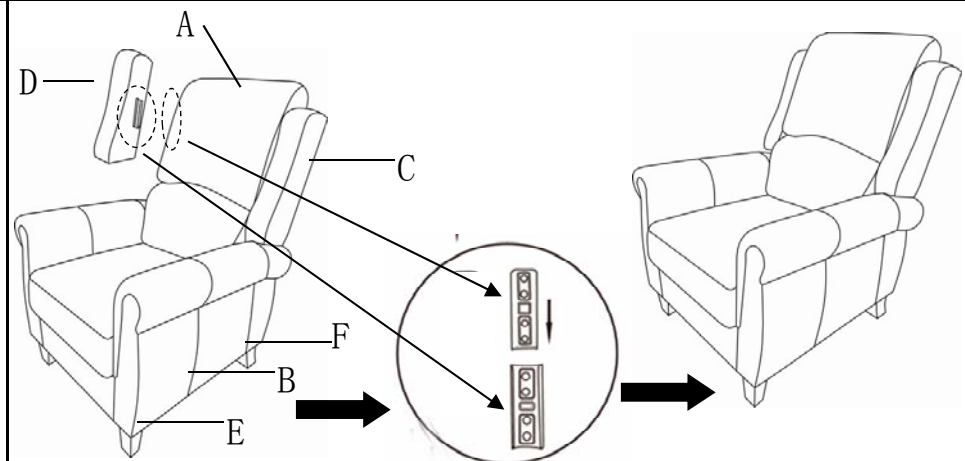


Position the Chair Backrest(A) on it's right side.

Align the mounting brackets of the Right Wing(D) with those on the right side of Chair Backrest(A).

Then slide Right Wing(D) forward by hand to make sure it locks into the position as shown in the picture.

Step 8

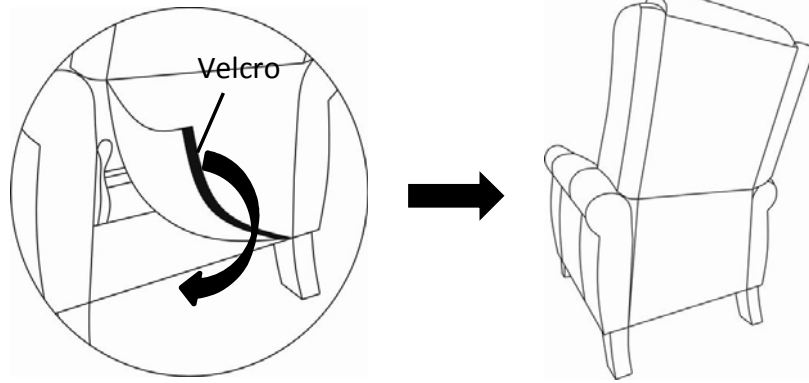

Smooth down the fabric flap on the Chair Backrest.

Run your hands down both sides of the flap, from top to bottom, allowing the velcro tape to adhere to the flap under the seat of the chair.

Your Push Back Chair is ready for use.


Step 9



Make sure all parts are connected and securely locked into position.

Your Chair is ready for use.

Step 10

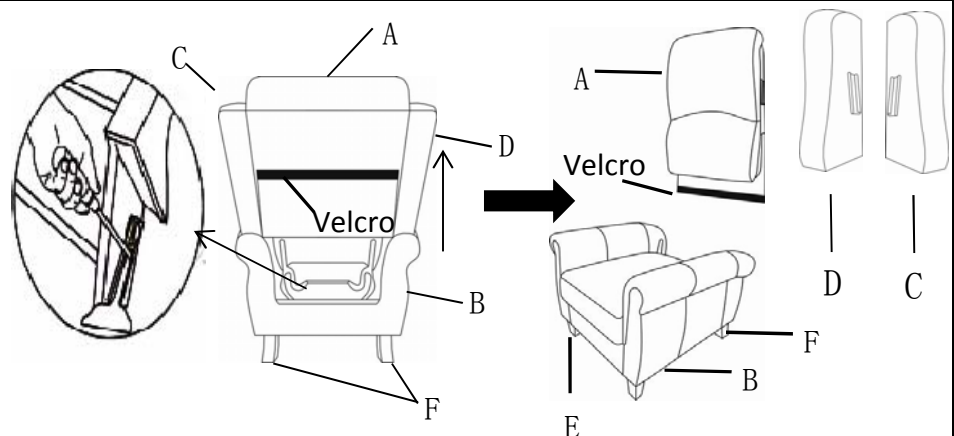


Disassembly Note: Open the flap on the Chair Backrest(A), use a screwdriver(Don't use fingers) pressing outward on the metal ear on the preattached Metal Bracket on one side of the Chair Base(B), with assistance of you adult partner to keep the Chair Base(B) in place, pull out the Chair Backrest(A) upward at the same time, repeat the same step for another side. Then the Chair Backrest(A) can be taken out.

User Instructions.


Please read the Instruction Manual below carefully before use.

Supervise children, when in use of this Push Back Chair.

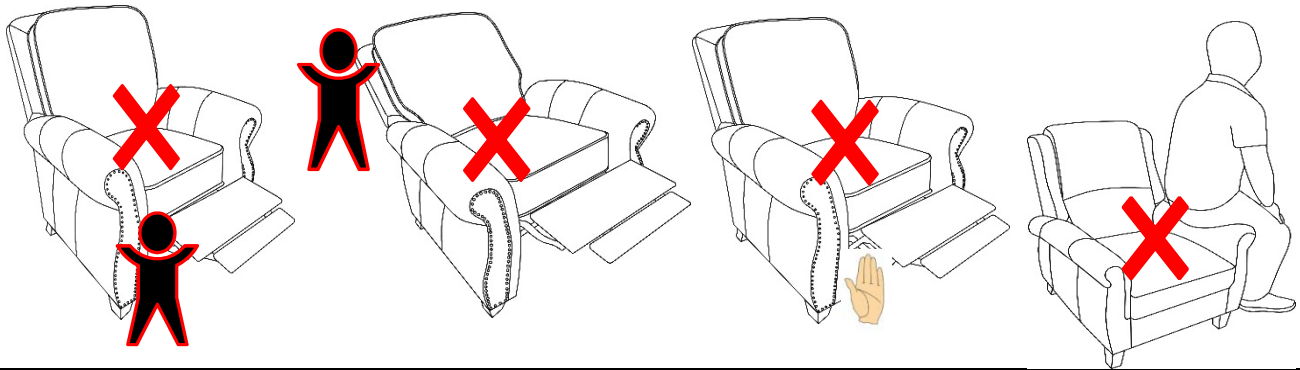

Do not let Child stand in front or back of the Push Back Chair when open or close the footrest. Do not put you hands inside the Footrest when open or close the footrest. Do not seat any armrest of this Chair.

To get into a open position - To push the Chair Backrest

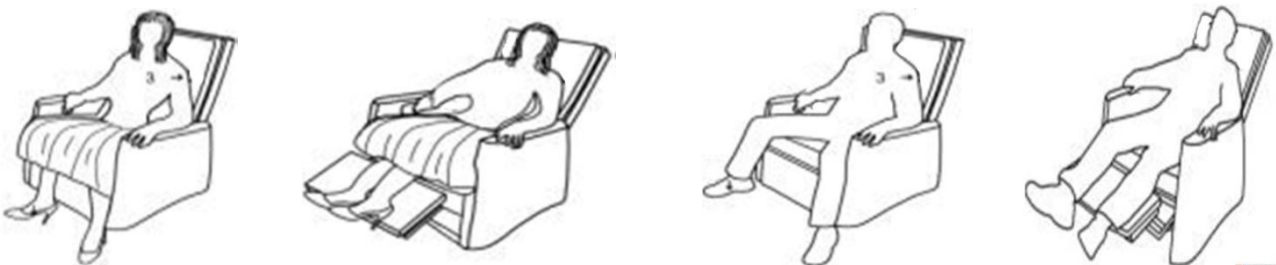


To get out of chair - move Seatback into Upright Position

Tilt your body weight slightly forward and upwards.

The seat back will come up to an upright position.

Use your feet to push the footrest back. You can stand up when the footrest and the machanism clicked.

Where necessary, use either your arms help lift- push yourself out of the seat.

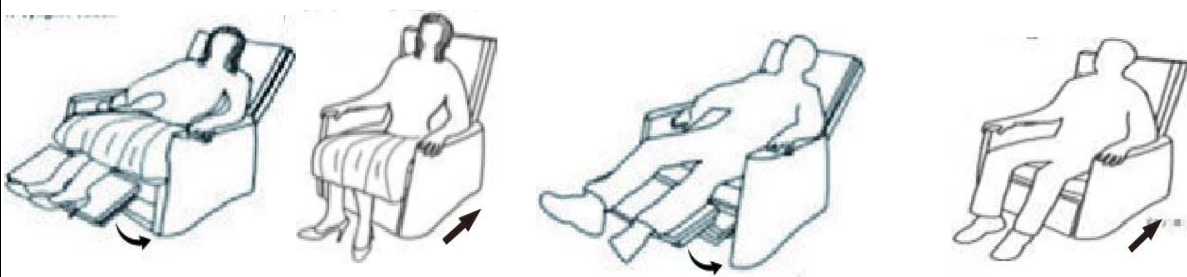

Care & Maintenance



- Do not put hot items directly on furniture surface



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only .



- Not for commercial use. For residential use only .



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth .