

















Parts Checking

(1) Castors 	(2) Base 	(3) Base Tube 	(4) Gas lift 
(5) Mechanism 	(6) Seat 	(7) Backrest 	(8) Armrests 
(9) Headrest 	(10) Lumbar Pillow 	(11) Angle Adjuster 	(12) Angle Adjuster Cover 
(13) Screws M8*25mm  (16PCS)	(14) Screws M5*10mm  (4PCS)	(15) Wrench 	


CAUTION

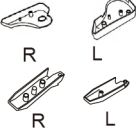- * Do not stand on the chair or use it as a ladder, only as a chair.
- * This chair is designed to be used by one person at a time.
- * This chair is designed for a single person weighing up to 400LBS(181kg).
- * Do not use this chair unless all bolts, screws and knobs are tightened.
- * Failure to follow these instructions could result in serious injury or death to you and others.
- * Some parts are heavy and/or have sharp edges, please install with care to avoid injury to yourself and others.


Instructions for Use

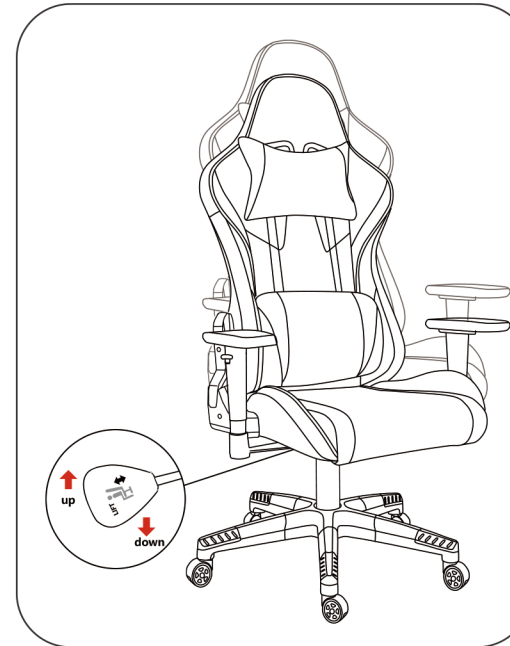

Height Adjustment

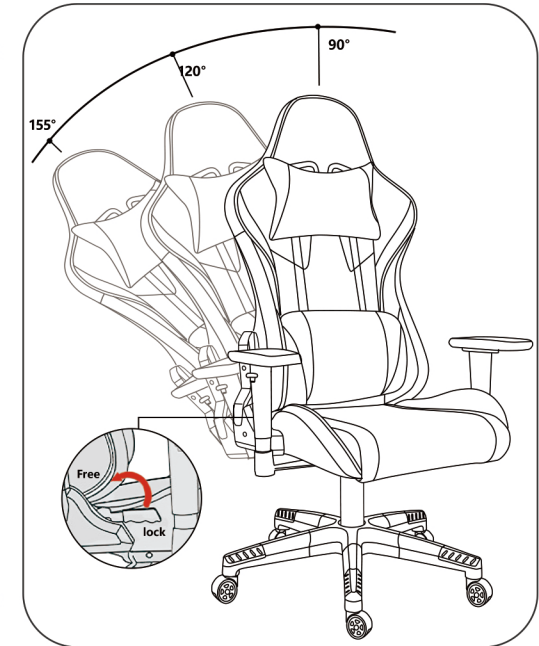

Backrest Adjustment

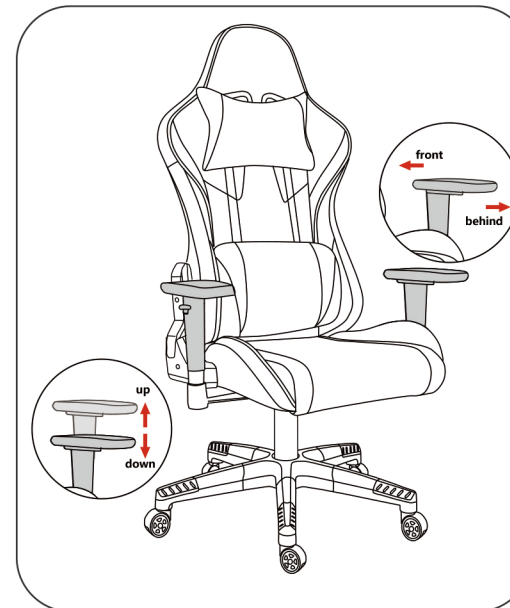

3D Armrests




400LBS(181KG)

Assembly Instruction

Step 1

Take out Base(2), Base Tube(3), Castors(1) and Gas lift(4). Start by placing the 5 Base Tubes(3) bottom side up and snapping them onto the Base(2) in order as shown. Firmly snap the 5 Castors(1) onto each Base Tube(3) in turn, then turn the entire base over. Finally insert Gas lift(4) into the hole in the center of Base(2).


***Note: The Castors(1) need to be fastened to the Base Tube(3), otherwise the chair might tip over!**

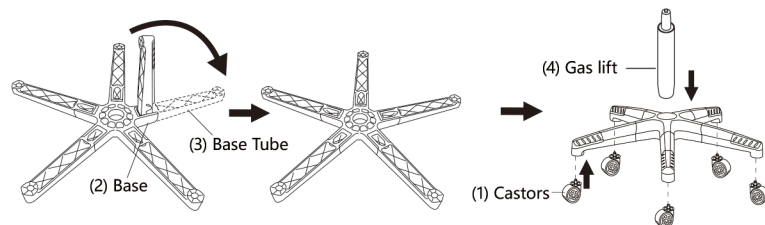

Step 2

Take out Seat(6), Armrests(8), 4 Screws(13) and Wrench(15). Place the Armrests(8) to the Seat(6) with 4 Screws(13) by using the Wrench(15) and before screwing, please make sure all the screw holes in the Armrests(8) and Seat(6) are aligned.


***Note: Please check the front and rear orientation of the Armrests(8) before installing.**

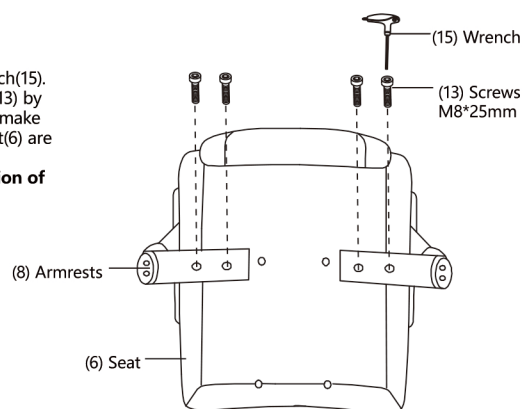

Step 3


Take out Mechanism(5), 4 Screws(13) and Wrench(15).

Use the Wrench(15) to tighten the Mechanism(5) to the Seat(6) through the 4 Screws(13) (refer to the detailed schematic for the order of screw installation). Then, find the hole in the center of the Mechanism(5) and fasten it against the Gas lift(4) installed in step 1.

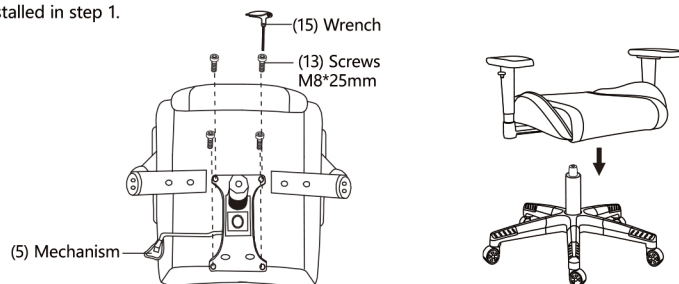

Screw installation order reference			
3	2	4	3
1	4	1	2

Step 4

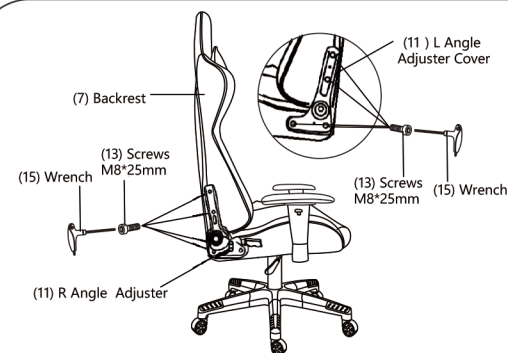

Take out Backrest(7), Angle Adjuster(11) and 8 Screws(13).

First take 4 Screws (13) to tighten the 2 Angle Adjusters(11) to the screw holes on each side of the Seat(6) (2 on each side).

Then take out the Backrest(7) and align the remaining screw holes on the Angle Adjuster(11) and the Backrest(7). Tighten them with the remaining 4 Screws(13).

Step 5


Take out Angle Adjuster Angle(12) and 4 Screws(14).

Tighten the Angle Adjuster Cover(12) to the Angle Adjuster(11) with 4 Screws(14) on the left and right sides respectively.

***Note: The left and right Angle Adjuster Covers(12) are different from the Angle Adjuster(11)'s shape, so look at the picture to identify them.**



Step 6

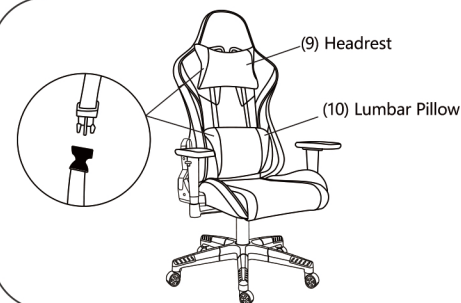

Take out Headrest(9) and Lumbar Pillow(10).

Pass the elastic strap of the Headrest(9) over the 2 holes of the Backrest(7) and snap it on. Fasten the Lumbar Pillow(10) by passing the elastic band of the Lumbar Pillow(10) through the holes of the Backrest(7) and the seam between the Backrest(7) and the Seat(6).