


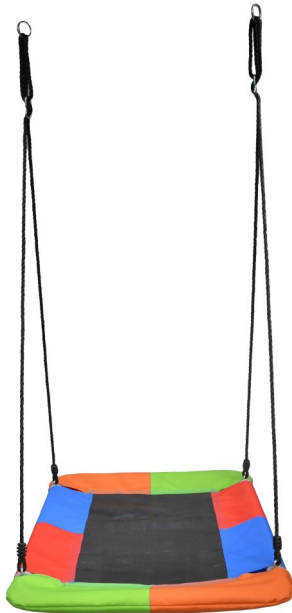

Giant Mat Platform Swing, Rainbow

SKU: SWG-RNBW-MT100

Designed for Ages 5+; Max Weight 400lbs



**Assembly, Installation, Operation and Maintenance
Instructions**

Assembly Instructions


- 1) Unpack and check contents. Packaging includes one fabric mat, four foam covered steel tubes and two hanging ropes.



- 2) Spread out the fabric mat and arrange the foam covered tubes around the mat as shown below.




- 3) Insert the poles through the flaps in the mat going all the way around until the mat is completely assembled.

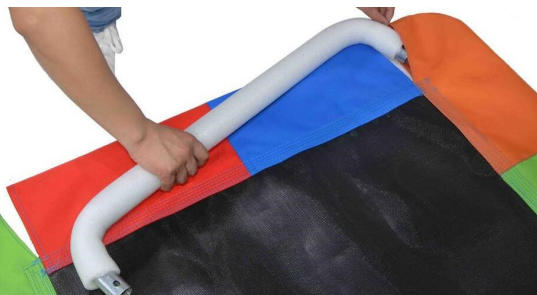

- 4) Secure the frame using the bolts of the hanging ropes by screwing the bolts through the frame.**



- 5) Hand tighten the nuts onto the bolts and secure the bolts tightly with a wrench. Repeat for all four bolts.**

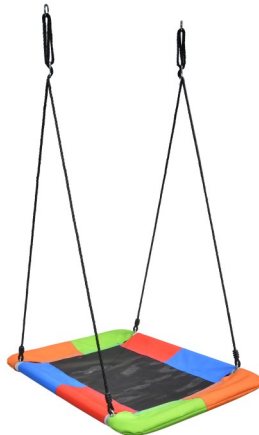

The swing is now complete, enjoy responsibly and swing safely!

Installation Guidelines

- The swing shall be mounted in such a way to hang over a soft surface such as grass, sand, wood chips, or other soft surfaces. Under no circumstances should it be hung over concrete, asphalt, or other hard surfaces.
- Distance from the ground should not exceed 12"-16"; the maximum fall height should not be more than 18".
- Equipment should be hung in such a way that a distance of at least 6' is clear on all sides. Swing can be hung on an A-frame swing set or on a tree limb with a diameter of at least 10".
- Please be sure to examine the ropes regularly to check for wear. Rope will, in time, degrade. If the color of the ropes has become pale, frays easily, or gives off a powdery material when rubbed between the fingers we recommend you replace the rope.
- The swing can be mounted from one mounting points (left picture) or two mounting points (right picture). Please see examples below.



Operation

Clearance distance should be 6 feet around the swing.

A fall onto a hard surface can result in serious injury.

Do not use the equipment until installed properly.

This swing is not to be used in any manner other than its intended use.

Adults should verify that the hanging ropes are secured and cannot be looped back on the swing.

It is important for adults to instruct children:

- To dress appropriately while using the swing (avoid ponchos, scarves, and other loose-fitting clothing that is potentially hazardous).
- When swinging alone to put their full weight in the center of the swing.
- **Warning!** Do not attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- **Warning!** Please be sure children wear well-fitting footwear that fully encloses the foot when using this swing. Clogs, flip-flops, and sandals are considered inappropriate footwear.

It is important for adults to instruct children NOT to:

- Walk close to, in front of, behind, or between moving items.
- Twist ropes or loop them over the top support bar since such action may reduce the strength of the rope.
- Get off of the swing while it is in motion.
- Climb on the swing when it is wet.
- Attach additional items to the swing that might cause a strangulation hazard.
- Wear a bicycle or sport helmet while on the swing.

Maintenance

At the beginning of each play season, adults should:

- Tighten all hardware.
- Check all protective coverings on pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seat, ropes for wear, rust, or other deterioration. Replace as needed. The hardware used for this swing (binding post, screw, S hook, lock washer, flat washer, and metal ring) can be found at a local hardware store.
- Check metal parts for rust. If found, sand and repaint using a non-lead-based paint meeting the requirements of 16 CFR 1303.
- Lubricate all metallic moving parts per manufacturer's instructions. If the swing is hung from swing set frame, then lubricate all metallic moving parts that are attached by a metal connection.

Once a month during play season, adults should:

- Tighten all hardware.
- Check all protective coverings on pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including ropes for wear or other deterioration. Replace as needed.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check protective surfacing materials and replace as needed.

At the end of each play season or when the temperature falls below 40°F:

- Remove the swing from its outdoor location and store in a dry environment.
- Owner should check and be responsible for maintaining the legibility of the warning labels.

Disposing of the Swing

To dispose of the swing, first disassemble it. Dispose of it in such a way that no unreasonable hazards will exist at the time that the swing is discarded.

More Fun Products from




Tarzan Tire Swing



Climbing Rope with Platforms



Standard Swing Seats

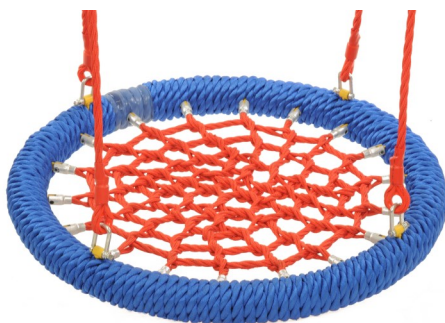

Commercial Nest Swing

To reduce the likelihood of injury please follow the guidelines as outlined in this manual. Swinging Monkey Products tests our products to ensure safety and complies with: ASTM F1148 Standard Consumer Safety Performance Specifications for Home Playground Equipment, F1487 Standard Consumer Safety Performance Specifications for Playground Equipment for Public Use, and CPSIA Specifications for lead paint.

For questions and sales inquiries please contact:

Swinging Monkey Products

800-893-7202

info@swingingmonkey.com



www.swingingmonkey.com