



# Hanging Chair

OP-DYV0712-31BG  
OP-DYV0712-31BK

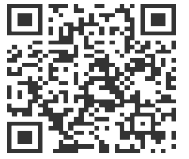

OP-DYV0712-31BK

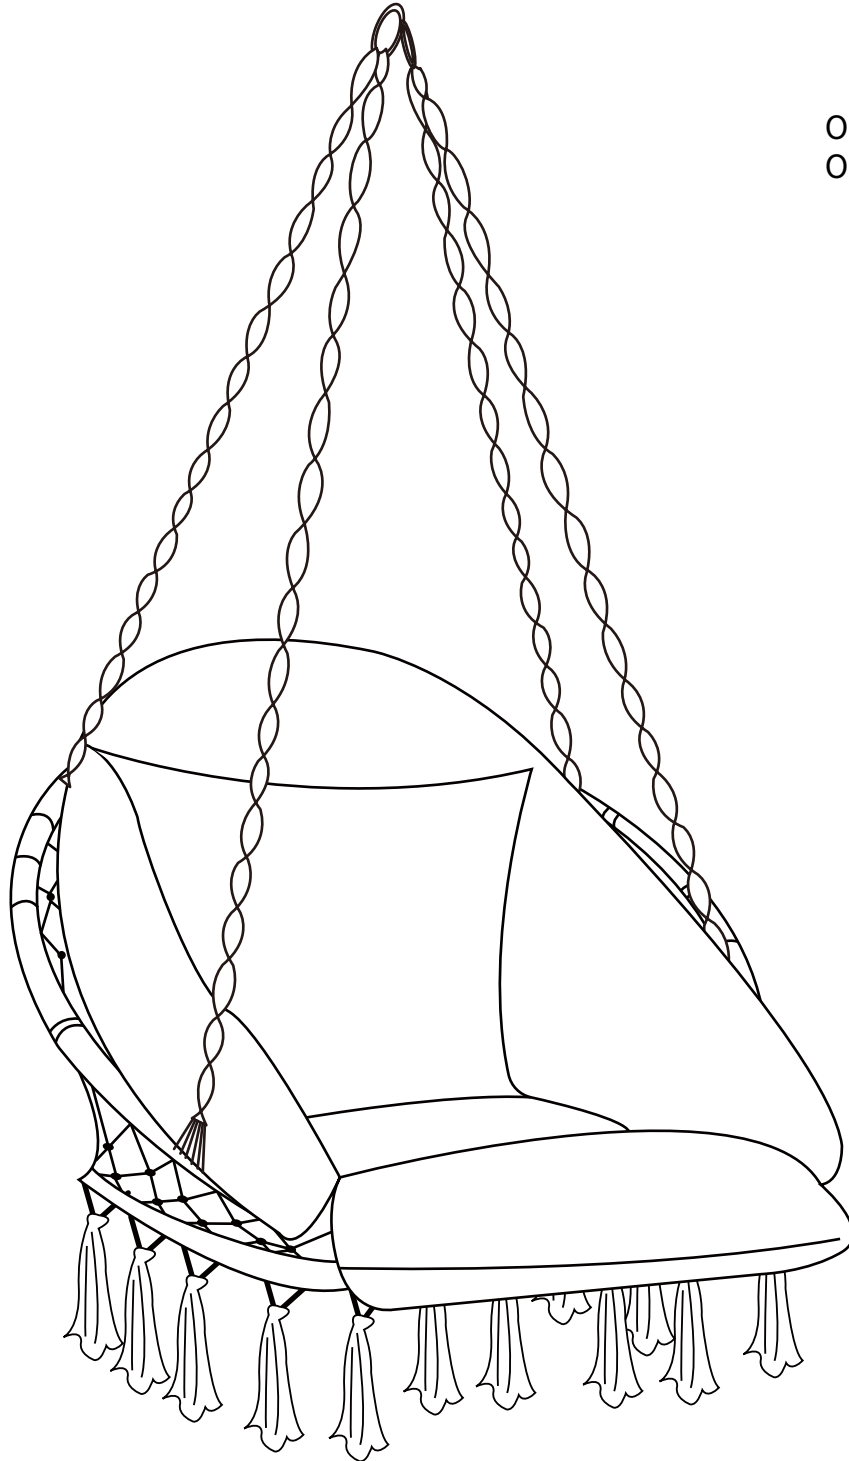

✉ (909)637-7665 | (909)637-7593

☎ HJ-Customer-Service@outlook.com

EST 9:00AM--17:00PM

# User Manual

## Hanging chair

### READ THE INSTRUCTIONS BEFORE USE!

### EXERCISE CAUTION!

#### Safety rules

- ✓ The swing is intended for recreational use.
- ✓ The product is not suitable for independent use by children under 3 years of age.
- ✓ The maximum allowable load is 150kg.
- ✓ Before use, ensure that all components are properly connected and undamaged.
- ✓ Improper use of the product can result in serious injury or even death!
- ✓ Please exercise extreme caution!
- ✓ Children may use the swing only under adult supervision!
- ✓ The product contains small parts that are not suitable for children under 3 years of age. There is a risk of swallowing, choking, or suffocation! This applies to both the product and its packaging!
- ✓ Children over 3 years old may use the swing only under the supervision of a responsible and sober adult!
- ✓ Please use the product only with appropriate clothing, without loose elements that could wrap around the body.
- ✓ Falling from the swing can cause serious injuries; therefore, it is not recommended to hang it over hard surfaces such as asphalt, concrete, or paving stones.
- ✓ Do not allow children, other people, or animals near the swinging swing, as this poses a risk of accident.
- ✓ Jumping off the swing and climbing on its ropes is prohibited.
- ✓ Do not modify the product or add extra elements.
- ✓ The manufacturer is not responsible for damages caused by unauthorized modifications to the swing.
- ✓ The product is intended for indoor use. However, if someone decides to use it outdoors, the product must be protected from adverse weather conditions such as heavy rain, hail, strong sunlight, etc.
- ✓ The product should be cleaned with a soft, slightly damp cloth (possibly with a bit of soap). Strong detergents must not be used.
- ✓ The manufacturer is not responsible for damage caused by improper use.
- ✓ Please regularly check the condition of the ropes and other parts of the swing. If any part is damaged, immediately stop using the product and replace the damaged elements.
- ✓ The swing should be mounted only on a sturdy hook, using a suitable frame or carabiner that can withstand heavy loads.
- ✓ The swing should hang at least 35cm above the ground. Legs and feet should not touch the ground while swinging, so the height of the suspension should be adjusted accordingly.
- ✓ Ensure a minimum of 60cm of free space on all sides of the swing.
- ✓ **The importer/manufacturer reserves the right to make modifications and changes to the instructions.**

EN

## Technical Support

(909)637-7665 | (909)637-7593

## Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.