

EPOQUE

ELECTRIC KETTLE

INSTRUCTION MANUAL



PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE

SQIM 10938K-10939K-10940K 26-07-2023 V1 | © 2023 SQ Professional Ltd



FEATURES

- 1 Spout with filter
- 2 Lid with knob
- 3 Handle
- 4 Stainless steel cordless kettle jug
- 5 Water level indicator
- 6 Concealed heating element
- 7 ON/OFF switch
- 8 Base unit with 360° connector
- 9 Water temperature gauge



HOT SURFACE!



SHARP PARTS!

Due to hot parts and potential hazards, this appliance should not be used by children under 16 years old unless supervised by an adult. Please keep the appliance and mains cable out of the reach of children. This is not a toy!

If used by persons with reduced physical, sensory or mental capabilities, instruction and supervision must be given to understand the use of the appliance and the hazards involved.

Always disconnect the appliance from the power socket if it is left unattended and before assembling, disassembling or cleaning. If the mains cable is damaged, it must be replaced by qualified persons in order to avoid any hazards.

IMPORTANT SAFEGUARDS

Do not use the appliance in a bathroom, near water, or outdoors. Do not operate the appliance with wet hands or bare feet.

Do not immerse any of the parts (appliance, mains cable, plug) in water or other liquids during use to protect from fire, electric shock and personal injury.

Do not use the appliance if it is damaged or malfunctioning.

Do not leave the appliance unattended whilst in use. Use and store it out of reach of children.

- This appliance is intended for household use only.
- Ensure that the appliance is always placed on a firm and flat surface, away from any edges of the worktop. Do not place the appliance onto a metal tray or metal surface whilst in use. Do not place the appliance on, or near, a hot gas or electric burner or in a heated oven.
- Keep the appliance and mains cable away from the edges of worktops and out of reach of children. Route the mains cable so it does not overhang, and cannot be tripped over or caught.
- Do not let the mains cable run across an open space, such as between a low power socket and a table, or across any hot area, such as a cooker. Heat may damage the mains cable.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

- The connections on both sides of the mains cable (the appliance and the power socket) should never be strained. If the mains cable is damaged it must be replaced by a qualified person or service to avoid any hazards.
- This appliance must not be operated by an external timer or a remote control system.
- The top of the base unit **8** should always be kept dry, especially around the connection area.
- Before drying, disconnect the power supply; ensure that the base unit **8** is completely dry before you reconnect the appliance to power supply.
- Pour the water out of the kettle slowly and carefully, do not over tilt or tip the kettle too fast to prevent spillage and splashing. Remove the kettle jug **4** from the base unit **8** before filling or pouring.
- Do not move the kettle when it is switched on. Use extreme caution when moving a kettle jug **4** containing hot water.
- Do not switch the kettle on unless it contains at least two cups of water.
- Avoid filling it up above the **MAX** mark to prevent the hot water spewing out.
- Always remove the kettle jug **4** from the base unit **8** before you fill it.
- Always close the lid **2** and have the filter **1** in place before you switch the kettle on. Do not open the lid **2** while the water is boiling.
- Avoid contact with steam while the water is boiling and after the kettle is switched off.
- Avoid using the kettle near or below curtains, shelves, cupboards or anything that might be damaged or deformed by hot steam.
- Use the handle **3** and knob **2** on the appliance and avoid touching any hot surfaces.
- The switch **7** should never be held fixed in the **ON** position as this may cause damage to the switch-off mechanism.
- Do not remove the kettle jug **4** from the base unit **8** without switching it off first. Unplug the base unit **8** when not in use.
- Unplug the kettle from the power socket before cleaning or removing any parts. Ensure that the kettle is completely cooled down before cleaning and storing away. Keep the kettle jug **4**, base unit **8**, mains cable, and plug away from sources of heat and store in a dry place.
- Do not use the kettle for any purpose other than heating water.
- Use the kettle jug **4** only with the base unit **8** supplied and do not tamper with the connector in any way.

A scald hazard can last for a long time after boiling. Take care when opening the lid **2 as steam will escape from the opening. If scalding does occur, immediately run cold water over the affected area and seek medical assistance.**

BEFORE FIRST USE

Fill to the **MAX** mark, boil, discard the water, then rinse. Do this three times, to remove manufacturing dust. Ensure that the electrical connections are completely dry before use.

SAFE HANDLING

- Pour water from the kettle jug **4** slowly to prevent splashing and scalding with the hot water.
- Fill the water from the top to help free the filter **1** from limescale build-up. There should always be a minimum amount of water in the kettle before you switch it on (**MIN** mark on the water level indicator **5**).
- To save time and electricity, only boil the necessary amount of water.

SWITCHING ON

- Place the kettle jug **4** on the base unit **8**. Make sure that the kettle jug **4** is secure on the 360° connector.
- Plug the mains cable of the base unit **8** into a power socket before switching the power on.
- Switch the kettle **ON**. The **ON/OFF** switch **7** will light up and the kettle will start heating the water.

SWITCHING OFF

- Once the water is boiled the kettle will automatically switch off.
- Lift the kettle jug **4** from the base unit **8** and hold it level to avoid splashing the hot water.
- To boil the water again, place the kettle jug **4** back on the base unit **8** and switch it on again.
- If there is not enough water in the kettle jug **4**, it will switch off automatically. To switch it back on, refill the kettle jug **4** and wait a few minutes to let it cool down.

Using insufficient water will shorten the service life of the appliance.

WATER TEMPERATURE GAUGE

Do not attempt to remove the water temperature gauge **9 from the kettle jug **4**.**

The water temperature gauge **9** shows the temperature of the water inside the kettle. The gauge **9** will not work if there is insufficient water in the kettle jug **4**. There may be +/-5°C variation of temperature.

CARE & MAINTENANCE

Before cleaning always check that the kettle is switched off and has completely cooled down.

- Unplug the base unit **8** and let the kettle cool down completely.
- Wipe the kettle jug **4**, inside and out, with a damp cloth. Do not use abrasive cleaners on the outside of the appliance to avoid scratching the surface. Be very careful with the temperature gauge bar **10** as it is extremely sharp.

- Ensure that all connectors and sockets are completely dry.
- **Descale - even in soft water areas**
- This appliance is fitted with a concealed heating element **6** and therefore must be descaled regularly.
- The frequency of descaling depends on usage and water hardness. Excessive scale causes overheating, reduces the life of the appliance, and may trigger the boil-dry cut-out feature. This may damage the concealed heating element **6** and invalidate the guarantee.
- Use an appropriate descaling product suitable for stainless steel, glass or plastic and follow the manufacturer's instructions carefully.
- Products returned under guarantee with faults due to scale will be subject to a repair charge.

FILTER REMOVAL

Handle carefully as the water temperature gauge **9 bar inside the kettle is very sharp.**

Never operate the kettle without the filter fitted in the spout **1.**

- Remove the filter from the spout **1** and rinse it with water. Use a small brush to remove any residue, rinse, dry and fit into the spout **1**.
- If there is excessive scale, clean the filter with descaling agent and follow the manufacturer's instructions.

SPECIFICATIONS

Rated Voltage: AC 220-240V
 Frequency: 50-60Hz
 Rated Power: 1850-2200W
 Capacity: 1.7L


ELECTRICAL

The product must not be used without the fuse cover fitted.

Should the power cable or the power plug become damaged, arrange for these to be replaced by Customer Service or a qualified person before continuing to use the appliance. The appliance is fitted with a 10A fuse (BS1362) in a 10A plug (BS1363).

ENVIRONMENTAL

To reduce environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with the symbol below must not be disposed of with unsorted municipal waste. Please repair, reuse or recycle.

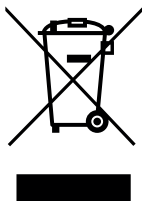

SERVICE

This product is not user-serviceable. If it is not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it is still not working, consult your retailer. If that does not solve the problem contact Customer Service – they may be able to offer technical advice. Please have the **Model Number** to hand, as they will not be able to help you without it.

If you are advised to return the product to us, pack it carefully, include a note with your name, address, day phone number, and description of the problem. If under a guarantee, say where and when it was purchased and include a valid VAT receipt. Send it to SQ Professional Ltd.

GUARANTEE

The guarantee for this product is covered by SQ Professional Limited. Any faults with this product arising through a manufacturer defect will be covered for 1 year from the date of purchase, subject to a valid VAT receipt being presented. This does not include faults or damage caused by misuse of general wear and tear.

SQ Professional Ltd will not be held liable for general wear and tear, or eventual damages to persons, animals or objects caused by incorrect installation or deriving from improper, erroneous or unreasonable use. Please contact customer services on 01992 716 070 or send an e-mail to info@sqprofessional.com, Monday to Friday from 09:30 - 17:30.

This does not affect your statutory rights.



SCAN THE QR CODE TO EXPLORE OUR FULL PRODUCT RANGE.

Voltage Business Centre, Units 1 - 3
 6 Mollison Avenue, Enfield, EN3 7XQ
T 01992 716 070 | **F** 01992 700 538
 | **E** info@sqprofessional.com

WWW.SQPROFESSIONAL.COM



All images are for illustration purposes only. Actual products may vary.