


Massage Chair User Manual

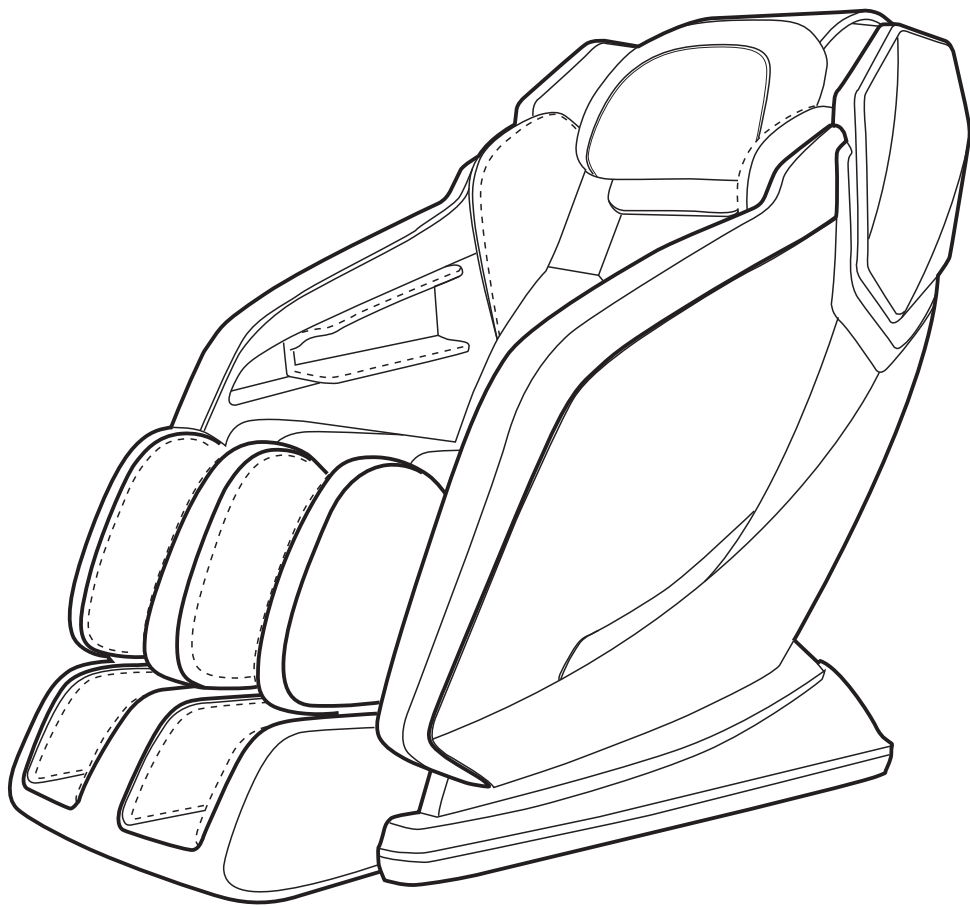



DELUXE MASSAGE CHAIR

User Manual

Thanks you for purchasing our Massage Chair. Before operating the Massager, please read this User's Manual thoroughly for the correct methods of usage, especially the notes on Safety. This manual should be kept available for future reference after you have read it through.



Contents

Important Safety Instructions	1
Components	4
Remote Control Functions	5
How to Use the Remote Control	6
Description of LCD Monitor	9
Checkpoints before Use and Operational Procedure	11
Problems and Troubleshooting ; Specification	12
Voice control operation	13


Important Safety Instructions

Switch off the power and unplug the power cord.

As shown in the figure, press the backrest and put the system up so that the wheels touch the ground. Move the system slowly. Once the relocation is over, gently unload the system.

For safety, a massage chair should be moved by two strong individuals.

Moving

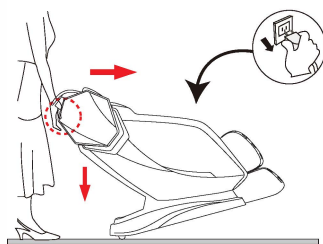

⚠ Caution

Wind or fix the electric cord to a chair leg to prevent any damage during transportation. Because parts can be broken by external impact, be careful when placing the massage chair onto the ground. Use the machine on an even surface only.

If the machine is moved on a wooden floor using the wheels, the floor could be damaged.

Safety Precautions

- ※ Make sure that you read the manual and follow the instructions before use.
- ※ We shall NOT be responsible for any results caused by the violation of these regulations.
- ※ The safety instructions are divided into Warning and Caution as follows.

 Warning	Improper operation may threaten user safety.	
 Caution	Improper operation may harm the user or the machine.	
 Use prohibited	 Follow the instructions	
 Disassembly prohibited	 Definite power supply control	

Warning



- Check if there are any obstacles or children near when adjusting backrest and footrest angles before operation

- Keep children or pets away from the massage chair. Failure to do so may cause an accident.



- Check the panel buttons and power switch before operation.
- Do NOT allow children to climb the machine.
- Be careful not to allow the electric cord to become entangled or be pressed by a heavy object.
- Use only the rated voltage to avoid fire or failure.
Plug the power supply into a grounded outlet only.
- Do NOT pull on or peel the sheath off of the electric cord.
This may result in fire or electric shock.



- NEVER randomly disassemble or remodel the machine. We shall NOT be responsible for any results caused by the violation of this regulation.
- If damage to the electric cord is suspected, contact us or the distributor for repair.



Caution



- Keep the machine stable on an even surface at all times before use.
- Check if the massage balls inside the backrest pad are well arranged before use.
- The optimum massage time is 20 minutes. The massage time for the same body part should NOT exceed 5 minutes.
- If operated repeatedly, leave the machine idle for about 20 minutes before reuse.
- Make sure that the power is off after use.
- Keep the machine away from wet or dusty areas. Failure to do so may result in a short circuit or mechanical failure.
- Do NOT use the system in high temperatures.
- Do NOT use the machine with a heater near, and keep out of direct sunlight to prevent fire.
- Do NOT use the system in a humid place. (ex: Bathroom, etc.)
(If the massage chair is used in a cold area, do NOT greatly increase indoor temperature all at once. If the machine is relocated from a warm to a cold place, it may not operate normally. In this case, leave the massage chair powered off for about one hour.)
- Check if there is any damage or defect to the machine before use. If any problem is detected, stop the machine immediately and contract us or the distributor.




- If the machine is not used for a long period of time, contact a professional to find out if there are any defects in the product.
- Children and the elderly should use the machine only in the presence of an assistant.
- Do NOT use the massage chair if you fall under one of the following categories (including children):
 - Suffering from a physical or mental problem; lack of experience or knowledge
If individuals having these issues want to use the massage chair, use should take place only with an assistant present.
 - Suffering from spinal disease or having weak bones; Using an orthotic, prosthetic or any other form of assistive device
- Those in one of the following categories are also strictly prohibited from using the massage chair:
 - With an adjunctive device transplanted in the body
 - Using a critical medical device such as an artificial heart/lung
 - Using a controlled heart device such as an artificial heart
- Do NOT use the massage chair simultaneously with other medical equipment. This may result in poor efficiency or bodily injury.
- If you fall under one of the following categories, consult with your doctor before use:
 - Cancer patient; suffering from a heart problem or any other physical or mental problems
 - Mental illness
 - Pregnant or menstruating woman
 - Scars
 - Under medical treatment
 - Suffering from a chronic disease or serious illness
- Do NOT use the massage function for prolonged periods.
- Do NOT apply too much force to the rollers.
- Be careful to not get your hand or foot stuck in the machine.
- Do NOT put heavy objects on the backrest, armrest or footrest. Do NOT sit on the massage chair in an awkward position.
- NEVER move the machine during use.
- Do NOT use the machine right after a meal.
- Do NOT fall asleep during use.
- Do NOT use the machine after you consume alcohol. This may result in bodily injury.
- Keep the electric cord away from water or dust.
- If your body or hand is wet, do NOT operate the machine
- Do NOT put your hand or foot on the remote control.
This may cause improper operation.
- To prevent fire, do NOT use an electric pad or blanket with this device.
- Do NOT use the massage chair with other electrical devices.
- Be careful to not get any body parts or objects stuck in the machine.
This may result in bodily injury.
- Check if there are any sharp objects (ex: Car keys, etc.) in your pocket before use.




- Wipe sweat or pollution stains with a dry cloth.
- If staining is severe, clean with a neutral detergent then wipe with a dry cloth. Or, gently remove with a brush. If too much force is applied, it may cause damage to the cover.
- Unplug the power cord before the cleaning.
Do NOT allow the electric wire to come in contact with wet surfaces.
- NEVER use water on or near this device.
- Do NOT wash the system with chemical solvents such as benzene or alcohol.
- Do NOT use a dryer to dry wet or damp sections. Allow to air-dry naturally.

| Components |

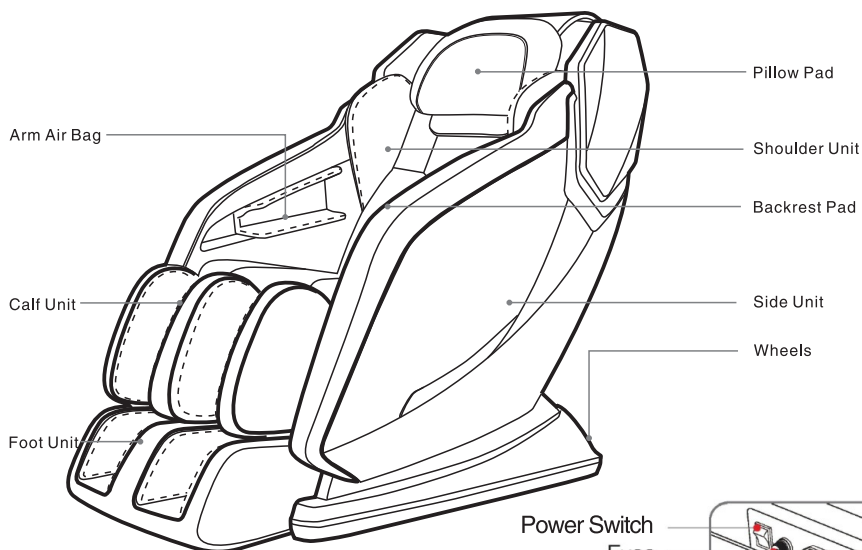


Power Switch
Fuse
Electric Cord
connecting part

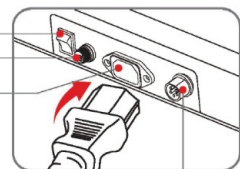

Remote Control
connecting part

Remote Control Functions

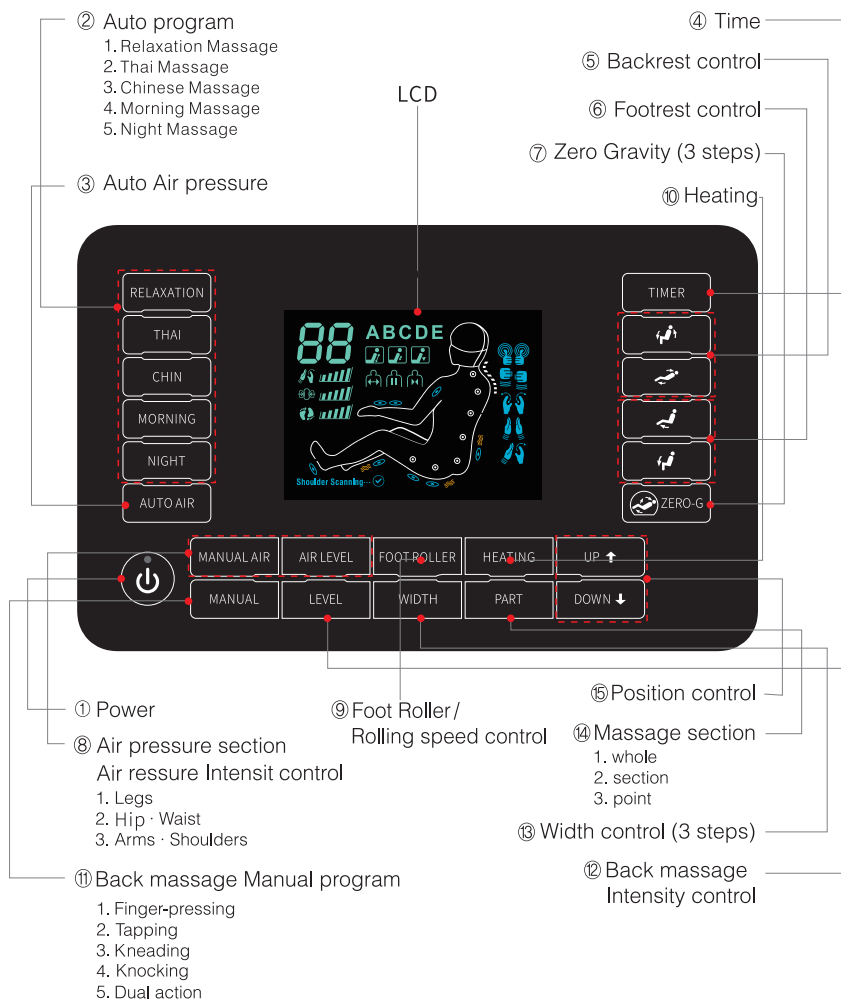

| How to Use the Remote Control |



① Power

This button is used to turn on / off the Power.

RELAXATION

THAI

CHIN

MORNING

NIGHT

② Auto program

User can choose specialized Auto program.

- ▶ Relaxation Massage
 - ▶ Thai Massage
 - ▶ Chinese Massage
 - ▶ Morning Massage
 - ▶ Night Massage
-

AUTO AIR

③ Air pressure

User can turn on / off Auto Air pressure massage function which is given to Legs, Hip·Waist, Arms and Shoulders.

TIMER

④ Time

Setting time is 20 minutes and working time can be adjusted from 5 minutes to 30 minutes.



⑤ Backrest control

- ▶ **Backrest Up** : Once this button is pressed, the backrest goes up and footrest goes down.
 - ▶ **Backrest Down** : Once this button is pressed, the backrest goes down and footrest goes up.
-



⑥ Footrest control



- ▶ **Footrest Up** : Once this button is pressed, the footrest goes up
- ▶ **Footrest Down** : Once this button is pressed, the footrest goes down



⑦ Zero Gravity(3 steps)

If button is pressed, Massage chair is moving to "Zero Gravity" position.
(3 steps)



⑧ Air pressure section



User can choose each section of Legs, Hip-Waist, Arms and Shoulders in this mode.

Air pressure Intensity control

This button is used to adjust Massage strength of Air pressure in 5 Steps.



⑨ Foot Roller/Rolling speed control

This button is used to turn on /off Foot roller.
User can adjust Roller speed in 3 steps.



⑩ Heating

This button is used to turn on / off Heating.



⑪ 5 back massage manual programs

1. Finger-pressing massage
 2. Tapping massage
 3. Kneading massage
 4. Knocking massage
 5. Dual action
-

LEVEL

⑫ Back massage Intensity control

This mode is available in Manual program and it is adjusted in Message Intensity.

WIDTH

⑬ Width control (3 steps)

This button is used to adjust the interval of between Massage ball left and right in Tapping, Finger-pressing and Knocking mode.

PART

⑭ Massage section (whole / section / point)

This mode is available in Manual program and set to Whole section on Back part. Once the button is pressed, it is adjusted to whole / section / point part.


UP ↑

DOWN ↓

⑮ Position control

This button is used to move the position of Massage ball during Manual program.

LCD monitor

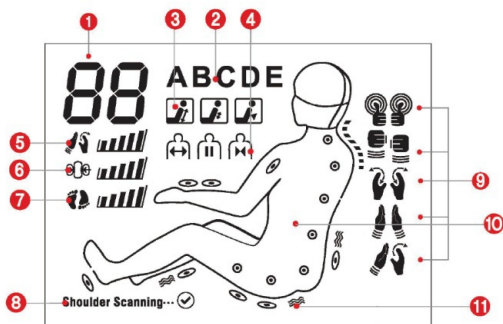

88

ABCDE



Shoulder Scanning... ✓



① Time (Default setting time is 20 minutes)

② Working on Auto program

A:Relaxation, B:Thai, C:Chinese, D:Morning, E:Night

③ Whole / section / point part

④ Width of between Massage ball left and right

⑤ Massage ball strength

⑥ Air pressure strength

⑦ Foot roller strength

⑧ Shoulder scan

⑨ Working on Back massage

finger-pressing, tapping, kneading, knocking, dual action

⑩ Working on Massage ball position and Air pressure Area


⑪ Heating

Checkpoints before Use and Operational Procedures


Useful Tips

1. Do NOT use the massage chair in a wet area.
This may result in an electric shock or other accidents
2. Place the massage chair on an even surface.
3. Zero against the wall wall design to reduce the occupation of space.
4. Keep out of direct sunlight or high temperatures.
This may discolor or damage the leather.
5. It is recommended to place the massage chair on carpet to prevent the floor from being damaged.

*Keep at least 30cm
away from the wall

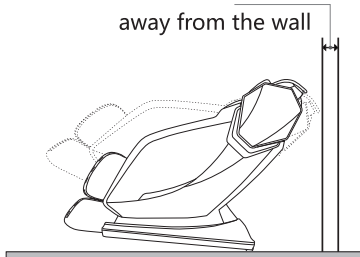


Checkpoints before use

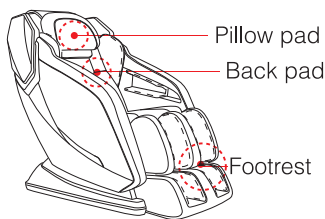

1 Ensure the following massage chair conditions before use

- 1) Pillow pad are well positioned
- 2) Power connection
- 3) Place the massage chair on an even surface

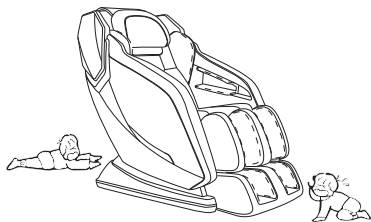

2 Check surroundings and clear any obstacles from around the massage chair

3 Connect the power supply.

- 1) Connect the electric cord.
- 2) If [Power] is pressed in the back of the chair, the power lamp will blink.


How to use



1 Press [Power].

Press the power button and select either automatic message or manual message option.
The base time is set to '20minutes.'

2 Use the remote control to select the desired message program

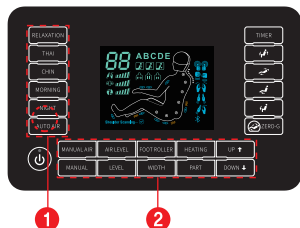


1 Automatic message program

This program is recommended for those who want a simple message.

2 Manual message program

The user can choose a message mode and target area.

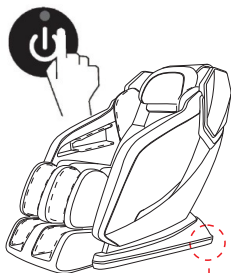


3 Switch off the power to stop the operation.

If [Power] is pressed to stop the massage, massage balls, backrest and footrest return to the original position.

4 Check point after using

- 1) If not used the machine, press "OFF" button.
- 2) Turn off power switch and pull out plug.
- 3) If not use the machine for a long time, please cover the machine using cloth because it is covered with dust and it is having any bad effects.

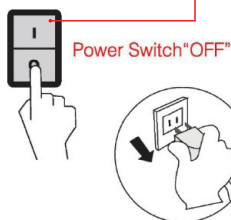

Problems and troubleshooting

Problems	Checkpoints	Troubleshooting
'Standby Mode' out of order	Power supply	Switch on the power
	If a massage option is selected	Select a massage option
	Check on power receptacle	Check the power connection
Minor noise	Air pump, motor and other mechanical parts	Normal state
	Noise	
Roller height imbalance (left and right)	Alternative operation	Normal state
Sudden increase in noise during operation	Alternative operation	Turn off the power. After approximately 30 minutes later, start the machine again.
Massage function out of order	Length of use	
The backrest not returning back to the original position	Overload	
Power switch out of order	Plug	Plug adjustment

Specification

Product name	Massage Chair	Voltage	100-120V~ 60Hz
Skin material	PU	power	95W
weight	93kg	Suggested time	20 Minute
Specification and size	Sitting position: 1560(L)X770(W)X1160(H)mm Lying posture: 1730(L)X770(W)X960(H)mm		

※ The company reserves the right to change the design of the product, and is subject to change without notice.

Voice control operation

S/N	Command list	Reply
1	Smart Steward	Welcome
2	Start massage	OK, start massage
3	Stop massage	OK, Stop massage
4	Mode one	Yes, Mode one
5	Mode two	Yes, Mode two
6	Mode three	Yes, Mode three
7	Mode four	Yes, Mode four
8	Mode five	Yes, Mode five
9	Increase air	Yes, Increase air
10	Reduce air	Yes, Reduce air
11	Maximum air	Yes, Maximum air
12	Minimum air	Yes, Minimum air
13	Increase time	Yes, Increase time
14	Shorten time	Yes, Shorten time
15	Heating on	Yes, Heating on
16	Heating off	Yes, Heating off
17	Increase strength	Yes, Increase strength
18	Reduce strength	Yes, Reduce strength
19	Backrest up	Yes, Backrest up
20	Backrest down	Yes, Backrest down
21	ZERO G	Yes, ZERO G
22	Turn On the Roller	Yes, Roller is on
23	Turn Off the Roller	Yes, Roller is off

Function Description:

The voice control function can help users receive clearer feedback when operating the massage chair, and instantly obtain information on ongoing functions. Using the massage chair will become easier and more fun.

Instructions for use:

Turn on the power to the massage chair, wake up the massage chair with wake-up words, and say the command word "Start massage". The massage chair will respond and activate the automatic massage program. Then say the function command to activate the corresponding function on the massage chair. After the massage chair is awakened, no command is given for more than 15 seconds, and it needs to be awakened again.