



TOBERMORY

Assembly Guide

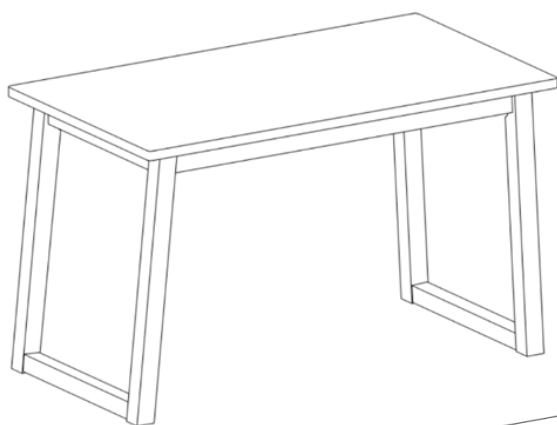

Dining Table

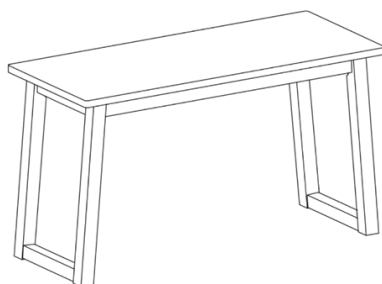

Dining Bench

IMPORTANT: please read these instructions fully before starting assembly



**SAFETY AND
CARE ADVICE**



NO POWER TOOLS

- Check you have all the components and tools listed
- Remove all fittings from their bags and separate into groups
- We do not recommend use of power tools - this could damage the unit. Only use hand screwdrivers and Allen keys
- Keep children and animals away from the work area, small parts could cause choking if swallowed
- Make sure you have enough space to lay out the parts before starting
- Assemble the item as close to its final position (same room) as possible
- Do not over tighten the nuts to avoid damage to the threads
- Only clean using a damp cloth and mild detergent. Do not use bleach or abrasive cleaners
- Do not allow children to climb or play on this product
- From time to time, check there are no loose screws in this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre
- Unless otherwise stated, this product is designed for domestic use and is not certified for commercial or contract settings.

IMPORTANT INFORMATION



30 Minute
Build



Two Person
Build




Max Weight
Capacity
Table - 60kg
Bench - 120kg

Note: Assembly estimates are approximate and can differ based on the specific environment and user experience.

WHAT'S IN THE BOX

Note: the quantities are the correct amount to complete the assembly. In some cases more fixings may be supplied than are required.

Label	Part Name	Drawing	Quantity
1	Top		1
2	Left Leg		2
3	Right Leg		2
4	Bottom Bar		2

Label	Hardware Description	Drawing	Size (mm)	Quantity
A	JCBC Bolt		M6x70	8
B	Spring Washer		5/16"	8
C	Flat Washer		M7x19	8
D	Wood Screw		M4x38	4
E	Allen Key		M4	1

Note:

- Use a clear, flat surface to avoid bumps or scratches before assembling.
- Insert all fixings loosely at first to allow for alignment; only tighten them once everything is properly positioned, as some adjustment may be required.
- Avoid over-tightening, as this may damage the parts.
- Seek assistance when moving large or heavy parts

STEP 1

Place top [1] upside down on a flat surface.


Attach 2x Right legs [3] to the opposite corners of the top [1] and secure using 4x washer [C], 4x spring washer [B] and 4x bolt [A].

To allow for alignment, only partially tighten with Allen key [E]

NOTE:

The Right Legs [3] have 2 holes.
The Left Legs [2] have 3 holes.

NOTE: Do not overtighten fixings as this will cause damage to the wood.

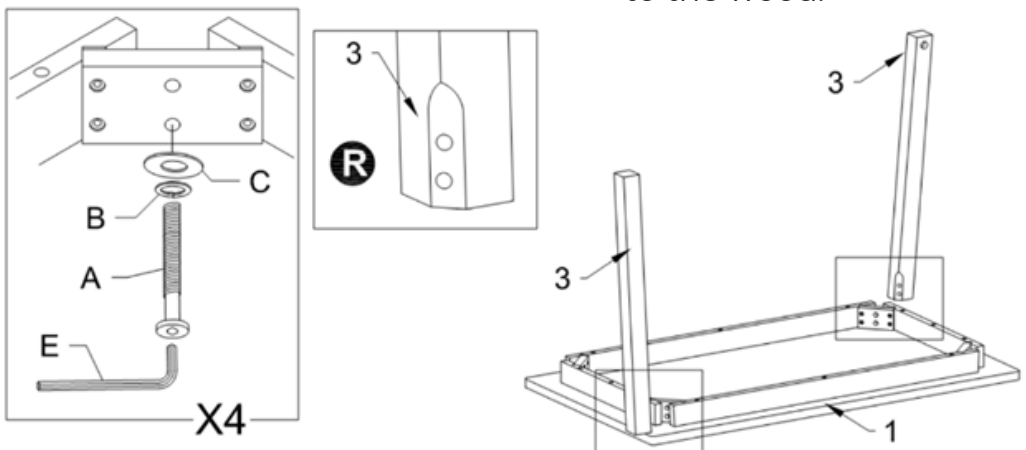

STEP 2

Attach 2x Left legs [2] to the opposite corners of the top [1] and secure using 4x washer [C], 4x spring washer [B] and 4x bolt [A].




Align 2x Support Bar [4] between the legs.

To allow for alignment, only partially tighten with Allen key [E]

NOTE:

The Right Legs [3] have 2 holes.
The Left Legs [2] have 3 holes.


NOTE: Do not overtighten fixings as this will cause damage to the wood.

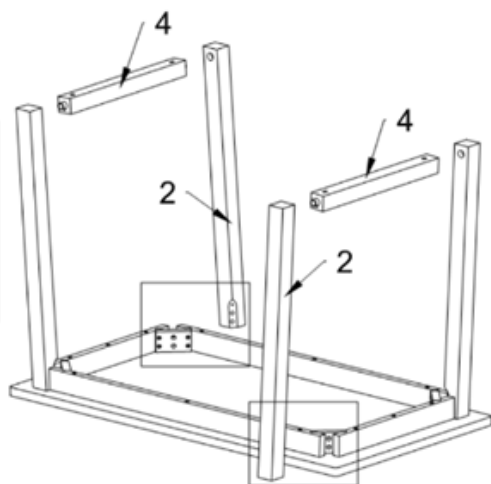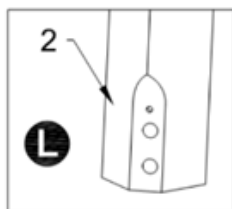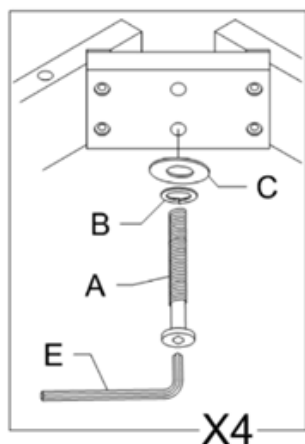

STEP 3

Secure the 2x Support Bars [4] using 4x wood screws [D].

Fully tighten all screws and bolts.

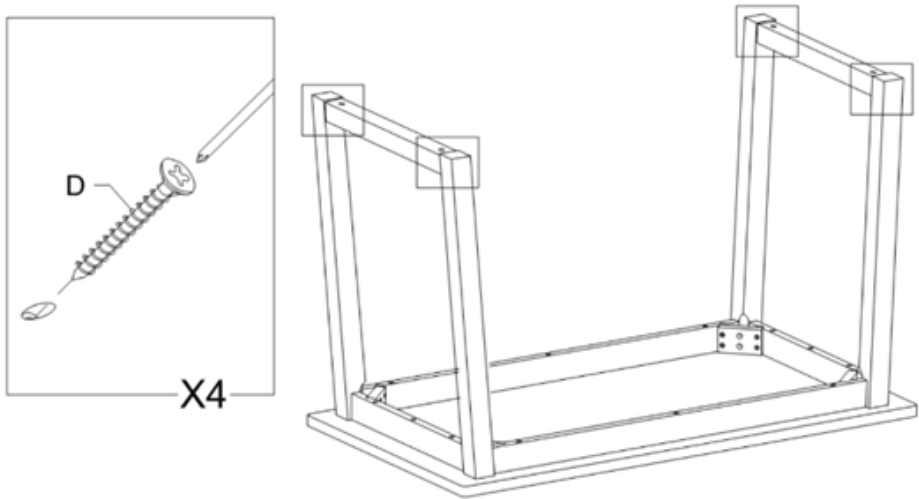


STEP 4

Carefully, and with help,
turn the product over to
stand on the legs.

Check stability.

Your bench or table is now
ready to use!

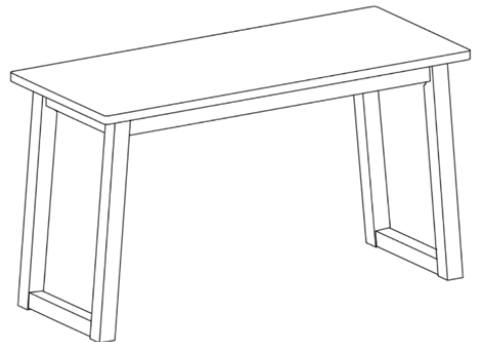

Please ensure any and all fixings and fittings are FULLY tightened before using this product



our 2 year GUARANTEE

Our products come with a 2 year guarantee, giving you extra peace of mind when shopping with us!

What the guarantee covers



PRE-INSERTED FIXINGS

e.g. loose metal threads



FAULTY JOINTS

e.g. legs bending



EXTERNAL FIXING FAULTS

e.g. metal discs removing
from table top



STRUCTURAL INTEGRITY

e.g. the frame of the
product

Activate your Guarantee

Scan the QR code to read the full guarantee online and register your product. It only takes a moment to fill out.

Or visit: furniturebox.co.uk/our-guarantee

