
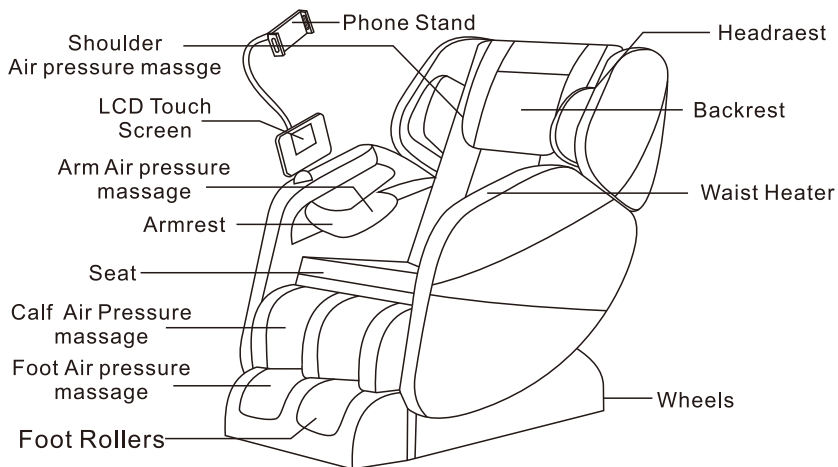


MASSAGE CHAIR USER MANUAL

Table of Contents

Massage Chair Overview	Overall Structure -----	01
	Main Features -----	02
Before You Begin	Installation Site -----	03
	Surrounding Environment -----	04
	Move Methods -----	04
	Grounding Instructions -----	05
Chair Setup	Main Power Switch -----	05
	Headrest Adjustment -----	06
	Footrest Extension -----	06-07
Component Functions	Key Functions of LCD Touch Screen ---	08-09
	Foot Rollers -----	09
Massage Programs	Auto Programs -----	10
	Manual Programs -----	10
	Air pressure massage Programs -----	11
	Zero Gravity -----	11
	Waist Heating -----	11
	Massage Time Adjustment -----	11
Safety Precautions	Not Suitable for Below Persons -----	12
	Best Practices for Safe Use -----	12-13
	Unplug the Massage Chair -----	13
Fixing Issues	Troubleshooting -----	14-15
	Specifications -----	15
	Contact Us -----	15

Massage Chair

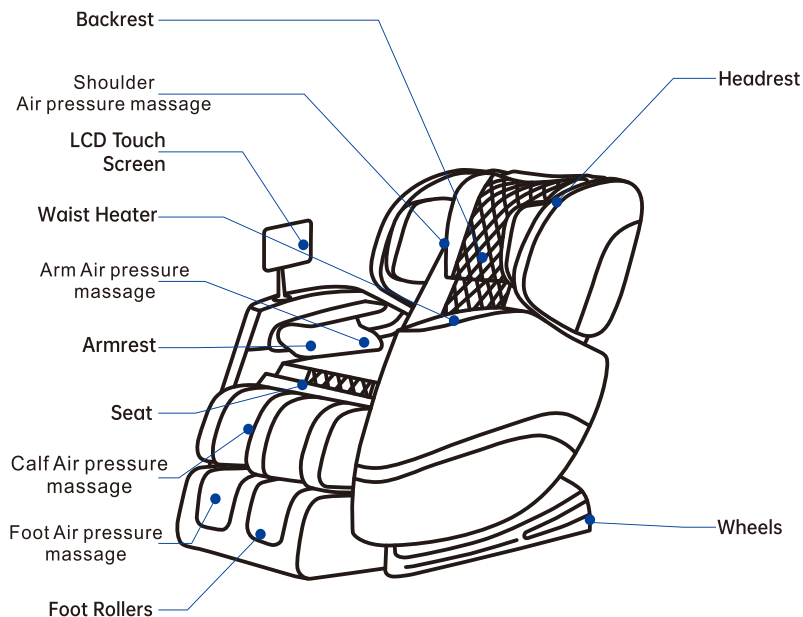

Main Features



**10 Fixed Points
Massage Rollers**



**Full-body
Air pressure massage**




**3 levels of
air pressure**



**Auto
Programs**



**3 Massage
Techniques**

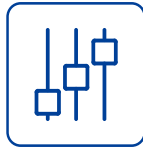

**3 Massage
Intensity**



Timer Function



Zero - G



Waist Heating



**LCD Touch
Screen**



Foot Roller



**Footrest
Extension**

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

Before You Begin

Installation Site

Please guarantee the proper clearance space for the massage chair

- Place a massage chair in a place where there is enough space for the back of the chair to recline and the footrest to extend.
- Ensure there is at least 18 inches of clearance behind the massage chair and at least 8 inches of clearance in front.
- Please keep it at least 40 inches away from the TV, radio and other video and audio devices to avoid signal interference.

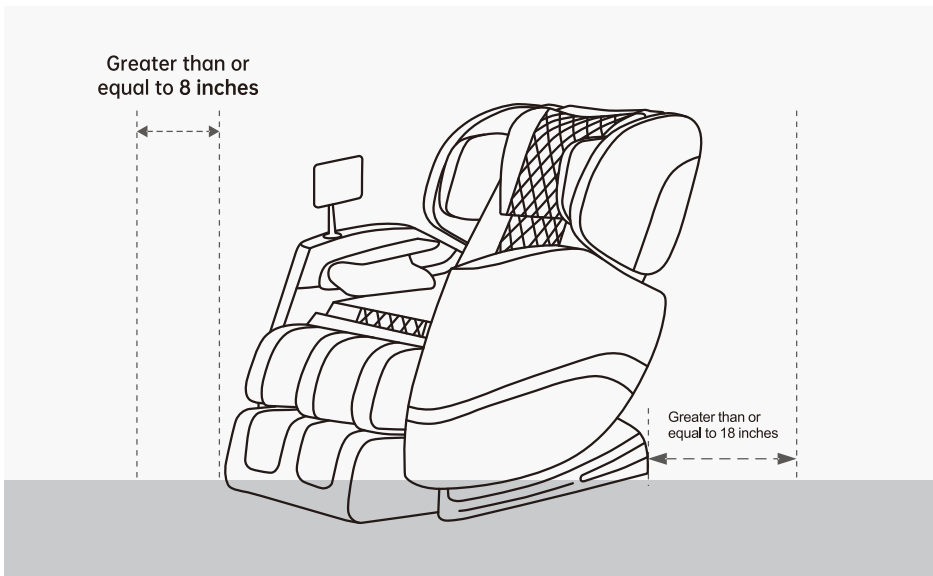

CAUTION


- Please tidy up the cables well to avoid tangle or damage.
- When the massage chair sliding forward or backward, please check first to make sure there are no kids, pets or other objects around to avoid accidents.
- We recommend to place a piece of carpet or other pad under the massage chair to avoid damaging the floor.

Surrounding Environment

- Keep the massage chair away from damp places (such as bathroom) to prevent electric shock accident.
- Keep the massage chair away from high temperature sources (such as stove) to avoid fire hazard or damage to leather material.

Move Methods

- Apply pressure to the back of the massage chair from behind to pivot on the casters.
- One person should raise the chair via moving holder while another person pushes the chair from the top to facilitate the movement of the casters. Ensure there is a second person at the front to assist in guiding the footrest to its correct position. Keep the specified clearances in mind and gently lower it into place. Do not pull on the armrests.

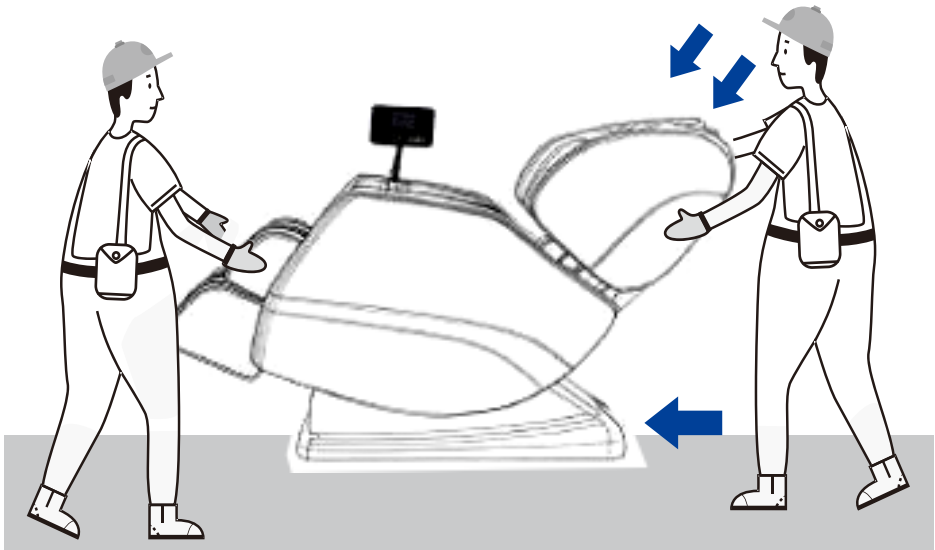

CAUTION

- Do not move the chair when there are people inside the chair.
- To move the chair, do not lift by the footrest or armrest, and only hold the moving holder in the back and front.



Grounding Instructions

- Insert the plug into a 110V-240V grounded outlet.
- This product must be grounded. In case of malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- **Danger** - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not replace the plug provided with the product - it may not fit the outlet; have a proper outlet installed by a qualified electrician.

Chair Setup

Main Power Switch

- Activate the chair by switching the main power button, located on the back of the chair's base, to the **ON** position.

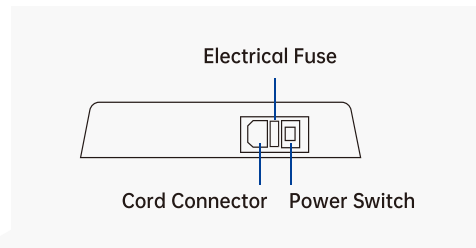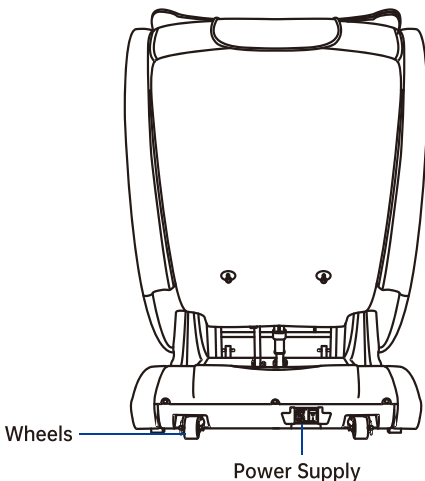



CAUTION

- Please turn off the massage chair and unplug it from power the electrical outlet immediately after using.
- Please turn off the massage chair and unplug it from the electrical outlet when the chair is not in use, to avoid children to power on the chair accidentally.
- It is advised to cover the chair with dust-proof cloth, coil the power cord and store the massage chair in a dust-free and dry environment to maintain its condition when it is not in use for a long time.

Headrest Adjustment


● How to use headrest

Sit in the chair and observe the position of the neck headrest on your neck. Ensure it comfortably fits in the arch of your neck by adjusting it - remove it from the Velcro, align it as needed, and reattach it to the Velcro for the desired positioning.

● Increase or reduce the massage intensity manually


Flip up the headrest or both the headrest and headrest pad so that you lie directly on the seat back pad to obtain a more intense massage in the neck area.

For a milder massage experience, fold down the headrest to increase cushioning.

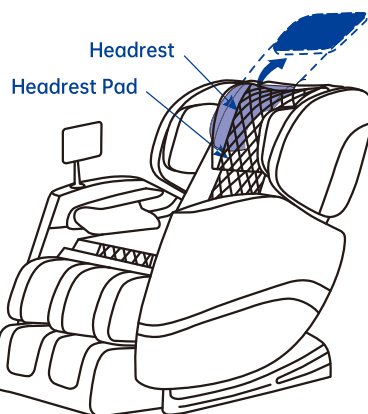

Footrest Extension

- Take a comfortable seat in the massage chair and press the power button to turn it on. As the massage begins, the back of the chair will recline to a certain degree. To adjust the footrest, simply step onto it with proper strength to extend it until you reach the desired length, then hold the position.

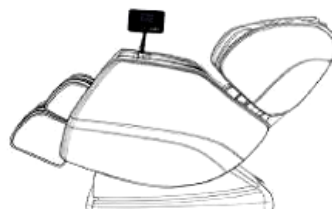

**CAUTION**

- Do not stand directly on the footrest to get in or out of the massage chair, as it will cause damage to the foot rollers!

TIPS:

- **How to sit correctly on the chair**

How to sit on the massage chair correctly will directly affect your massage experience. It is recommended that you sit in the massage chair deeply, adjust the length of the legs after massage starts, ensuring your body fits snugly against massage chair cushion. After body scanning ends, get ready to start your relaxation journey!


- **How to get out of the chair**

Simply press the ON/OFF power button to return the chair to its upright position at any time to get out of the chair.

Component Functions

Key Functions of LCD Touch Screen


- The LCD touch screen on the massage chair is designed with a user-friendly interface, facilitating you to use the massage chair easier.

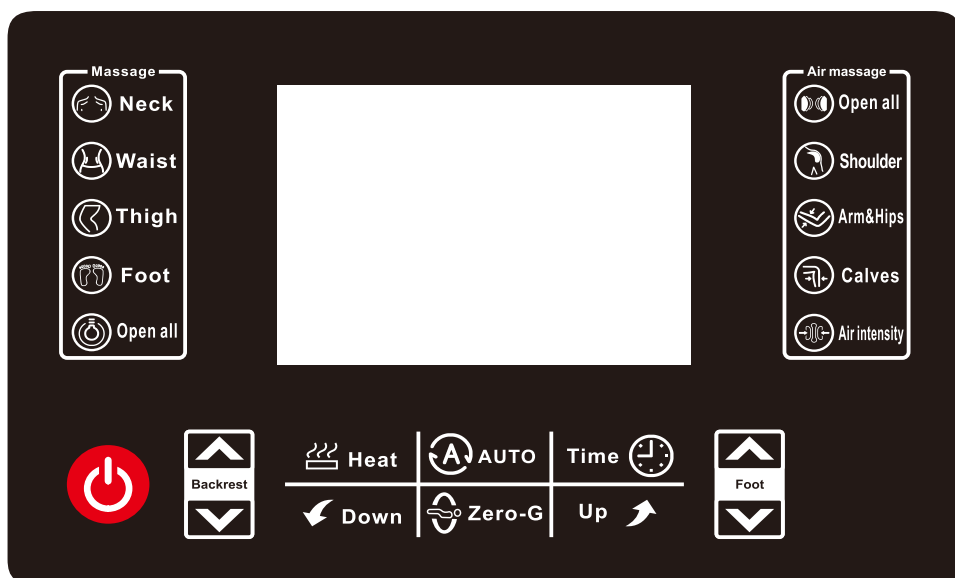

 Neck	Shoulder & Neck Massage: Press this button to turn the shoulder and neck massage function on/off.
 Waist	Lower Back Massage: Press this button to turn the lower back massage function on/off.
 Thigh	Hip Massage: Press this button to turn the hip massage function on/off.
 Foot	Foot Massage: Press this button to turn the foot massage function on/off.
 Open all	Full Massage: Press this button to turn all massage functions on/off.
 Open all	Auto Air Pressure: Press this button to turn the air pressure function on/off.
 Shoulder	Shoulder & Arm Airbags: Press this button to turn the shoulder and arm airbags on/off.
 Arm&Hips	Seat & Head Airbags: Press this button to turn the seat and head airbags on/off.
 Calves	Leg Airbags: Press this button to turn the leg airbags on/off.
 Air intensity	Air Pressure Intensity: Press this button to adjust the air pressure intensity (3 levels available).
	Power Button: Press to turn the massage chair on/off.
 Backrest	Lower Back Speed+: Press to increase the speed of the lower back and hip massage rollers (3 levels available).
 Backrest	Lower Back Speed-: Press to decrease the speed of the lower back and hip massage rollers (3 levels available).
 Heat	Heating: Press to turn the lower back heating function on/off.
 Down	Recline Down: Press to lower the backrest of the massage chair.
 Zero-G	Zero Gravity: Press to activate the zero-gravity position (3-step adjustment).
 Up	Recline Up: Press to raise the backrest of the massage chair.
 AUTO	Manual Mode: Press to stop all active functions and manually choose your desired massage or adjustment options.
 Time	Timer: Press to adjust the session duration. Each press adds 5 minutes, with a maximum session length of 30 minutes.
 Foot	Foot Speed+: Press to increase the speed of the foot massage rollers (3 levels available).
 Foot	Foot Speed-: Press to decrease the speed of the foot massage rollers (3 levels available).


Foot Rollers

- Press the foot rollers button to turn the rollers on or off

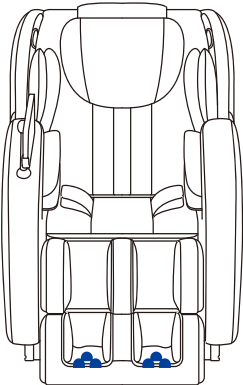

- Turn on the massage chair to automatically start the massage session. In automatic modes, massage intensity and strength cannot be adjusted. To adjust the massage intensity and strength, please switch to the manual modes and select the specific areas such as arm, foot or shoulders to make proper adjustment.
- You can press "Power" button to switch time from 15/20/25/30 minutes. Press and hold the Power button to turn the massage chair off.
- Auto massage mode will stop automatically after 15/20/25/30 minutes.
- It is allowed to switch to next auto program at any time, without waiting for the end of current program.
- In auto mode, you can turn air pressure system, heater and foot rollers on or off.

Manual Programs

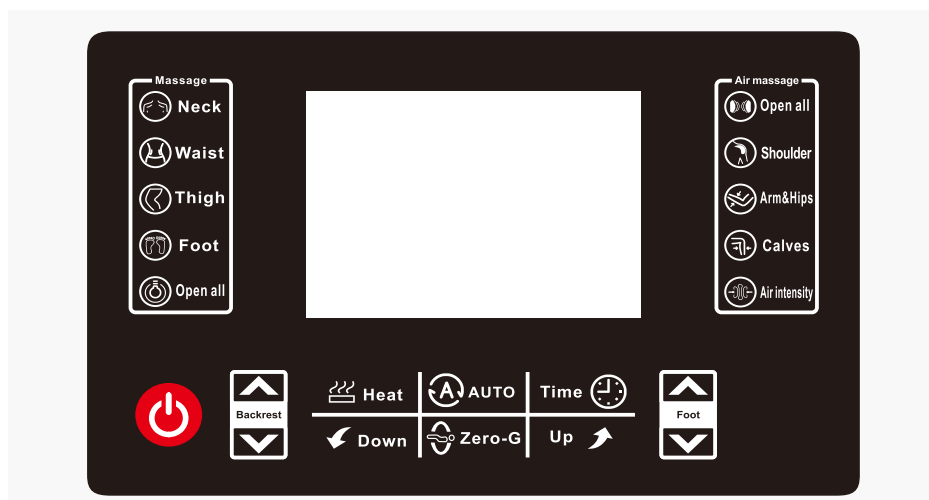

- After selecting the manual option, the automatic mode will stop and you can select single or multiple massage areas to customize your massage experience.
- Press the button of "air intensity", "foot intensity", "speed+" and "speed-", and adjust the intensity of airbags and rollers(3 levels adjustable).
- When the chair is powered on, Press button of "Back Up" or "Back Down" on the screen to adjust the chair angle.

Airbag Programs


- **Airbag programs:**
This massage chair is equipped with full body air pressure massage, including shoulders, arms, hips, calves and feet.
- You can click the "Pressure AUTO" button to let all air pressure massage work automatically, or activate air pressure massage for different body parts and adjust the air pressure intensity according to personal preference.
- During the air pressure massage, the air pressure bag will be inflated to wrap the body. Due to the limited power of the air pump, our air pressure bag will not be over-inflated, ensuring a comfortable experience without applying excessive pressure on the body.

Zero Gravity

- In Zero Gravity mode, the massage chair will recline the back and elevate the feet to reduce stress on your joints and spine.
- Press the button to select your desired Zero Gravity setting and feel the relaxation when the chair is fully reclined.

Waist Heating

- Press the Heat Function button to apply the hot compress to waist to expel the moisture from the body, thus promoting blood circulation and relieving muscle pain.

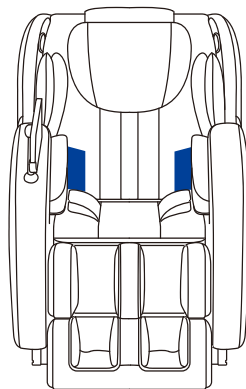

Massage Time Adjustment

- Short press the Power button to turn the massage chair on and adjust the massage session duration (5 minutes will be added with each press).
- Recommended massage time: 1 hour or less each time.

Safety Precautions

Not Suitable for Below Persons



Warning

- We recommend those with any of the following conditions consult your physician first before using the massage chair.
- Patients with serious hyperostosis.
- Patients with swollen lump and thrombosis.
- Patients with serious heart conditions.
- Women who are pregnant.
- People that consume large amounts of alcohol.
- People with diabetes.
- People suffering from high fever.
- Patients with malignant tumors or malignant abscesses.
- People with distorted joints.
- People with serious skin conditions.
- People with spinal injuries.
- Minors under 16 years or people unable to control their behavior, such as mental patients and people with paralysis.
- Children shall not play with the device.

Best Practices for Safe Use



Warning

- Use this product only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Never operate this chair if it has a damaged cord or plug.
- Keep the cord away from heated surfaces.
- Empty pockets and remove all your arm jewelry and watches before using this chair.
- Do not operate where aerosol (spray) products are being used.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- Connect this device to a properly grounded outlet only. See Grounding Instructions.
- Do not remove the back cushion to modify roller mechanism.
- Do not remove the bottom seat to modify actuators.
- Keep the cord away from a heavy traffic area.
- Please unplug the power cord from the electrical outlet immediately after use.
- Only for users who weigh below 120kg.
- Do not operate any equipment with damaged parts.
- Any other use not recommended by the manufacturer may cause electrical shock or injury.
- Do not touch or re-wire the wires connected to the master-box.
- Do not attempt to repair or modify any electrical or mechanical functions on this unit, it will void the warranty.

Best Practices for Safe Use



Warning

- Do not put your hands or head under the chair.
- When using the massage chair, make sure that the footrest is in the lowest position.
- Do not allow children to play near the chair, especially when the chair is in use.
- Do not leave mobility impaired or speech impaired people alone in chair.
- Do not place or stock this chair near damp places such as swimming pools or bathrooms.
- Do not press massage rollers by force.
- Do not stand on the chair or put heavy items on the chair.
- Do not use in a humid, dusty, greasy or oxygen-deficient environment.
- Do not spill water or other liquids onto the control buttons to avoid fault.
- Do not place the product near steam oven, open fire, or heat.
- Wear suitable clothing, do not massage with bare skin.
- Do not place it directly in the sun.
- Do not use electric blanket while using the massage chair.
- Do not use it outdoors.
- Do not massage while smoking.
- Do not massage immediately after meals.
- Do not sit on the back cushions, armrest, or footrest.
- Don't use it when your body is wet or moist as it can result in electrical shock.
- Do not massage with more than one person.
- Don't massage when using headwear as it can result in injury.
- Do not stumble over electrical wires or connections.
- Do not squeeze, over bend, pull hard or twist the cord.
- Do not use the massage chair when you are not feeling well.
- Do not massage the head, elbow joints, knees, chest, abdomen directly on the massage ball.
- Do not damage the power cord, which may result in electric shock or mechanical failure.
- Do not stand on or stack heavy objects on the footrest.
- Do not fall asleep when using the product.
- Do not disassemble, fix or modify the product yourself to avoid failure.
- Please be seated properly while using the product.

Unplug the Massage Chair



Caution

- Pull out the power plug before maintenance.
- Do not plug in or unplug the massage chair with damp hands to avoid electric shock.
- Turn off power and unplug the massage chair from the electrical outlet when the massage chair is not in use to prevent power surges or other emergencies that may damage the massage chair or to avoid children powering on the massage chair accidentally.
- Power off the chair and unplug the massage chair after using.
- Disconnect the controller and store the chair carefully.

Fixing Issues

Troubleshooting

Problems/Issues	Possible Causes	Possible Solution
● Sounds like tapping or hum are heard while in use	● These sounds are normal and arise from air pump, motor or other mechanical parts	● Normal, no need to take any measure
● Massage chair stops working suddenly	● Power connection is bad ● Auto program time is up	● Unplug and reinsert the power cord to the chair ● Normal circumstance
● Massage chair doesn't work after power on	● Power switch is not turned on ● Connection between plug and socket is bad ● Massage remote is not turned on ● Power wire plug is broken ● Fuse is blown ● Control unit fails to work properly	● Turn on switch ● Insert power cord again ● Press power button on remote ● Contact customer service or professional technician ● Replace with a fuse of same type and rating ● Contact our customer service or professional technician
● Roller height changes	● Rollers work alternately	● Normal, no need to take any measure
● Abnormal sounds are heard suddenly while in use	● May be caused by over-working of the massage chair	● Reduce usage ● Contact our customer service or professional technician
● Backrest or footrest can not recline	● Be obstructed, make sure that there is enough space for the chair to fully recline	● Stop operation, move the obstacles and provide sufficient clearance
● Fail to restore position after reclined	● Electric motion pole fails ● Plug connection is bad	● Contact our customer service or professional technician ● Insert the power plug properly into the socket
● No music comes from the speaker	● The volume is adjusted to its minimum setting	● Adjust the speaker volume and ensure that both the chair's and phone's Bluetooth settings are activated

In case of any problems beyond above reasons, turn off the power supply and contact the distributor or manufacturer for assistance.

TIP:

Do not attempt to dismantle or repair the product by yourself, and our company shall not be liable for the damage or injury caused by improper use or servicing without authorizations. Thank you for your cooperation!

Specifications

Rated Voltage: 110V-240V

Rated Frequency: 50Hz-60Hz

Rated Power: 90W

Safety Design: Class I

BOX 1

NW: 52.8lb

GW 59.32lb

MEAS: 37.6*23.43*16.34in

BOX 2

NW: 40.7lb

GW 47.69lb

MEAS: 37.2*23.43*15.87in

Manufacturer reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions at any time and without prior notice.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.