

Aluminum Loading Ramps Product Manual



1500 lbs
Set of 2

BEFORE FIRST USE

Please read and follow all the instructions below.

Remove the packing and make sure that the appliance is intact.

If in doubt, please contact us for customer service.

Keep the packaging, especially the plastic, out of the reach of children.

WARNINGS



TOOCA Aluminum Loading Ramps are only suitable for specific application scenarios (the main purpose is to help you transport heavy objects to your pickup truck more safely and efficiently).

Please do not use them for any purpose except for specific scenarios.



To avoid the danger of children being caught or falling, please do not allow children to operate or play with the ramps.




Failure to follow the instructions for use of the ramps may result in product damage or personal injury. The seller is only responsible for the product and is not responsible for any adverse consequences caused by incorrect use of the ramps.

2

INSTRUCTIONS

- (1) The bolt must be inserted and hand-tightened through the barrel hinge.
- (2) The ramp surface must be dry, clean, and free from oil or grease.
- (3) When using the ramps, please park your vehicle or trailer on flat, firm ground. And make sure the engine has been turned off and put on the handbrake.
- (4) Place ramps on the tailgate or trailer to accommodate the wheelbase of the loading vehicle.
- (5) Ensure the plate or fingers of the ramp are securely in place.
- (6) Install and secure safety straps. An illustration of how to secure the safety straps is as follows:

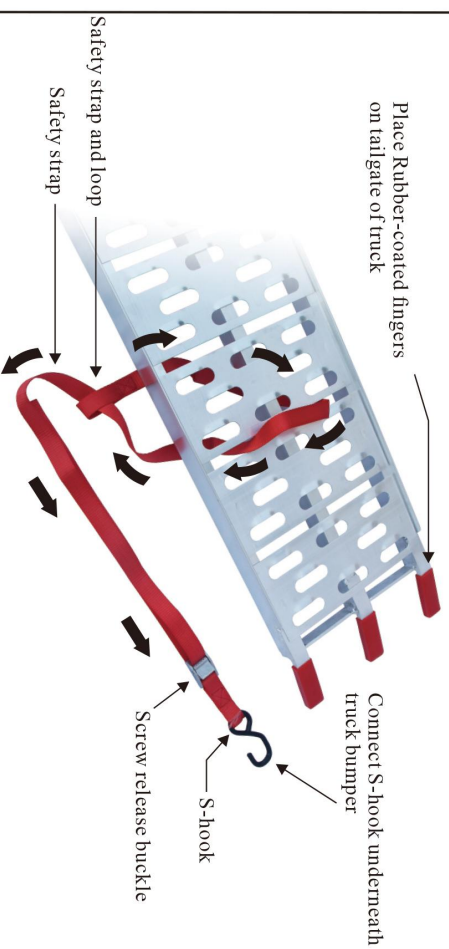

- (7) When using, please always attach the safety straps and adjust them to a suitable length, and then fix the hooks on the truck to prevent the aluminum ramps from sliding down.

3

TIPS FOR LOADING MOTORCYCLES/ATV

- (1) Do not ride a motorcycle or any motor vehicle on any aluminum ramp to load or unload.
- (2) Slowly push the machine up the ramp, making sure that the tires are on the ramp all the time. (It is recommended that two or more adults finish together)
- (3) Acceleration must be slow, controlled, and constant. The operator must remain in control of machinery at all times during loading and unloading.
- (4) When unloading, use the brake as necessary to control your speed. Sudden or erratic braking or accelerating can cause ramps to pull away from the tailgate or trailer or even broke the ramps.
- (5) Attention: Please never exceed the maximum load capacity of the ramps. (1500 lbs)

ONE-YEAR LIMITED MANUFACTURER'S WARRANTY

This appliance is covered by an one-year limited manufacturer's warranty. For one year from the original date of purchase, the manufacturer will repair or replace any parts of this appliance that prove to be defective in materials and workmanship, provided the appliance has been used under normal operating conditions as intended by the manufacturer.

Size Information

