




# Web Swing



## How to hang the swing:

1. Wrap the rope around a sturdy branch or swing set until web swing is at desired height.
2. Feed rope through the crimped/knotted end, making sure you expand the circle large enough to feed the web swing seat through.
3. Thread the web swing seat through the knotted end.
4. Push knot up as close to branch or bar as possible and tighten. (You may need to use other links, straps or fasteners to attach depending on your structure. These are not included.)

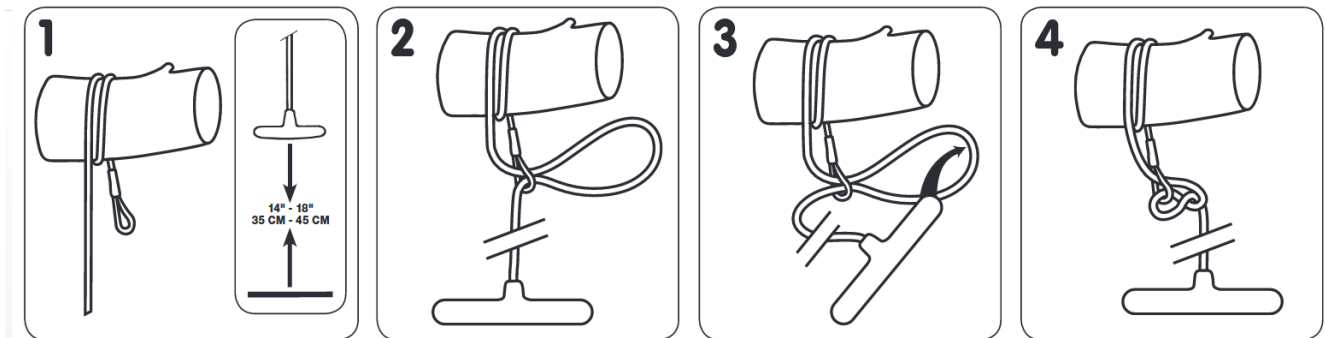

## Warnings:

- Only use the swing under adult supervision
- Only one rider at a time.
- Only for children 3-10 years with maximum weight of 100 lbs.
- Swing requires 6' of swing circumference clearance around it.

Made in China.