



# AIR RIDERZ


MODEL MM00151




## ADULT INSTALLATION REQUIRED.

This product manual should be carefully read and installation of this swing should be performed by an adult.


## INSTALLATION INSTRUCTIONS

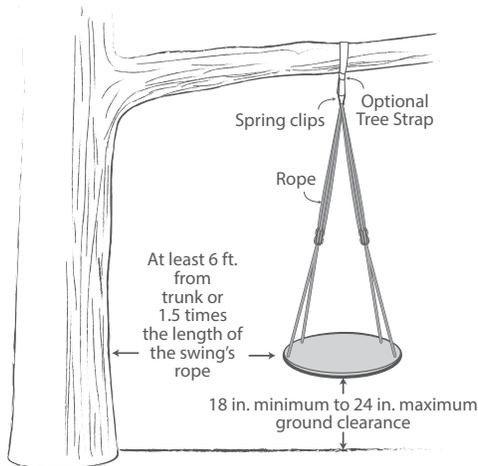

CLEARANCE REQUIREMENTS

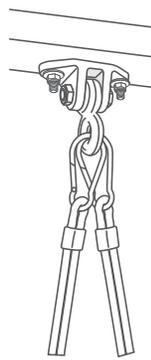

SINGLE ATTACHMENT EXAMPLE

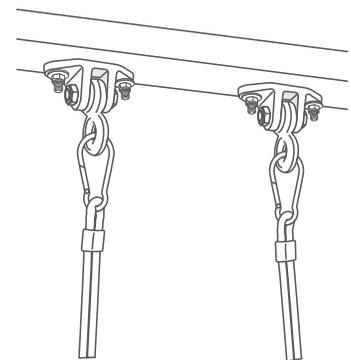

DUAL ATTACHMENT EXAMPLE

**TREE LIMB ASSEMBLY:** Test tree limb to ensure that it will hold the weight limit of 200 lbs. safely.

**SWING SET OR OTHER HORIZONTAL BEAM ASSEMBLY:** Attach swing to a swing set by removing two sets of swings from the existing swing set and attach the spring clips to the chain support hooks.

1. Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet or any other hard surface. A fall onto a hard surface can result in serious injury or death to the equipment user.
2. To prevent serious injury, children must not use the equipment until properly installed.
3. Confirm that the supporting structure is secure, it will support at least 200 lbs., is over level ground, has a minimum height of 7 ft. and is no less than 6 ft. on all sides from vertical elements. Swing should have a clearance of at least 1.5 times the total length of all the rope measured from the tree limb/horizontal beam to the spring clip(s) attachment point.
4. The Air Riderz® swing has adjustable hardware (S hooks) that let you customize the height of your swing from the ground. Adjust swing hanging length so platform is parallel with ground. Bottom of swing should be no more than 24 in. and no less than 18 in. from the ground.

## OPERATION INSTRUCTIONS

1. An adult should supervise play on this product for children of all ages.
2. Only for family residential domestic use. Design for multi-rider use. 200 lb. maximum load.
3. Riders should be dressed appropriately including wearing well-fitting shoes that fully protect feet. Remove articles before swinging that create hazards when they get tangled and caught (examples include: ponchos, scarves, and other loose-fitting clothing, bike or sports helmets).
4. **INSTRUCT CHILDREN:** Not to swing higher than hook attachment • Get off swing only after it has completely stopped and hold onto the rope or chain until both feet are planted firmly on the ground • Not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope • To avoid swinging empty seats • Not to walk close to, in front of, or behind, or between moving items • To sit in center of the swings with their full weight on the seats • Not to use the equipment in a manner other than intended • Not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard • To remove their bike or other sports helmet before playing on the playground equipment

## MAINTENANCE INSTRUCTIONS

1. At the BEGINNING of each play season: Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed; Check metal parts for rust. If found, sand and repaint using a non-lead-based paint meeting the requirements of 16 CFR 1303; Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season; Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.
2. TWICE A MONTH DURING play season: Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.
3. ONCE A MONTH DURING play season: Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
4. At the END of each play season or when the temperature drops below 32°F: Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use; Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary; Owners shall be responsible for maintaining the legibility of the warning labels.
5. When you are ready to dispose of swing, make sure that all swing components are disposed of in accordance with local waste ordinances.
6. The seat of this swing can be recycled. Remaining parts should be disassembled and disposed of in such a way that no unreasonable hazards exist at the time the swing is discarded.
7. WARNING: Failure to carry out these checks and inspections could result in fall or injury.

## SAFETY INFORMATION

To reduce the likelihood of injury please follow the guidelines as outlined in this instructions. You can visit our website [www.mandmsalesinc.com](http://www.mandmsalesinc.com) to review the instruction manual in the future or keep this instruction sheet for reference: Air Riderz® MM00151.

The installation instructions above are reflective of the U.S. Consumer Product Safety Commission's Outdoor Playground Safety Handbook. For a complete description of installation instructions and warnings for outdoor playground equipment you can visit our website [www.mandmsalesinc.com](http://www.mandmsalesinc.com) to link to the current CPSC handbook and review in its entirety.

Our products are tested to ensure safety and compliance with Consumer Product Safety Improvement Act of 2008 (CPSIA) including specifications for lead paint and phthalates and ASTM International F1148 Standard Consumer Safety Performance Specifications.



**M&M SALES ENTERPRISES, INC.**  
Dubuque, Iowa 877.242.0154  
[mandmsalesinc.com](http://mandmsalesinc.com)

INSPIRING *outdoor* ADVENTURES



[MANDMSALESINC.COM](http://MANDMSALESINC.COM)