

Recreational Vehicle Air Conditioner

Installation and Operation Manual

WARNING

This manual must be carefully read and understood before installation, adjustment, repair or maintenance. The equipment must be installed by qualified technicians. Transformation of this product is an extremely dangerous operation, which may lead to personal injury or property loss. Important: please keep this manual with the product.

-
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
 - Children shall not play with the appliance.
 - Cleaning and user maintenance shall not be made by children without supervision.
 - When refrigerant leaks or requires discharge during installation, maintenance, or disassembly, it should be handled by certified professionals or otherwise in compliance with local laws and regulations.

CONTENTS

1 Safety Information	04
1.1 Safety Definitions	04
1.2 Safety Messages	04
1.3 The Refrigerant	04
2 General Information	05
2.1 About Air Conditioning Unit	05
2.2 Electrical Data	05
2.3 Parts Name	06
2.4 Packing List	07
3 Installation Precaution	08
3.1 Working Temperature Range	08
3.2 Selection of Installation Location	08
3.3 Requirements for Electric Connection	08
4 Installation	09
4.1 Before Installation	09
4.2 Stick Sponge (Sealing Strip) and Sponge on The Outdoor Unit	09
4.3 Installing The Roof Top Air Conditioner	10
4.4 Mounting Outdoor Unit	12
4.5 Installing The Ceiling Assembly	12
4.6 Electrical Wiring	13
4.7 Completing The Installation	14
5 Operation	16
5.1 Operation Of Wireless Remote Controller	16
5.2 Control Panel	21
6 Troubleshooting	22
6.1 Troubleshooting Guide	22
6.2 Error Code	23
7 Normal Maintenance Procedures	24
8 Electric Diagram	25
9 Specialist's Manual	26

1 Safety Information

1.1 Safety Definitions

This manual has safety information and instructions to help you eliminate or reduce the risk of accidents and injuries.



DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



CAUTION

Indicates a hazardous situation which, if not avoided, could result in property damage and minor or moderate injury.



NOTICE

This symbol indicates important information where there is no risk to people or property.

1.2 Safety Messages



A2L Appliance filled with flammable gas R32.



Before install and use the appliance, read the owner's manual first.



Before install the appliance, read the installation manual first.



Before repair the appliance, read the service manual first.

1.3 The Refrigerant

- To realize the function of the unit, a special refrigerant circulates in the system. The used refrigerant is the fluoride R32, which is specially cleaned. The refrigerant is flammable and inodorous. Furthermore, it can lead to explosion under certain conditions. But the flammability of the refrigerant is very low. It can be ignited only by fire.
- Compared to common refrigerants, R32 is a nonpolluting refrigerant with no harm to the ozonosphere. The influence upon the greenhouse effect is also lower. R32 has got very good thermodynamic features which lead to a really high energy efficiency. The units therefore need a less filling.



WARNING

- Appliance filled with flammable gas R32.
- Appliance shall be installed, operated and stored in a room with floor a realarger than 4 m².
- The appliance shall be stored in a room with continuously operating ignition sources. (for example: open flames, an operating gas appliance or an operating electric heater.)
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- The appliance shall be stored so as to prevent mechanical damage from occurring.
- Ducts connected to an appliance shall not contain an ignition source.
- Keep any required ventilation openings clear of obstruction.
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odour.


**WARNING**

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- Servicing shall be performed only as recommended by the manufacturer.
- Should repair be necessary, contact your nearest authorized Service Centre.
- Any repairs carried out by unqualified personnel may be dangerous.
- Compliance with national gas regulations shall be observed.
- Read SPECIALIST'S MANUAL.

2 General Information

2.1 About Air Conditioning Unit

- Thank you for choosing the Recreational Vehicle Air Conditioner.
- This manual will supply you with all the information for installation, operation and maintenance.
- Take a few minutes to discover how to get the most in cooling comfort and economic operation from your new air conditioner.
- Please keep this manual well for future reference.
- An all-pole disconnection switch having a contact separation of at least 3mm in all poles should be connected in fixed wiring.
- Including an air switch with suitable capacity, Air switch capacity: 25A.
- Air switch should be included magnet buckle and heating buckle function, it can protect the circuit-short and overload.





2.2 Electrical Data

1. All wiring must be complied with local and national electrical codes. All wiring must be installed by qualified electricians. If you have any questions about the following instructions, contact a qualified electrician.
2. Check the available power supply and resolve any wiring problems before installing and operating this unit.
3. This air conditioner is designed to operate from a 115V AC, 60Hz, 1 Phase power supply.
4. The wiring diagrams are located on the cover of the control box. The assembly unit wire diagrams are located on the ceiling panel.
5. The electric schematic diagram are subject to change without notice. Please refer to which one on the unit.

* See "8 Electric Diagram".

2.3 Parts Name

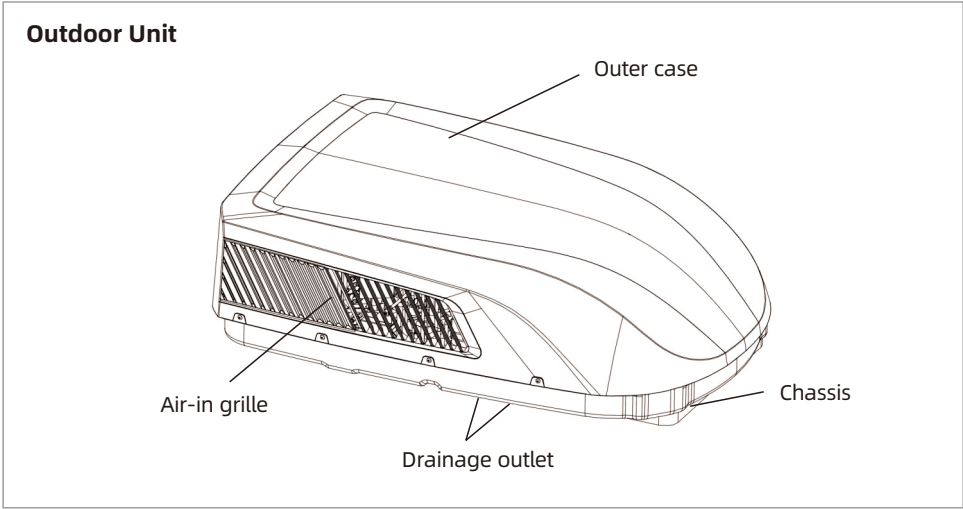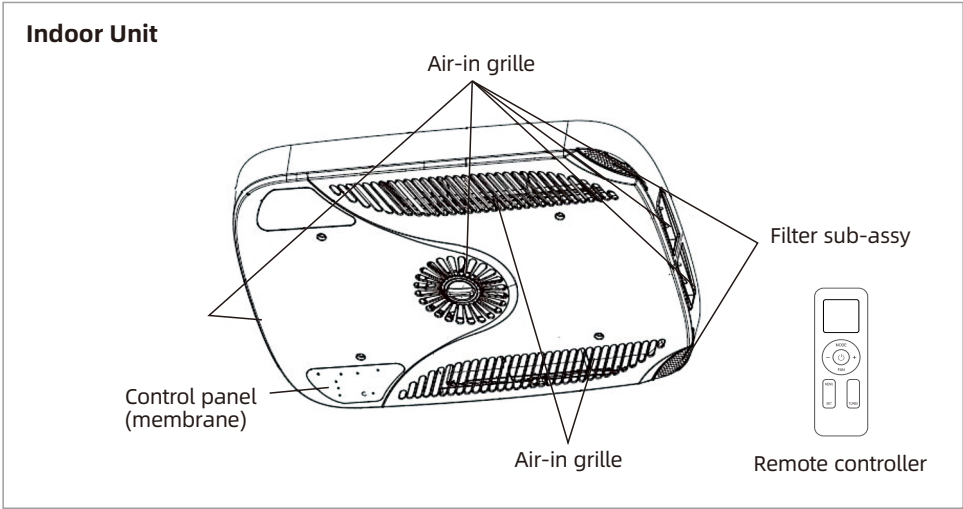

NOTICE


Actual product may be different from above graphics, please refer to actual products.

2.4 Packing List

■ Packing List of Indoor Unit



Installation and
Operation Manual

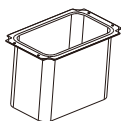


Sponge (air duct)



Remote controller



Battery (AAA 1.5V)



Remote controller
holder



Sunk screw
(remote controller holder)




Tapping screw




Screw cap



Double-sided
gummed paper



Use in indoor (bottom)
Plate of air vent



Use in outdoor (upper)
Plate of air vent




Bolt sub-assy
M8X135




Bolt sub-assy
M8X190

■ Packing List of Outdoor Unit

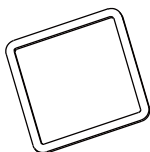

Sponge (sealing strip)



Sponge

3 Installation Precaution



WARNING

- Observe all governing codes and ordinances.
- Do not use damaged or non-standard power cord.
- Be caution during installation and maintenance. Prohibit incorrect operation to prevent electric shock, casualty and other accidents.

3.1 Working Temperature Range

Suggested working temperature range: 23 ~ 115 °F (-5 ~ 46 °C).

Heating: 23 ~ 75 °F (-5 ~ 24°C);

Cooling: 64 ~ 115 °F (+18 ~ 46 °C).

Outdoor unit may stop operation, due to various kinds of protection within working temperature range.

3.2 Selection of Installation Location

Basic requirement

Installing the unit in the following places may cause malfunction. If it is unavoidable, please consult the local dealer:

- a. The place with strong heat sources, vapors, flammable or explosive gas, or volatile objects spread in the air.
- b. The place with high-frequency devices (such as welding machine, medical equipment).
- c. The place near coast area.
- d. The place with oil or fumes in the air.
- e. The place with sulfureted gas.
- f. Other places with special circumstances.
- g. This air conditioner unit is only used for the vehicle without and convex surface on the top of it.

- h. Prohibit operating this air conditioner unit when starting up the vehicle or when the vehicle is driving.
- i. Prohibit supplying the power for the air conditioner unit with the vehicle power supply.

Requirement of air conditioner

- a. Air inlet should be far away from obstacles and do not put any objects near air outlet. Otherwise, it will affect the radiation of heat-removal pipe.
- b. Select a location where the noise and outflow air emitted by the outdoor unit will not affect neighborhood.
- c. Please try your best to keep far away from fluorescent lamp.
- d. The appliance shall not be installed in the laundry.

3.3 Requirements for Electric Connection

Safety precaution

1. Must follow the electric safety regulations when installing the unit.
2. According to the local safety regulations, use qualified power supply circuit.
3. For appliances with type Y attachment, the instructions shall contain the substance of the following. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Properly connect the live wire, neutral wire and grounding wire of power socket.
5. Be sure to cut off the power supply before proceeding any work related to electricity and safety.
6. Do not put through the power before finish installation.

7. The air conditioner is first class electric appliance. it must be properly grounding with specialized grounding device by a professional. Please make sure it is always grounded effectively, otherwise it may cause electric shock.
8. The yellow-green wire or green wire in air conditioner is grounding wire, which can't be used for other purposes.
9. The grounding resistance should comply with national electric safety regulations.
10. The appliance shall be installed in accordance with national wiring regulations.
11. Specification of fuse on the main board:T3.15AH250V; the maximum current passes through the fuse can't be more than 3.15A.
12. Installation must be performed in accordance with the requirement of NEC and CEC by authorized personnel only.

4 Installation

4.1 Before Installation

Test run the unit with proper power supply. Refer to the operation instruction section in the Owner's Manual Operation & Installation. Make sure all the controls operate correctly then disconnect the power supply of the unit.



WARNING


1. Moving parts may cause personal injury. Be careful when test the unit. Do not operate the unit with exterior cover removed.
2. Outdoor unit can't be installed at the low recess of the roof of vehicle. It must be mounted at the flat surface on the roof of vehicle to make sure the rain, car-washing water, condensate water, etc. can be drained smoothly. No water is

allowed to be accumulated around the outdoor unit; otherwise, it will cause malfunction or safety hazards as the water will pour into the air conditioner.

4.2 Stick Sponge (Sealing Strip) and Sponge on The Outdoor Unit

1. Before sticking, clean up the sundries at the sticking position (as shown in Figure 1) of the chassis of the outdoor unit to ensure that the sticking position is clean.
2. Take out one piece of sponge (sealing strip) and one piece of sponge from the accessories, and tear off the paper on the glue surface and align at the edge of the position as shown in Figure 1 to stick the sponge. If the sponge (sealing strip) is damaged or not stuck on the proper position, you must replace it with a new one and stick it properly.

Sticking position of sponge (sealing strip)

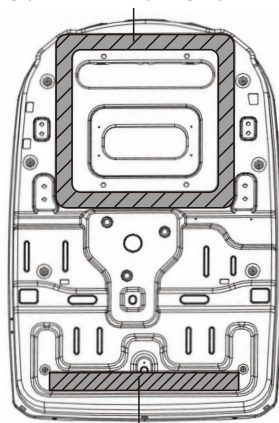

Sticking position of one piece of sponge

Figure 1

3. Check whether the sponge (sealing strip) and the sponge are tightly adhered, and ensure that they will not fall off.

4.3 Installing The Roof Top Air Conditioner

Your air conditioner has been designed for use in recreational vehicles.

Check the roof of the vehicle to determine if it can support both the roof top unit and the ceiling assembly without additional support. Make sure the interior ceiling mounting area will not interfere with existing structures.

Once the location for your air conditioner has been determined. A reinforced and framed roof.

Hole must be cut (if there is no hole, please refer to CASE B) or you may use existing vent holes (See CASE A).

■ CASE A

If a roof vent is already present in the desired mounting location for the air conditioner the following steps must be performed:

- 1.Remove all screws which secure the roof vent to the vehicle. Remove the vent and any additional trim. Carefully remove all chalking from around the opening so the surface is clear.
- 2.It may be necessary to seal some of the old roof vent mounting screw holes which may fall outside of the air conditioner base pan gasket.
- 3.Examine the roof opening size, if the opening is small than $14\text{-}1/4" \times 14\text{-}1/4"$, the opening must be enlarged.


■ CASE B

If a roof vent opening is not used, a new opening(see figure 1-1)will be cut into the vehicle roof.

A matching opening will also have to be cut into the interior vehicle ceiling, be careful when cutting the ceiling opening because if the ceiling opening is carpeted, snagging could occur. After the opening in the roof and

interior ceiling are the correct size, a framed support structure must be placed between the exterior roof top and interior ceiling. The reinforced framed structure must follow the following guidelines:

1. It must be capable of supporting both the weight of the roof top air conditioner and the interior ceiling assembly.
2. It must be capable of holding the roof outer surface and interior ceiling apart and supporting them, so that when the roof top air conditioner and ceiling assembly are bolted together, no collapsing occurs. A typical support frame is shown in Figure 1-1 .

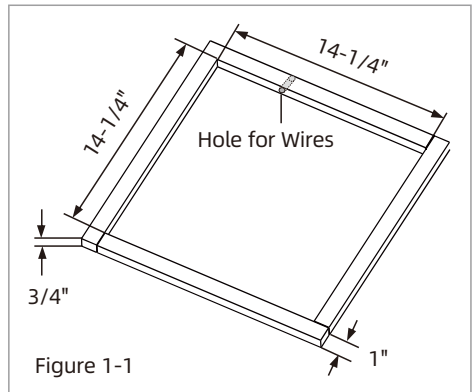

3. There must be an opening through the frame for the power supply wiring. Route the supply wiring through the frame at the same time the support frame is being installed.





CAUTION

1. The roof top air conditioner must be mounted on a level plane from front to rear and side to side when the vehicle is parked on a level plane. Figure 2 shows maximum allowable degrees that the unit can be mounted above or below level.
2. If the roof of the vehicle is sloped (not level) such that the roof top air conditioner cannot be mounted within the maximum allowable degree specifications, an exterior leveling shim will need to be added to make the unit level. A typical leveling shim is shown in Figure 3.
3. Once the roof top air conditioner has been leveled, some additional shimming may be required above the interior ceiling assembly. The roof top air conditioner and the interior ceiling assembly must be square with each other before they are secured together.
4. After the mounting hole area is properly prepared, remove the carton and shipping pads from around the roof top air conditioner. Carefully lift the unit on top of the vehicle. Do not use the outer plastic shroud for lifting. Place the roof top air conditioner over the prepared mounting hole.
5. The front section of outdoor unit of air conditioner must be in the same direction as the vehicle, which is useful for reducing wind resistance.




NOTICE

Try your best to put the unit on the horizontal surface for operation. The unit can only operate for a short time at the maximum sloping angle of 5° for preventing water leakage.

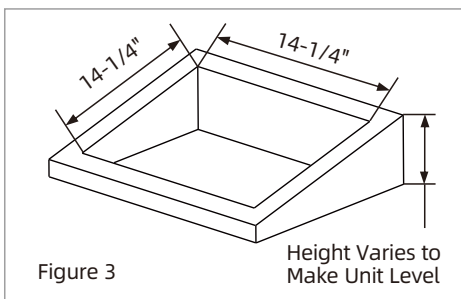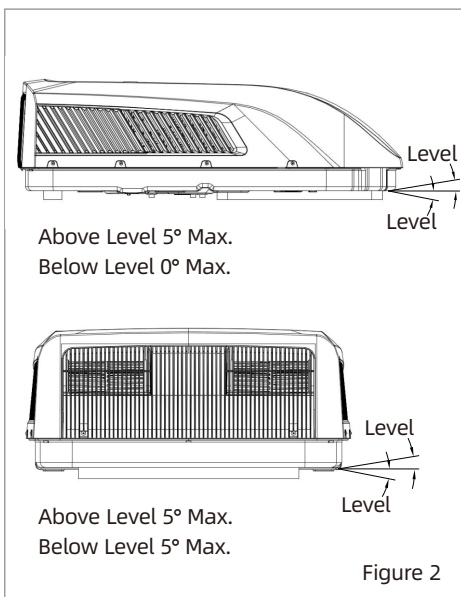


Note air conditioner dimensions (roof of unit)

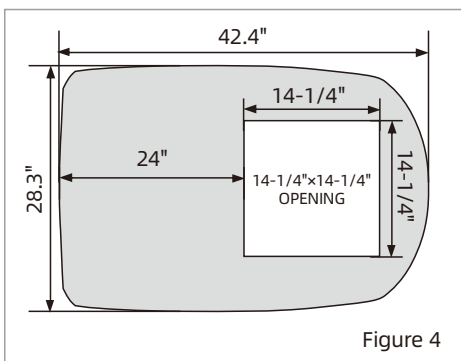


4.4 Mounting Outdoor Unit

1. Open the package and take out the outdoor unit.
- When taking out the outdoor unit after unpacking, do not lift the air outlet grille at the back of outer case (see Figure 4-1).

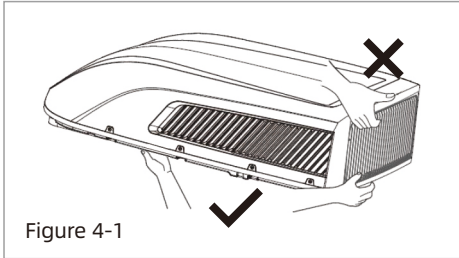

2. Fix the outdoor unit at the roof of vehicle and then drill holes.
- Place the outdoor unit at the roof of vehicle; lift the outdoor unit and then place the outdoor unit after drilling holes at the roof of vehicle. Do not drag the outdoor unit. Otherwise, the seal may fall off (see Figure 4-2).

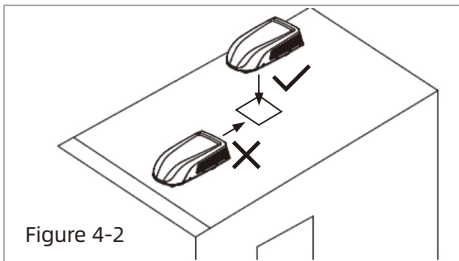

4.5 Installing The Ceiling Assembly

Make sure that you have properly matched the roof top air conditioner and interior ceiling assembly. Caution before tightening bolts:

1. The applicable thickness of vehicle roof ranges from 1.2" ~ 3.1".

2. Before tightening bolts, screw in the four bolts manually and prohibit screwing forcibly.
3. When screwing bolts, you can use automatic tool. Do not tighten one bolt completely and then tighten other bolts, in order to prevent sticking of screw thread.
4. The max torque for tightening ranges from 2.3 Nm ~ 2.5 Nm. The following step by step instructions must be performed in the following sequence to ensure proper installation.

1. Carefully take the ceiling assembly out of the carton(The remote control packed with the ceiling assembly). Remove the ceiling grille from the ceiling assembly.
2. Before the ceiling assembly can be mounted to the roof top air conditioner, the fabric duct collar must be fastened to the basepan of the roof top air conditioner with 4 screws by upper duct plate (see Figure 5-2、Figure 6-1、Figure 5、Figure 5-1).
3. Before lifting the ceiling assembly, pull the fabric duct collar so it hangs out of the way and does not get caught under the ceiling assembly frame.
5. Secure the ceiling assembly frame to the roof top air conditioner with the mounting bolts (see Figure 5). You must start (thread) the mounting bolts by hand to avoid cross threading. **DO NOT START THE MOUNTING BOLTS WITH AN AIR GUN.** The mounting bolts should be tightened, process is completed when the base pan gasket has been evenly compressed.
6. Set the fabric air duct into the duct opening of installation plate sub-assy and cut off four corner of fabric air duct. Because the thickness of vehicle top is different, the distance between the opening and the installation plate sub-assy is shown in figure 6.
7. Fasten each side of the fabric duct with fitting the bottom duct plate to the ceiling assembly frame with 4 screws (see Figure 6).Trim any excess fabric that may extend beyond edge of bottom duct plate.

4.6 Electrical Wiring


ROUTING 115V AC WIRING








WARNING

Make sure that all power supply to the unit is disconnected before performing any work on the unit to avoid the possibility of shock or injury and/or damage to the equipment. When the interior ceiling assembly frame is properly secured to the roof top air conditioner, the following electrical connections must be performed.


1. As shown in Figure 7, the outdoor unit has two sets of outgoing wires, which are power cord (high current) and the control signal wires respectively. The former one should be directly connected to terminal box while the latter one should be connected to the control signal wire of the indoor unit.

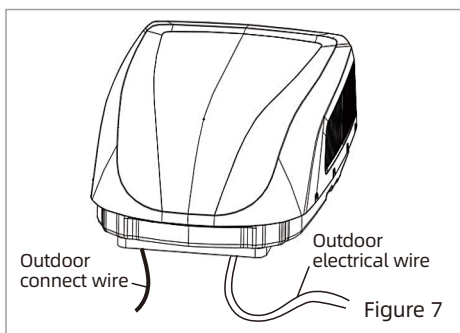

2. Route a copper ,with ground, supply wiring with minimum #14 AWG , the wiring from its power source to the junction box. Do not attach them at this time.
3. Take the roof top air conditioner power cord to connect to the side of the junction box.

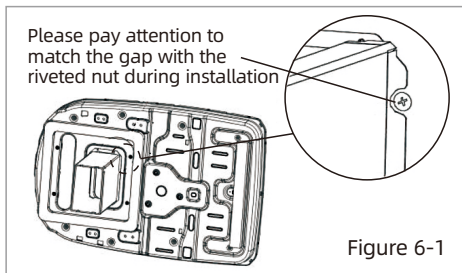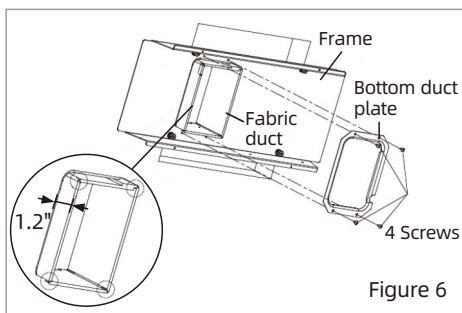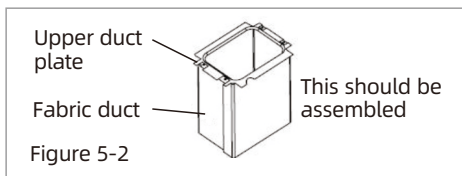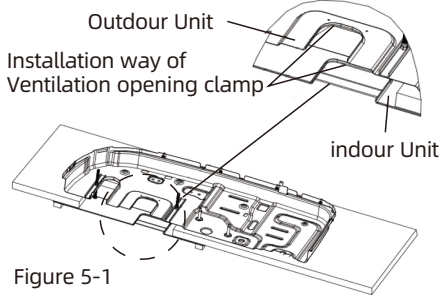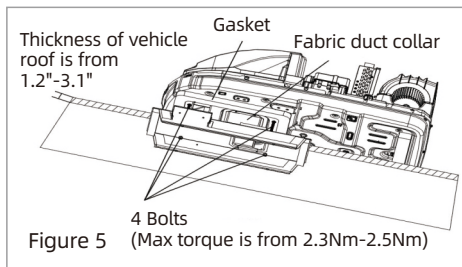

- Remove the junction box cover (2 screws). Take the power cord and make it get into the box through the strain relief that is provided (see Figure 8).

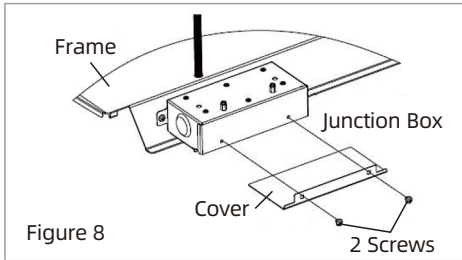


- Connect the power cord to the black, white and ground wires found in the junction box with a terminal board.

CAUTION Connect black wire to black wire (brown wire), white wire to white wire (blue wire) and the ground wire to earth. (see Figure 9)





NOTICE

When connecting the power cord, please use the pipe for preventing cutting power wire.

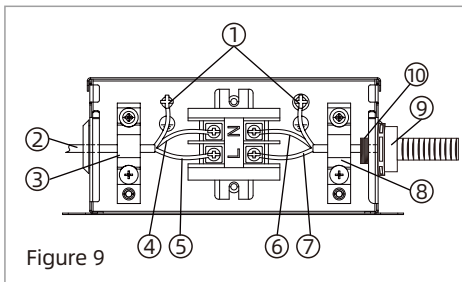

- Ground Wire (Yellow-Green Wire)
- Power Cord Come From Roof Top Air Conditioner
- Strain Relief (Clamp)
- White Wire
- Black Wire
- White Wire (Blue Wire)
- Black Wire (Brown Wire)
- Strain Relief (Clamp)
- Pipe
- Power Supply Cord


- Tighten the strain relief clamp to secure the supply power cord. **DO NOT OVERTIGHTEN.** Reinstall the junction box cover.
- Connect connector and secure the clamp (see Figure 10 and Figure 10-1).

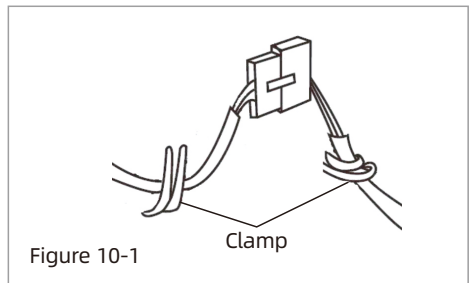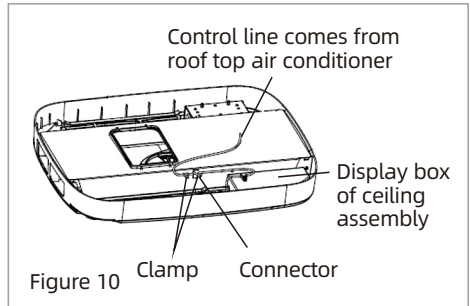

4.7 Completing The Installation

To complete the installation and system checkout requirements, the following steps must be performed.


- Check the thermostat position. Make sure the thermostat is routed through the holding guide and is not touching any metal surface.
- Make sure the guide louver and the filters are properly positioned in the ceiling grille.
- Secure the ceiling grille to the ceiling assembly frame with 4 screws. (see Figure 11).
- Install screw caps into four screw holes.
- Switch on the power supply and check the unit work or not.

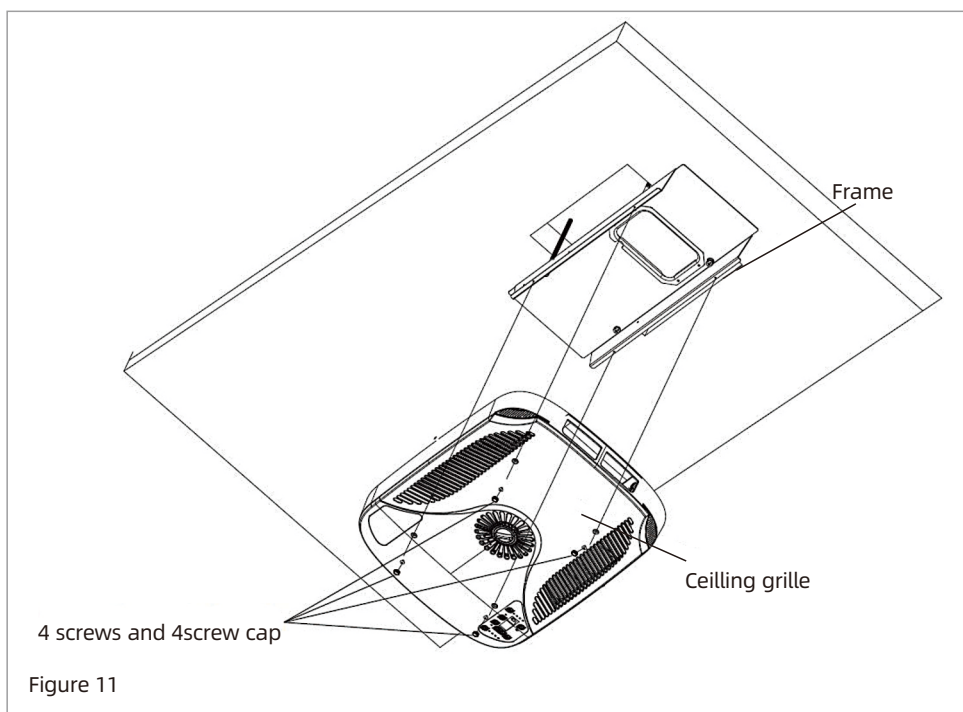

5 Operation

5.1 Operation Of Wireless Remote Controller

■ Buttons on remote controller

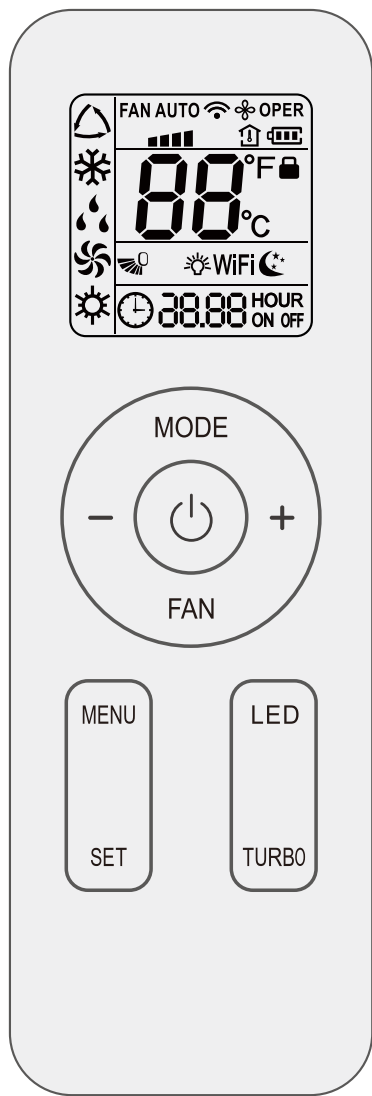

■ Introduction for icons on display screen

FAN AUTO		Set fan speed
		Send signal
Operation mode		Auto mode
		Cool mode
		Dry mode
		Fan mode
		Heat mode
		Sleep mode
		Light
		X-FAN function
		Indoor ambient temp.
		Clock
		Set temperature
WiFi		WiFi function
		Set time
ONOFF		TIMER ON / TIMER OFF
		Up & down swing
		Child lock

■ Introduction for buttons on remote controller



NOTICE

- This is a general use remote controller. It could be used for the air conditioner with multifunction. For the functions which the model doesn't have, if press the corresponding button on the remote controller, the unit will keep the original running status.
- After putting through the power, the air conditioner will give out a sound. Power indicator " " is ON. After that, you can operate the air conditioner by using remote controller.
- Under on status, pressing the button on the remote controller, the signal icon " " on the display of remote controller will blink once and the air conditioner will give out a sound, which means the signal has been sent to the air conditioner.

button

Press this button to turn on the unit. Press this button again to turn off the unit.

MODE button

Press this button to select your required operation mode.



- When selecting auto mode, air conditioner will operate automatically according to ambient temperature. Set temperature can't be adjusted and will not be displayed as well. Press "FAN" button can adjust fan speed.

- When selecting cool mode, air conditioner will operate under cool mode. Press "+" or "-" button to adjust set temperature. Press "FAN" button to adjust fan speed.
- When selecting dry mode, the air conditioner operates at low speed under dry mode. Under dry mode, fan speed can't be adjusted.
- When selecting fan mode, the air conditioner will only blow fan, no cooling and no heating. Press "FAN" button to adjust fan speed.
- When selecting heat mode, the air conditioner operates under heat mode. Press "+" or "-" button to adjust set temperature. Press "FAN" button to adjust fan speed.



NOTICE

- For preventing cold air, after starting up heat mode, indoor unit will delay 1~5 minutes to blow air (Actual delay time depends on indoor ambient temperature).
- Set temperature range from remote controller: 61~86 °F (16~30 °C).
- This mode indicator is not available for some models.
- Cooling only unit won't receive heat mode signal. If setting heat mode with remote controller, press " " button can't start up the unit.

FAN button

This button is used for setting Fan Speed in the sequence that goes from AUTO, ■ , ■■ , ■■■ , to ■■■■ , then back to Auto.



NOTICE

- Fan Speed "■■■■" is unavailable for some models,
- Fan Speed "■■■■" is the same with Fan Speed "■■■" for some models.
- Under AUTO speed, air conditioner will select proper fan speed automatically according to factory default setting.
- AUTO speed is only available for some models.
- It's low fan speed under dry mode.

- / + button

Press "+" or "-" button once increase or decrease set temperature 1°F (°C). Holding "+" or "-" button, 2s later, set temperature on remote controller will change quickly. On releasing button after setting is finished, temperature indicator on indoor unit will change accordingly. (Temperature can't be adjusted under auto mode)

When setting TIMER ON, TIMER OFF or CLOCK, press "+" or "-" button to adjust time. (Refer to CLOCK, TIMER ON, TIMER OFF functions).

MENU button

Press this button to select submenu function and then press "SET" button to set the function status of submenu. The submenu can be selected circularly as follows:



NOTICE

Some menu's function may be unavailable under different models.




Light function

When selecting sleep function, sleep icon "☾" flashes for 5s; press "SET" button within 5s to turn on sleep function and "☾" icon is displayed on remote controller. Press "SET" button again within 5s to turn off sleep function and "☾" icon disappears.



up & down swing function

When selecting up & down swing function, up & down swing icon "↕" flashes for 5s; press "SET" button within 5s to select up & down swing angle. Fan blow angle can be selected circularly as below:



NOTICE

This function is only available for some models.



Ambient temperature display function

When selecting ambient temperature display function, icon "🌡️" flashes for 5s; press "SET" button within 5s to select ambient temperature display on or off. After setting function on, the "🌡️" icon will be displayed on remote controller and you can see indoor ambient temperature on indoor unit's display for a few seconds.

TIMER ON function

TIMER ON function can set the time for timer on.

Under TIMER ON function status, "🕒" icon disappears and the word "ON" on remote controller blinks. Press "+" or "-" button to adjust TIMER ON setting. After each pressing "+" or "-" button TIMER ON setting will increase or decrease 1min. Hold "+" or "-" button, 2s later, the time will change quickly until reaching your required time. Press "SET" button to confirm it within 5S. The word "ON" will stop blinking.

Cancel TIMER ON: Press "MENU" button to TIMER ON function and the characters "ON" flashes on the remote controller; press "SET" button until the characters "ON" disappears.

TIMER OFF function

TIMER OFF function can set the time for timer off.

Under TIMER OFF function status, "🕒" icon disappears and the word "OFF" on remote controller blinks. Press "+" or "-" button to adjust TIMER OFF setting. After each pressing "+" or "-" button TIMER OFF setting will increase or decrease 1min. Hold "+" or "-" button, 2s later, the time will change quickly until reaching your required time, press "SET" button to confirm it within 5S. The word "OFF" will stop blinking.

Cancel TIMER OFF: Press "MENU" button to TIMER OFF function and the characters "OFF" flashes on the remote controller; press "SET" button until the characters "OFF" disappears.

🕒 CLOCK function

CLOCK function can set clock time. Under CLOCK function status, "🕒" icon on remote controller will blink. Press "+" or "-" button within 5s to set clock time. Each pressing of "+" or "-" button, clock time will increase or decrease 1 min. If hold "+" or "-" button, 2s later, time will change quickly. Release this button when reaching your required time, press "SET" button to confirm it within 5S. The "🕒" icon will stop blinking.

LED button

Press this button can turn on or turn off the LED light on the panel.



NOTICE

This function is only available for some models.

TURBO button

Under COOL or HEAT mode, press this button to turn to quick COOL or quick HEAT mode. "🔥🔥🔥🔥" icon is displayed on remote controller. If start this function, the unit will run at super-high fan speed to cool or heat quickly so that the ambient temperature approaches the preset temperature as soon as possible.



NOTICE

Fan Speed "🔥🔥🔥🔥" is unavailable for some models, Fan Speed "🔥🔥🔥" is the same with Fan Speed "🔥🔥🔥" for some models.

■ Function introduction for combination buttons

Child lock function

Press "+" and "-" simultaneously to turn on or turn off child lock function. When child lock function is on, "🔒" icon is displayed on remote controller. If you operate the remote controller, the "🔒" icon will blink three times without sending signal to the unit.

Temperature display switch over function

Under OFF status, press "-" and "MODE" buttons simultaneously to switch temperature display between °C and °F.

WiFi function

Press "MODE" and "TURBO" button simultaneously to turn on or turn off WiFi function. When WiFi function is turned on, the "WiFi" icon will be displayed on remote controller; Long press "MODE" and "TURBO" buttons simultaneously for 10s, remote controller will send WiFi reset code and then the WiFi function will be turned on. WiFi function is defaulted ON after energization of the remote controller.


**NOTICE**

This function is only available for some models.

**NOTICE**

- During operation, point the remote control signal sender at the receiving window on indoor unit.
- The distance between signal sender and receiving window should be no more than 8m, and there should be no obstacles between them.
- Signal may be interfered easily in the room where there is fluorescent lamp or wireless telephone; remote controller should be close to indoor unit during operation.
- Replace new batteries of the same model when replacement is required.
- When you don't use remote controller for a long time, please take out the batteries.
- If the display on remote controller is fuzzy or there's no display, please replace batteries.

■ Replacement of batteries in remote controller

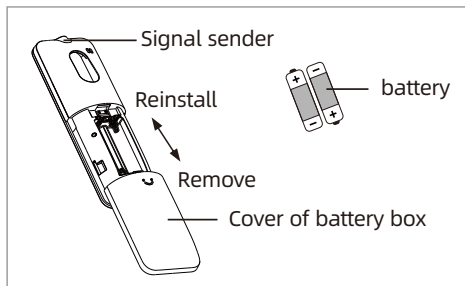


1. Press the back side of remote controller marked with "☺", as shown in the fig, and then push out the cover of battery box along the arrow direction.
2. Replace two 7# (AAA 1.5V) dry batteries, and make sure the position of "+" polar and "-" polar are correct.
3. Reinstall the cover of battery box.

5.2 Control Panel



NOTICE

If the remote controller is missing, operate on the control panel.

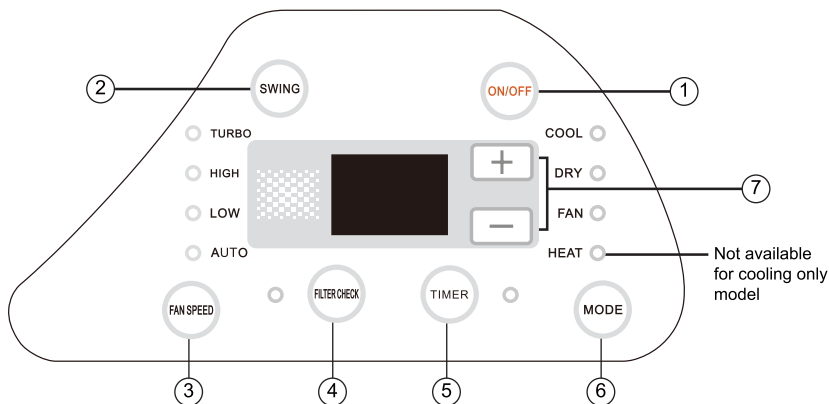

① ON/OFF button

Operation starts when pressing this button, and stops when pressing this button again.

② SWING button

Activate the automatic air swing function.

③ FAN SPEED button

Select the fan speed AUTO, LOW, HIGH and TURBO in sequence.

NOTICE:

1. When setting fan mode by the remote controller, turbo function is unavailable for the fan mode. Turbo function can only be set by the buttons on the control panel.
2. If the unit is without medium fan speed, when receiving medium fan speed command from the APP or remote controller, the unit will operate at high fan speed.

④ ON/OFF button

This feature is a reminder of cleaning the air filter (normal maintenance) for more efficient operation. The light will turn on automatically after the fan works more than 250 hours. If the

light is on, turn off and power off the unit, take the air filter out and clean it, then re-install the air filter, power on and turn on the unit, the light will still be on, press FILTER CHECK button, the light will turn off.

⑤ TIMER button

Press TIMER button, then press +/- to increase and decrease the time setting. If the time setting is no more than 10 hours, the increment/decrement is 0.5 hours by each press, if more than 10 hours, the increment/decrement is 1 hour by each press. The time setting range is 0.5~24 hours.

⑥ MODE button

Select the operation mode, COOL, DRY, FAN, HEAT.

⑦ (+/-)

Press the "+" button to increase the set (operating) temperature of the unit, and press the "-" button to decrease the set (operating) temperature of the unit. The temperature setting range is from 61 ~ 86°F (16-30°C).

6 Troubleshooting


6.1 Troubleshooting Guide

If you have problems with your recreational vehicle air conditioner, check this guide before contacting your service representative.

Trouble	Possible Cause	Solution
The unit can not start	The unit may not be connected to the power supply correctly.	Check the power supply of the vehicle and make sure it is provided correctly.
The unit can not cool the room	The roof top air conditioner is not level.	Mount the roof top air conditioner as level as possible from front to rear and side to side when the vehicle is parked. Make sure that the mounting of the air conditioner is correct and level.
	The temperature setting is too high.	Reset the remote control to a lower temperature setting.
	The air filter is dirty.	Remove and clean the filter.
	The room was already very hot before the unit was turned on.	Allow a sufficient amount of time for unit to cool the room.
The unit is making noise	The unit is click and gurgle.	These noise are normal during the operation of the unit.
The unit has water dripping inside	The basepan gasket has not been evenly compressed.	Mounting bolts should be tightened evenly by compressing the basepan gasket.
The unit has ice or frost on the coils	The temperature is low inside.	Select FAN mode at HIGH fan speed.
	The filter is dirty.	Remove and clean the filter.

6.2 Error Code

If you have problems with your recreational vehicle air conditioner, check this guide before contacting your service representative.

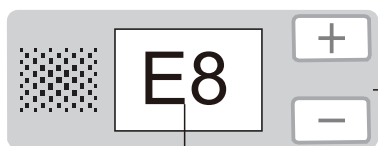

Error code

Indoor
display

Above indicator diagram is only for reference. Please refer to actual product for the actual indicator and position.

Error code	Troubleshooting
E6/E8	It can be eliminated after restarting the unit. If not, please contact qualified professionals for service.
PL	The power supply voltage is too low. Please check whether the voltage is correct. It can be eliminated after restarting the unit. If not, please contact qualified professionals for service.
F1/F2/F3/F4	Please contact qualified professionals for service.



NOTICE


If there're other error codes, please contact qualified professionals for service.

7 Normal Maintenance Procedures

Activity	Frequency
Remove the cover and wash the condenser coil	Twice a year.
Clean the filter (More frequent cleaning may be necessary depending on the air quality)	When the air conditioner FILTER CHECK light on.

■ How to remove the air filter

Remove the air filters by pulling them as illustrated below.

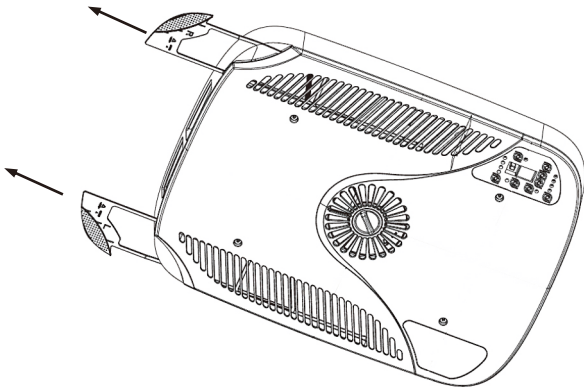

■ How to clean the air filter

Wash away dust from the air filters with clean water or vacuum the filter with an electric household vacuum cleaner.





WARNING

FAILURE TO FOLLOWING INSTRUCTIONS COULD RESULT IN SERIOUS PERSONAL INJURY

1. Don't touch the capacitor terminals without the electric discharge, the capacitor still may have the high voltage even though the power supply is turned off.
2. Be careful when you maintain the refrigeration system, which has the high internal pressure.
3. Do not block the filter and the indoor air inlet badly to prevent water leakage.

8 Electric Diagram

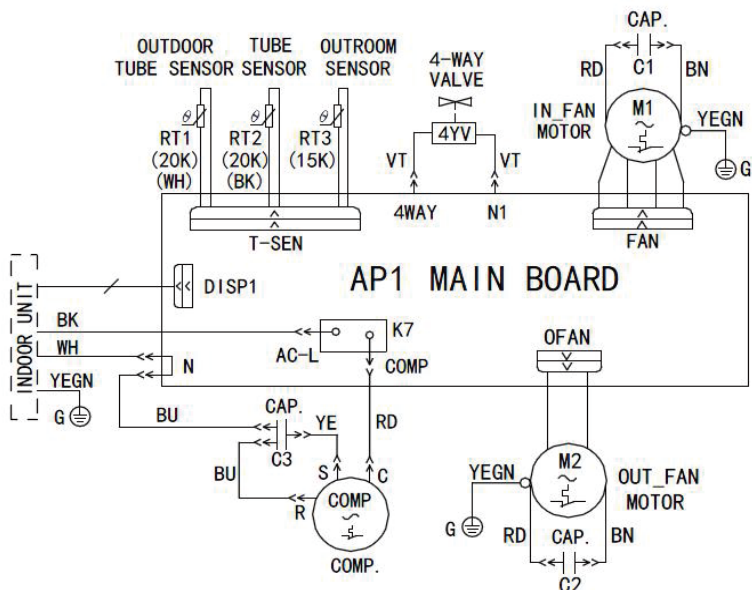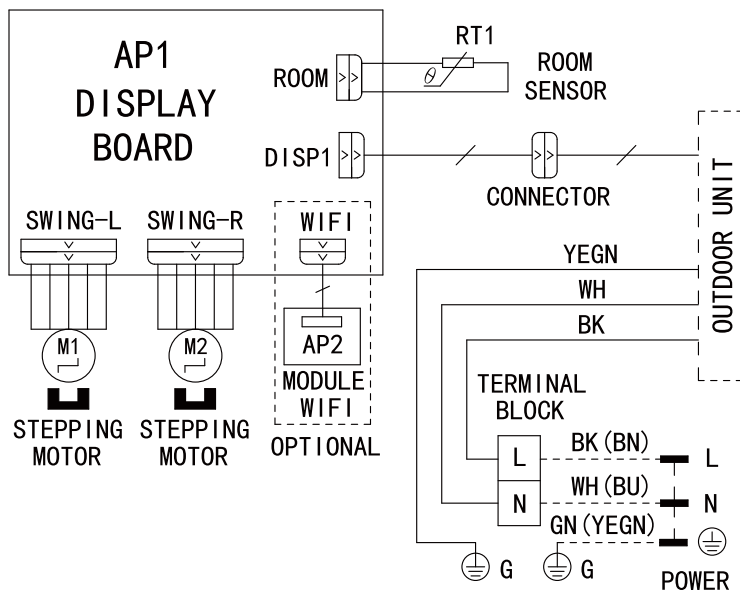

9 Specialist's Manual

■ Aptitude requirement for maintenance man (repairs should be done only be specialists).

- a. Any person who is involved with working on or breaking into a refrigerant circuit should hold a currently valid certificate from an industry-accredited assessment authority, which authorises their competence to handle refrigerants safely in accordance with an industry-recognised assessment specification.
- b. Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.

■ Safety preparation work

The maximum refrigerant charge amount is shown on the following table a.

**NOTICE**

Please refer to the nameplate for the charging quantity of R32

Room area (m ²)	/	4	6	8	10
Maximum charge (kg)	<1.842	2.02	3.03	3.55	3.97

table a - Maximum charge (kg)

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

• Work procedure

Work shall be undertaken under a controlled procedure so as to minimize the risk of flammable gas or vapor being present while the work is being performed.

• General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

• Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

• Presence of fire extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.

• No ignition sources

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

• **Ventilated area**

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

• **Checks to the refrigeration equipment**

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- The actual refrigerant charge is in accordance with the room size within which the refrigerant-containing parts are installed;
- The ventilation machinery and outlets are operating adequately and are not obstructed;
- If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- Refrigeration pipes or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant-containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

• **Checks to electrical devices**

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a

fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- That no live electrical components and wiring are exposed while charging, recovering or purging the system;
- That there is continuity of earth bonding.

■ **Repairs to sealed components**

During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.

- Ensure that the apparatus is mounted securely.
- Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer's specifications.

■ Repair to intrinsically safe components

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.

Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating.

Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.



NOTICE

The use of silicon sealant can inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

■ Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

■ Detection of flammable refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection methods are deemed acceptable for all refrigerant systems.

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of FLAMMABLE REFRIGERANTS, the sensitivity may not be adequate, or may need re-calibration.

(Detection equipment shall be calibrated in a refrigerant-free area.)

Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.



NOTICE

Examples of leak detection fluids are

- bubble method,
- fluorescent method agents.

If a leak is suspected, all naked flames shall be removed/extinguished.

If leakage of refrigerant is found which requires brazing, all of the refrigerants shall be recovered from the system, or isolated (by means of shut-off valves) in a part of the system remote from the leak. Removal of refrigerant shall be according to Clause Removal and Evacuation

■ Removal and evacuation

When breaking into the refrigerant circuit to make repairs – or for any other purpose –conventional procedures shall be used. However, for flammable refrigerants it is important that best practice be followed, since flammability is a consideration. The following procedure shall be adhered to:

- a) safely remove refrigerant following local and national regulations;
- b) purge the circuit with inert gas;
- c) evacuate (optional for A2L);

- d) purge with inert gas (optional for A2L);
- e) open the circuit by cutting or brazing.

The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance

safe for flammable refrigerants. This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, refrigerants purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum (optional for A2L). This process shall be repeated until no refrigerant is within the system (optional for A2L). When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and that ventilation is available.

■ Charging procedures

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.
- Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.

- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigeration system.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas.

The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

■ Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to reuse of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.
- c) Before attempting the procedure, ensure that:
 - Mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - All personal protective equipment is available and being used correctly;
 - The recovery process is supervised at all times by a competent person;
 - Recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.

- g) Start the recovery machine and operate in accordance with manufacturer's instructions.
- h) Do not overfill cylinders. (No more than 80 % volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

■ Labelling

Equipment shall be labeled stating that it has been decommissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing flammable refrigerants, ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

■ Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labeled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release.

Consult manufacturer if in doubt.

The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.



Tel: 877-216-1818 | E-mail: us@fogatti.com

@2025 Fogatti Holdings Limited. Fogatti Holdings Limited continually updates materials, and as such, content is subject to change without notice.