


USE AND CARE GUIDE

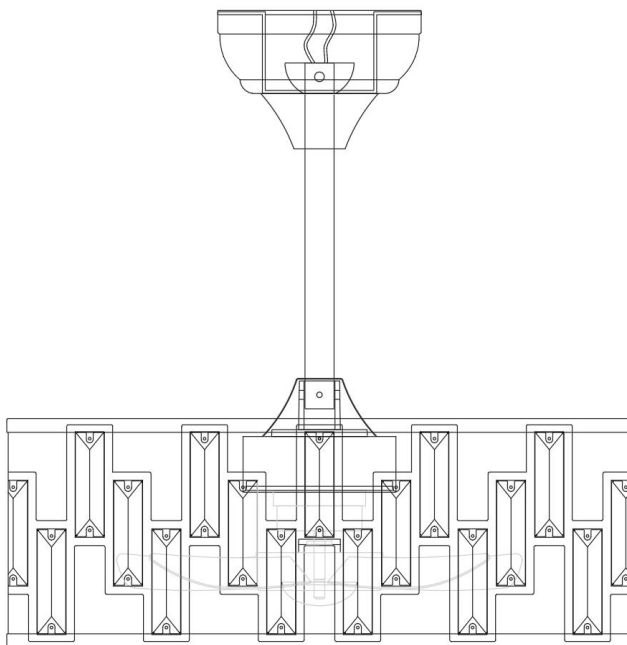

Instructions for use: The image of the instruction manual is for illustration purposes only

This manual is designed to make it as easy as possible for you to assemble, install, operate and maintain your ceiling fan

Tools Needed for Assembly (Not Included)

- a. One Phillips head screwdriver
- b. One stepladder

WARNING: Before assembling your ceiling fan, refer to section on proper method of wiring your fan. If you feel you do not have enough wiring knowledge or experience, have your fan installed by a licensed electrician.

Materials



Wiring outlet box and box connectors must be of type required by the local code. The minimum wire would be 3-conductor (2 wire with ground) of the following size:

<u>Installed Wire Length</u>	<u>Wire Size A.W.G</u>
Up to 50ft	14
50-100ft	12

NOTE: Place the parts from the loose parts bags in a small container to keep them from being lost. If any parts are missing contact your local retailer.

Unpacking Instructions

Check to see that you have received the following parts:

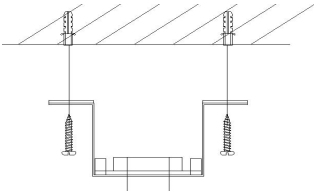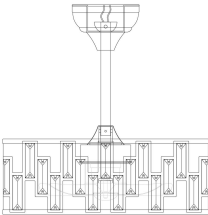Ceiling Canopy	
Motor Assembly	
Remote Control Remote Holder	

Energy Efficient Use of Ceiling Fans

Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.

Choosing the Appropriate Mounting Location

Ceiling fans should be installed, or mounted, in the middle of the room and at least 10 feet from floor to the blade and 18 inches from wall to the blade.

Turn Off When Not in the Room

Ceiling fans cool people, not rooms. If the room is unoccupied, turn off the ceiling fan to save energy.

Using the Ceiling Fan Year Round

Summer Season: Use the ceiling fan in the clockwise direction. The airflow produced by the ceiling fan creates a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze, lower speeds consume less energy.

Winter Season: Reverse the motor and operate the ceiling fan at low speed in the counterclockwise direction. This produces a gentle updraft, which forces warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan-additional energy and dollar savings could be realized with this simple step!

Electrical and Structural Requirements

Your new ceiling fan will require a grounded electrical supply line of 120 volts AC, 60 HZ, 15 Amp Circuit. Electrical code requires use of a fan-rated outlet box to support the extra weight and motion associated with a ceiling fan. A fan-rated box will be labeled as such and typically supports up to a 50lbs ceiling fan. Fan-Rated Outlet Boxes vary in ratings and design. Ensure the ratings of your ceiling fan outlet box meet the requirements for the ceiling fan being installed. Figure 1, Figure 2 and Figure 3 depicts different structural configurations that may be used for mounting the outlet box.

Low-profile use (Figure 1)

A 1 2-in.-deep pancake box is meant to be screwed to a joist or block. It's used if only one cable is coming into the box. It is also available in a saddle-mount configuration.

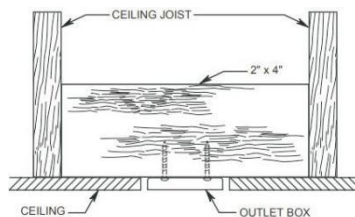



Figure 1

Deep-profile use(Figure 2)

A 2-1-in.-deep box can be attached to

blocking between joists and is roomly enough to handle more than one cable.

WARNING: To reduce the risk of fire, electrical shock, or personal injury, mount fan to outlet box marked acceptable for fan support of 22.7 kg (50 lbs) or less. Use screws supplied with outlet box. Most outlet boxes commonly used for support of light fixtures are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt.

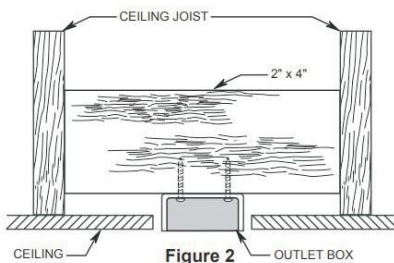


Brace use (Figure 3)

Paired with a deep box, this hanger is meant to span between two joists and takes the place of wooden blocking.

If your fan is to replace an existing light fixture, turn electricity off at the main fuse box at this time and remove the existing light fixture.

WARNING: Turning off wall switch is not sufficient. To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring. All wiring must be in accordance with National and Local codes and the ceiling fan must be properly grounded as a precaution against possible electrical shock.

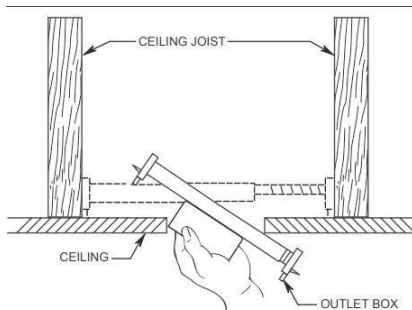



WARNING: Do not operate this fan with a variable (Rheostat) wall controller or dimmer switch. Doing so could result in damage to the ceiling fan's remote control unit.


WARNING: To avoid fire or shock, follow all wiring instructions carefully. Any electrical work not described in these instructions should be done or approved by a licensed electrician.

How to Hang Your Ceiling Fan


With Outlet Box: Fix the bracket onto the outlet box with screws from the outlet box, fix the cross bar of the bracket onto the ceiling with 4 wood screws (optional).

Without Outlet Box: Fix the cross bar onto the solid wood structure with 4 wood screws.

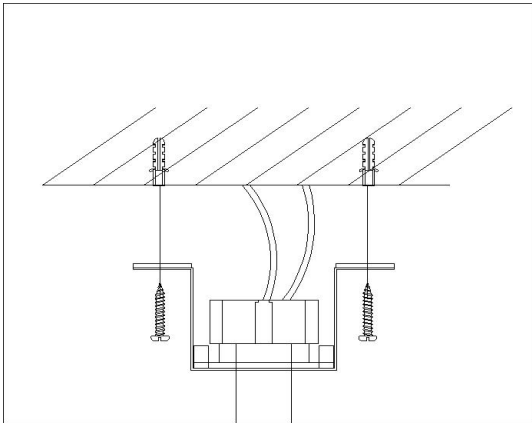
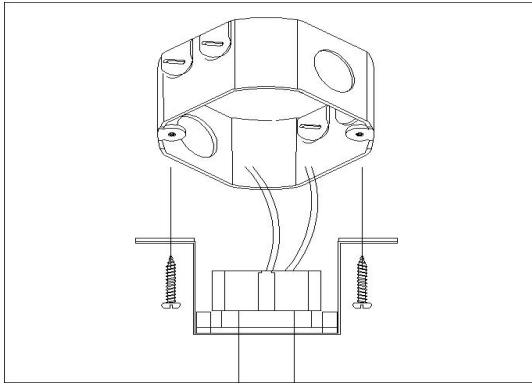


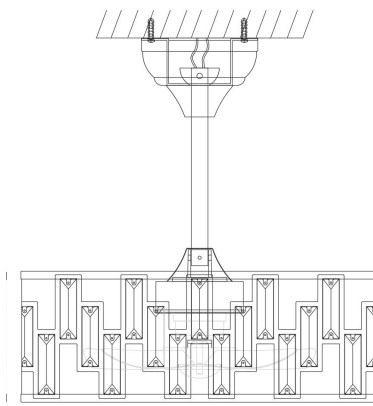


Connect wires from the fixture to the wires from outlet box with wire nuts, ground wire (green, green/yellow or bare copper) to ground wire, neutral wire (white or blue) to the neutral wire, hot wire (black or brown) to the hot wire. Wrap the connection with electrical tape.

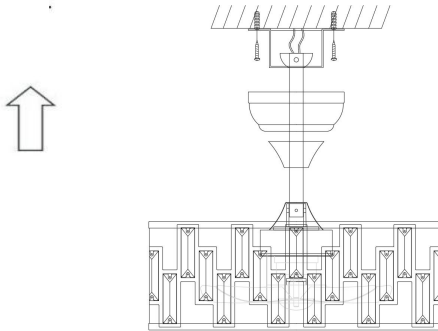

1. Use wood screws to fix the mounting plate onto the ceiling.
2. Push the base plate upward, align its holes with the screws on the mounting plate, then turn it clockwise until the screws are locked.

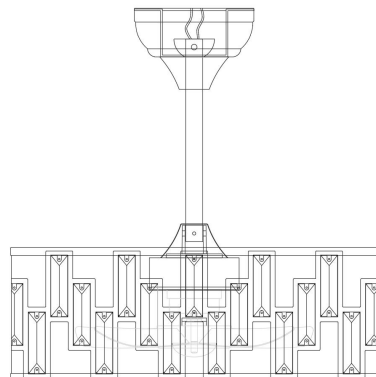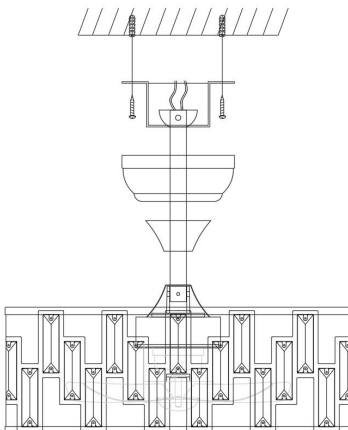

Installation Step

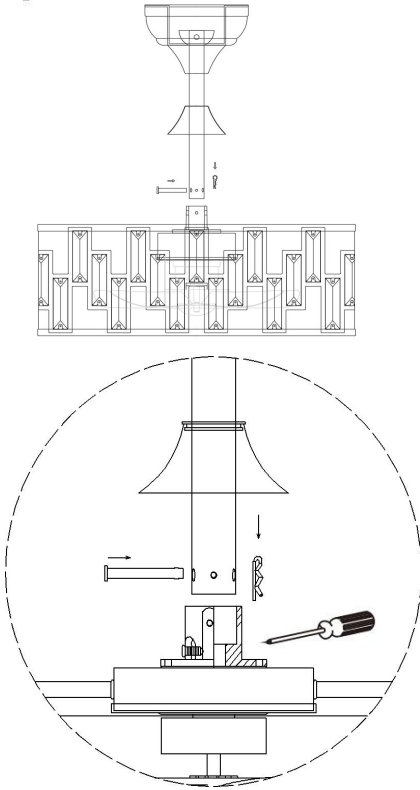

1. Assemble the downrod

Step 1. Pass the coupling cover through the downrod.

Step 2. Loosen the set screws from the downrod hub but do not take off. Align the holes at the bottom of the downrod with the holes in the downrod hub. Carefully insert the clevis pin through the holes in the collar and downrod. Insert the "R" pin into the end of the clevis pin.



Step 3. Fix the downrod with the set screws on the hub.

2.Wiring Diagram for Light Fixture

Step 1: Match and connect the wires from the fixture to the corresponding wires in the junction box using wire nuts.


Step 2: Connect the ground (green/green-yellow/bare), neutral (white/blue), and live (black/brown) wires according to their color codes.

Step 3: Once all connections are made, wrap each wire nut securely with electrical tape to ensure proper insulation.

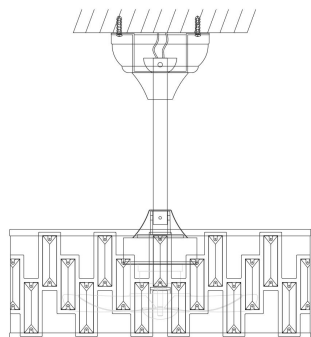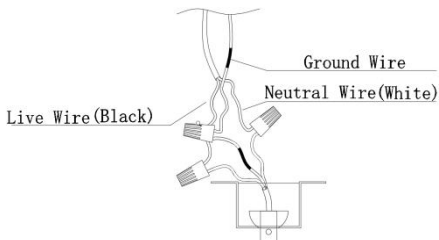



Scan and download the app

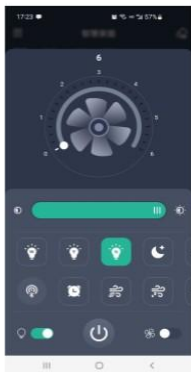

BLDC Fan Light Remote Control Manual

2.4GHZ frequency controller



Battery model

7#1.5V*2

Code matching: After powering on, within 5 seconds, press and hold the code matching fan to turn off, and the code matching is successful

Kind reminder:

When the remote control cannot be effectively controlled: please check the battery. If it is not used for a long time, please remove the battery


Notes:

1. The receiver should not be installed upside down to avoid affecting the unevenness of the outer cover and the ceiling.
2. The receiver is divided into input and output. It is strictly prohibited to switch input and output wiring.
3. Working voltage of this product: **AC100-265V**.
4. If there is a wall switch on the fan, it must be in the on state to effectively control.
5. Please refer to the wire color and sleeve color instructions for wiring.
6. When using the remote control, please check if the battery is installed correctly (pay attention to the positive and negative poles of the battery). The indicator light will flash every time the handle control button is pressed.
7. Fan blades need to be installed when the motor is turned on.

How to Install Your Remote Control

Installing Wall Holder:

Attach wall holder using the two provided screws.

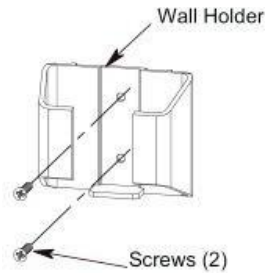

Replacement and Disassembly of Fan Blades

After cutting power, hold the blades steady, remove the fan nut cover clockwise, and take out the blade for replacement.