



713-001/019/021

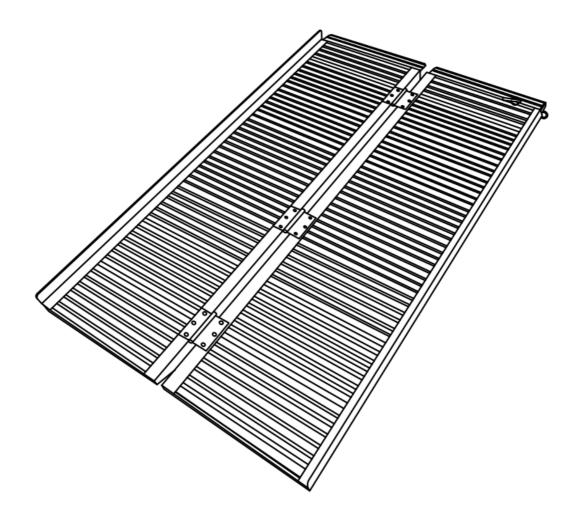


ASSEMBLY INSTRUCTIONS

STEP 1

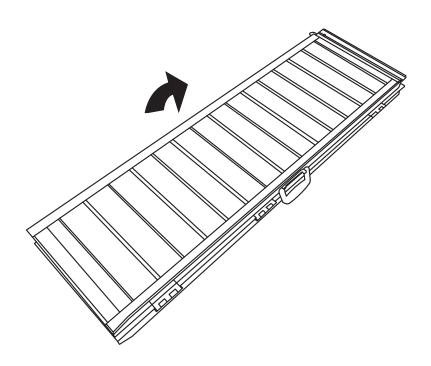

STEP 2

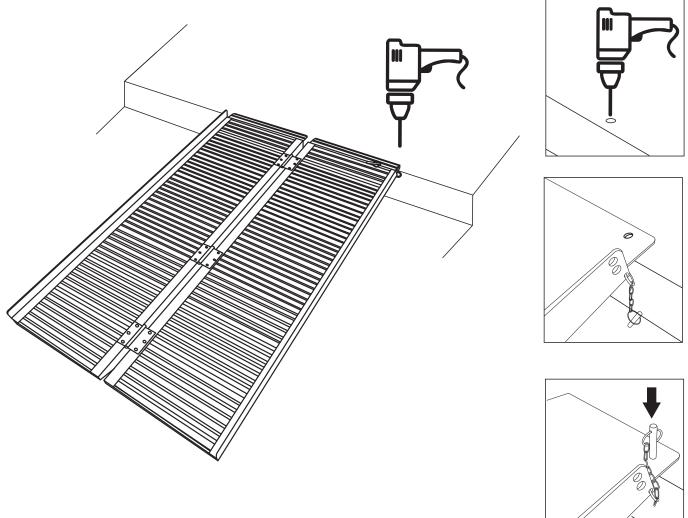

MAXIMUM *OCCUPIED / **UNOCCUPIED HEIGHT LIMIT TO GROUND LEVEL

- 2' ramp: Occupied loading: 4" maximum, unoccupied loading height: 6"
- 3' ramp: Occupied loading: 6" maximum, unoccupied loading height: 9"
- 4' ramp: Occupied loading: 8" maximum, unoccupied loading height: 12"
- 5' ramp: Occupied loading: 10" maximum, unoccupied loading height: 15"
- 6' ramp: Occupied loading: 12" maximum, unoccupied loading height: 18"
- 7' ramp: Occupied loading: 14" maximum, unoccupied loading height: 21"
- 8' ramp: Occupied loading: 16" maximum, unoccupied loading height: 24"
- 9' ramp: Occupied loading: 18" maximum, unoccupied loading height: 27"
- 10' ramp: Occupied loading: 20" maximum, unoccupied loading height: 30"

*Occupied is a person sitting in the wheelchair/scooter while loading (2:12 slope or 9.6 degree angle)

**Unoccupied is loading with nobody sitting in the wheelchair/scooter (3:12 slope or 14.5 degree angle)

MAXIMUM WEIGHT CAPACITY IS 600 lbs. (weight rating is based on evenly distributed load on 2 axles)

1. WARNING

- 1.1 **NEVER** exceed the rated capacity of your ramp.
- 1.2 **NEVER** exceed the maximum height limit listed above.
- 1.3 Use caution at all times when loading and unloading.
- 1.4 ONLY load and unload onto a stable, level surface.
- 1.5 NEVER stand in the path of equipment or vehicle. Keep bystanders and children away.
- 1.6 **DO NOT** leave attached ramps unattended.
- 1.7 Beware of hinged areas. Keep all body parts clear of hinged areas.
- 1.8 Ramp surfaces will have less traction when wet. Use caution.
- 1.9 Always fold and secure ramp with the latches before carrying.
- 1.10 The ramp is not a toy. **DO NOT** use ramp as a jump, scaffold, bridge, ladder or anything other than its designed purpose.
- 1.11 **ALWAYS** make sure the top of the ramp attaching lip is secured onto step, landing or vehicle before using. We strongly recommend using the supplied safety pins to prevent ramp kick out.
- 1.12 ALWAYS follow manufacturer recommendations for chair or scooter.

2. OPERATION GUIDANCE

2.1 Loading wheelchair:

- a. Position the wheelchair in the direction of the ramp with front wheel forward. Roll or ride the wheelchair slowly and steadily up the ramp, ensuring that the wheels follow the center of the ramp.
- b. Take extra care in wet conditions to ensure the wheels do not slide on the ramp.

2.2 Unloading wheelchair:


- a. Position the ramp as detailed above directly behind the rear wheel of the wheelchair. Allow the wheelchair to roll backwards down the ramp, ensuring the wheels follow the center of the ramp.
- b. Always have a qualified assistant present when using the ramp.

3. MAINTENANCE

- 3.1 It is the user's responsibility to check the loading ramp and components before each and every use. If the ramp is damaged, it should NOT be used.
- 3.2 Maintain the ramp by regular cleaning. Periodically lubricate the hinges.

Ramp Selection Quick Reference

NOTE: Check the ramp length, measure the rise height and determine the reasonable slop according to the following recommedations before use.

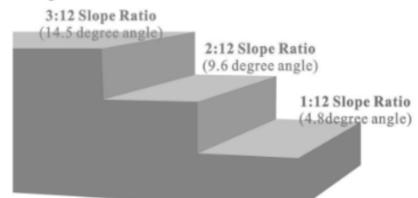

Slope Recommedations

1:12 slope or 4.8 degree angle:

When a person sitting in the manual wheelchair or scooter without qualified assistant.

2:12 slope or 9.6 degree angle:

when a person sitting in the wheelchair/scooter while loading with a qualified assistant.

3:12 slope or 14.5 degree angle:

When the wheelchair/scooter is unoccupied (with nobody sitting in).

Slope Chart

**				
н	eı	σ	h	t
	•••	6		٠

									menghe	
								14.5°	30in. (76cm)	
							14.5	13.5°	28in. (71cm)	
							13.5	12.5°	26in. (66cm)	
				50		14.5°	12.5	11.5°	24in. (61cm)	
			P	12		13.2°	11.5	10.6°	22in. (56cm)	
		01	ame		13.8°	12°	10.6	9.6°	20in. (51cm)	
		5	ampR	14.5°	12.4°	10.8°	9.6	8.6°	18in. (46cm)	
				12.8°	11°	9.6°	8,6	7.7°	16in. (41cm)	
			13.5°	11.2°	9.6°	8.4°	7.5	6.7°	14in. (36cm)	
		14.5°	11.5°	9.6°	8.2°	7.2°	6.5	5.7°	12in. (30cm)	
		12°	9.6°	8°	6.8°	6°	5.6	4.8°	10in. (25cm)	
	14.5°	10.8°	8,6°	7.2°	6.2°	5.4°	4.8	4.3°	9in. (23cm)	
	12.8°	9.6°	7.7°	6.4°	5.5°	4.8°	4.2	3.8°	8in. (20cm)	
	11.2°	8.4°	6.7°	5.6°	4.8°	4.2°	3.6	3.3°	7in. (18cm)	
14.5°	9.6°	7.2°	5.7°	4.8°	4.1°	3.6°	3.2	2.9°	6in.(15cm)	
12°	8°	6°	4.8°	4°	3.7°	3°	2.7	2.4°	5in.(13cm)	
9.6°	6.4°	4.8°	3.8°	3.2°	2.7°	2.4°	2.1	1.9°	4in.(10cm)	
7.2°	4.8°	3.6°	2.9°	2.4°	2°	1.8°	1.6	1.4°	3in.(8cm)	
2ft. (61cm	3ft. (91.5cm	4ft. (122cm	5ft. (152.5cm	6ft. (183cm)	7ft. (213.5cm	8ft. (244cm)	9ft. (275cm)	10ft. (305cm)		
Ramp Length										



001-877-644-9366 customerservice@aosom.com



001-855-537-6088 customerservice@aosom.ca



0044-800-240-4004 enquiries@mhstar.co.uk



0049-(0)40-88307530 service@aosom.de



0033-1-84166106 contact@aosom.fr



0034-931294512 atencioncliente@aosom.es



0039-0249471447 clienti@aosom.it

