



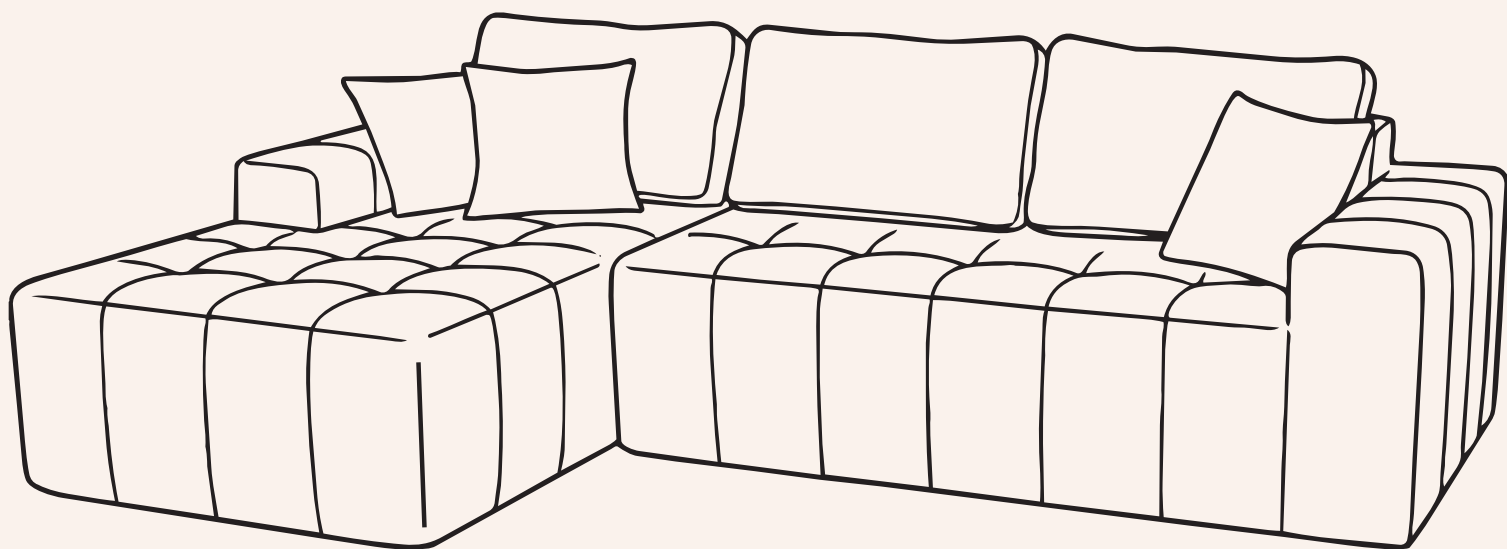


COMPRESSION SOFA


INSTRUCTIONS

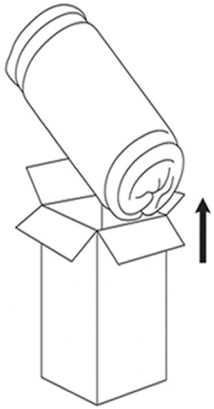

Unpacking

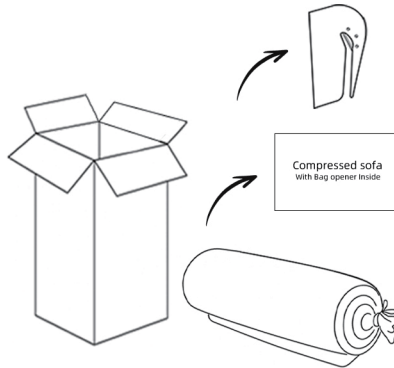


Locate the envelope and opener

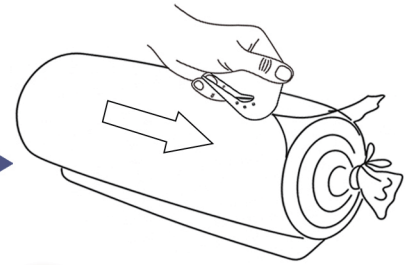


Please do not use art knives or scissors to open the package, as they may cause damage. Use our opener instead.


Locate the arrow on the outer bag and use the opener to cut it open

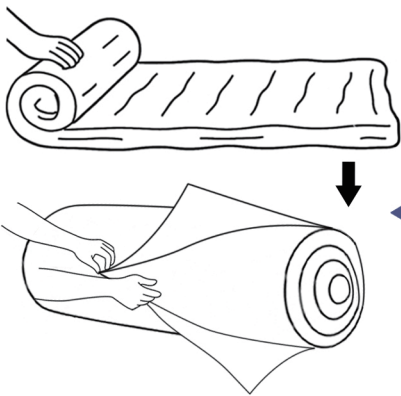


Unfold the sofa and tear open the inner packaging bag by hand.

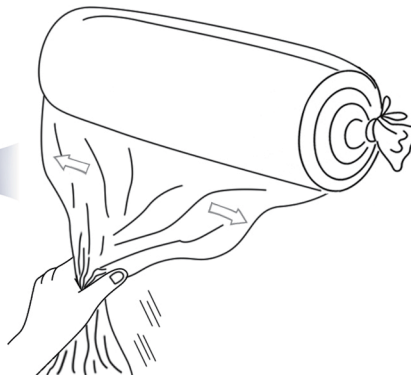


Take off the wrapping film

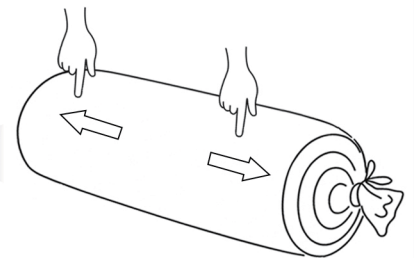


Locate the arrow on wrapping film

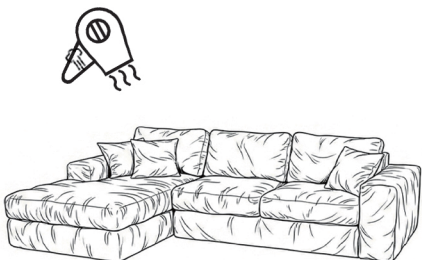

Blow Dryer

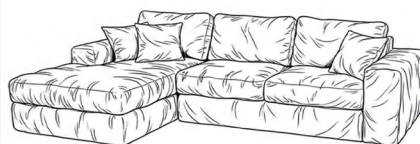

Waiting for Rebound
If there are creases, please iron carefully

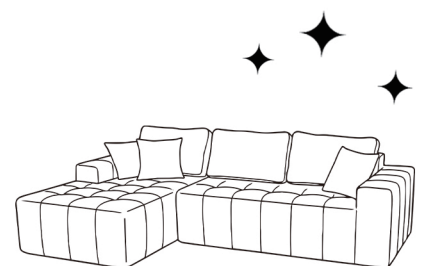


Enjoy



01

Due to package compression for better shipment, the fabric may have wrinkles; however, these wrinkles will gradually disappear.

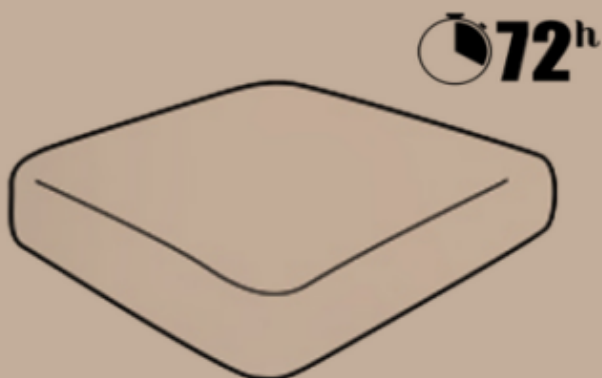

02

Please be patient as the couch returns to its fluffier state, which may take anywhere from 72 hours to a week.

Maintenance Instructions for Sofas


- **Regular Cleaning:** Use a vacuum cleaner to remove dust and stains from the sofa regularly to maintain hygiene
- **Rotate Cushions:** Periodically flip and rotate the cushions to ensure even wear and extend their lifespan
- **Ensure Ventilation:** Maintain good indoor ventilation to prevent moisture buildup and mold growth on the sofa.
- **Dusting:** Gently wipe with a sponge or soft cloth dipped in a cleaning solution for dust removal.
- **Avoid Sun Exposure:** Prolonged exposure to sunlight can cause fading and deformation. Avoid direct sunlight for extended periods.

Unboxing Instructions for the Sofa

After unpacking, the sofa will rebound to 90% of its original shape within 30 mins. Full recovery will take 48 to 72 hours.

Due to compression, air needs to enter the sofa for it to rebound quickly, and the zipper is usually in the open state.

Please ensure to zip up the sofa once it has fully rebounded

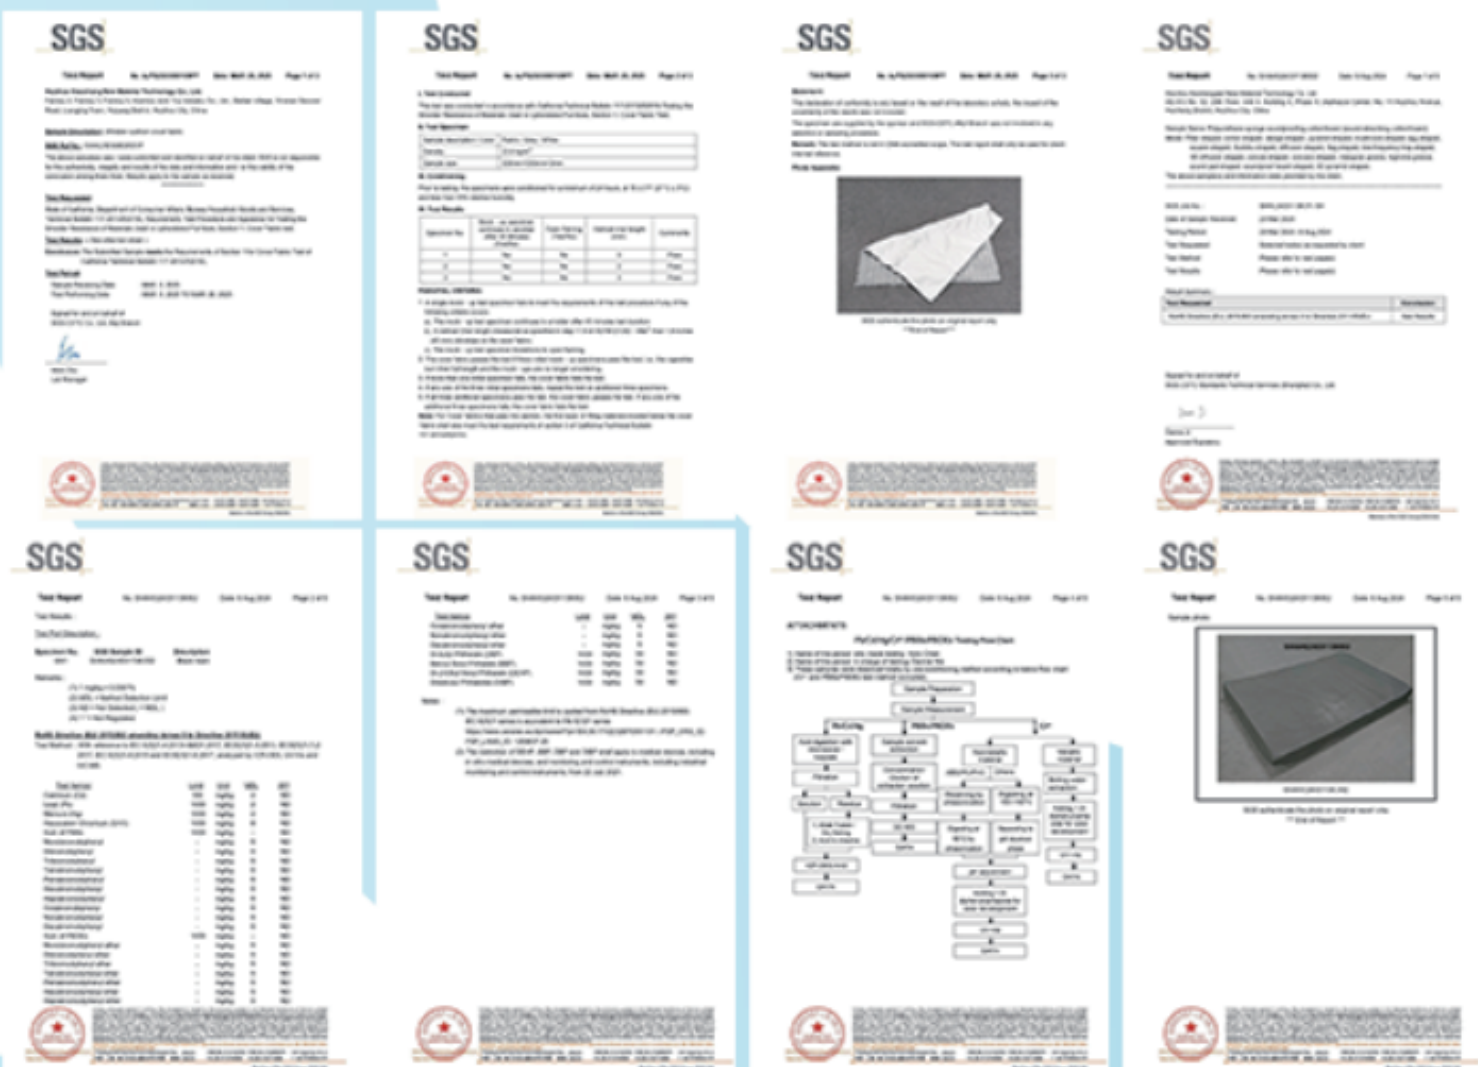

Vacuum cleaner cleaning

 iron at low setting

 Hang dry

 Hang in a cool place to dry

 Flat Dry