



Installation Instruction

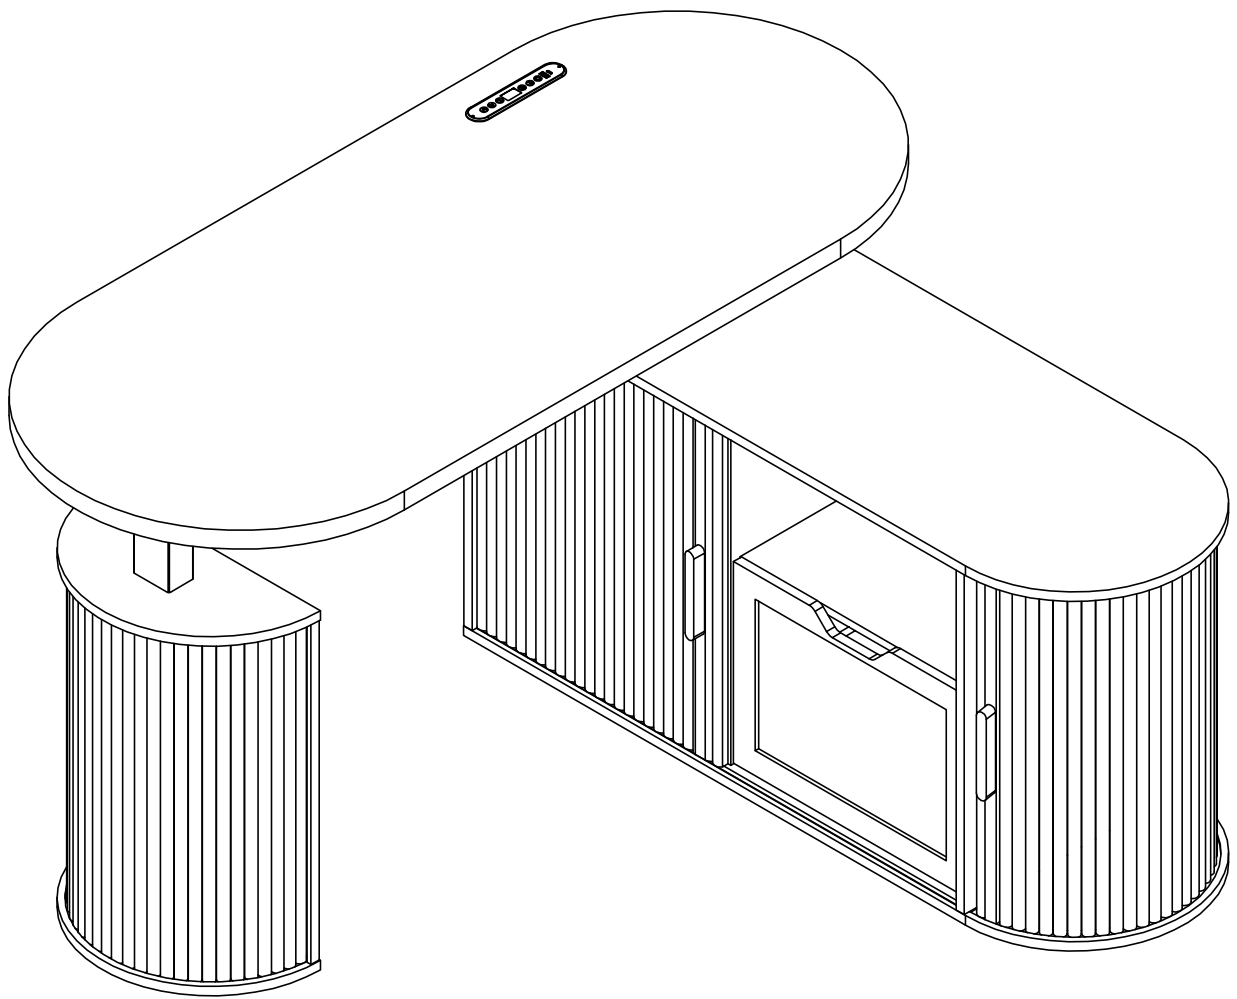

Assembling


What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation

 **100** | **35**
lbs table top lbs per

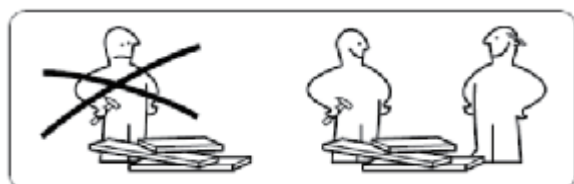


What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	26
B	Cam Lock 15X9MM	26
C	Wooden Dowel M8X30MM	44
D	Screw M4X40MM	30
E	Screw M3.5X10MM	2
F	Guide wheel	2
G	Nylon Strap	2
H	Screw M3.0X14MM	24
I	Metal handle	2
J	The back button	12
K	Anchor	2
L	Screw M6X15MM	4
M	Screw M6X50MM	12
N	Screw M5X30MM	4
O	Plastic cylinder	2
P	Cam Bolt M4X30MM	2
Q	Pivoting rod connector	1
R	Motor controller	1
S	Power converter	1

Assembling


What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation

 **100** | **35**
lbs table top lbs per

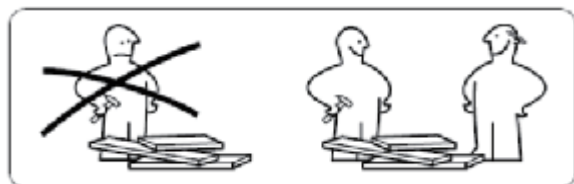


What' included


Code	Description	Qty
T	Wrench M2X52MM	1
U	Electric motor	1
V	Hole position sticker	26
W	Wrench M4X55MM	1
X	EVA foot mat	10
Y	Cam Bolt M4X15MM	4
Z	The bolt	2
a	Screw M6X35MM	8
b	Gasket	12
c	Shelf Holder	4
d	Screw M2.6X12MM	2
CL	Left mother extended orbit	1
CR	Right mother extended orbit	1
DL	Left public extension track	1
DR	Right public extends track	1

The Hardwares

A




B



C



D




E



F




G



H



I



J



K



L



M



N



O




P




Q



R



S




T




U



V



W



X



Y



Z



a



b




c




d




CL




CR



DL



DR

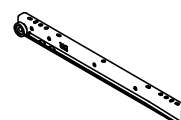

IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)


Included Accessories

Code	Description	Qty
1	Large display pane	1
2	Right cabinet panel	1
3	Bottom panel of the right cabinet	1
4	Right cabinet door pane	1
5	Right cabinet partition panel	1
6	Iron frame	1
7	The left panel of the right cabinet	1
8	The right side panel of the right cabinet	1
9	The middle panel of the right cabinet	1
10	Right cabinet fixed shelf panel	1
11	Middle crossbar	1
12	Right cabinet right back panel	1
13	The iron frame on the left	1
14	The iron frame on the right	1
15	The left side panel of the left cabinet	1
16	The right panel of the left cabinet	1
17	Left cabinet main support plate	1
18	The middle reinforcement plate of the left cabinet	2



Included Accessories





Code	Description	Qty
19	Drawer panel	1
20	Drawer left panel	1
21	Drawer right side panel	1
22	The drawer bottom	1
23	After the drawer board	1
24	Rebar	2
25	The movable shelf on the left side of the right cabinet	1
26	Right cabinet, left back panel	1
27	Left cabinet panel	1
28	Left cabinet bottom plate	1
29	Left cabinet partition panel	1
30	Left cabinet left reinforcement plate	1
31	Left cabinet and right reinforcement board	1

The Accessoriess

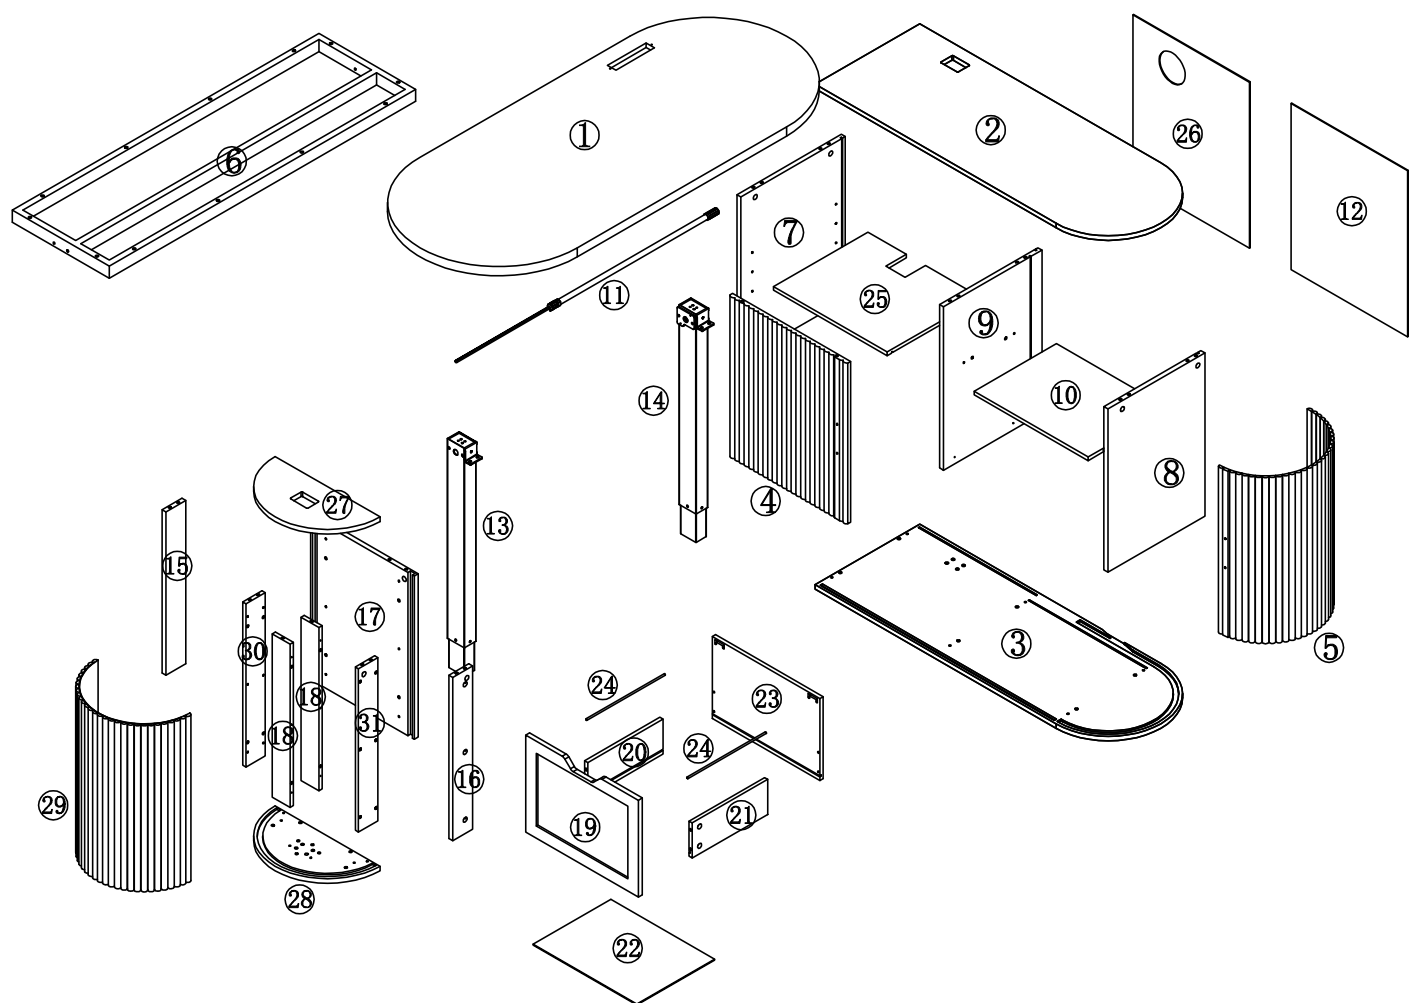







Step 1

A	x 6	C	x 4
			

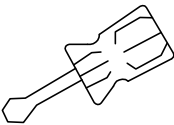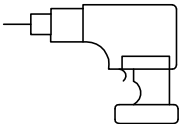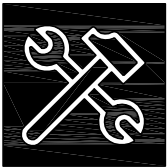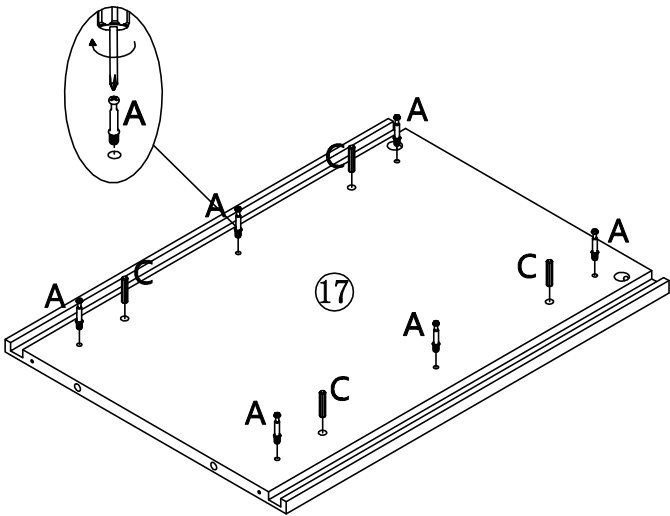




Step 2

B	x 6	V	x 6
			

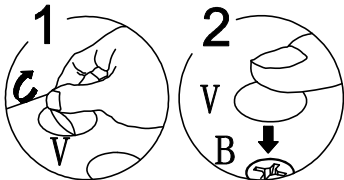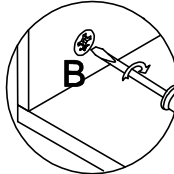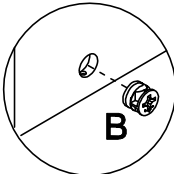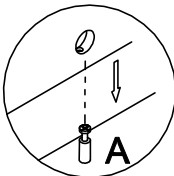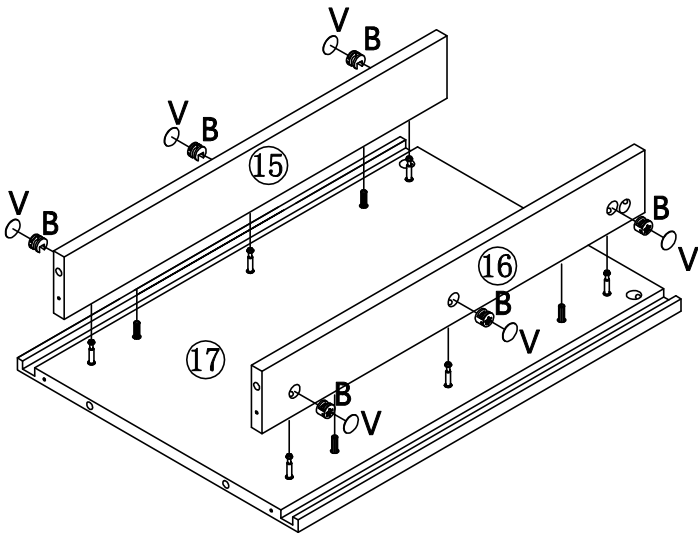






Step 3

D	x 12	C	x 8
			

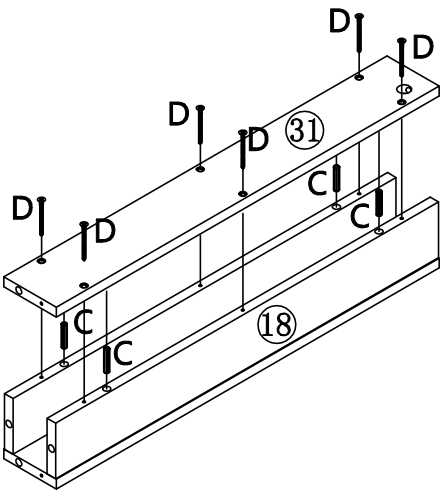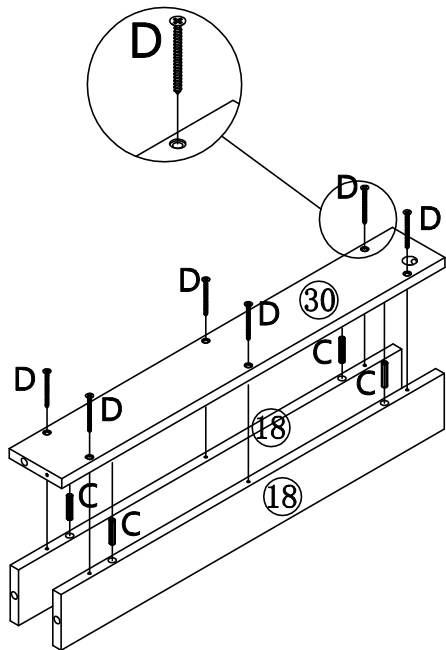






Step 4

A	x 6	C	x 8
			

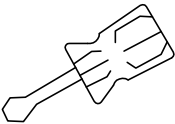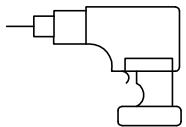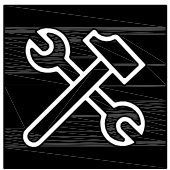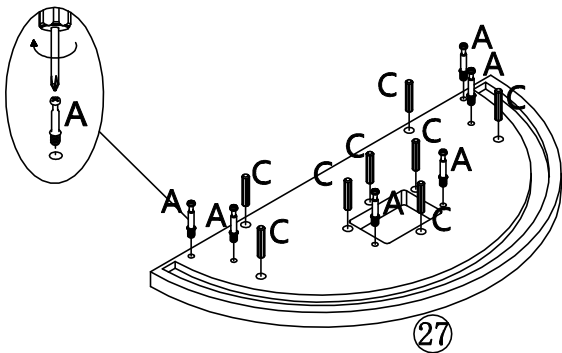


Step 5







B	x 6	V	x 6
			

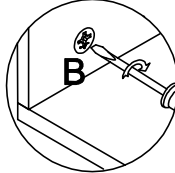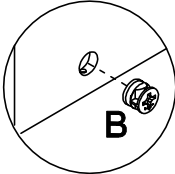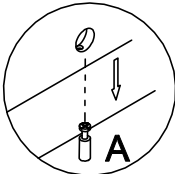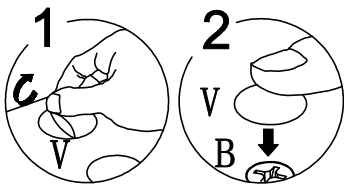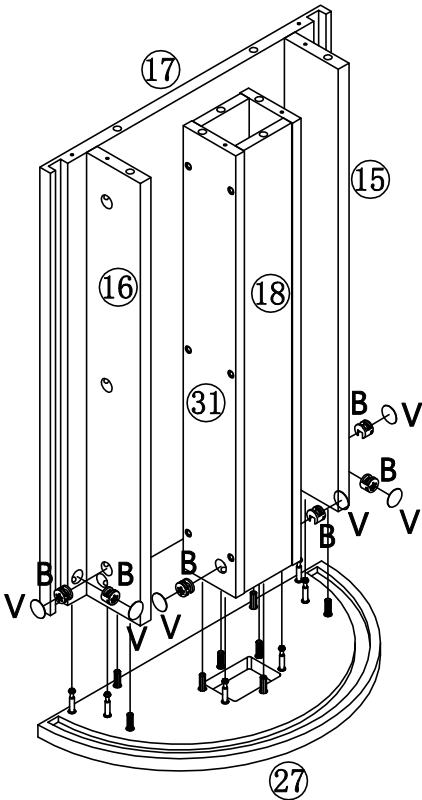


Step 6

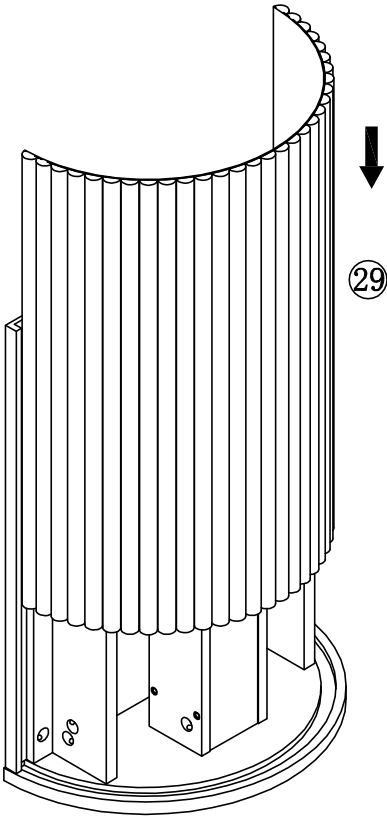


Step 7

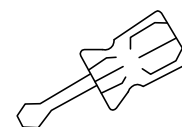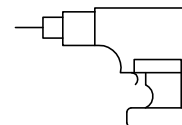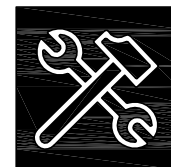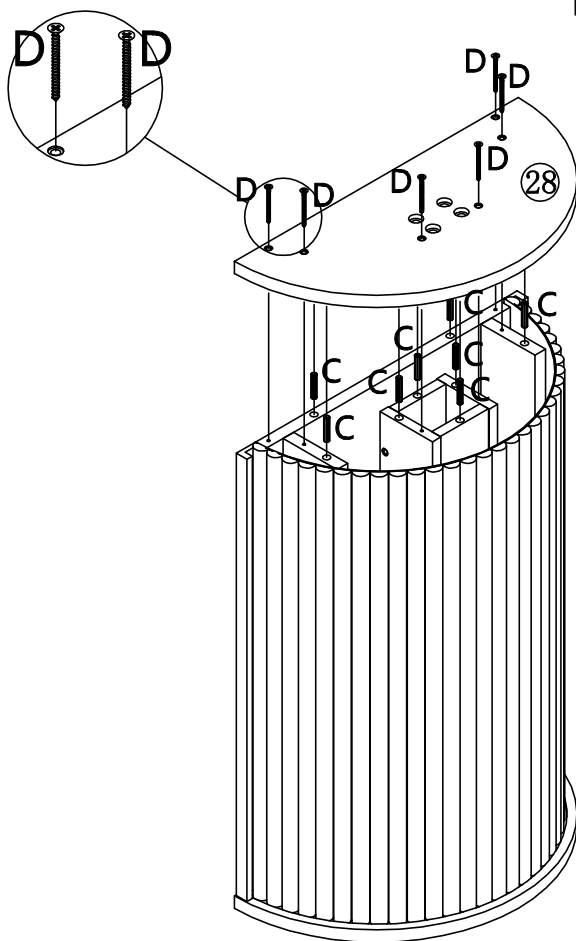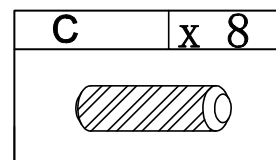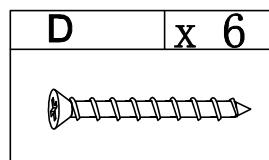







Step 8

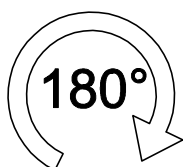





Please note: The side with three holes should face left

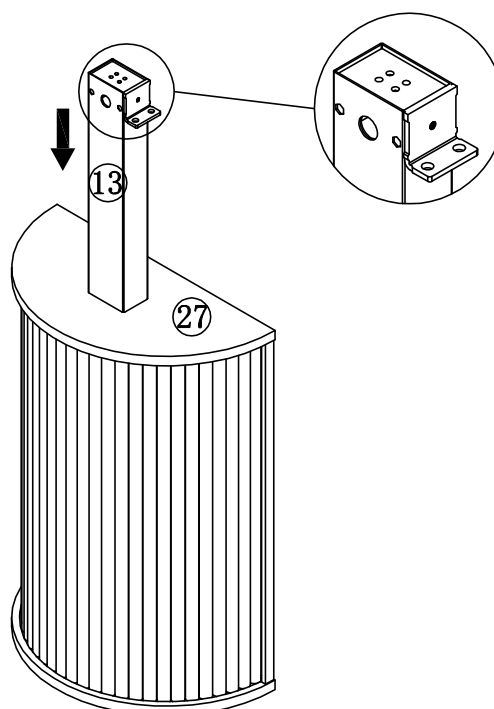

Step 9

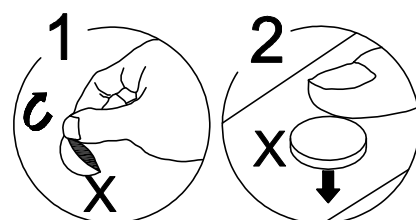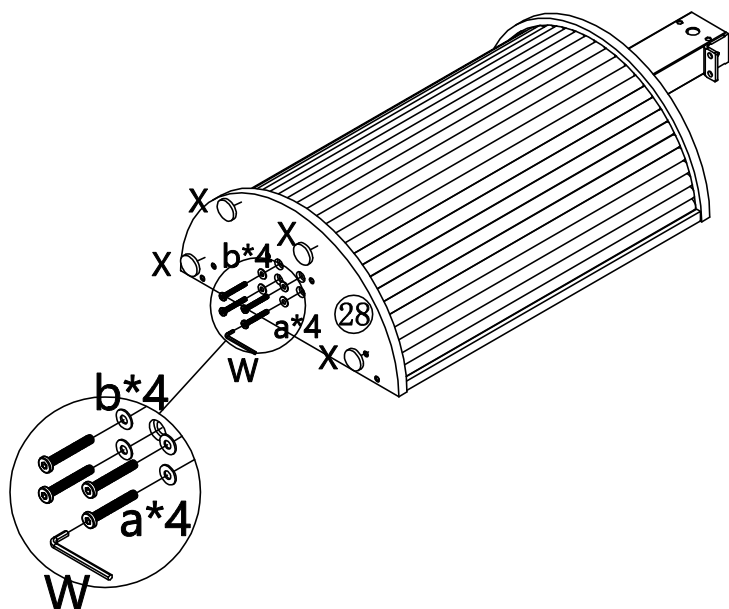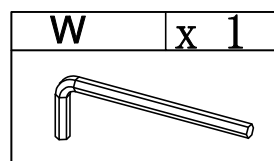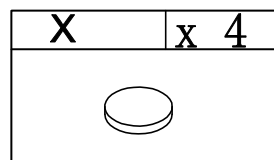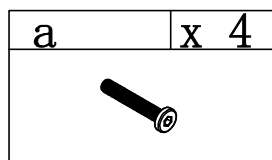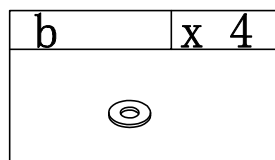




Step 10

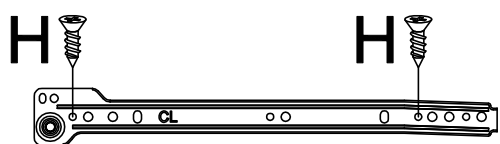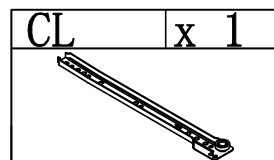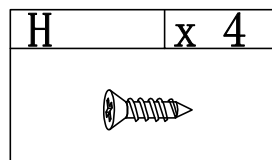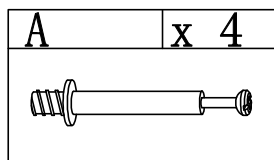









CL









CR

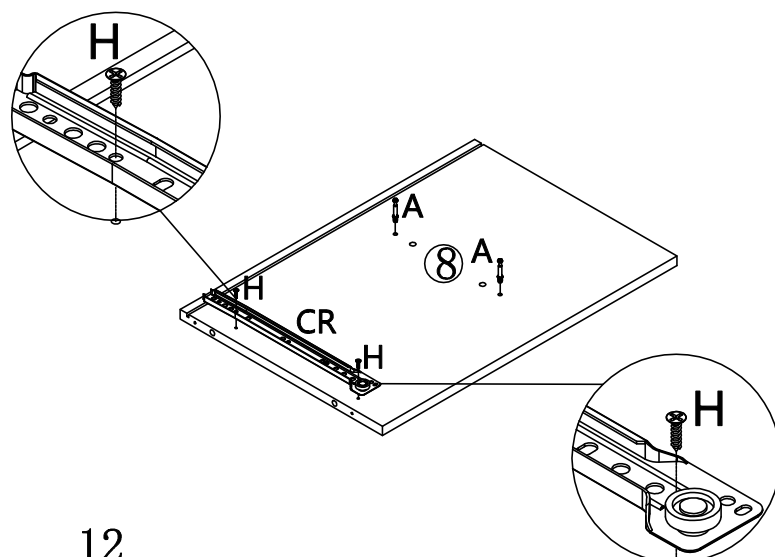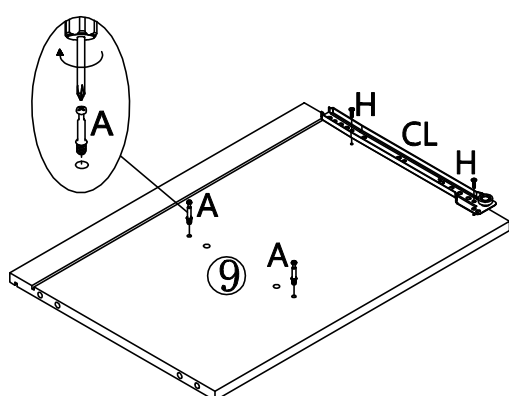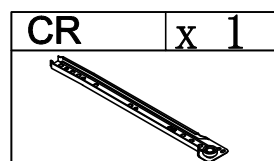

Step 11

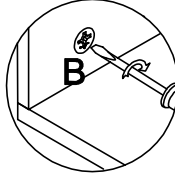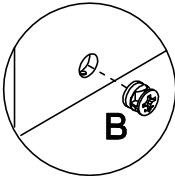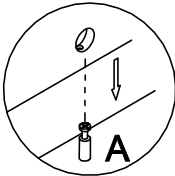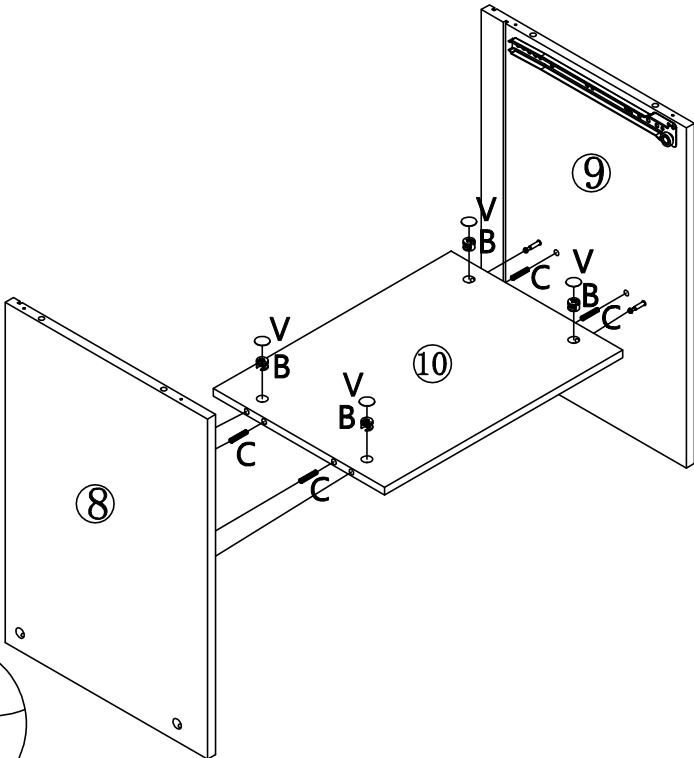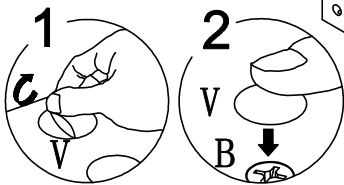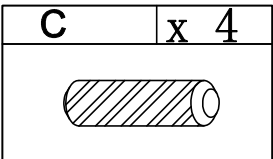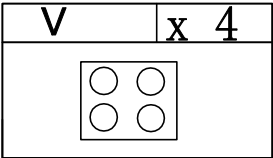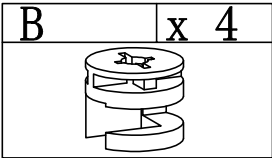


Step 12

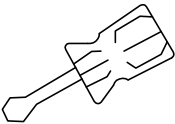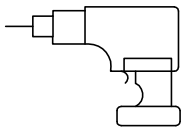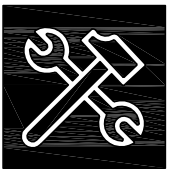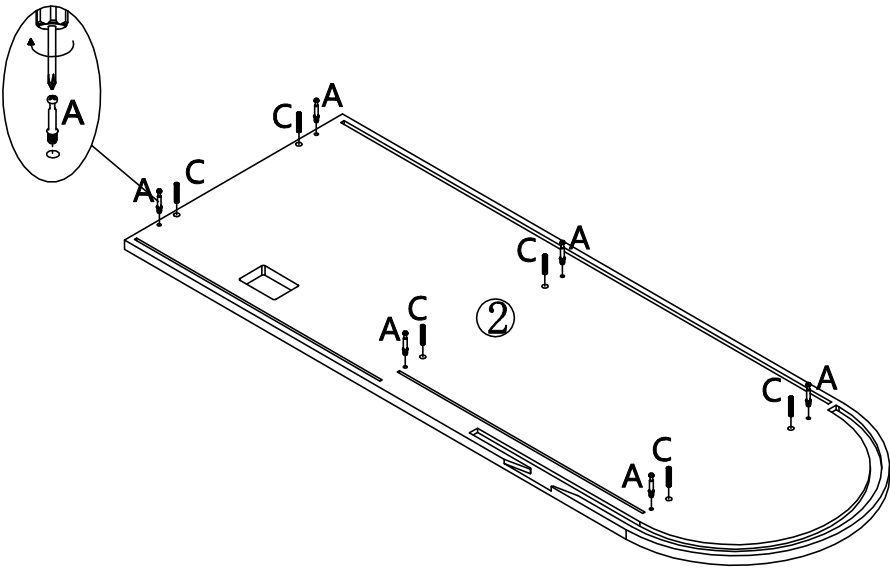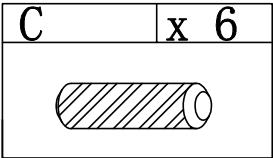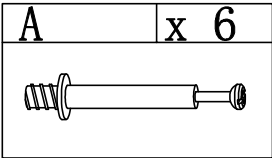


Step 13


B	x 6
	

V	x 6
	

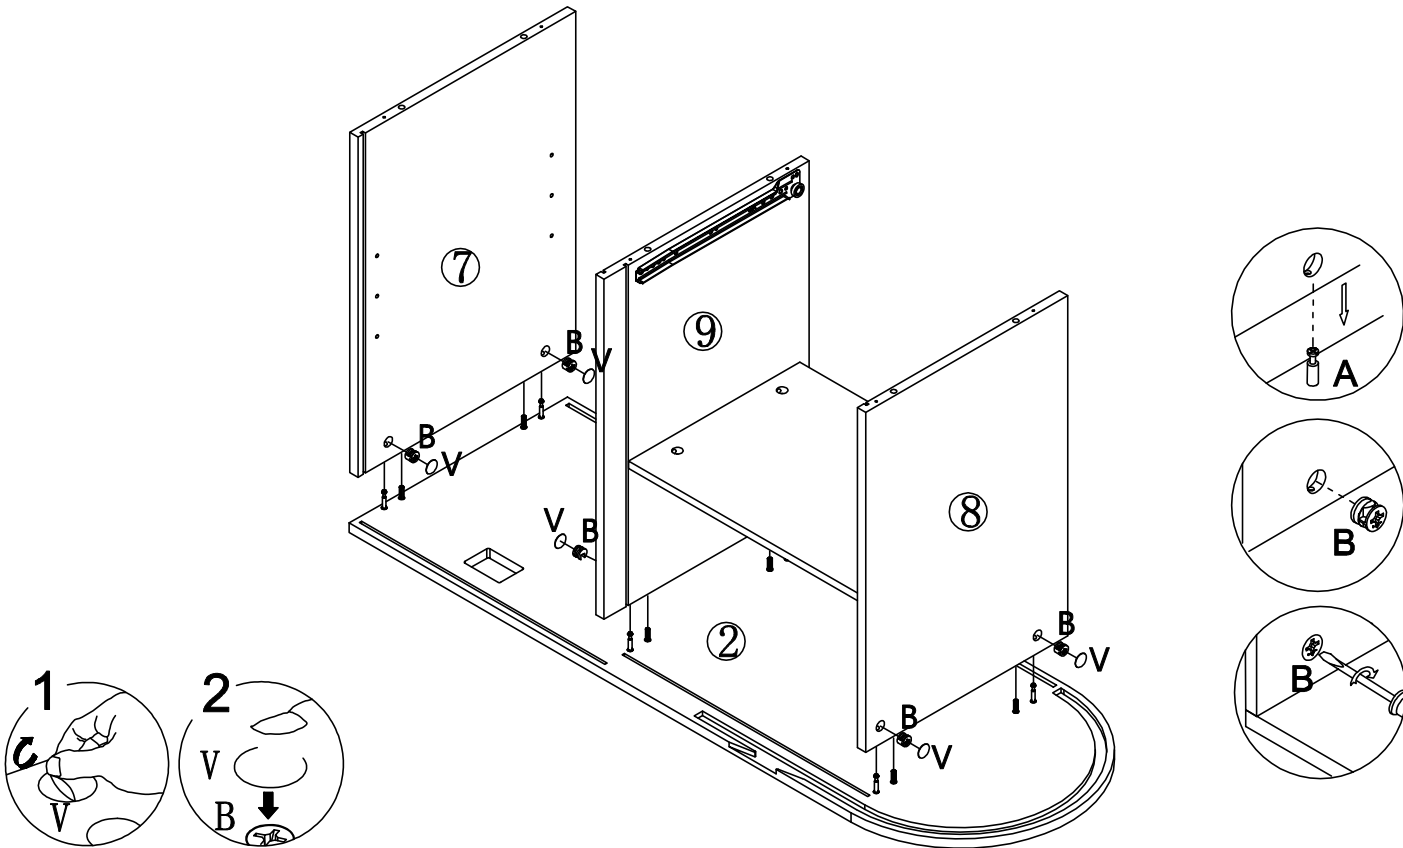



Step 14

C	x 6
	

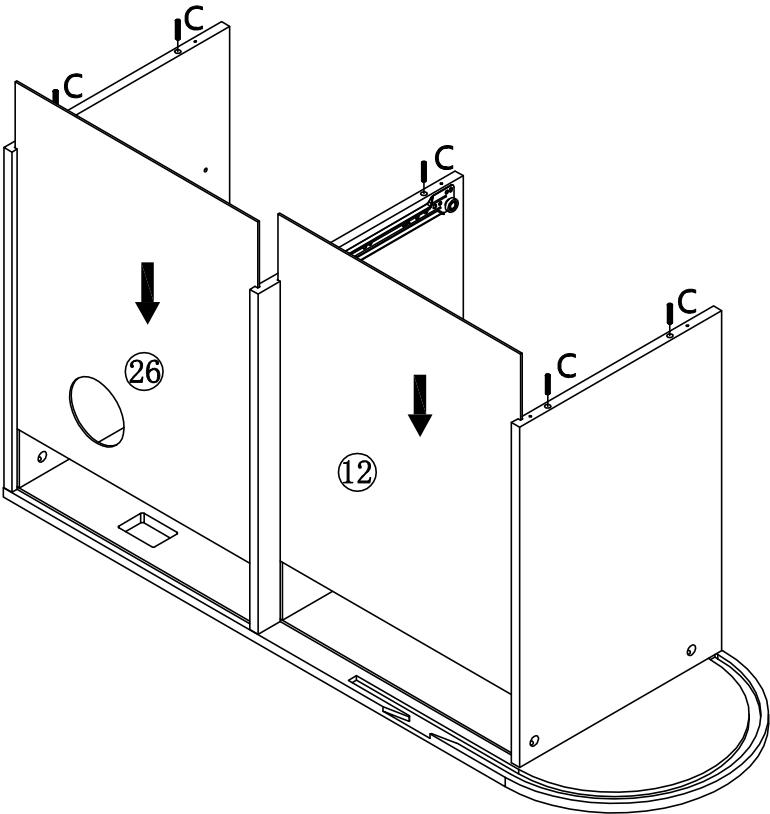


Step 15

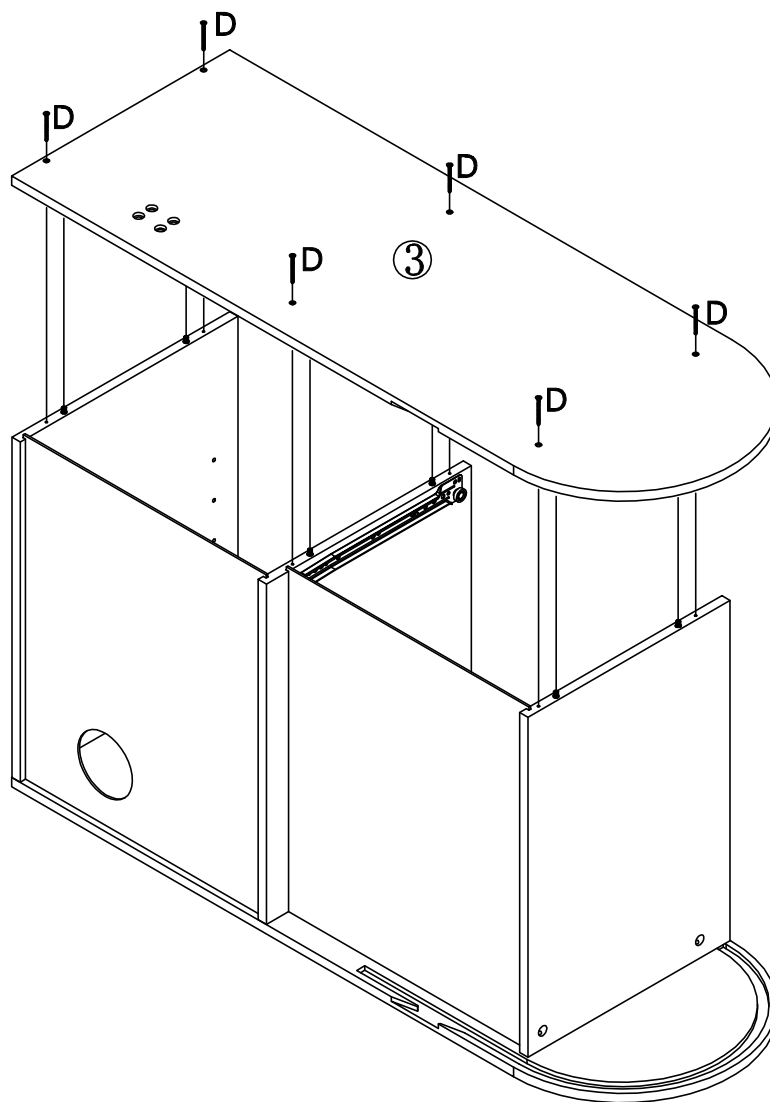

D	x 6
	




Step 16

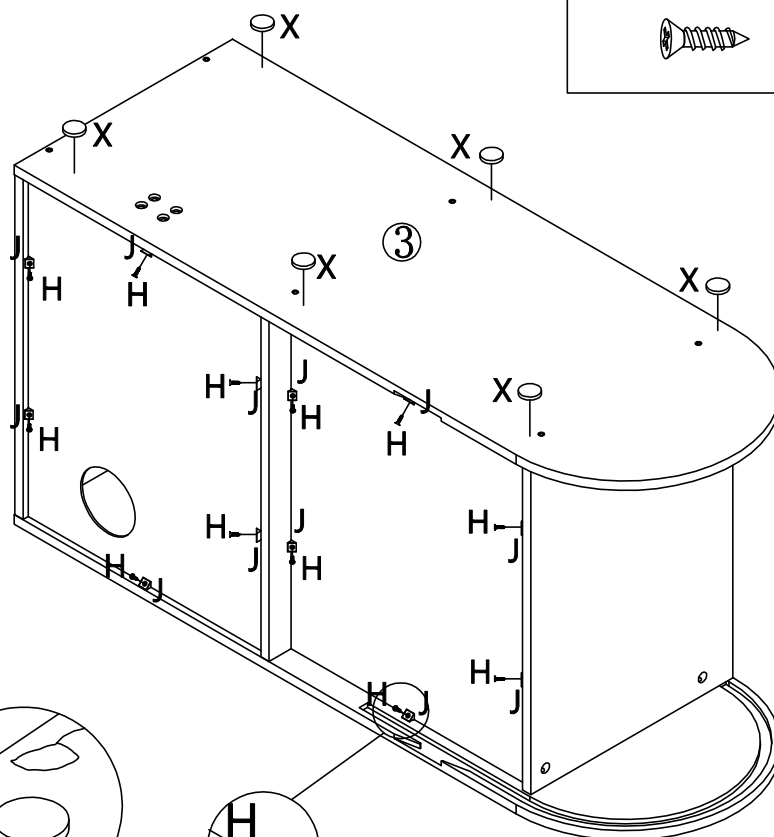



H	x 12
	

J	x 12
	

X	x 6
	

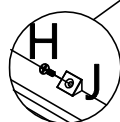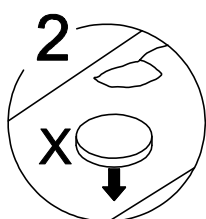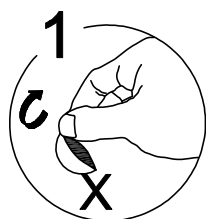

Step 17





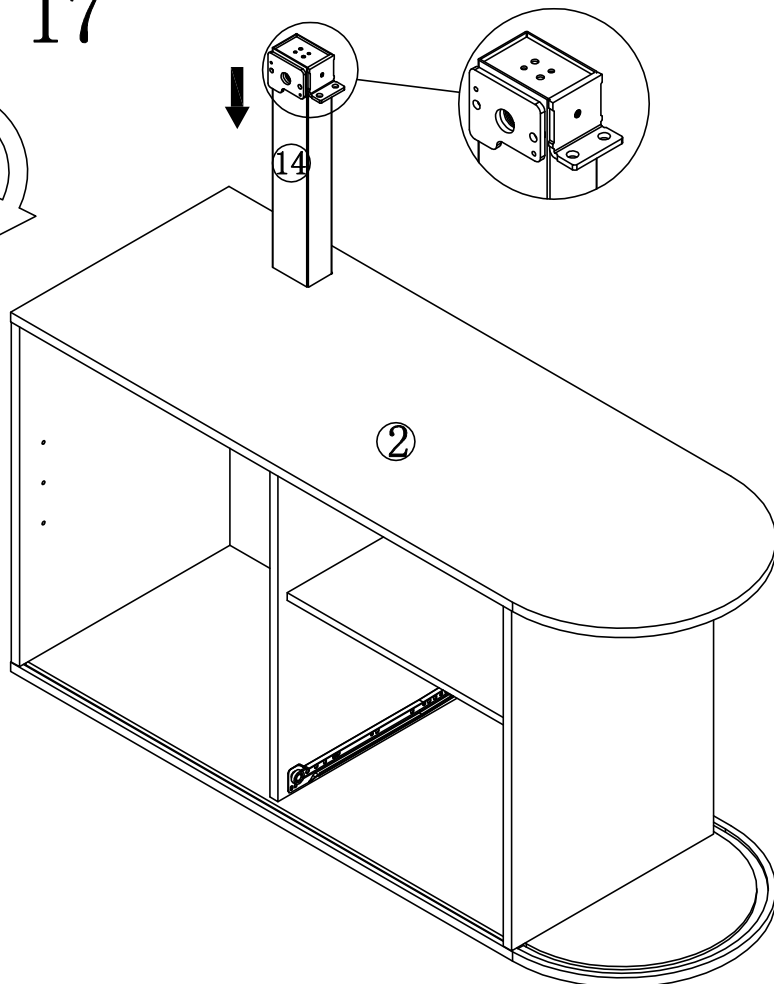
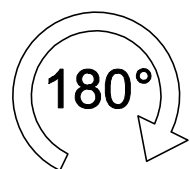


Please note: The side with the iron sheet faces left.





There is a red mark on one side of the 14th accessory. The side with the red mark faces left.

Step 18

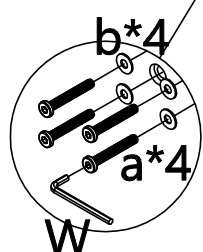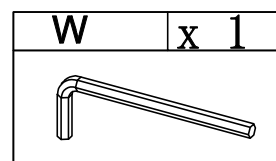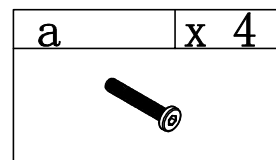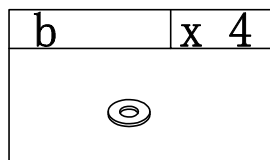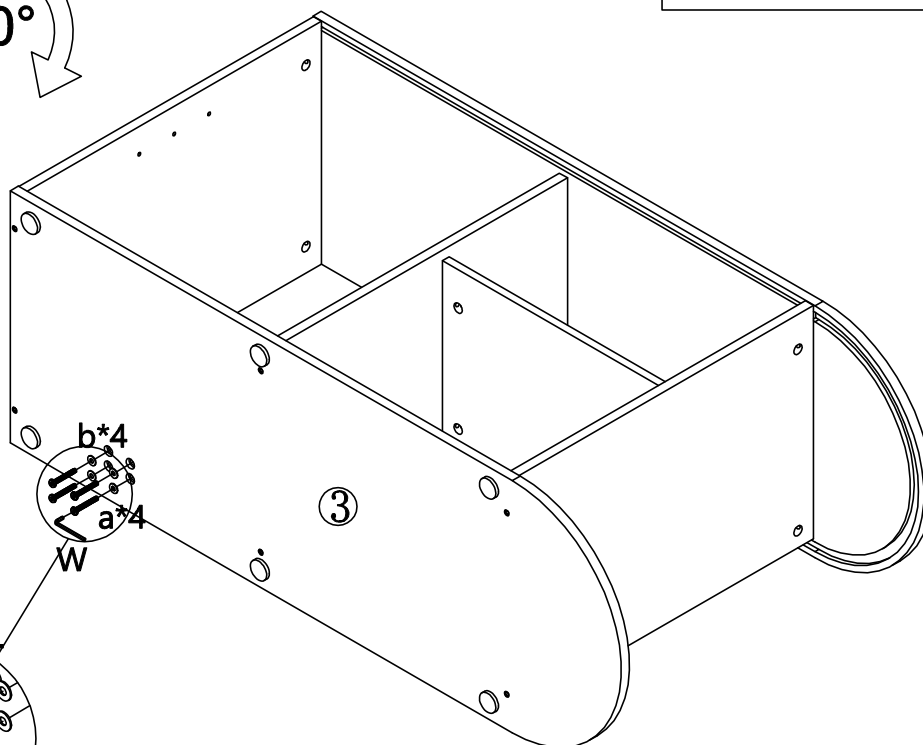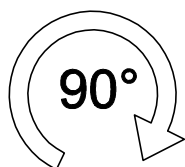


Step 19

U	x 1	Q	x 1
			



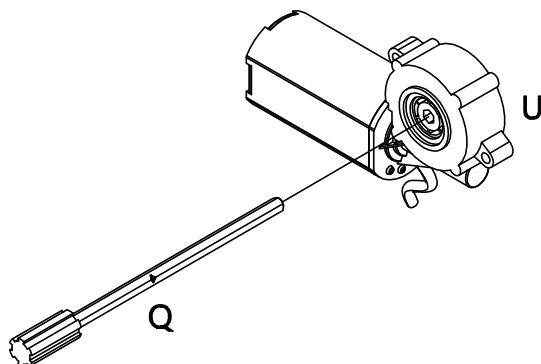


Please insert the iron rod of the U component into the round hole of the Q component until this bump snaps into place.

Step 20

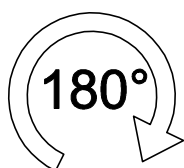


O	x 2	T	x 1	P	x 2
					

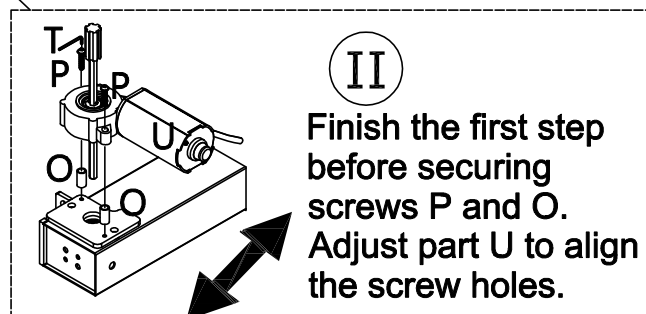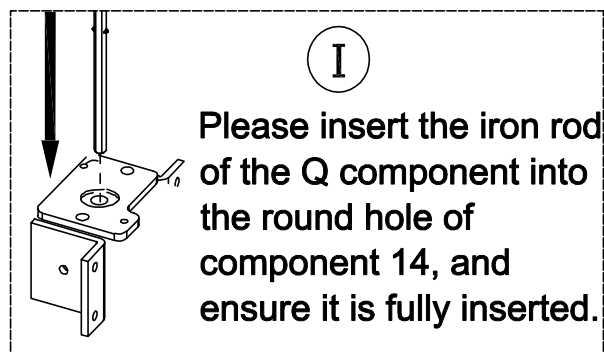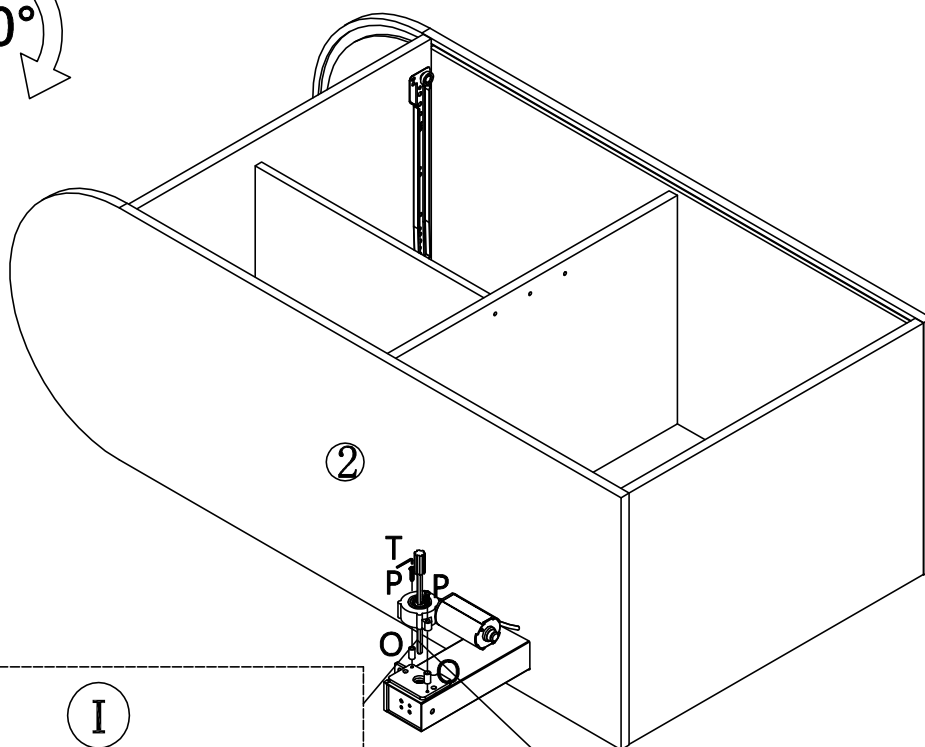


Step 21











c	x 4
	

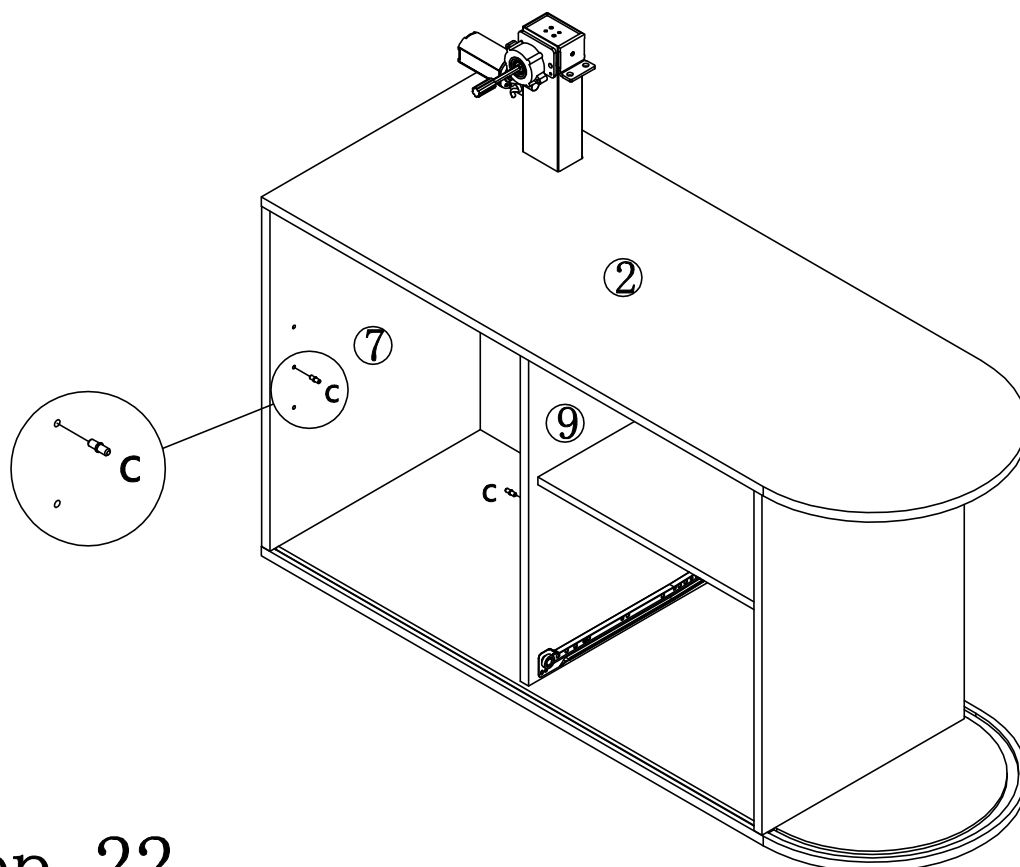







Step 22

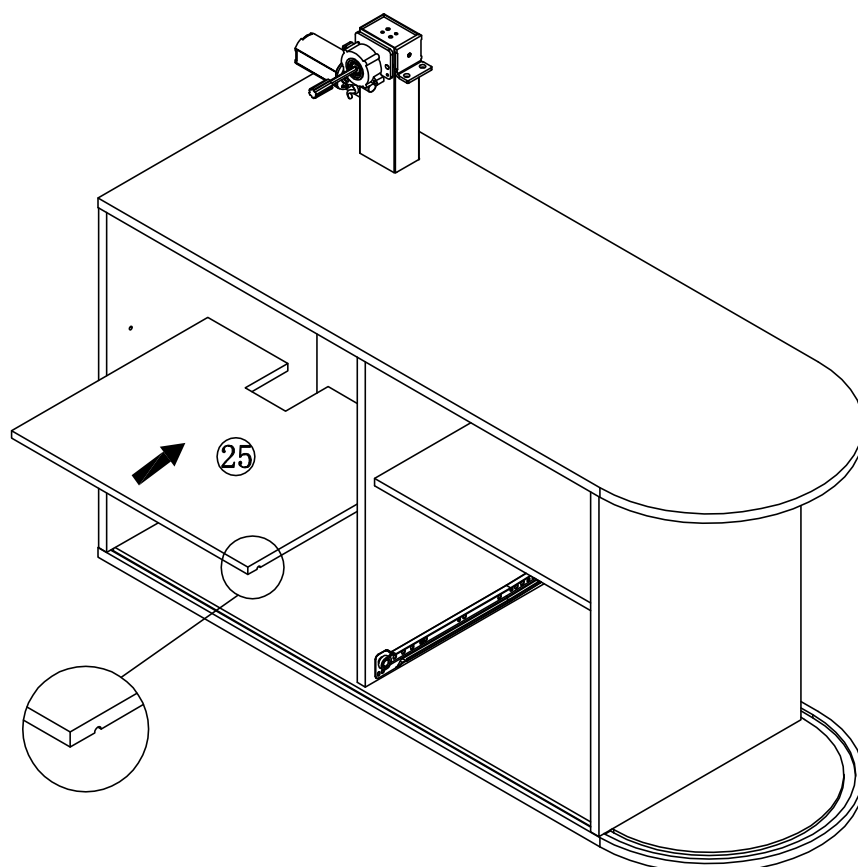





Step 23

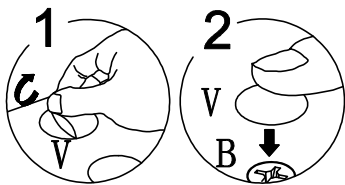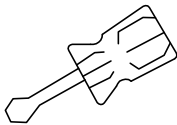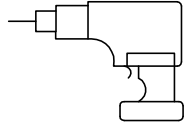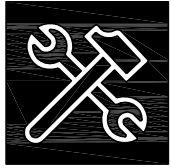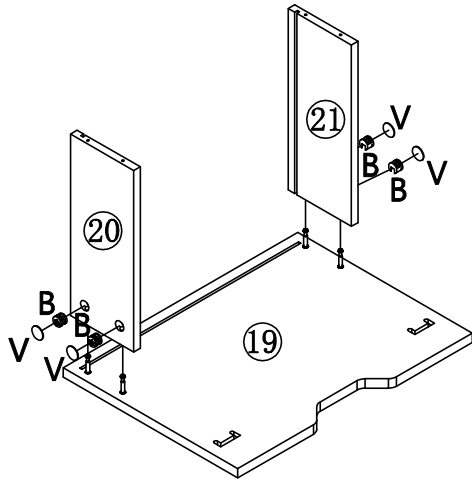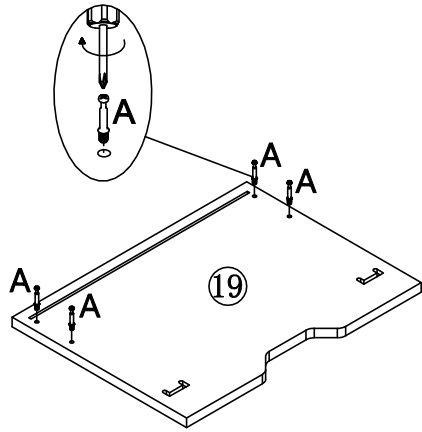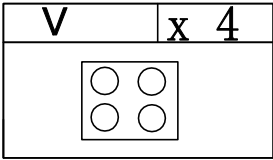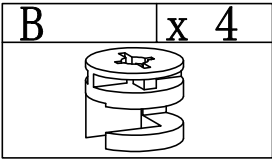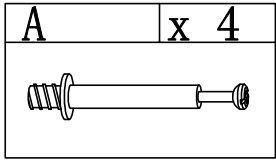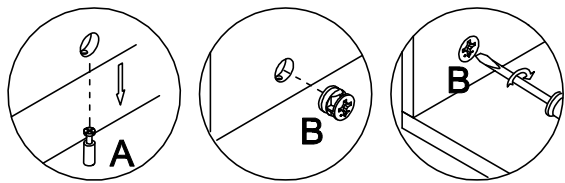


Step 24

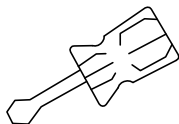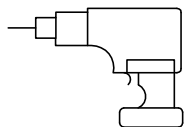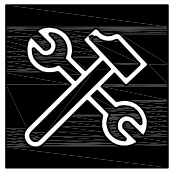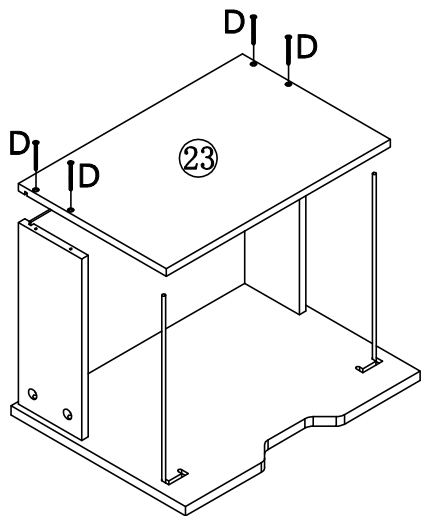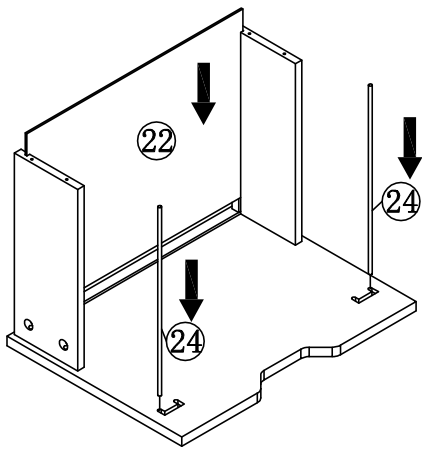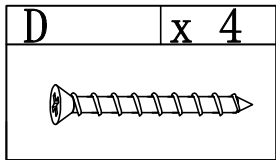






Step 25

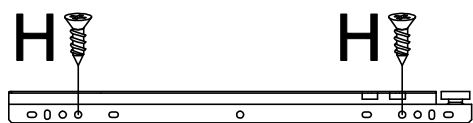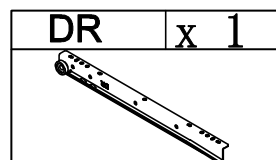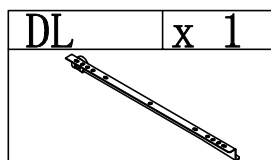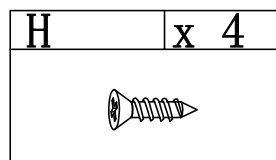

DL

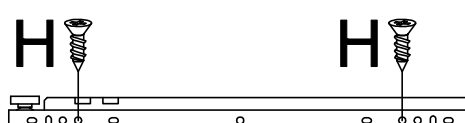



DR

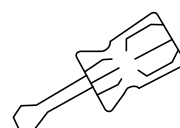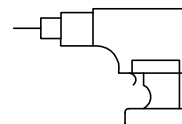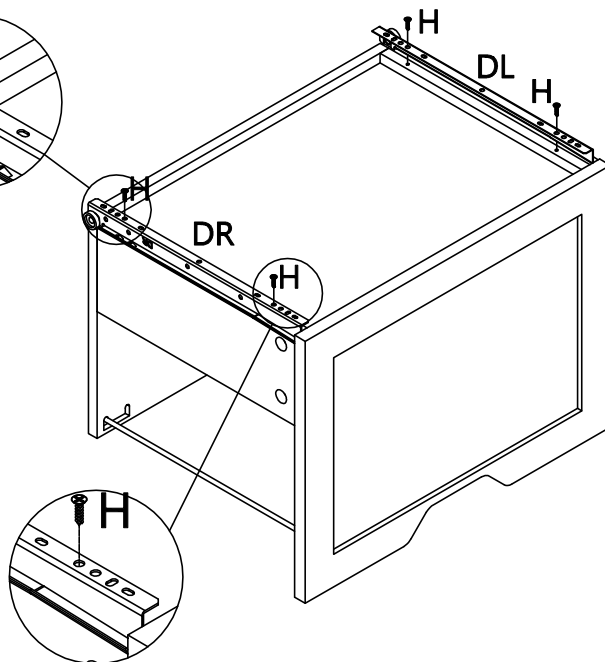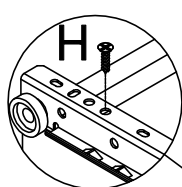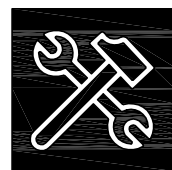



Step 26



The 24th type of steel bar can be adjusted according to the size of the folder.

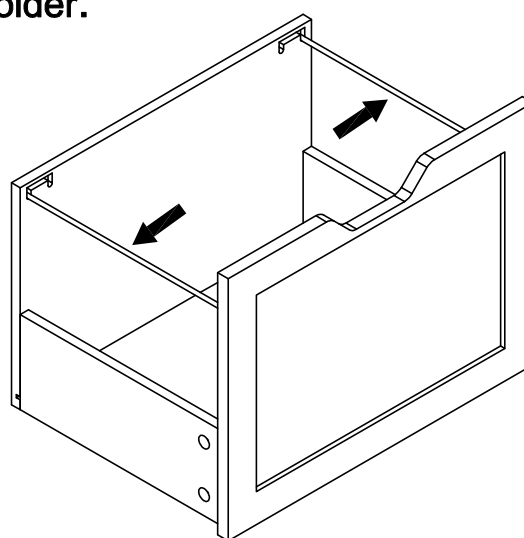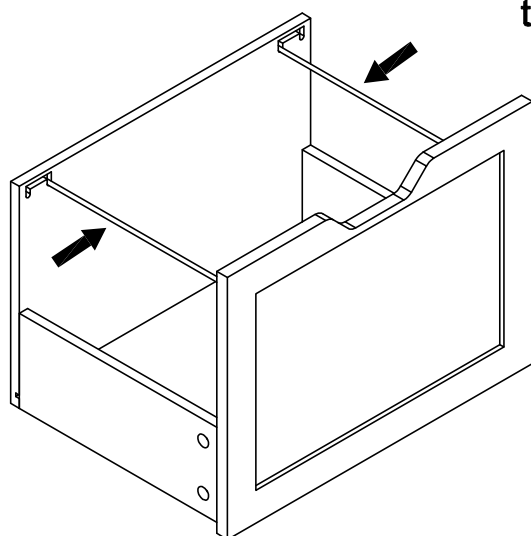

Step 27

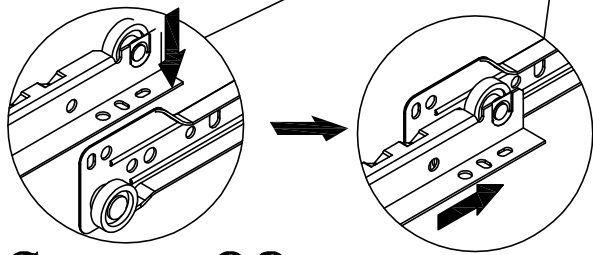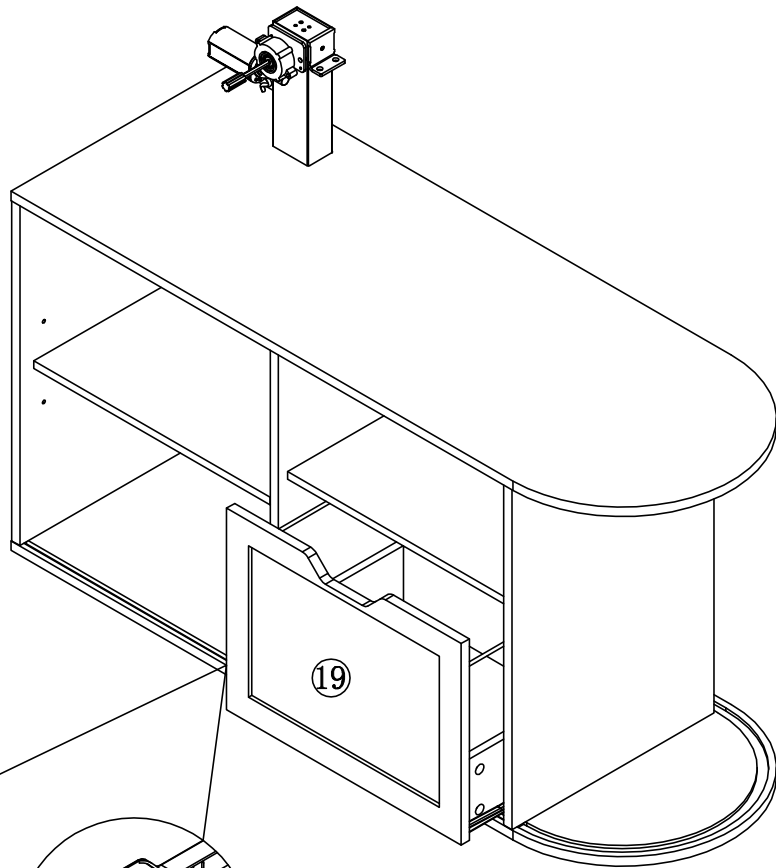

Step 28








H	x 4

I	x 2


F	x 2

Y	x 4


Z	x 2

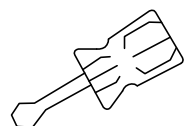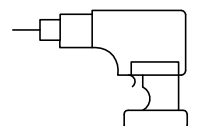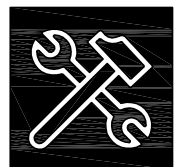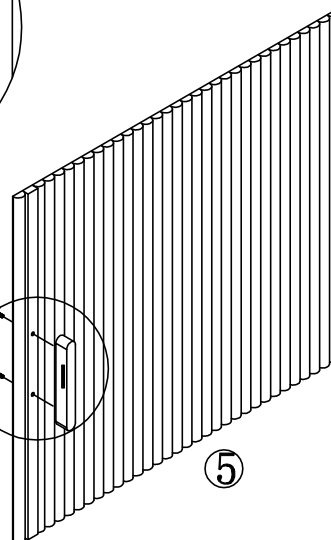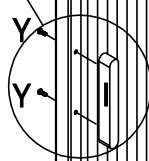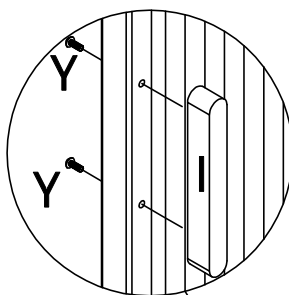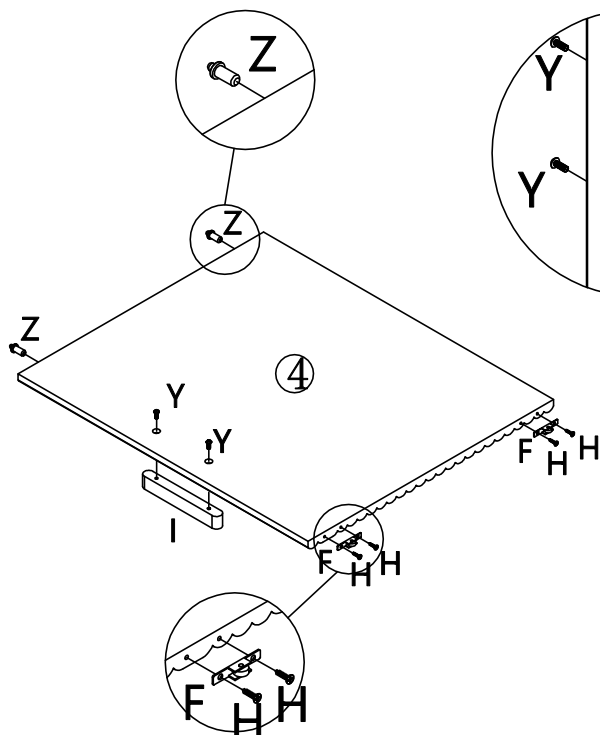

Step 29

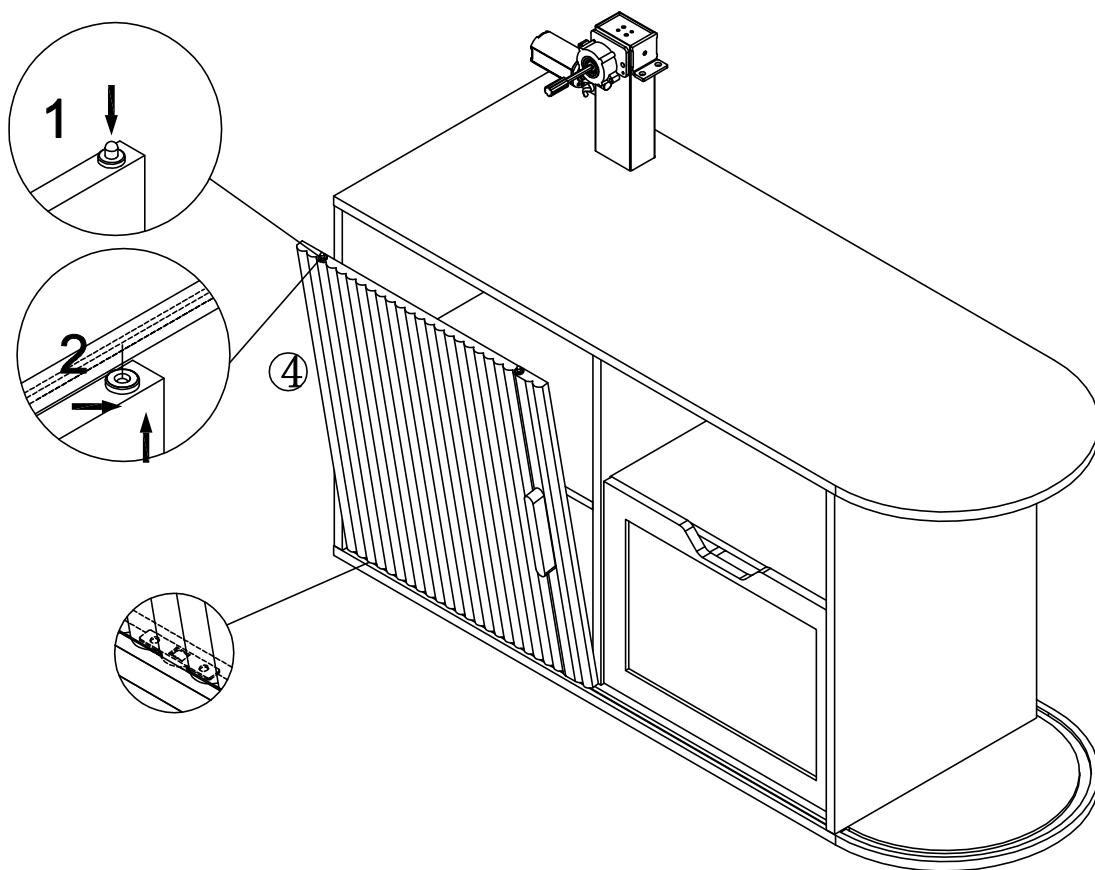

Step 30

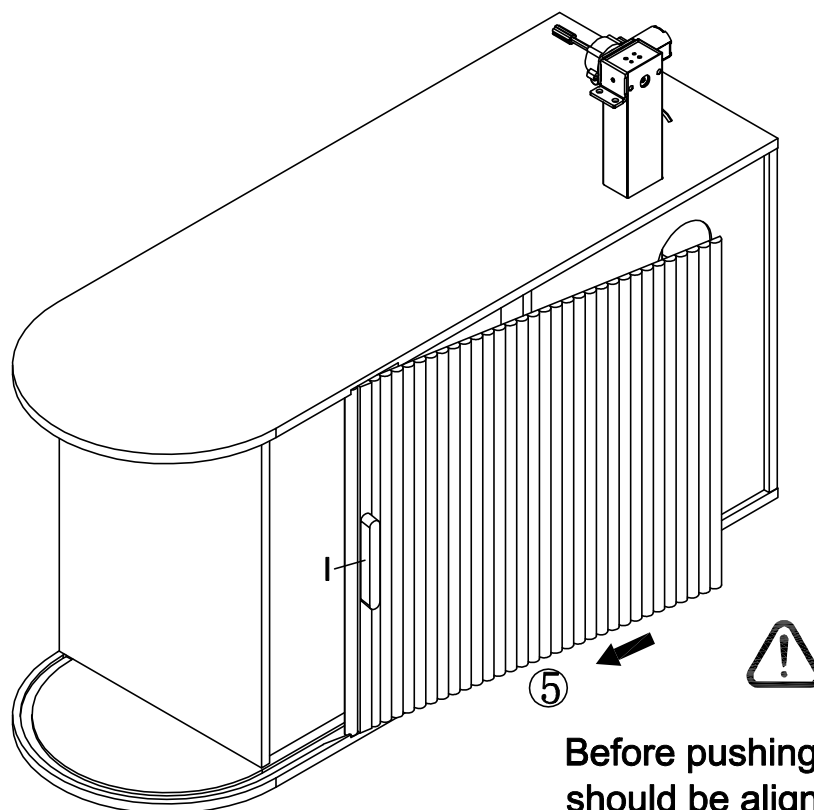


Step 31

L	x 4
	

W	x 1
	



The end of the iron pipe in the middle of the No. 6 frame with a pull cap is pointing downwards.

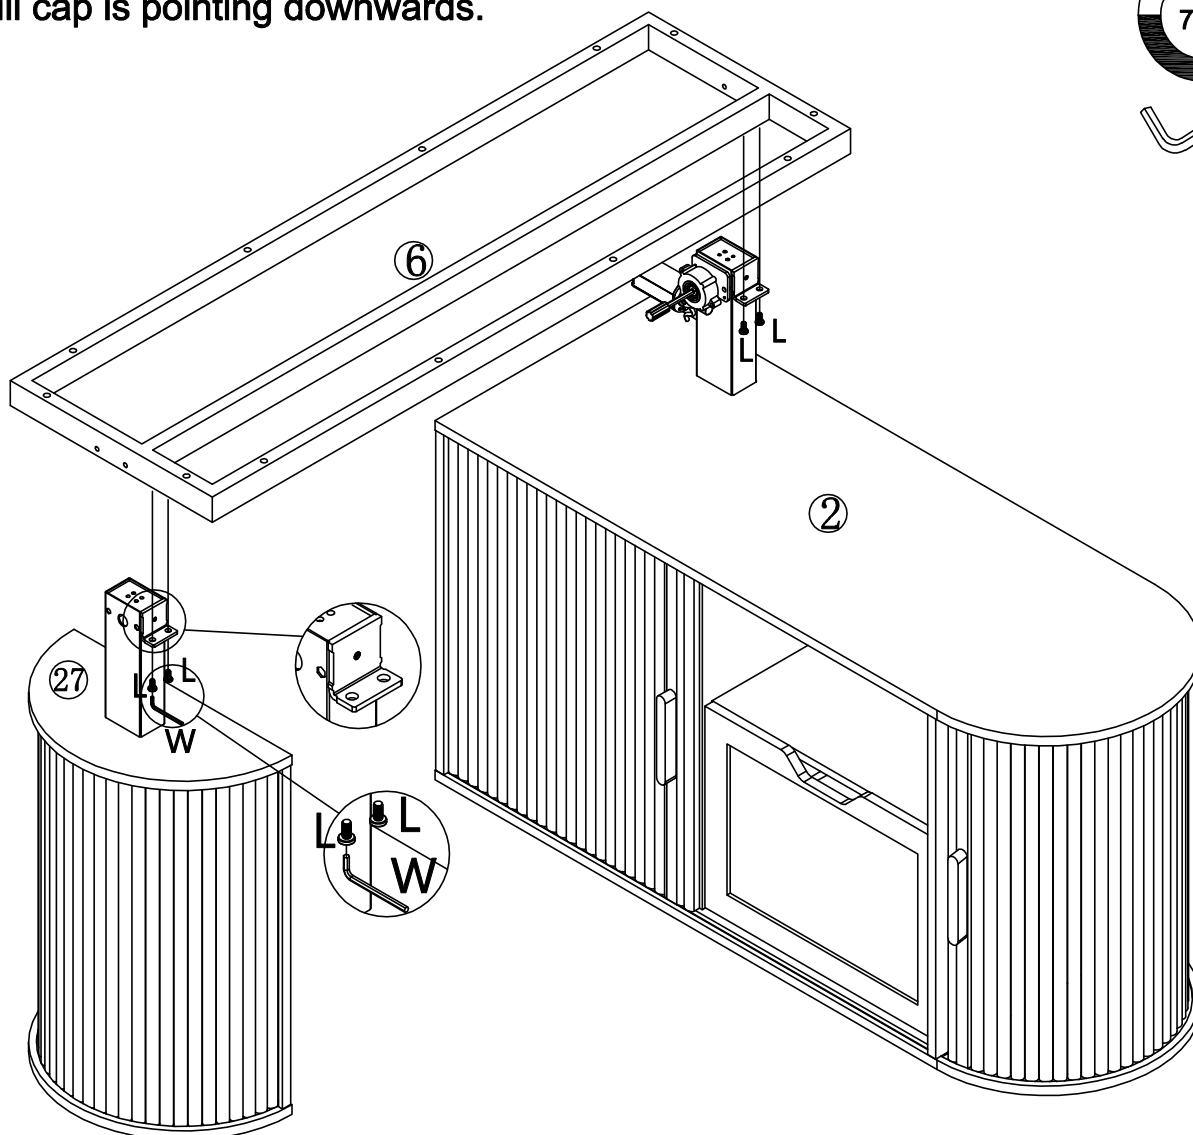


Step 32


b	x 4
	

N	x 4
	


W	x 1
	

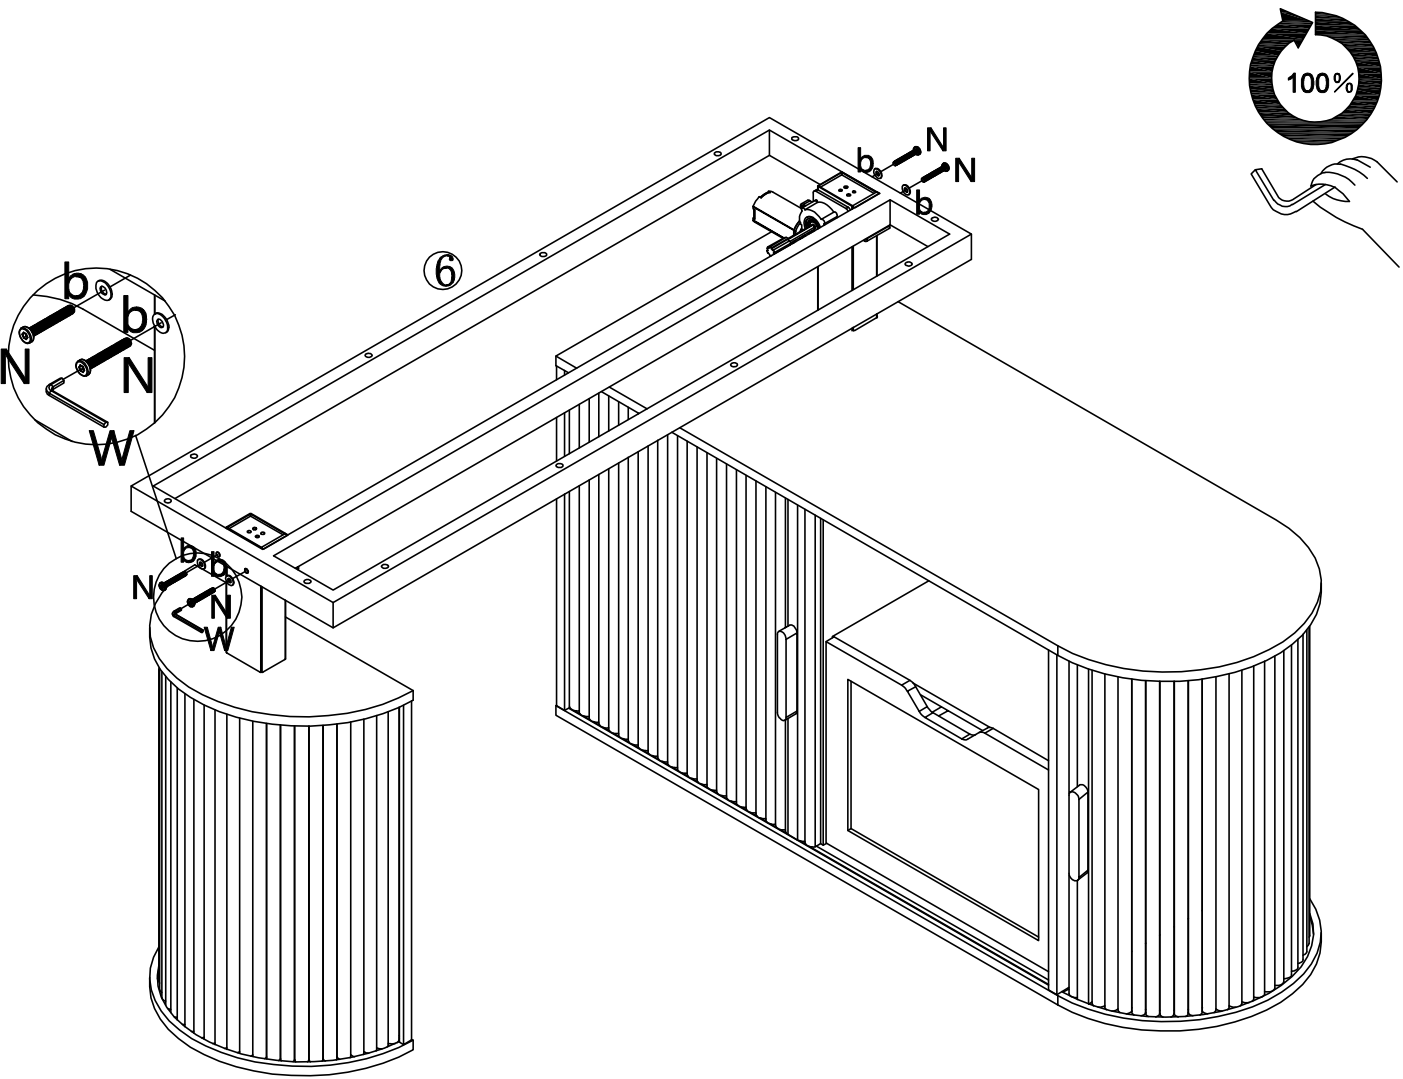

Step 33

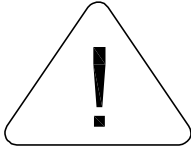

Please note: When assembling this step, be careful not to let the assembled Step 19 loosen. Keep the tabs snapped into place.

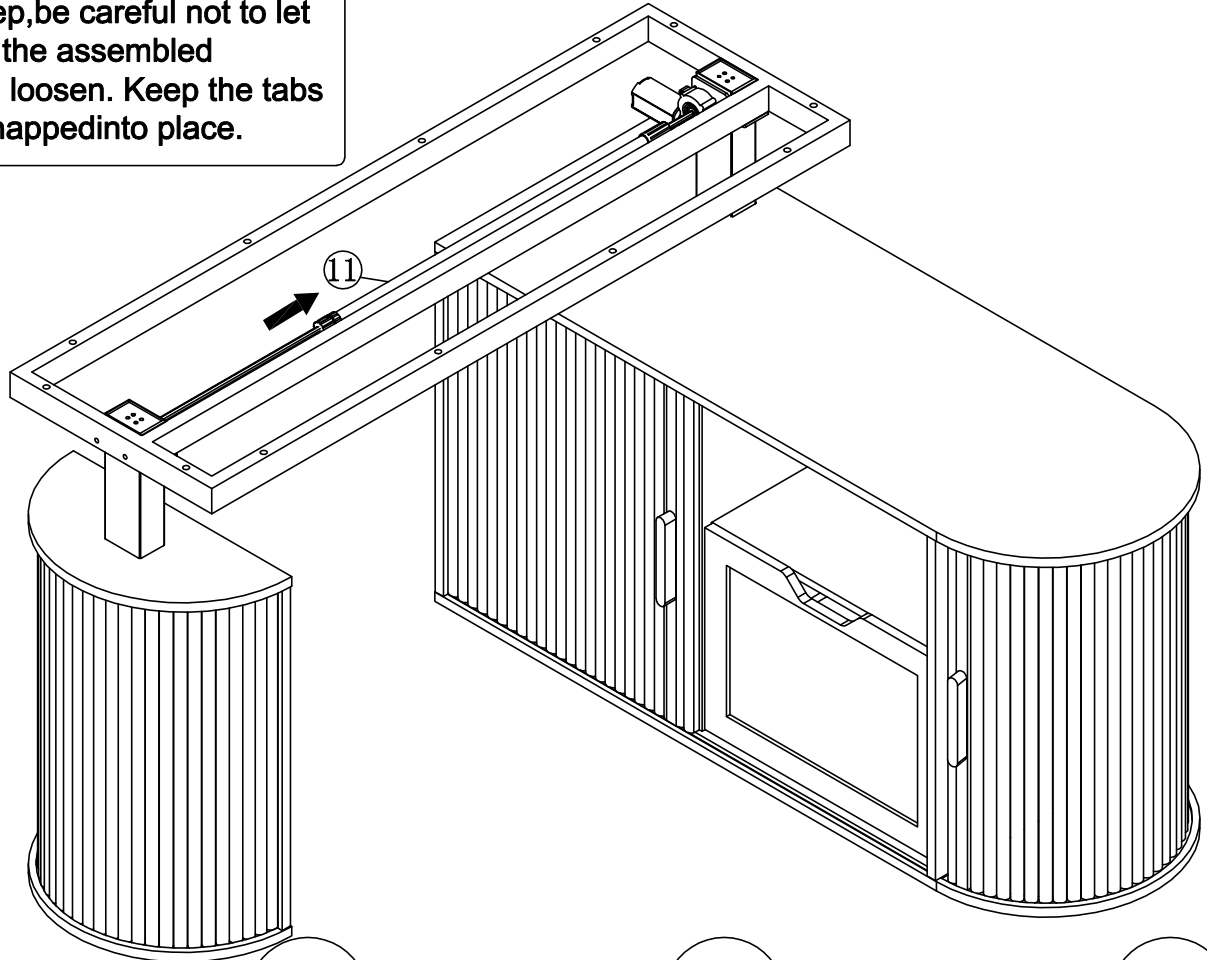

I

Loosen the plastic 11 fitting as shown in the illustration

II






Connect bearing 11 to the table leg without the motor, making sure it snaps into place at the bottom.

III


Align the bearing on the other side. Note: If you find the bearings are misaligned, you can slightly rotate the bearing on the non-motorized leg to adjust the alignment. Avoid over rotating, as this may cause the desktop to become uneven.


IV

Tighten the plastic joint as shown in the picture

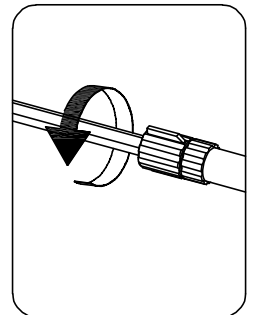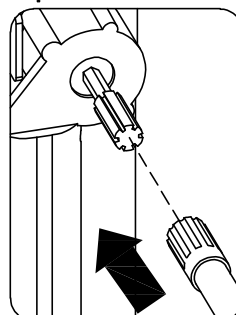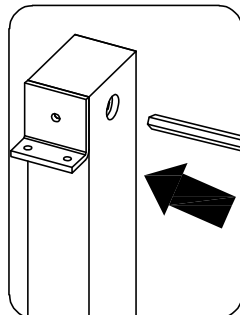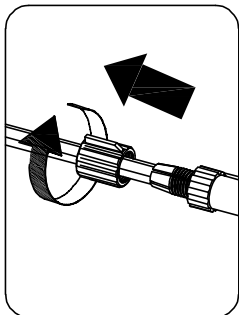


Step 34

S	x	1	R	x	1
					

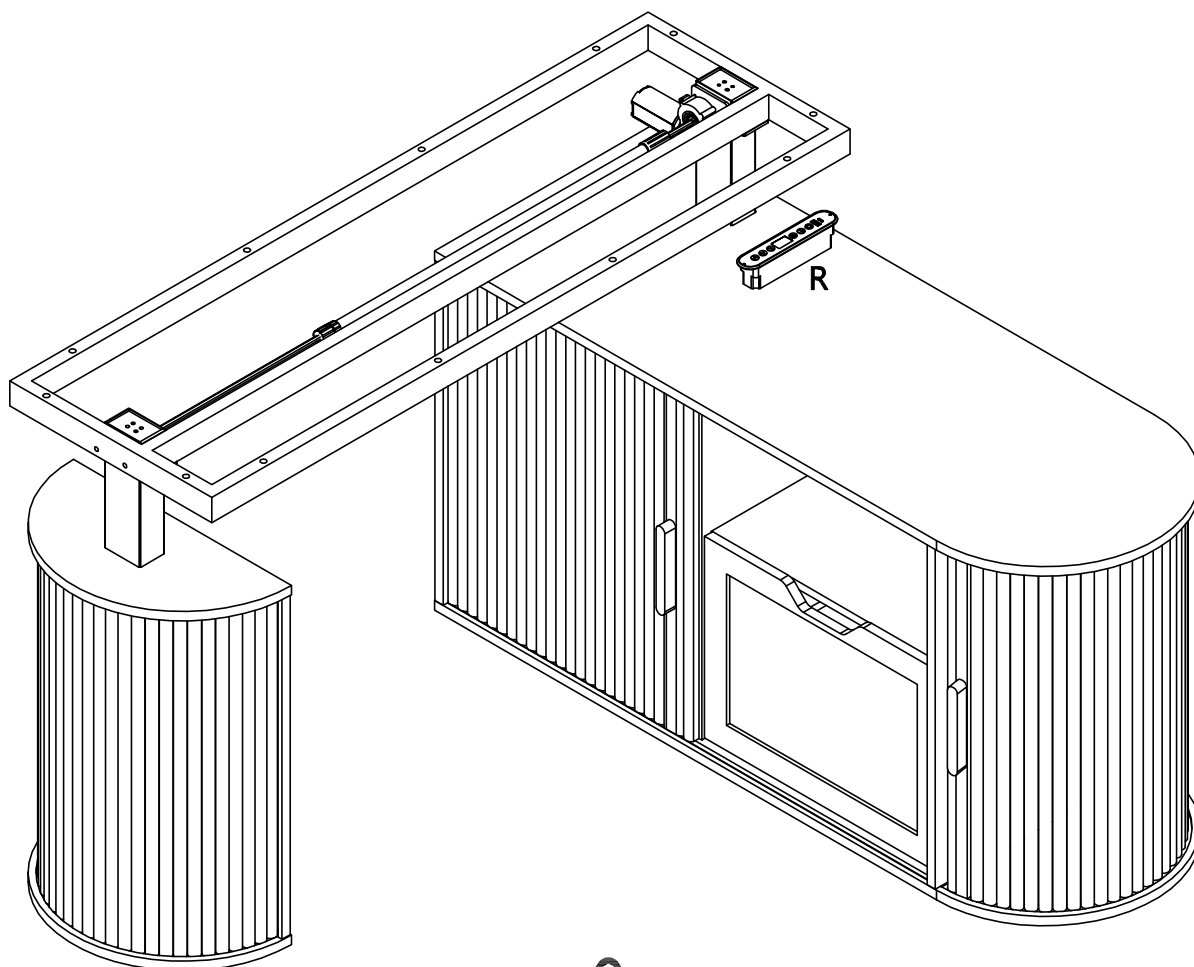



Please connect the wires of controller R first, so that the No. 1 board can be raised.

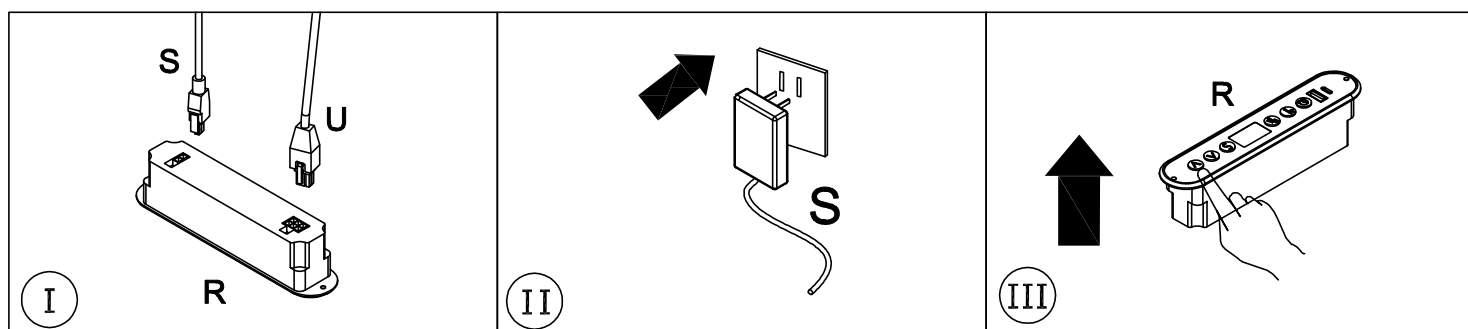

Step 35

M	x 12
	





W	x 1
	

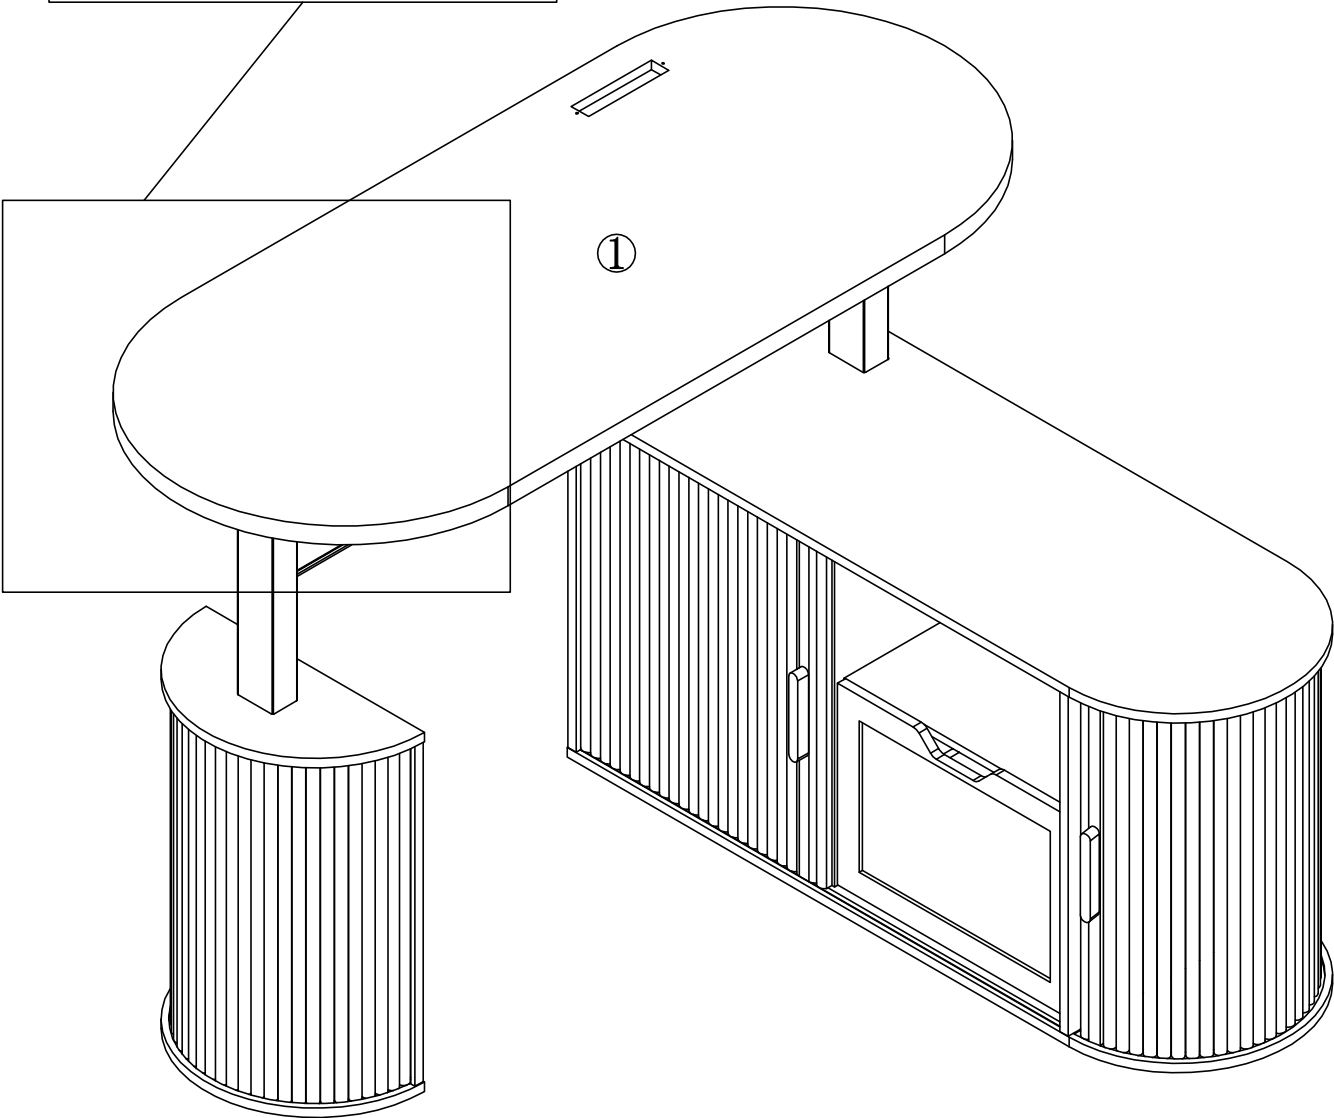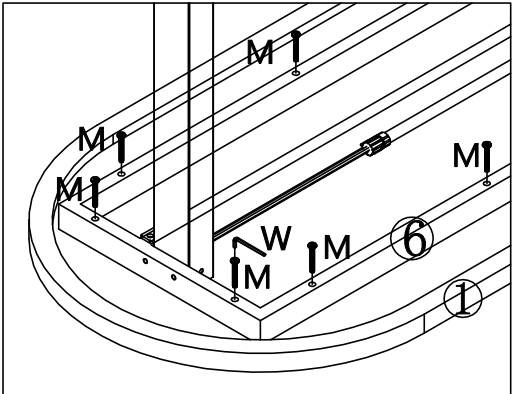

Step 36




There is only one controller R. The front part is used merely to raise the desktop, making it easier to install.

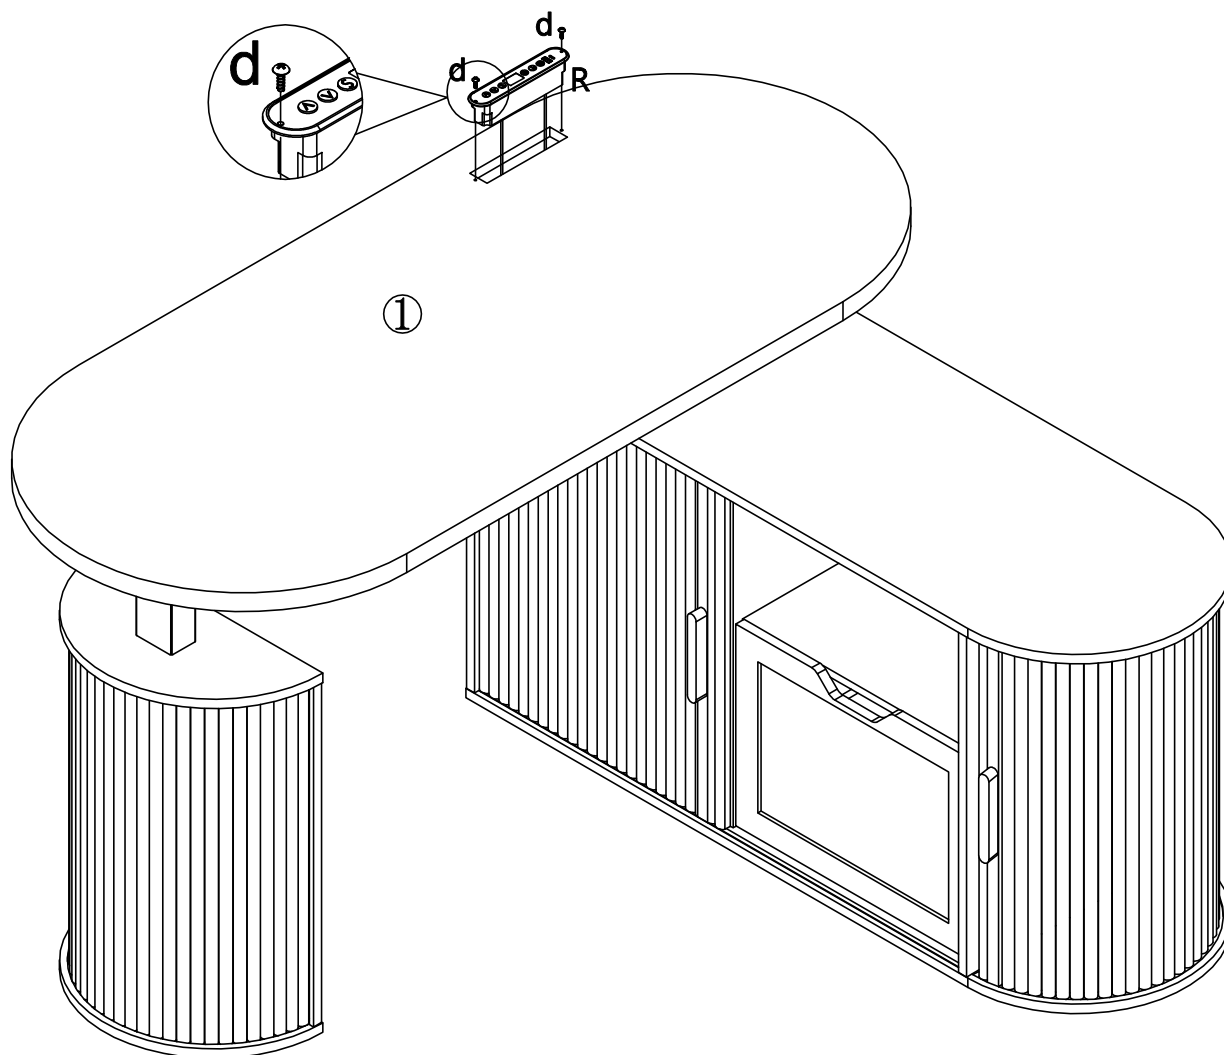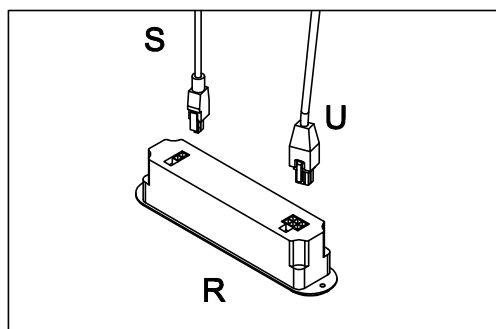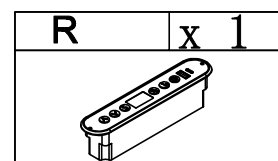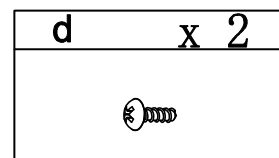


First, remove the wire of controller R. Then, install controller R on the 1st board and connect the wire afterwards.



Step 37

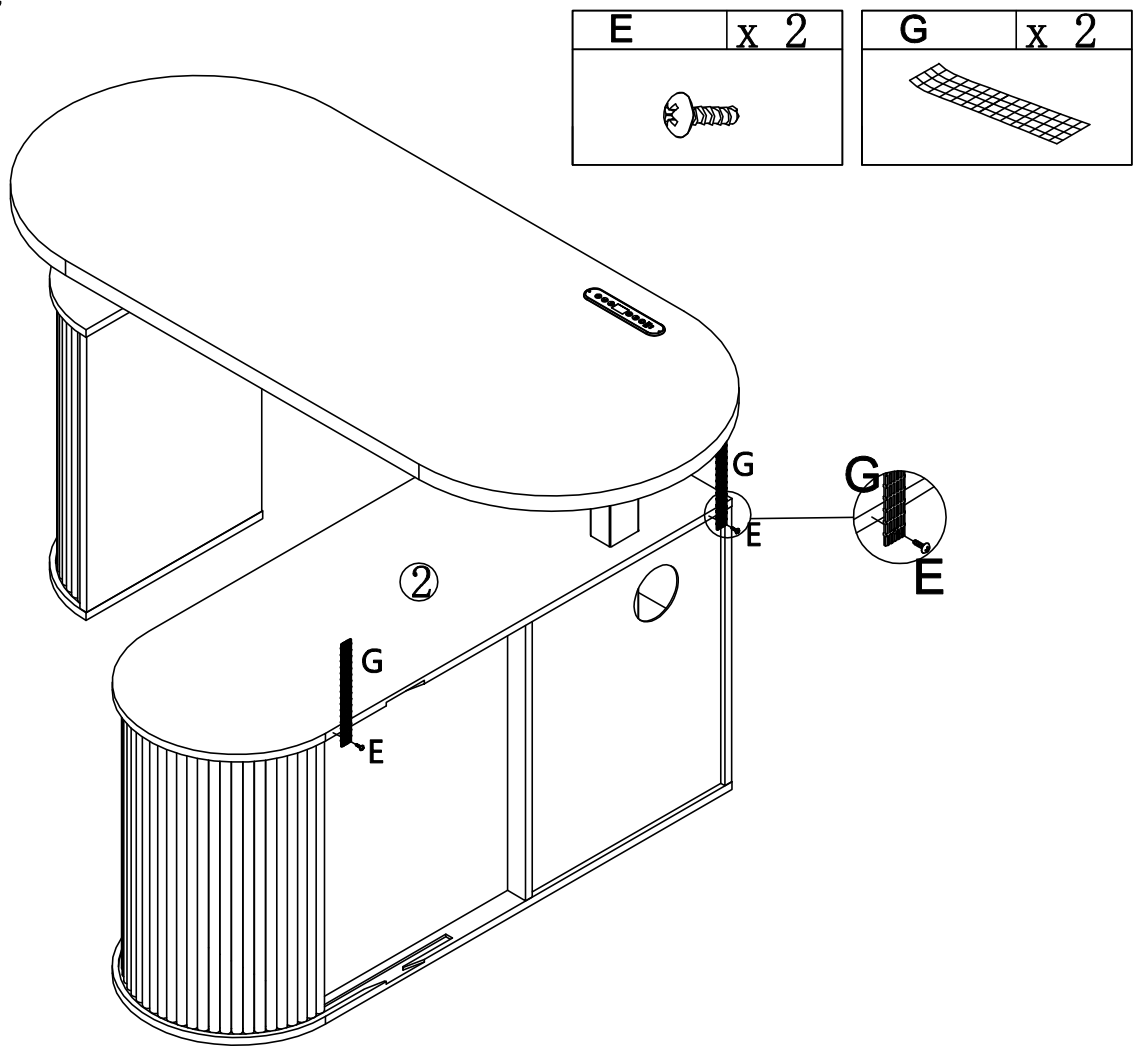

Step 38

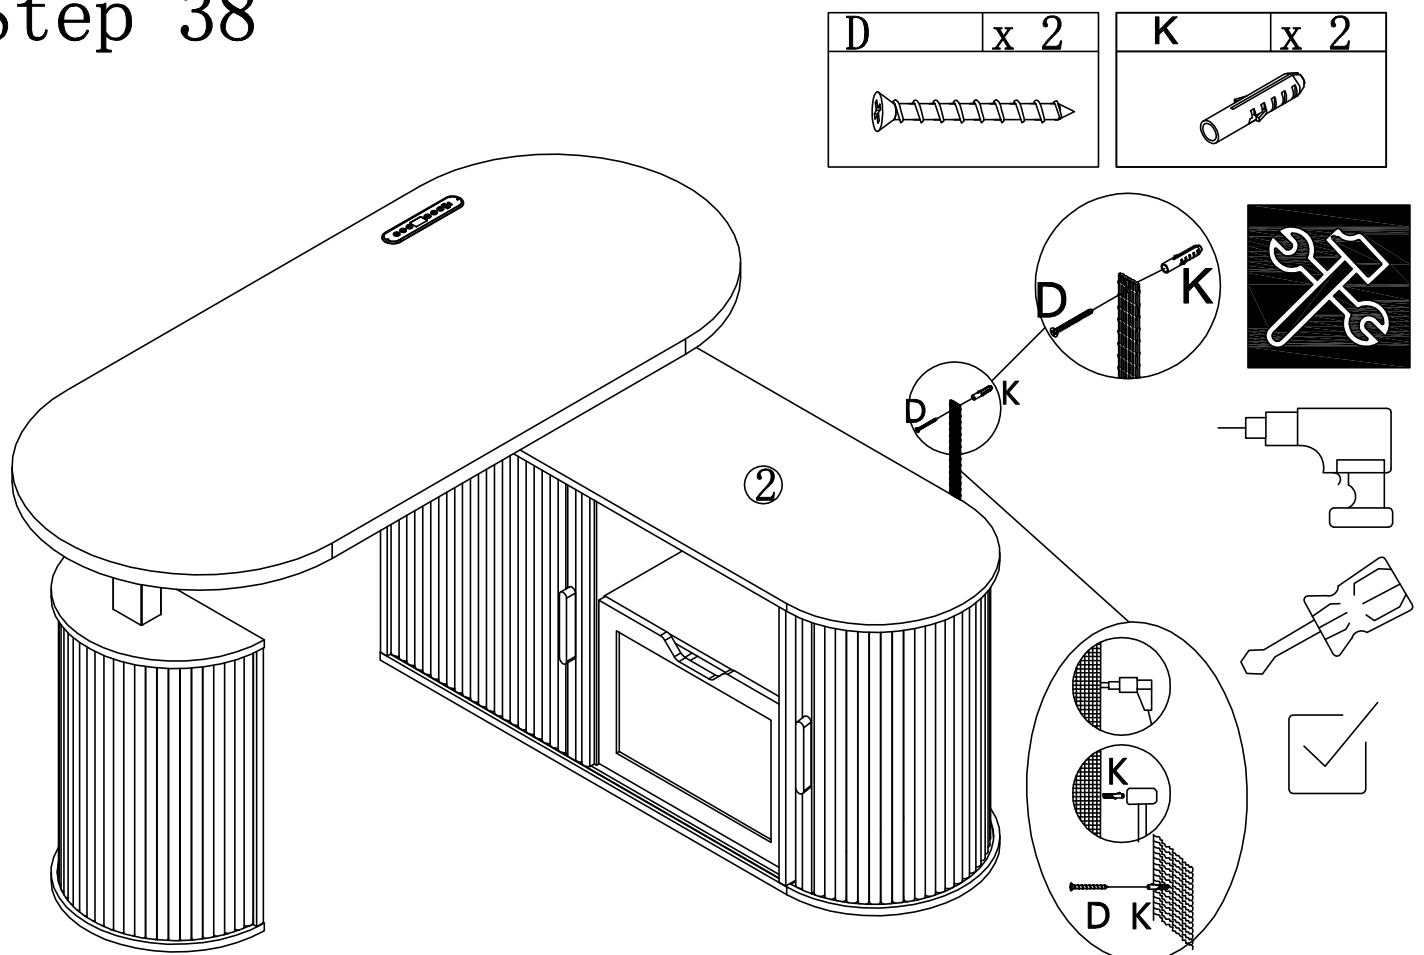

Step 39

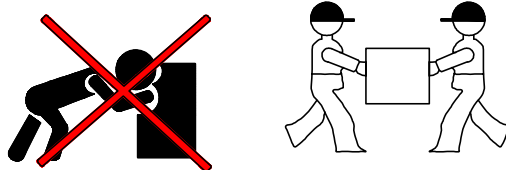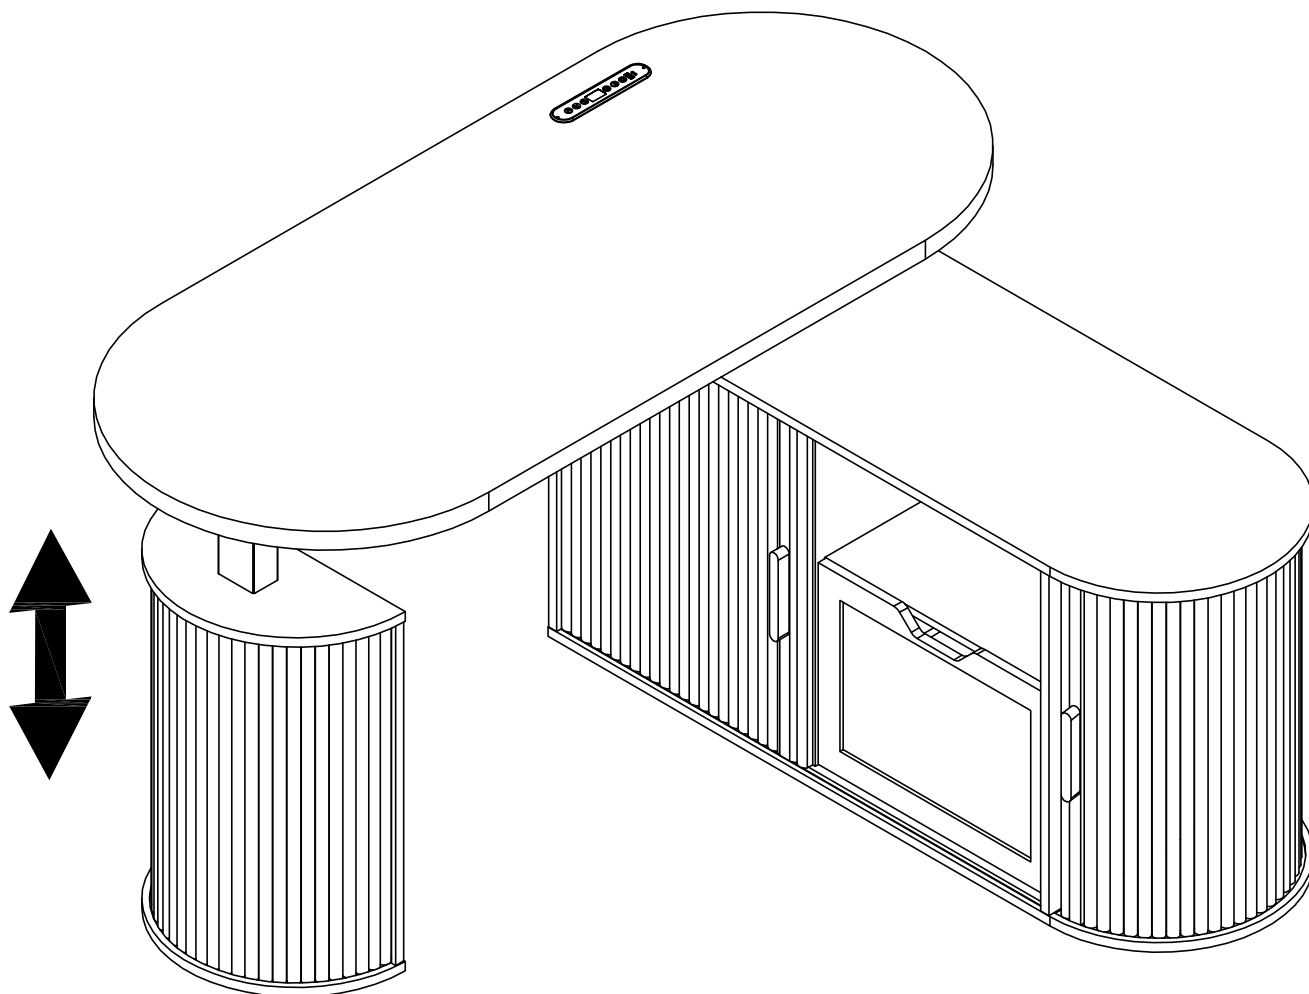

Two people work together to move the table.
Make sure you lift it off the ground.
Don't push and pull.

Functional Description of the Embedded Elevating Table Controller



Height-adjustable table

Up arrow key Down arrow key Reset key Display space Seated position Standing posture Alarm clock Charging port

Model: Function Description (Single Motor)

reset operation

Hold down the "V" key and wait for the controller display area to flash "RST"; then release the key to enter reset mode. The desktop will automatically descend to its lowest position and display the current height, completing the reset process.

Run the operation up

Press the "Λ " key to raise the desktop.

Run operation in reverse

Press the "V" key to lower the desktop.

Position Storage Operation

Posture: Move to the desired position and hold the " button. The key. The display area shows "H1", indicating that the sitting posture position has been successfully set.
standing position: Run to the desired location and hold" The key. The display area shows "H2", indicating that the standing position setting was successful.

Short press at any position Key or “ The key automatically moves the Height-adjustable table to this position.

Child Lock Operation

Long press" Press the button for 5 seconds; when the controller displays "LOC", it indicates the system is locked and cannot be raised or lowered.
Operation: Hold the "" key for 5 seconds while the device is locked. When the controller displays a change from "LOC" to normal numeric display, the system is unlocked.

Function Description of the Six-Button Elevating Desk Controller

Sitting reminder

Short press"  The key displays the sedentary time setting in the display area, switching between "30min", "45min", and "60min". If no action is performed for 3 seconds, the countdown starts automatically. Upon completion of the countdown, the display screen flashes "CHr".

Obstacle Sensitivity Setting

Hold down the "S" key; the display area will flash "cpt" and "-2-". The sensitivity levels are 0, 1, 2, and 3—higher numbers indicate greater sensitivity and more responsive rebound upon obstruction. "0" turns off this function.

Energy Saving Mode

If no button is pressed for a period of time, the device enters energy-saving mode. The controller display will show "Off," and the unit operates in low-power consumption mode. Pressing any button will exit the energy-saving mode.

error code

Fault Name	Fault Code	Fault Description	Remarks
Rebound upon encountering an obstacle	E02	During operation, if the system suddenly encounters an obstruction, the display area will flash "E02," halt the action, and reverse the movement for a certain distance. Subsequently, the LED screen will display the real-time altitude.	Auto-disappear after rebound
Undervoltage protection	E31	During operation, if the voltage suddenly falls below the set value, the system enters a protection state.	The signal disappears automatically once the source voltage stabilizes.
Overvoltage Protection	E32	During operation, when the voltage suddenly exceeds the set value, the system enters a protection state.	The signal disappears automatically once the source voltage stabilizes.
Motor open circuit	E10	When the motor experiences a disconnected or loose connection cable, the display area flashes E10.	Check all connection wires between motors and controllers to ensure they are secure, then press and hold the down button to reset. After completion, Disarm the alarm.
Overload protection	E20	When the load exceeds the set value, the screen flashes with E11. In this case, remove some of the desktop weight, power off the controller, and power it on again to resolve the alarm.	1. The normal load should be controlled below 80 kg. 2 When the current exceeds the preset maximum value, the overload protection function is triggered.
Work Schedule Protection	HOT	After the motor operates continuously for 2 minutes, the screen displays "HOT"; normal operation can resume after waiting for 18 minutes.	1. Continuous operation refers to an operational interval within 3 seconds. 2. This alarm can also be cleared by powering the control system on again.