
Assembly Instructions

Caution: You must read this before you proceed

DINING CHAIR

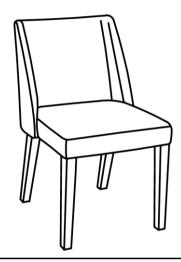

WARNING: These chairs are intended only for normal use with all four legs on the ground. These consumer chairs have relatively thin legs and are not designed to be sat in with only two chair legs on the ground (as from tipping back, forward, or to the side), and such can cause stress and failure of one or more chairs legs. Any misuse of the chairs voids any warranties, express or implied.

P	ar	+	L	ist
	1 11			151

Label	Picture	Description	QTY
А		Right Front Leg (Labelled 'A')	1
В		Left Front Leg (Labelled 'B')	1
С		Left Back Leg (Labelled 'C')	1
D		Right Back Leg (Labelled 'D')	1


E	Backrest	1
F	Seat	1

Hardware

Label	Picture	Description	QTY
1		Bolt (M6 x 50mm)	11
2		Bolt (M6 x 40mm)	2
3		Allen Key	1

Assembly Preparation

Before Beginning Assembly:

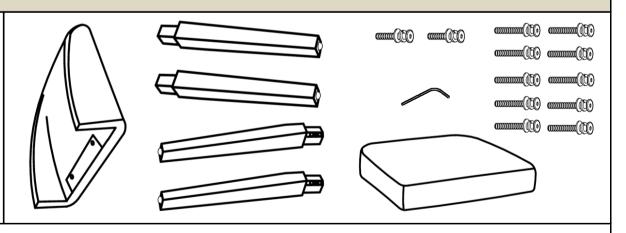



• Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-

Assembly Steps

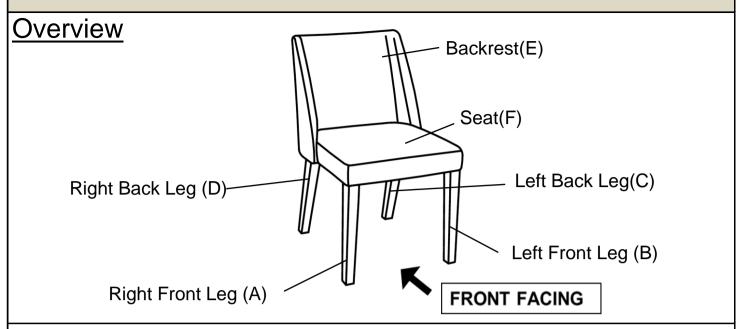

This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.



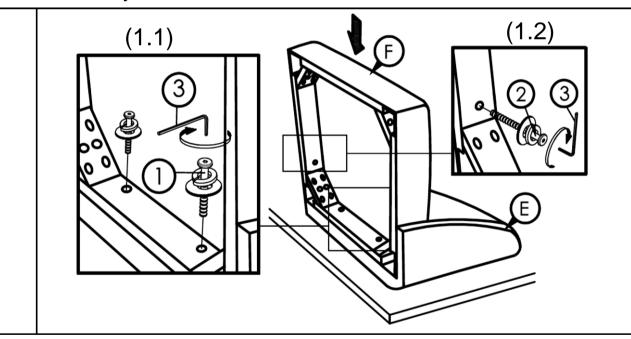


Place Backrest(E) onto a clean table.

Align Seat(F) to Backrest(E) as shown above.

- 1.1) Attach Seat(F) to Backrest(E) using Bolts(①) with Allen Key(③) as shown in the picture.
- 1.2) Attach Seat(F) to Backrest(E) using Bolts(②) with Allen Key(③) as shown in the picture.

Do not fully tighten the Bolts.

Step 2

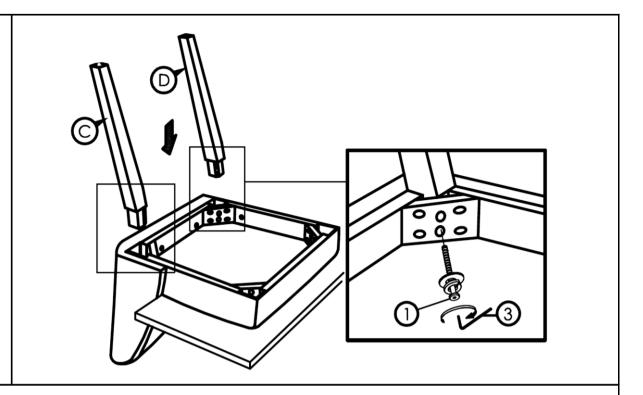

Place the Seat Frame facedown on the edge of the table.


Insert Left Back Leg(C) and Right Back Leg(D) into the Seat(F) as shown.

Note: Make sure to match the Labelled mounting position with the correct Legs.

Attach Left Back Leg(C) and Right Back Leg(D) to Seat(F) using Bolts(1) with Allen Key(3).

Do not fully tighten the Bolts.



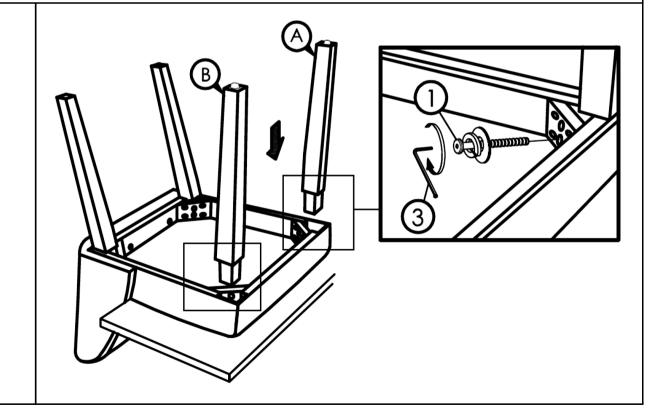


Insert the Right Front Leg(A) and Left Front Leg(B) into the Seat(F) as shown.

Note: Make sure to match the Labelled mounting position with the correct Legs.

Attach Right Front Leg(A) and Left Front Leg(B) to Seat(F) using Bolts(1) with Allen Key(3).

Do not fully tighten the Bolts.

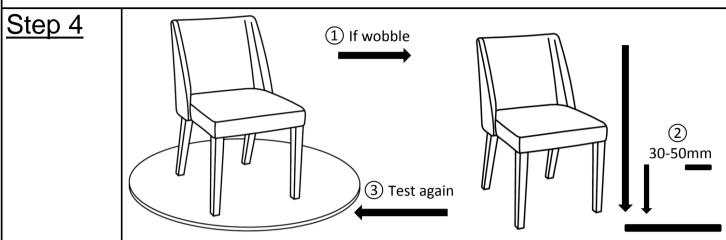

Place the Dining Chair on a Level Surface to check if it wobbles.

Lift the Dining Chair some 30mm to 50mm high from the ground, keep your feet and toes well away from the drop zone, and drop the dining chair freely and vertically with the four legs, hitting the ground at the same time.

This Drop Test will help to ensure that all the Bolts and gaps reach full alignment.


Test again for evenness on Level Surface.

If no wobbles are found, proceed to tighten all the Bolts.

When tightening the Bolts, tighten sequentially.

Do not tighten any Bolt fully and then move on towards the next one, this could cause the frame to warp.

If it still wobbles, loosen the Bolts and execute this same drop test. If the Dining Chair is not Stable it could lead to damage to the product.

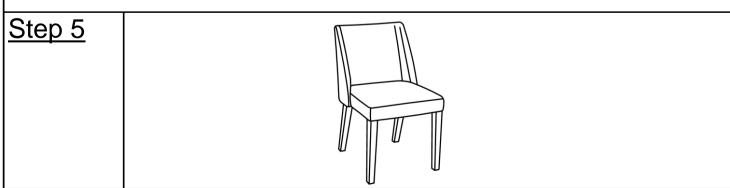

Your Dining Chair is ready for use.

This Dining Chair can only be used on a flat, level surface.

Care & Maintenance Do not put hot items directly on furniture surface Do not clean furniture with harsh cleansers or polish. Do not place furniture under direct sunlight. Do not place furniture near heating or cooling vents. Do not write on furniture without a padded barrier to protect the surface. Do not place furniture outside . For indoor use only . Not for commercial use. For residential use only. Stains may be removed with mild soap solution and damp cloth. Children should not climb or jump on the furniture. Dust and pick-up spills using a clean, non-colored, lint-free cloth.