











CROSLEY

FURNITURE



Record Player Stand with Vinyl Storage CF1241

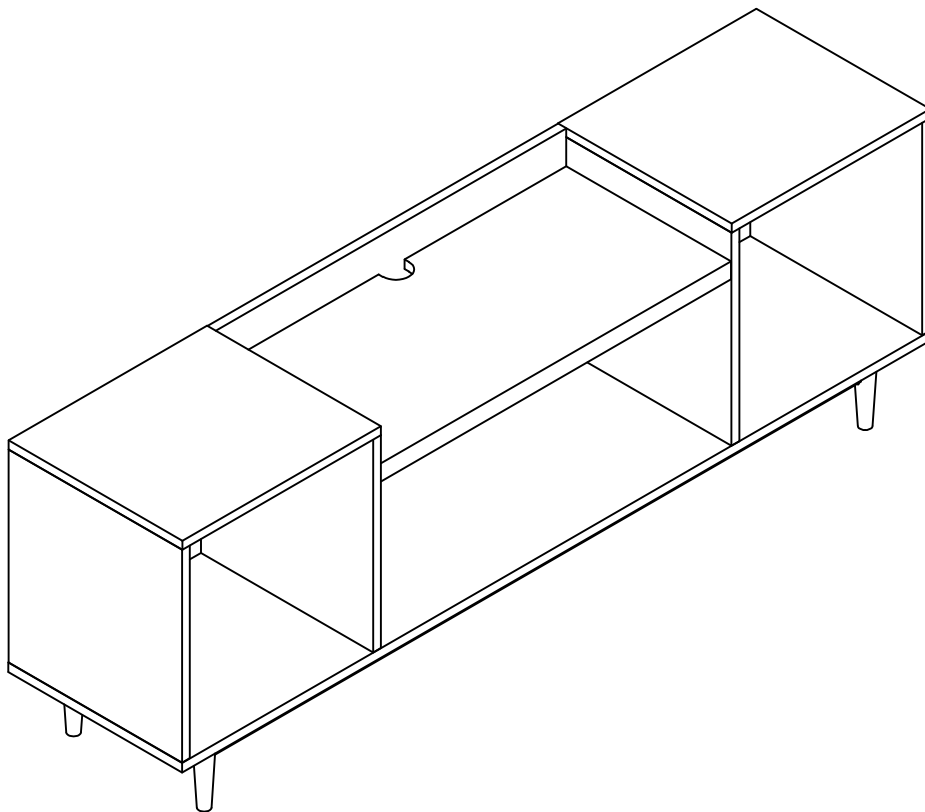

PARTS LIST

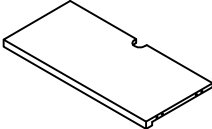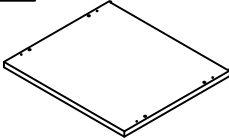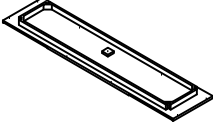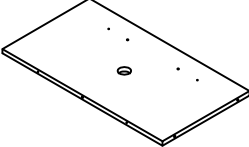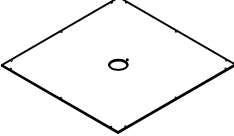
A 	B 	C 	D 	E 
Top Panel 1 PC	Side Top Panel 2 PCS	Left Panel 1 PC	Right Panel 1 PC	Left Partition Panel 1 PC
F 	G 	H 	I 	J 
Right Partition Panel 1 PC	Bottom Panel 1 PC	Back Panel 1 PC	Side Back Panel 2 PCS	Cover 3 PCS
K 	L 			
Leg 4 PCS	Support Leg 1 PC			

HARDWARE LIST

#1  1/4"*45mm Bolt 8 PCS (Extra 1)	#2  1/4"*10mm Spring Washer 8 PCS (Extra 1)	#3  1/4"*13mm Flat Washer 8 PCS (Extra 1)	#4  7*38mm Tapping Bolt 10 PCS (Extra 1)	#5  Cam Bolt 18 PCS (Extra 1)
#6  Cam Lock 18 PCS (Extra 1)	#7  8*30mm Wood Dowel 23 PCS (Extra 1)	#8  8*3*12mm Screw 24 PCS (Extra 1)	#9  5/32"*10mm Round Head Bolt 1 PC (Extra 1)	#10  Binding Post 2 SETS (Extra 1)
#11  M2 Small Allen Wrench 1 PC	#12  M4 Allen Wrench 1 PC	#13  Cam Sticker 18 PCS (Extra 1)		

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach legs (part K) to bottom panel (part G) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #12). Attach support leg (part L) to bottom panel (part G).

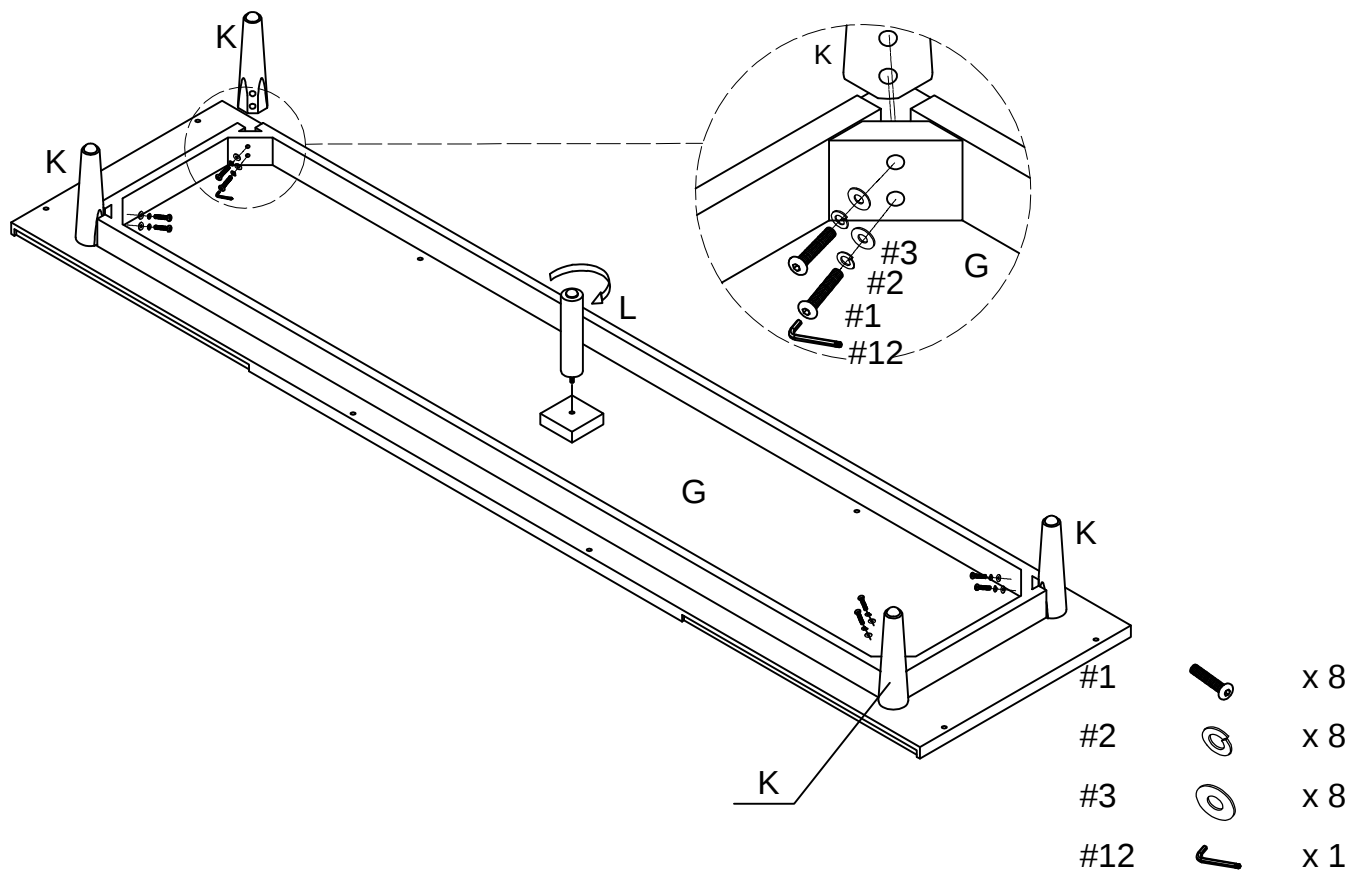


Step 2. Attach covers (part J) to side back panels (part I) using binding posts (part #10) and small allen wrench (part #11).

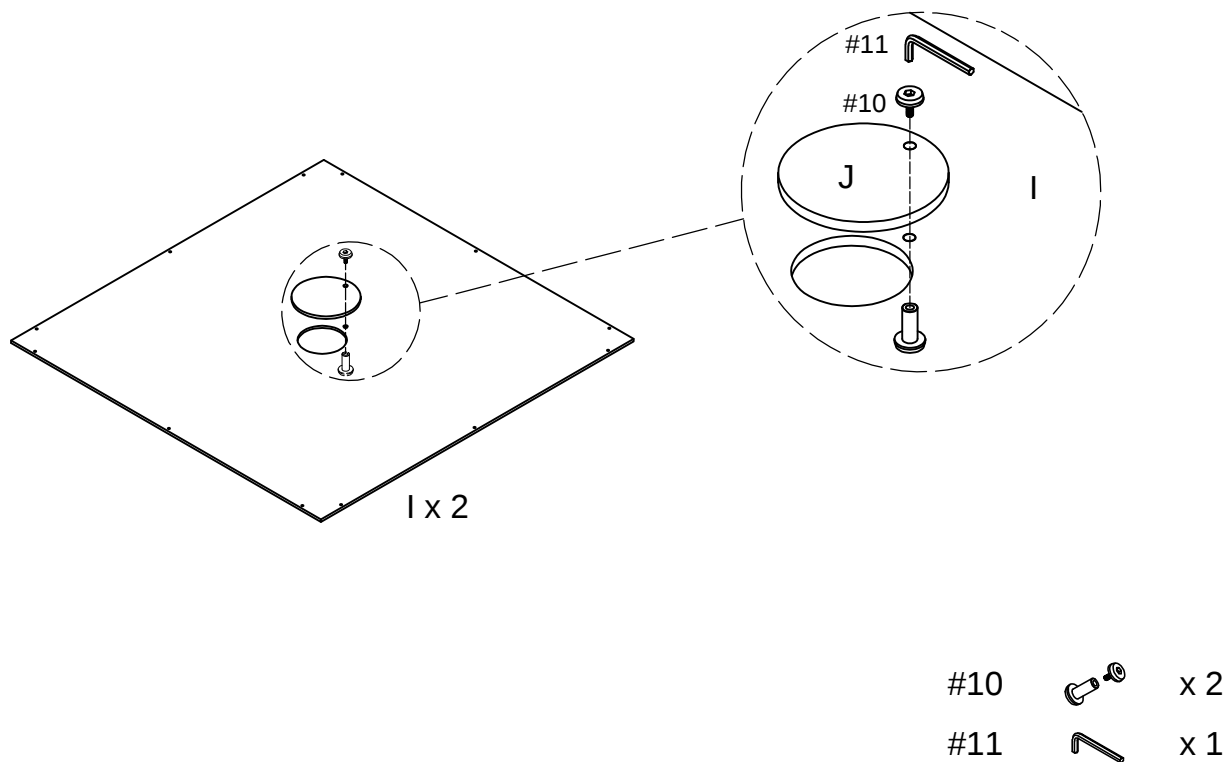

Step 3. Insert cam bolts (part #5) into pre-drilled holes of panels (parts B, E, F & H) using phillips head screwdriver.



Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

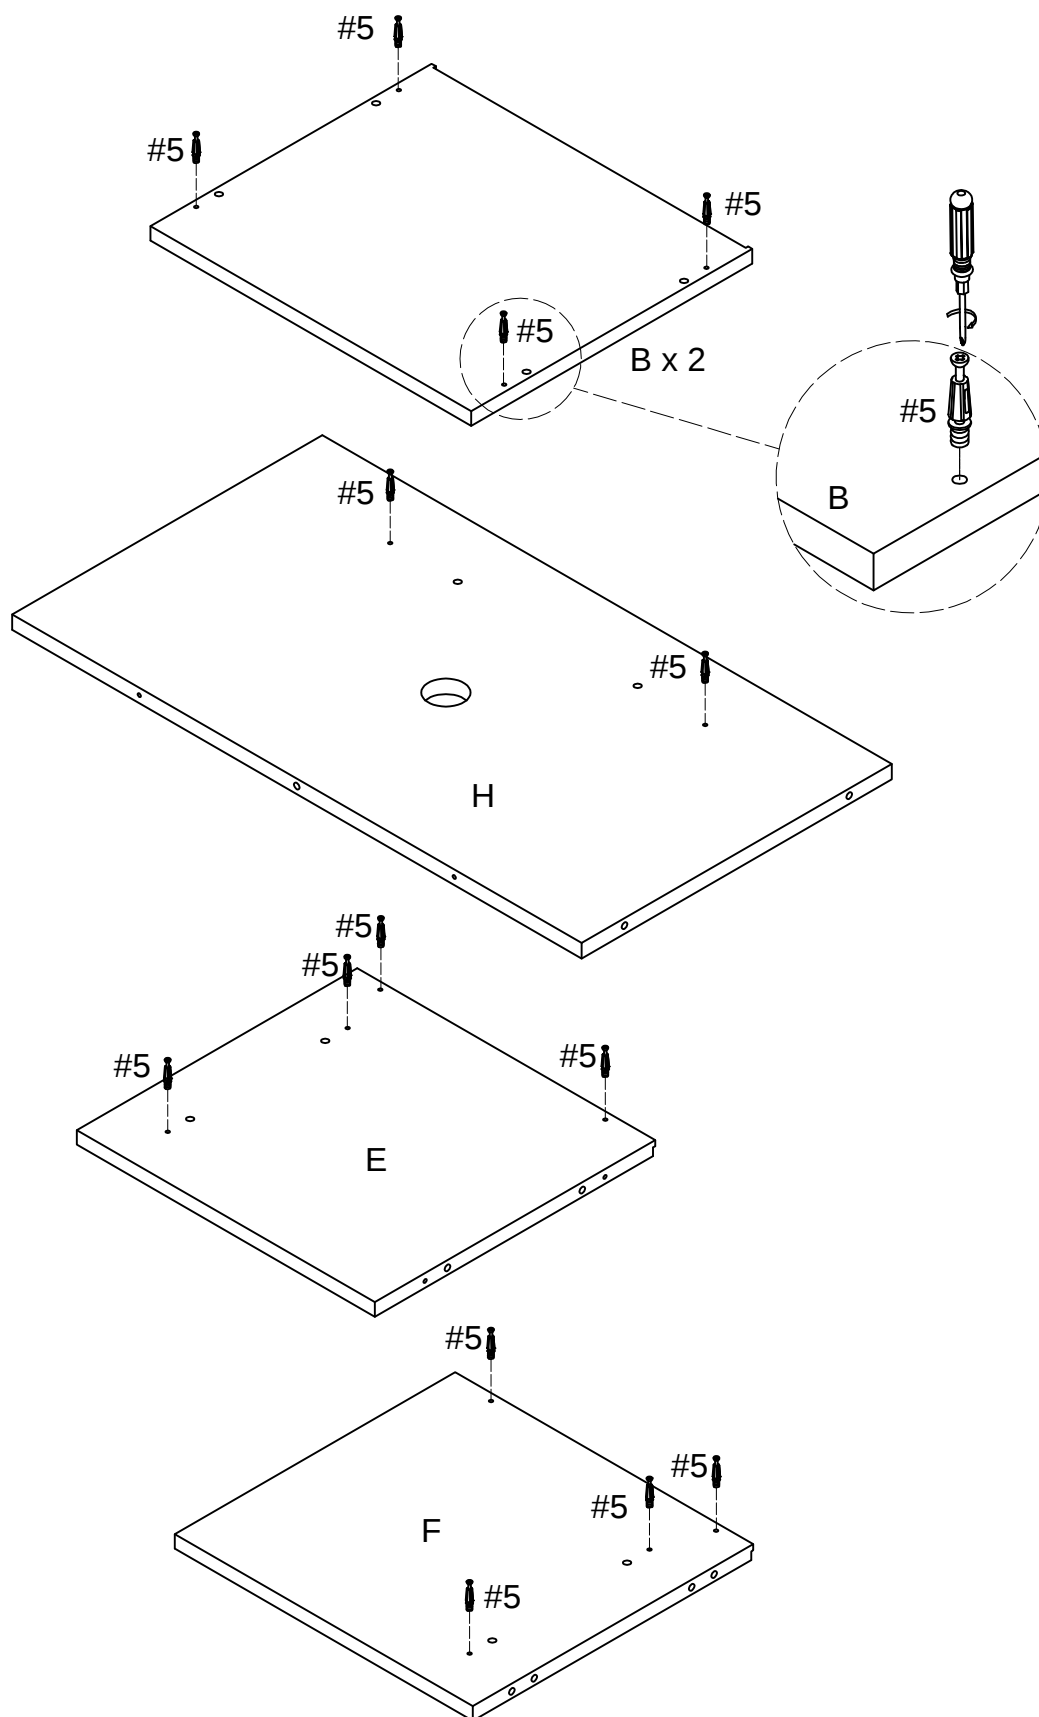

#5  x 18

Step 4. Attach top panel (part A) to back panel (part H) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

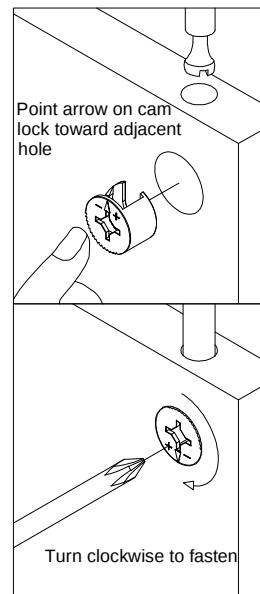
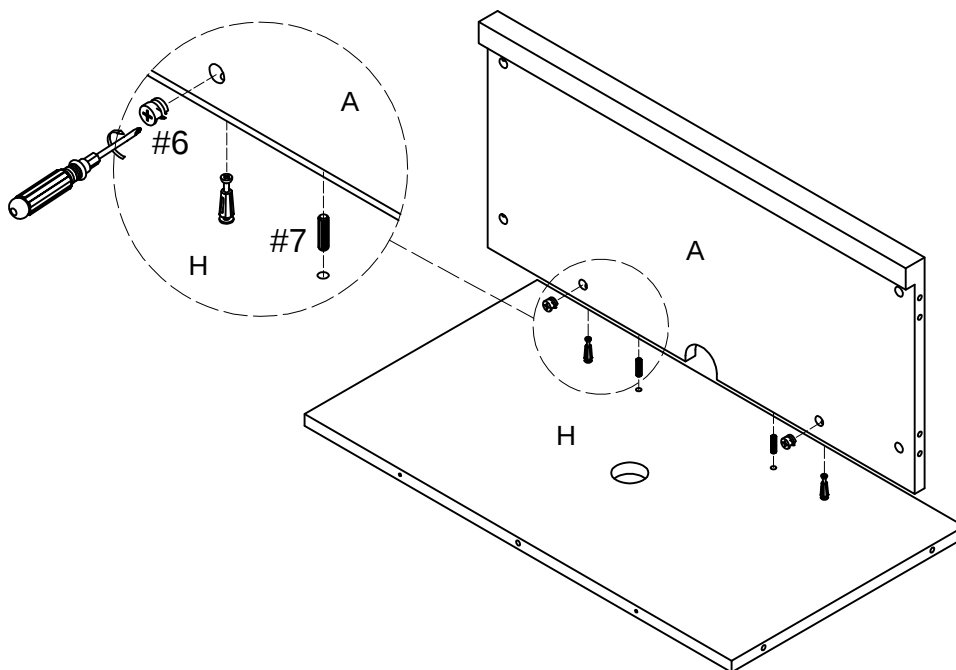


#6  x 2

#7  x 2

Step 5. Attach partition panels (parts E & F) to assembled unit (parts A & H) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

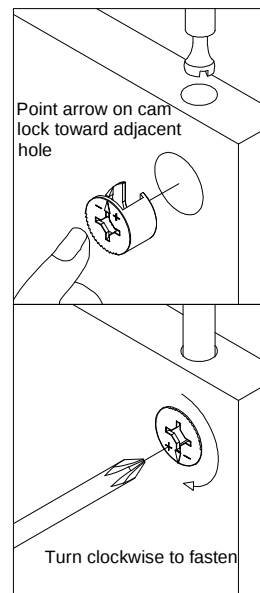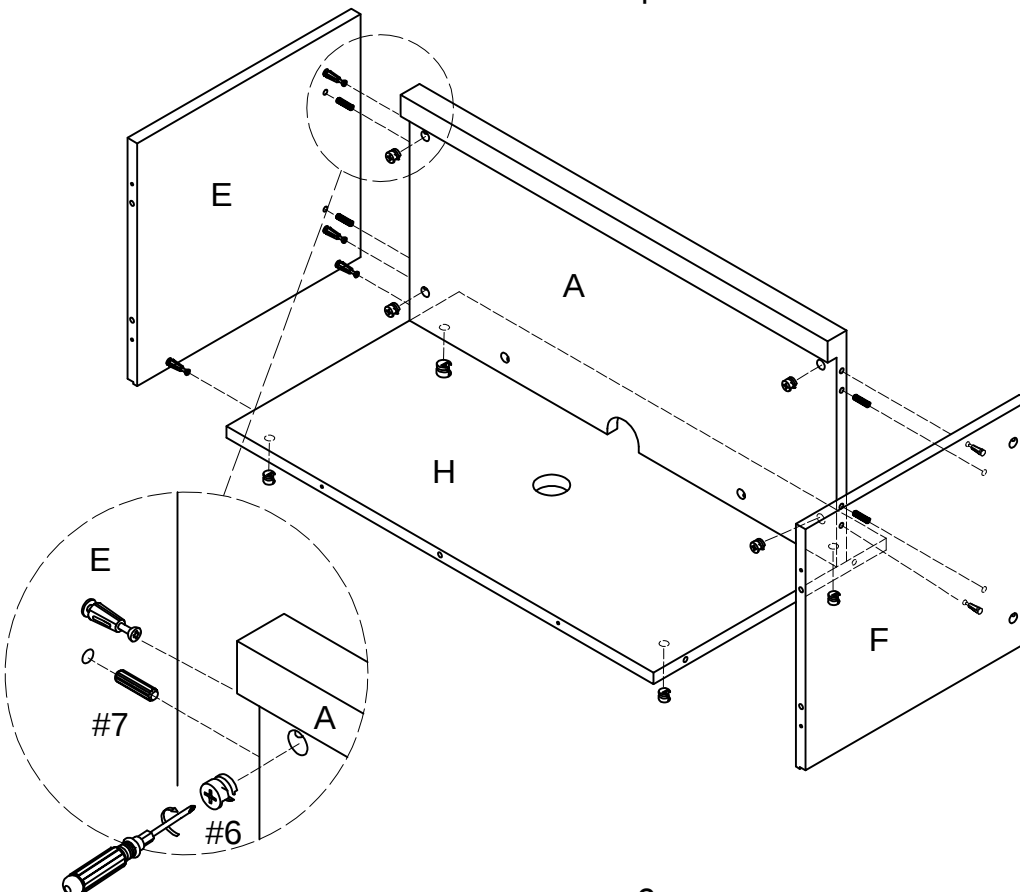


#6  x 8

#7  x 4

Step 6. Attach bottom panel (part G) to assembled unit (parts E, F & H) using tapping bolts (part #4), wood dowels (part #7) and allen wrench (part #12).

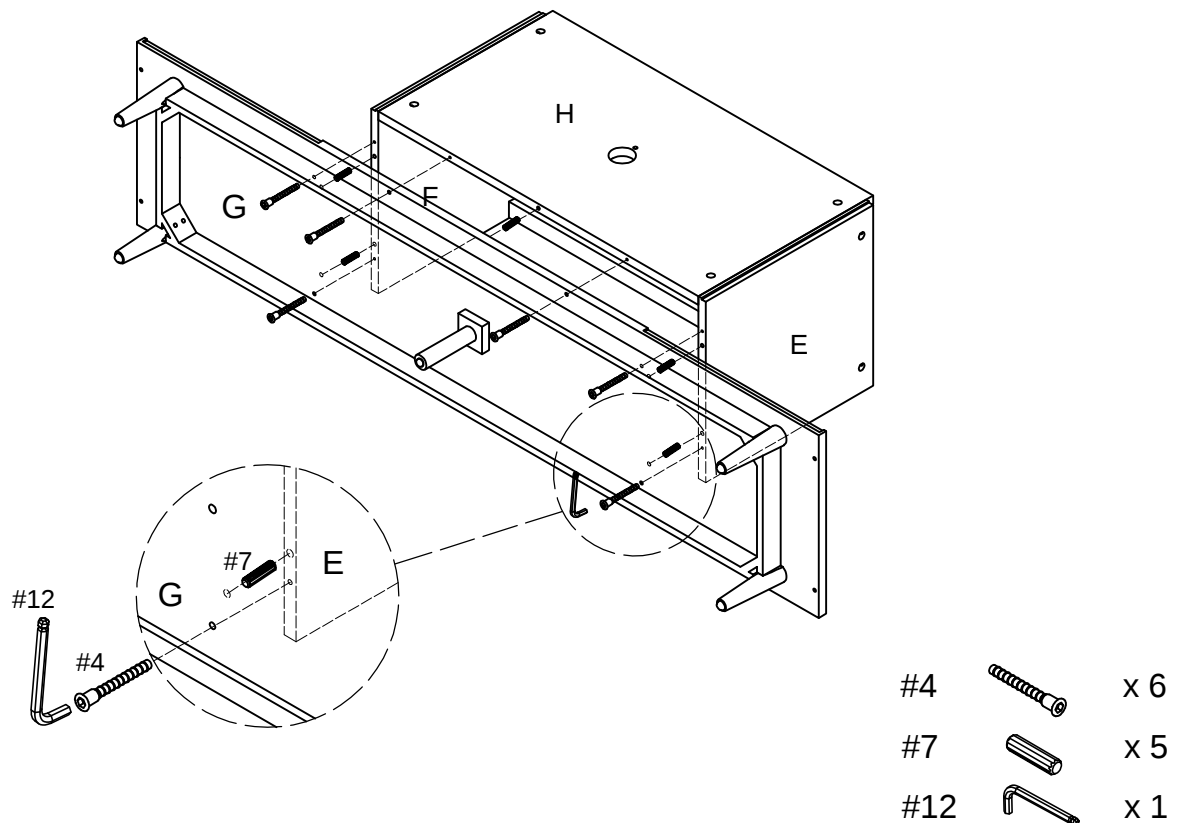


Step 7. Attach panels (parts C & D) to bottom panel (part G) using tapping bolts (part #4), wood dowels (part #7) and allen wrench (part #12).

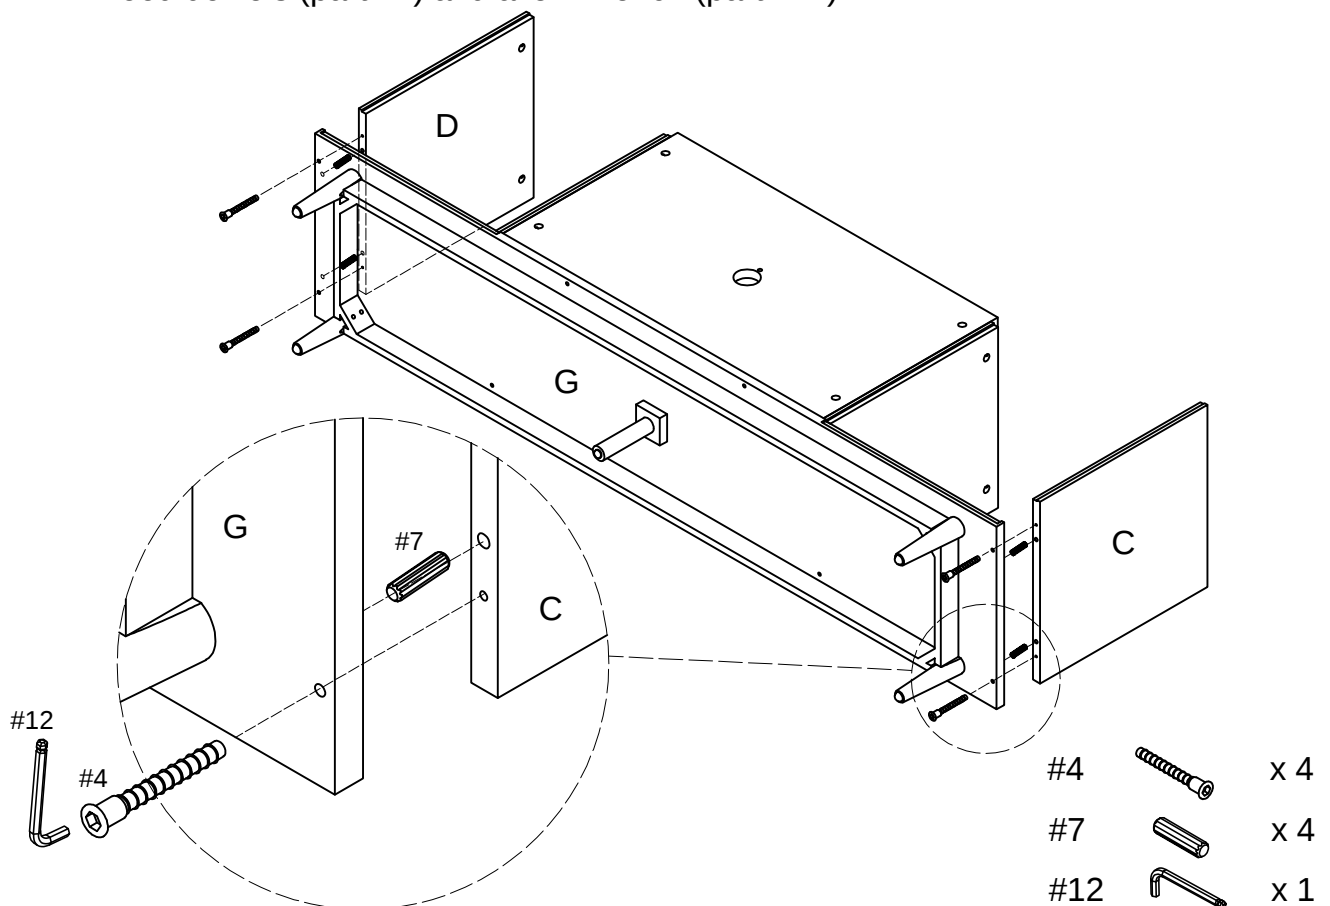


Step 8. Attach side top panels (part B) to assembled unit (parts C, D, E & F) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.



Note: Cam locks must rotate a full 180°. See pictured insert.

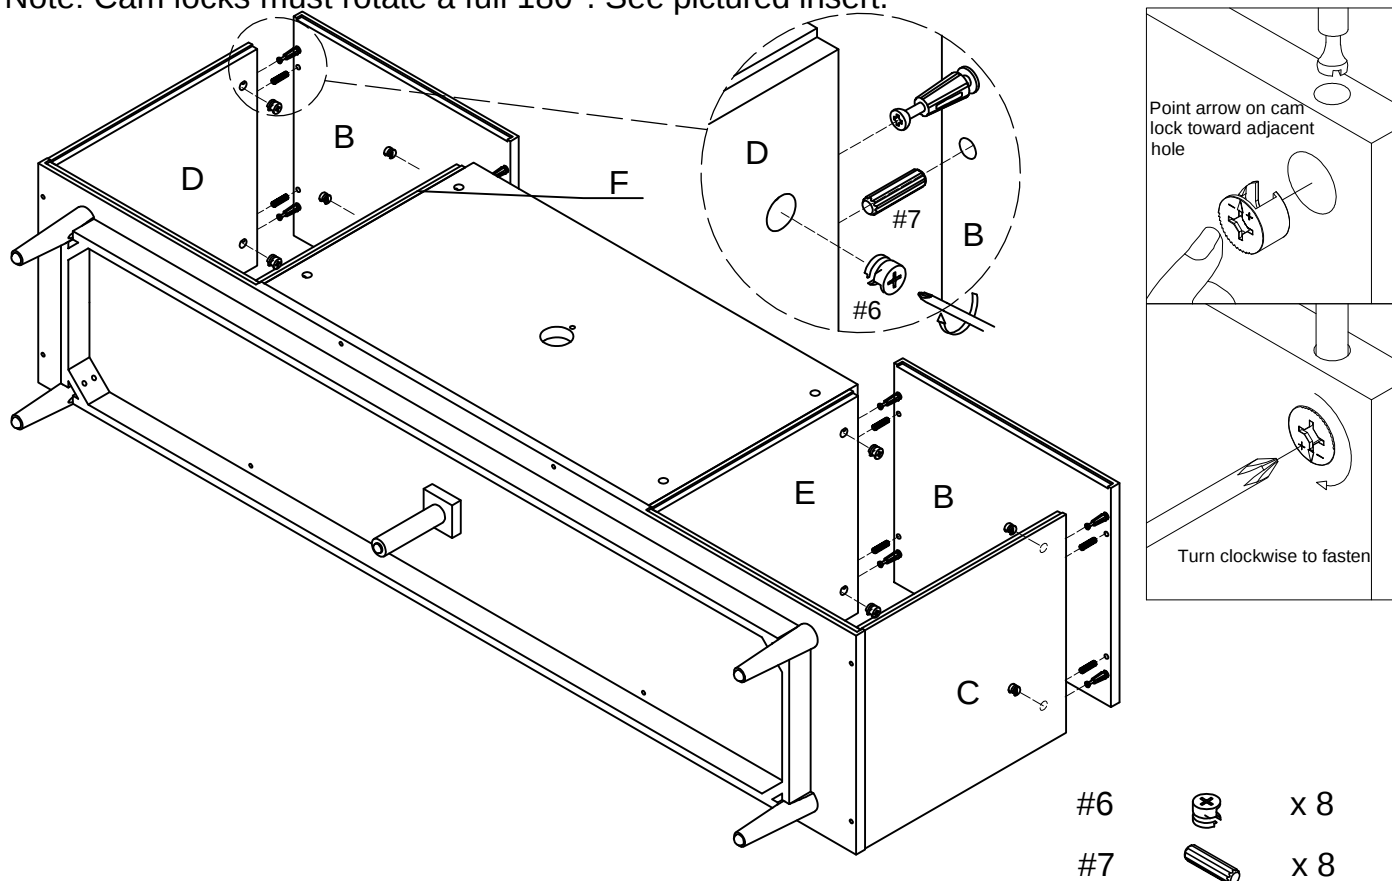

Step 9. Attach side back panels (part I) to assembled unit (parts B, C, D, E, F & G) using screws (part #8) and phillips head screwdriver. Attach cover (part J) to back panel (part H) using round head bolt (part #9) and phillips head screwdriver.

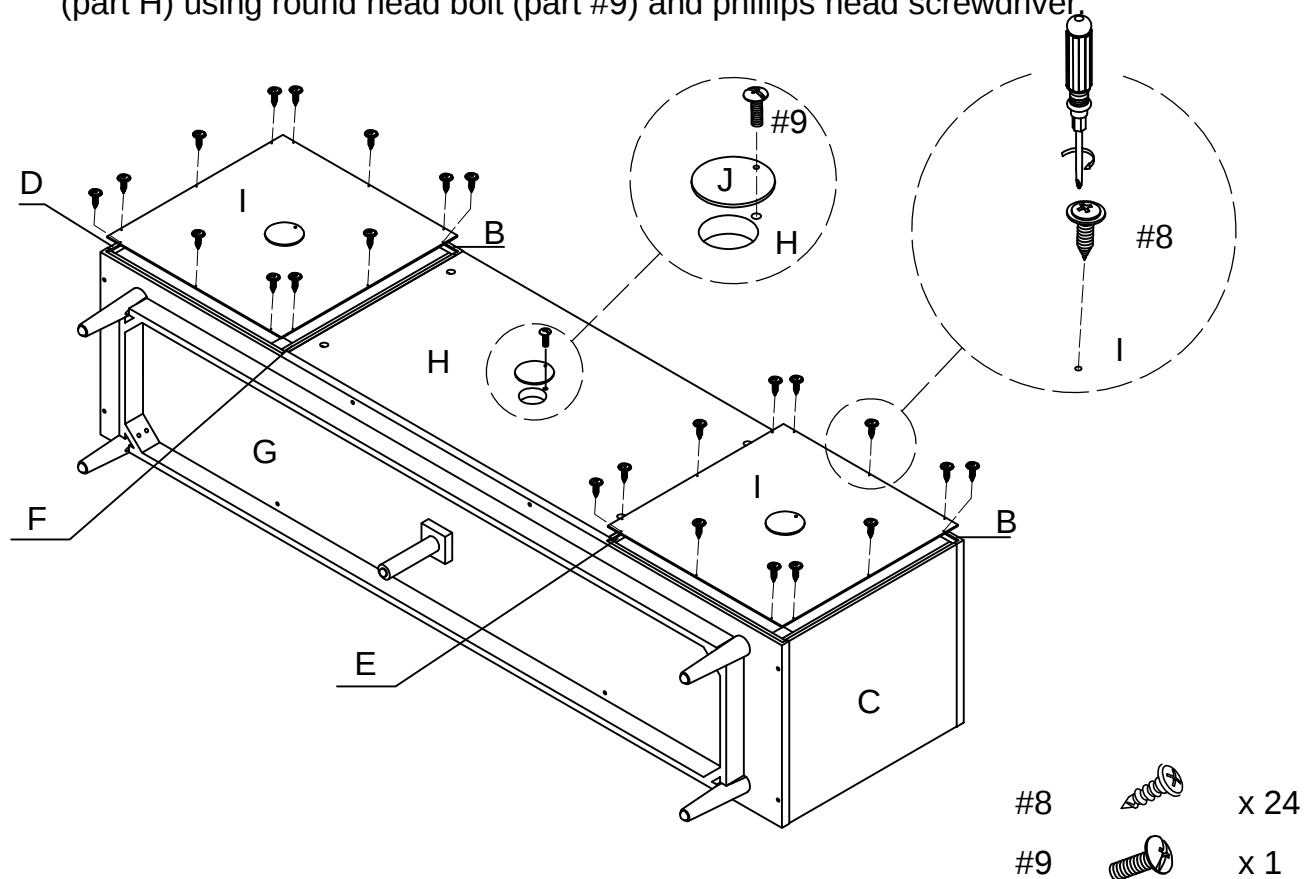

Step 10. Carefully turn unit upright. Using cam stickers (part #13) cover cam locks (part #6).
NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

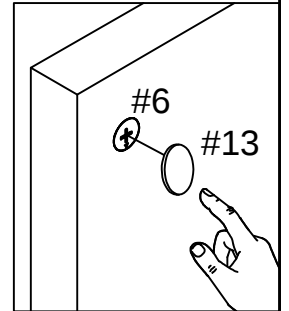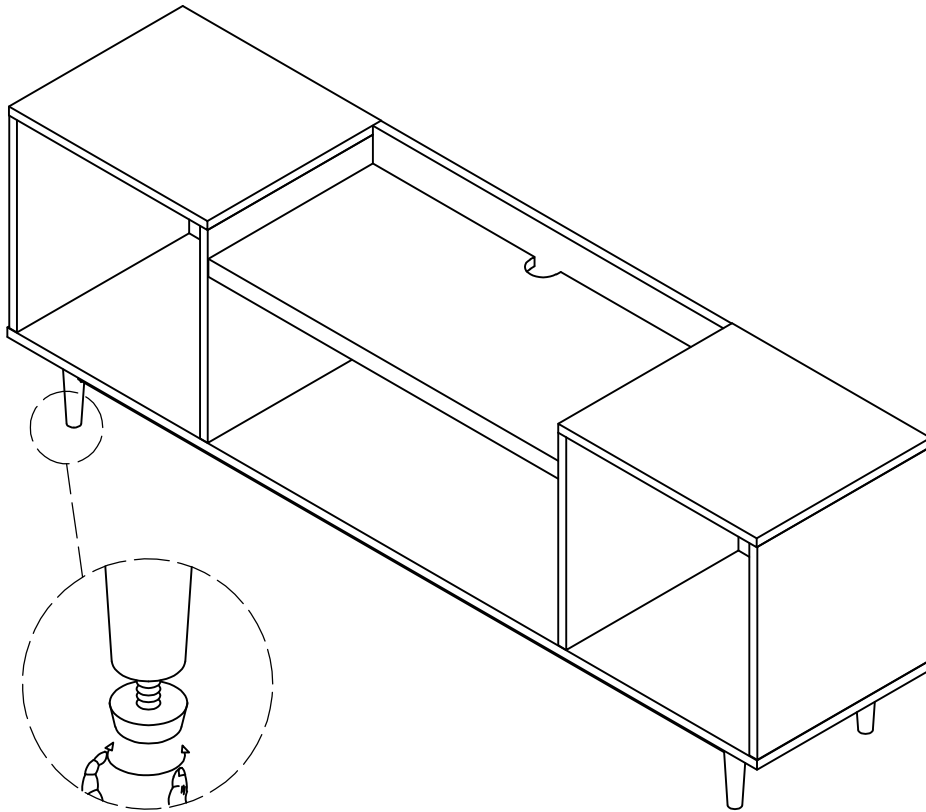

#13  x 18

