




## Cautlon!

- Read the manual carefully before using your new product.
- This product should always be assembled by an adult.
- Before each ride, make sure that all screws are tightened and that the levers / connections are in their proper positions.
- Protective equipment should be worn. We recommend you to wear a helmet, wrist, knee and elbow protectors and shoes with flat rubber sole.
- Be careful when riding this product in order to avoid falls or collisions which can injure the user or other people. To use the kick scooter requires great skill.
- This product is only intended for use on level ground. Do not ride in downhill slopes.
- Do not use the product for tricks or jumps.
- Must not be used in traffic.
- Do not let children use the product without adult supervision.
- All use of the product is at one's own risk.
- The instructions should be saved in case it becomes necessary to lodge a complaint with regard to the product.

## ASSEMBLY see pictures on page 2

- Release the quick release collar (fig A1).
- Pull the release lever (fig A2) and fold out the front fork into an upright position.
- Lower the release lever (fig B1) and tighten the screw (figure B2) and the quick release collar (fig C1) properly.
- Assembling of skis / Montage des skis: Disassemble the brake before using the product. Loosen the screws. (fig E+F) Attach the skis in the intended position. (fig G1) Tighten the screws with the hex key so that they are firmly in position. Use the shorter screw for the front ski and the longer screw for the rear ski. (fig G1)
- Assembling of wheels / Montage des roues: Be sure that the brake is assembled when using the product on wheels. Mount the wheels and tighten the screws carefully. (fig D) After assembling the brake, test it so it is working properly.
- Aluminum 170mm with kick stand.

## Assembling of wheels / Montage des roues

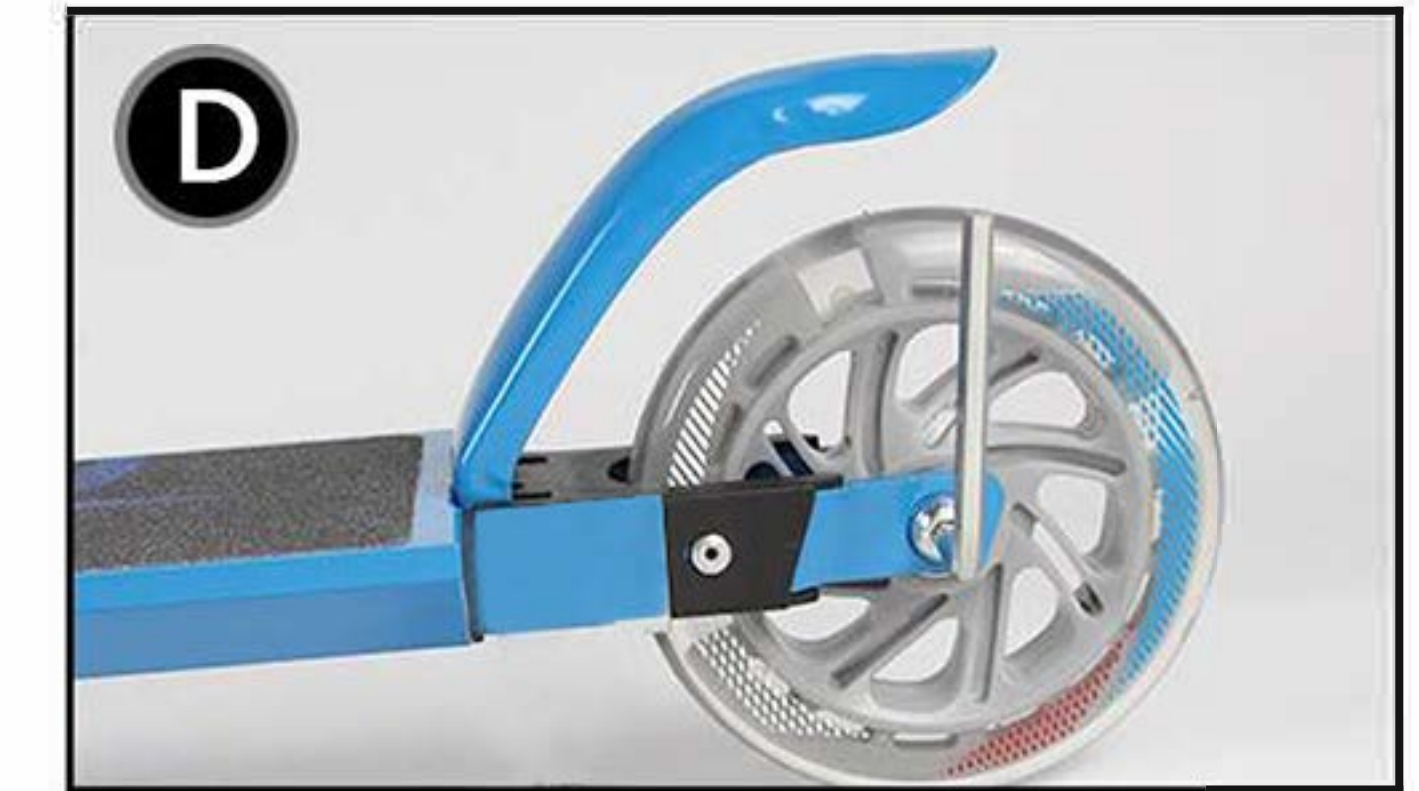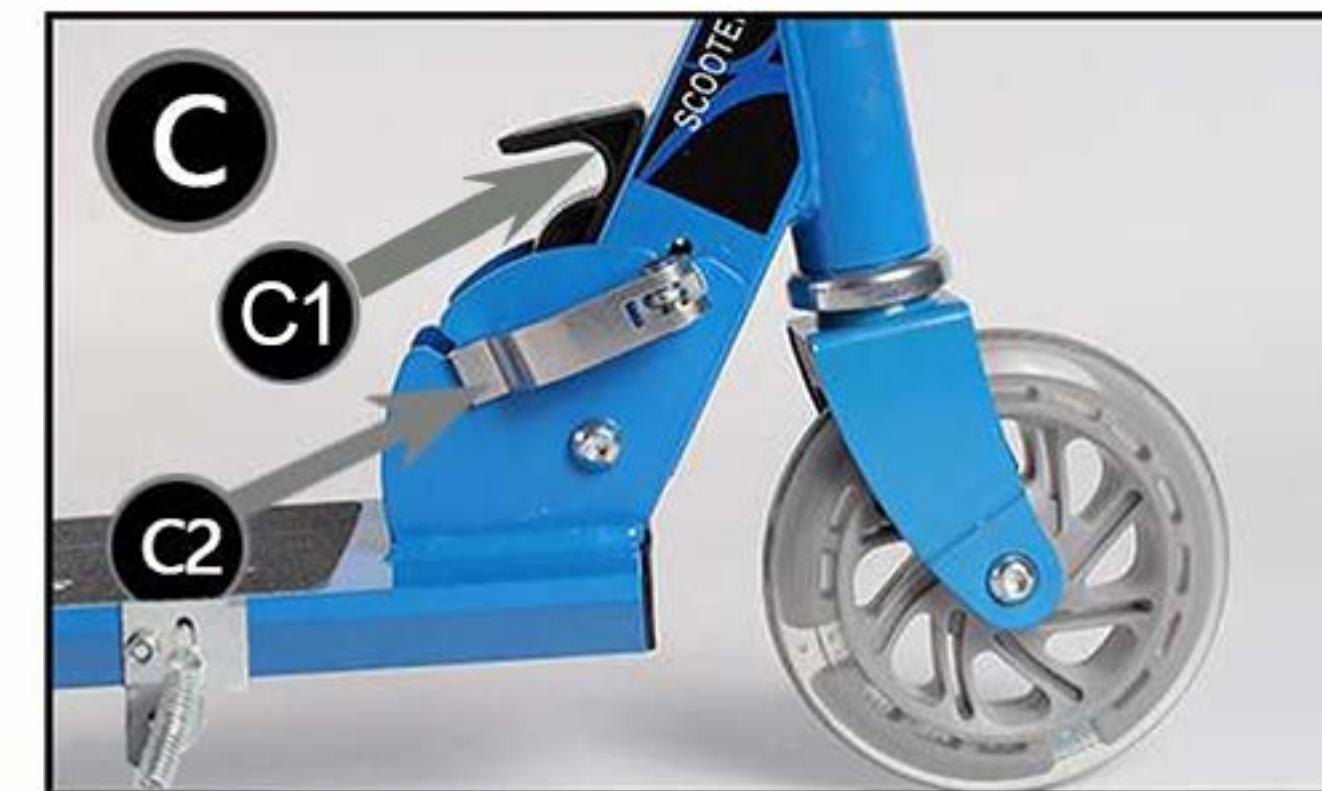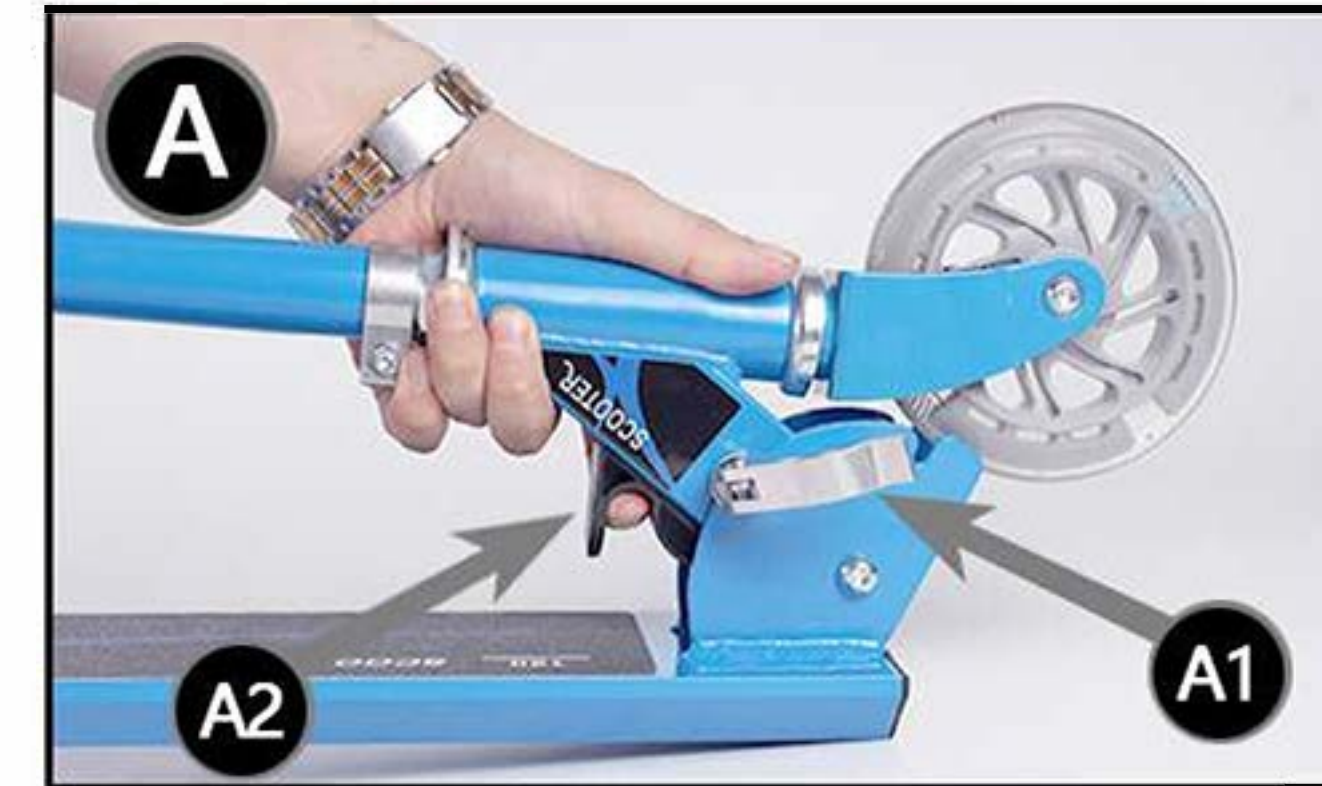

## Assembling of skis / Montage des skis

