



FT-285 Triad Fountain (5 Pieces) Components and Parts list


Revised July 11, 2016

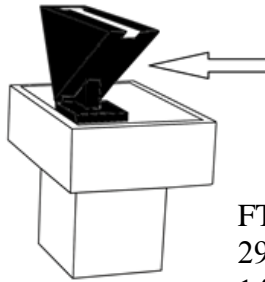


FT-285A
29.75"x9"x19.25"
148lb

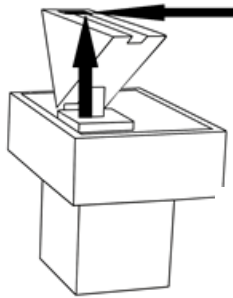


FT-285B
4"x4"x1"
5lb

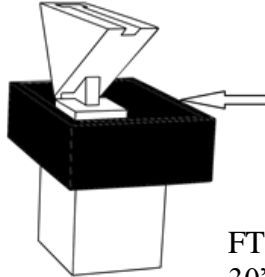

FT-285C
30"x20.25"x9"
162lb

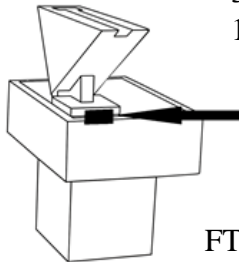

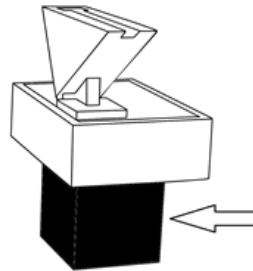

FT-285D
1.25"x5.25"x3.75"
2lb



FT-285E
16"x13.5"x15"
107lb



Pump Kit and Parts List	Tools You Will Need
Roughly 12" long 5/8" non-kink hose Metal hose clamps(3) 300 GPH Pump(1) Copper spiller (1) 2.8 oz Silicone (1) Wedges(3) 4mm Allen Wrench (1) #10 Compression Stopper (1)	Level  4mm Allen Wrench 
This fountain uses FTNCOV-LRG	

FT-285 Triad Fountain (5 pieces)

Revised July 11, 2016

ASSEMBLY INSTRUCTIONS

1. Make sure you are assembling your fountain on a level surface capable of holding a minimum of 500 pounds with approximately a 5 1/4" square foot footprint.
2. Place the base (FT-285E) into position where the fountain will be installed.
3. Place the basin (FT-285C) centered on top of the base.
4. **See enclosed stopper assembly instructions and complete before continuing.**
5. Place the hose clamp over the 1/2" non kink tubing and attach the clamp over the copper piping on the water feature. Tighten the clamp.
6. Place the water feature (FT-285A) with the 1/2" non kink tube connected to it over the pump.
7. Attach a hose clamp to the opposite end of the non kink tubing and connect it to the pump. Tighten the clamp
8. Place the spiller stopper (FT-285B) on top of the water feature. The spiller stopper is to prevent splashing.
9. Place the copper spiller in the front of the water feature where the water will be spilling out.
10. Fill basin with just enough water to reach the pump cover (approximately 15-20 gallons).
 - a. Note – do not allow pump to run dry as it will cause damage to the pump.

WINTER CARE AND GENERAL FOUNTAIN INSTRUCTIONS

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

(1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin. *Compression stoppers may be left on the pump cord for easier assembly next season.*

(2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.

(3) Cover your Campania Fountain with a Campania Fountain Cover, or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;

(4) Check fountain periodically to insure that plastic is secure and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

For more Campania product information visit www.campaniainternational.com

All of our cast stone is proudly



Made in USA