


Operation Instructions

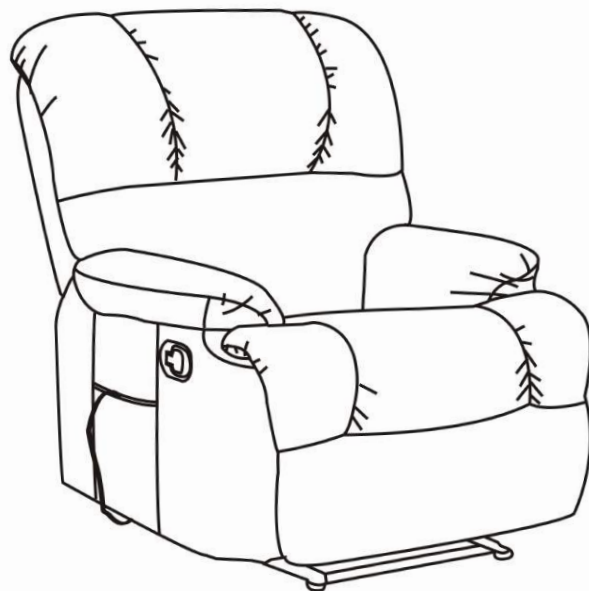

Massage Chair

Names & Functions of Remote Control

1. ON/OFF

Press the ON/OFF button, the indicator light will be on, and the machine will be functional. Then if you want to turn it off, you can press the ON/OFF button again; the machine will stop working and the indicator light will be off.

2. AUTO

Press the AUTO button, the machine will be into the automatic working mode and the automatic indicator light will be lit, the massage time is 18 minutes, the massage strength is in the moderate, mode automatically switches from mode 1 to mode 9 intermittently.

3. MODE

Press the MODE button to change the model from 1 to 9.

4. TIME

According to a digital display time you can have your massage last 10 minutes, 20 minutes or 30 minutes.

5. INTENSITY

Change the intensity by pressing the intensity button ranging between 1-5.

6. HEAT

Press the HEAT button, the machine will begin heating. The Heating indicator light will turn on. Press it again, the heating will stop, the light will be off.

7. Back

In the manual state, press the Back button, the independent indicator light will turn on. Press again to stop and the light will go out.

8. Lumbar

In the manual state, press the Lumbar button, the independent indicator light will turn on. Press again to stop and the light will go out.

9. Thigh

In the manual state, press the Thigh button, the independent indicator light will turn on. Press again to stop and the light will go out.

10. Leg

In the manual state, press the Leg button, the independent indicator light will turn on. Press again to stop and the light will go out.



PRODUCT FEATURE

- 8 Vibration Motors
- Adjustable intensity
- Four massage zones, each zone can be operated individually
- The default timer is 10 min

HOW TO USE

1. Connect plug.
2. Turn the unit ON/OFF by pressing the ON/OFF button once, the LED will illuminate when power is on.
3. Turn on the massage in each zone by pressing the BACK, LUMBAR, Thigh or LEGS button. LEDs will illuminate when each zone is activated. To turn off a zone, press the button again.
4. To choose a desired massage mode, press the MODE button. To change modes, press MODE button until the LED for the desired mode illuminates
 - PULSE---for deep tapping massage
 - PRESS---provides rapid tapping massage
 - WAVE----for a gradual, side-to-side vibrating massage
 - AUTO---provides a random pulsing massage to all zones
 - NORMAL---for a firm, vibrating massage
5. To change the massage intensity press the INTENSITY button. The LED ranging from 5 to 1 intensities will illuminate when chosen. NOTE: Discontinue use immediately if you feel any discomfort or pain.
6. NOTE: For your benefit, the massage chair is equipped with an auto shut-off feature that will turn the chair unit off after 20 minutes of continuous use.
7. Do not use for more than 30 continuous minutes.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including:

1. Always unplug the massage chair from the power source after use, and before cleaning.
 2. Do not reach for massage chair if large amounts of liquid have spilled on it. Unplug immediately.
 3. The chair should never be left unattended when plugged in. Unplug from the outlet when not in use, before putting on or taking off parts or attachments.
 4. Do not use outdoors.
 5. Do not carry this appliance by the supplied power cord using it as a handle.
 6. Keep the cord away from heated surfaces.
 7. Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
 8. This unit is not a toy. Children should not use or play with it.
 9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
 10. Do not use near eyes or other highly sensitive areas.
 11. To disconnect, press the OFF button, make sure all functions are stopped, then remove the plug from the outlet.
 12. Use this appliance only for its intended use as described in this manual. Do not use attachments that haven't been provided with the unit.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety, children should be supervised to ensure that they do not play with the appliance

HEALTH CAUTION

- If you have any concerns regarding to your health, consult your doctor before using this product.
- Individuals with pacemakers should not use this product.
- If you have pain in a muscle or joint after using for a prolonged period of time. Discontinue using and consult your doctor. Persistent pain could be a symptom of a more serious condition.

MAINTENANCE INSTRUCTIONS

TO STORE:


Place unit in its box or safe, dry, cool place. Avoid from sharp edges or pointed objects which might cut or puncture the fabric. Do not wrap power cord around the unit. Do not pull the unit by power cord.

TO CLEAN:

- Insure the unit is unplugged from the power source, and allow the unit to cool down before cleaning.
- Do not use any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat with clean, dry cloth.
- Do not use abrasive cleaners, brushes, gasoline, kerosene, glass furniture polish, paint thinner or water hotter than 120°F to clean the unit.

Adjusting the angle of the chair back

Back angle adjuster
(The back can be
adjusted to any angle at
will by a pneumatic
device.)

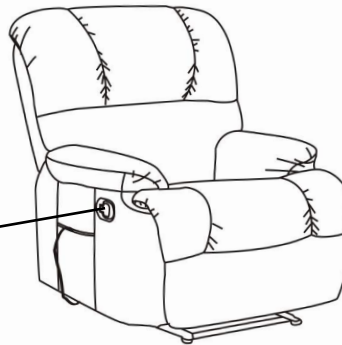

- Pull up the plastic handel, the foot-rest will be reclined. Please sit on the chair and lean your back against the backrest. Itwill turn downward.
- When you want to close the chair,make sure that you are not puting your weight against the backrest.Push the foot-rest to closed position.

※ The massage functions will not be affected during the adjuston.

Technical Specifications

Rated Voltage: 110V-240V~

Rated Frequency: 50Hz/60Hz 0.5A

Assemble Instructions



GENERAL INFORMATION, TIPS & TRICKS


- 1.Please read this instruction prior to assembling this product.
- 2.To avoid damage, assemble this product on a non-abrasive surface such as carpet.
- 3.Make sure all bolts are tightly fastened before use.
- 4.Use in home and in light commercial situations.
- 5.Please make sure you have all parts before assembly.

PART LIST

A.Main Frame(not replaceable)	B.Backrest (not replaceable)	C.Remote
		
QTY:1pc	QTY:1pc	QTY:1pc
D.Transformer		
		
QTY:1pc		

Step1


Attach the backrest (B) to the main frame (A) by aligning the metal grooves on the backrest to brackets on the main frame as shown. Ensure the backrest (B) slides down fully over the brackets on the main frame (A).

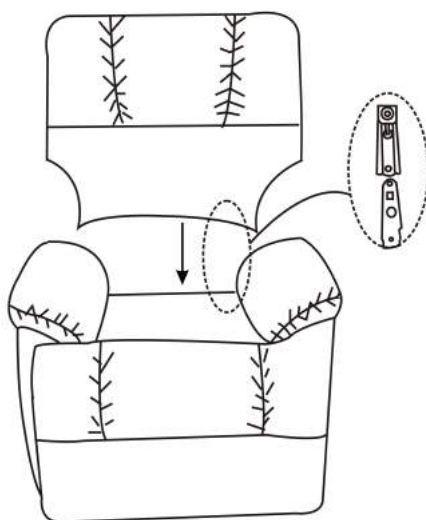

STEP 2


Find the white and red electric wires in the back of main frame (A). Connect by inserting the pin into the socket according to the color. Attach the remote (C) to the chair by inserting the pin into the big socket in the back of main frame (A).

Attach the transformer (D) to the chair by inserting the pin into the small socket on the back of main frame (A).

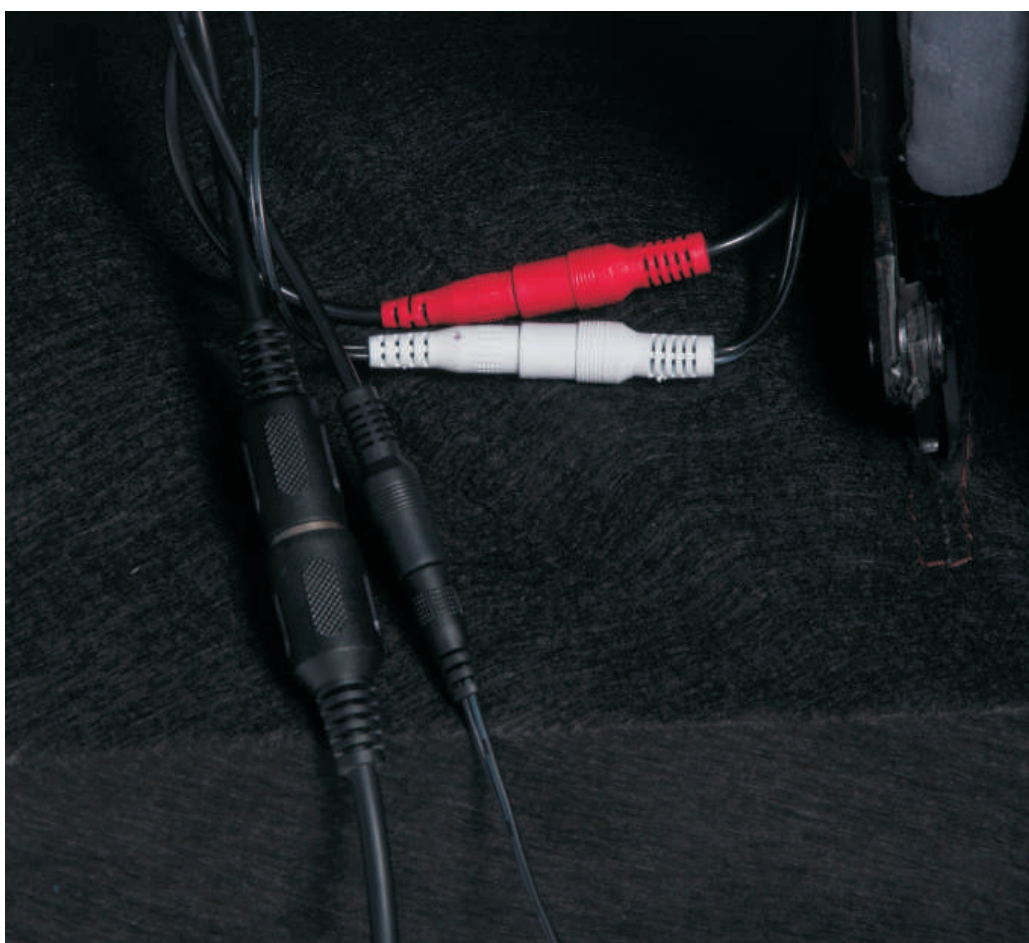

STEP 3

Attach adhesive strip on the backrest (B) to the lower back of main framer (A) as shown.

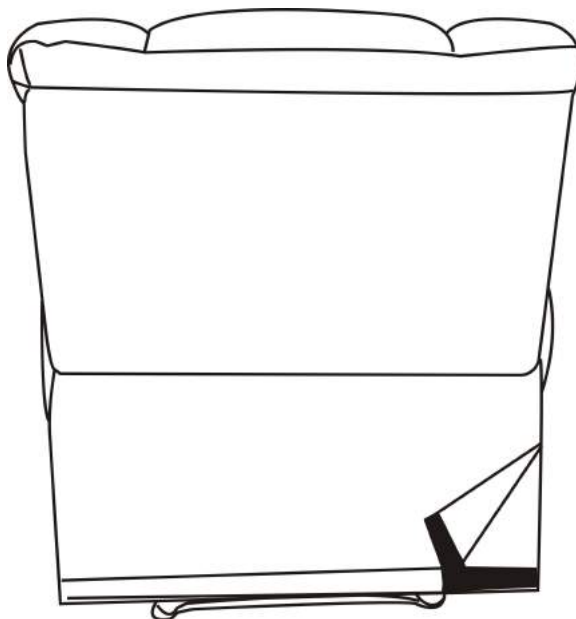

Warning:

- **Sit down in the chair gently. To avoid tipping over, do not throw yourself into the chair. Move the chair into the reclining position slowly, making sure that no children or pets are in close proximity. Do not allow children to play on or around the chair, particularly when it is in an open position.**
- **Close the recliner completely before getting out of it.**
- **Never sit on the footrest when it is open, even a child.**
- **To eliminate the risk of tip over, do not sit on the arms or footrest of the chair.**
- **The chair is designed to be used by 1 adult once.**

● **Please forbid these people below to use this chair:**

People with severe symptoms of heart disease, high blood pressure, cerebral thrombosis and other people who are sensitive to heat or completely insensitive, or people with bad bones or waist state, pregnant women, children, and other people who is not suitable to use this product or use the product under the guidance of doctors.

● **Weight capacity is 330LBS, Do not allow anyone who is over 330LBS to sit on the chair.**

● **Make sure to have the backrest away from the wall or other obstacle at least 100cm to recline.**

● **Keep the chair from liquid, fire, etc..Also do not put it near sharp objects (like knives, nails, etc.)**

● **Maintenance manual Instruction:**


1.To avoid collision, you should carry the chair carefully.

2.If you find some dirty on chair, please spray the sofa special cleaner on the dirty part, then use the sponge or cloth to wipe the dirty. Do not use water, soap water or cleaner with wax. If you find some dust on the surface, please use dry cloth to wipe it gently.

3.Please do not put the chair in direct sunlight place and do not put the chair in the place which air conditioner blows directly. Or it is easy to make the fabric fade.

How to disassemble

STEP 1

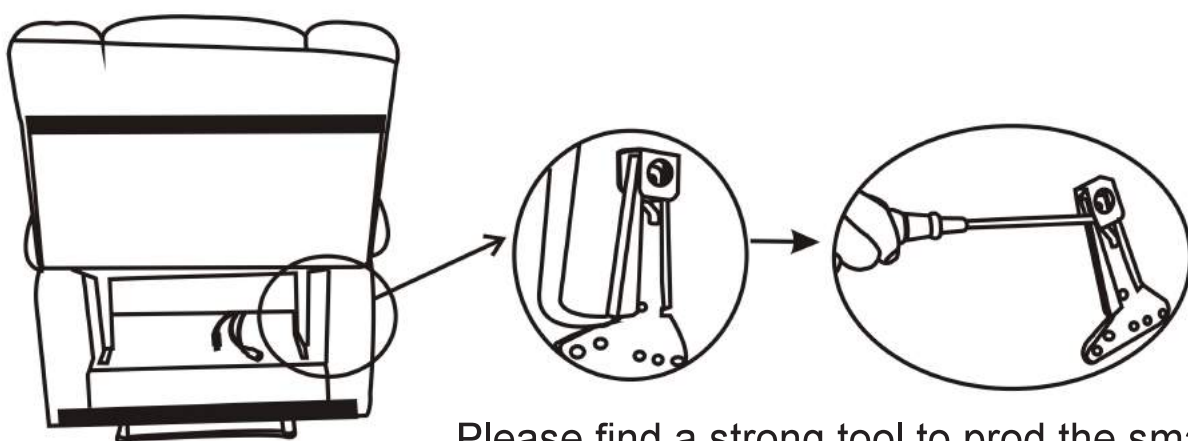

Please find a strong tool to prod the small piece of metal grooves, then the backrest will be pulled out. The tool is not included.