COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

708287
End Table

REVISION 0: 10/31/2023

ITEM : **708287**

COASTER FINE FURNITURE

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING !

1. Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

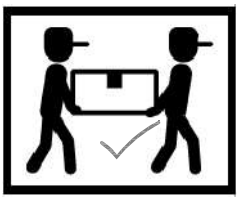

ASSEMBLY TIME | 15 MINUTES

PARTS IDENTIFICATION

A	TOP		1PC
B	LEG FRAME		1PC
C	LEG		2PCS
D	UPPER CROSSBAR		1PC
E	LOWER CROSSBAR		1PC

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	BOLT (M6 x 50mm - RBW)		8PCS
3	LOCK WASHER (1/4" - BLK)		8PCS
4	FLAT WASHER (M6 x 13mm - RBW)		8PCS
5	HEX HEAD SCREW (M7 x 35mm - RBW)		1PC
6	WOOD DOWEL (M8 x 30mm)		4PCS

ITEM : **708287**

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

STEP 1

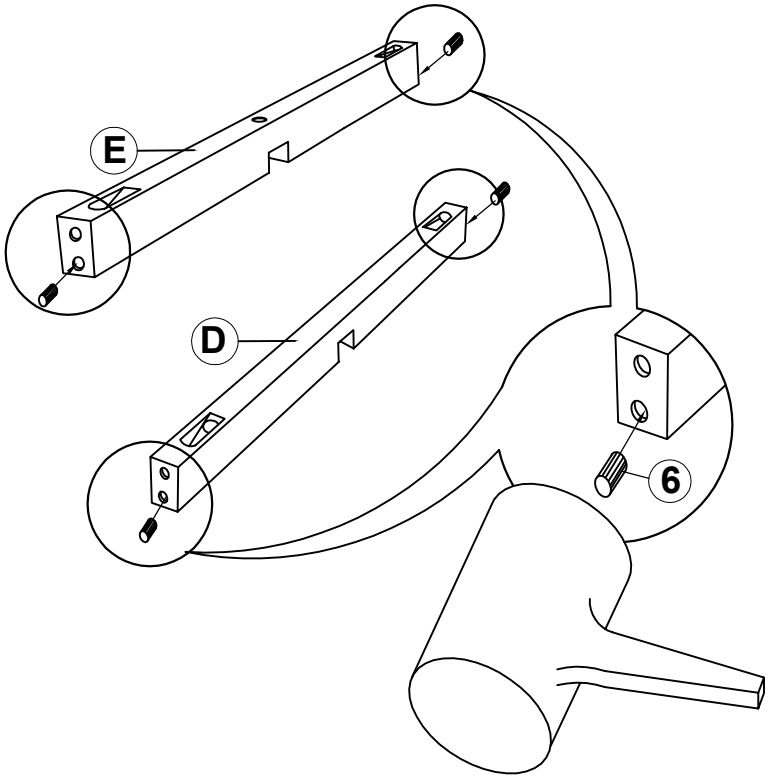

STEP 2

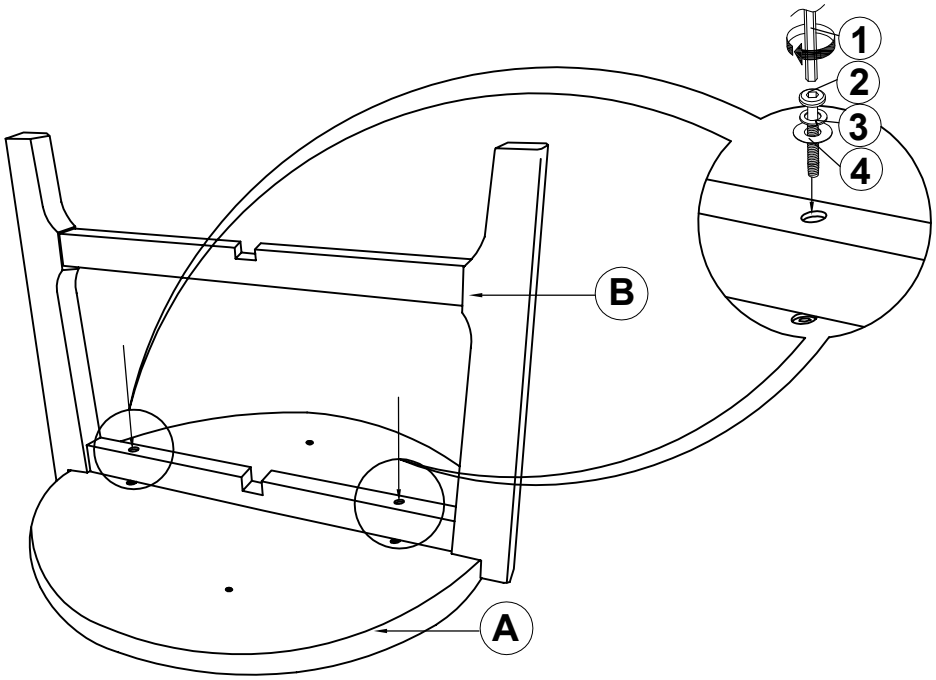

ITEM : **708287**

ASSEMBLY INSTRUCTIONS

STEP 3

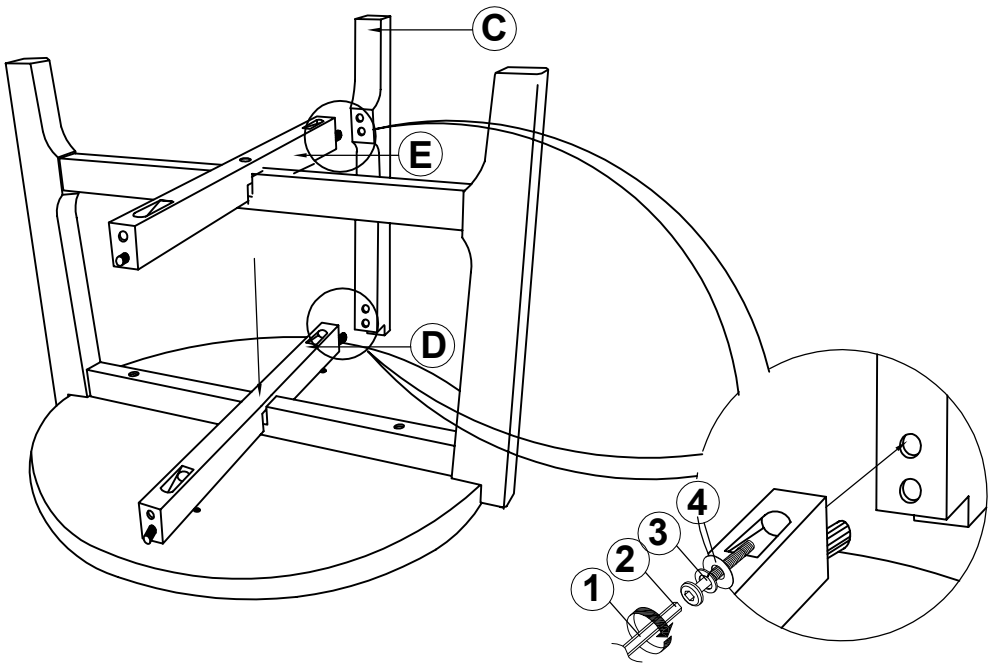

STEP 4

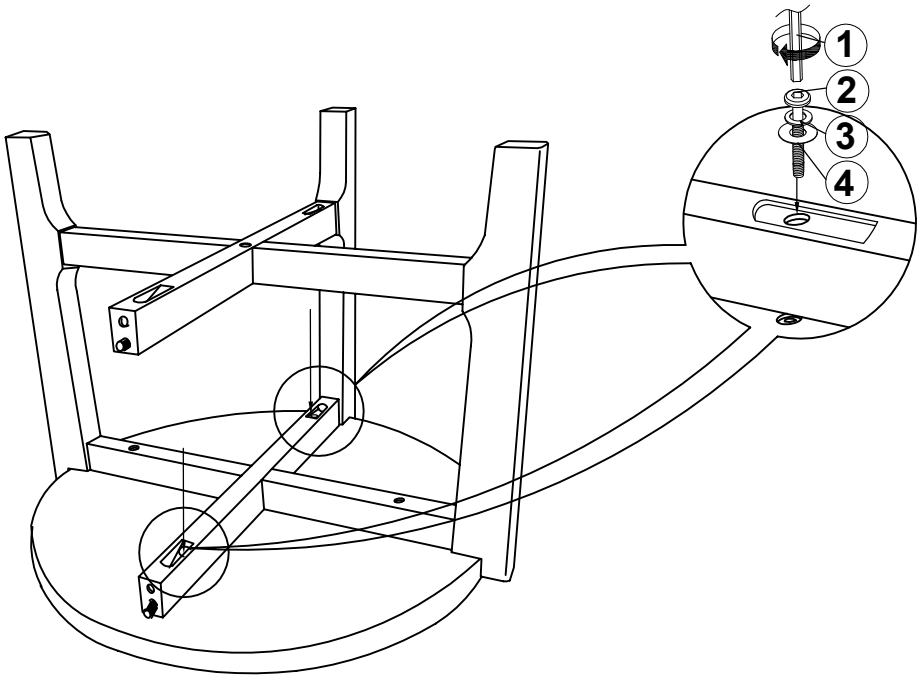

ITEM : **708287**

ASSEMBLY INSTRUCTIONS

STEP 5

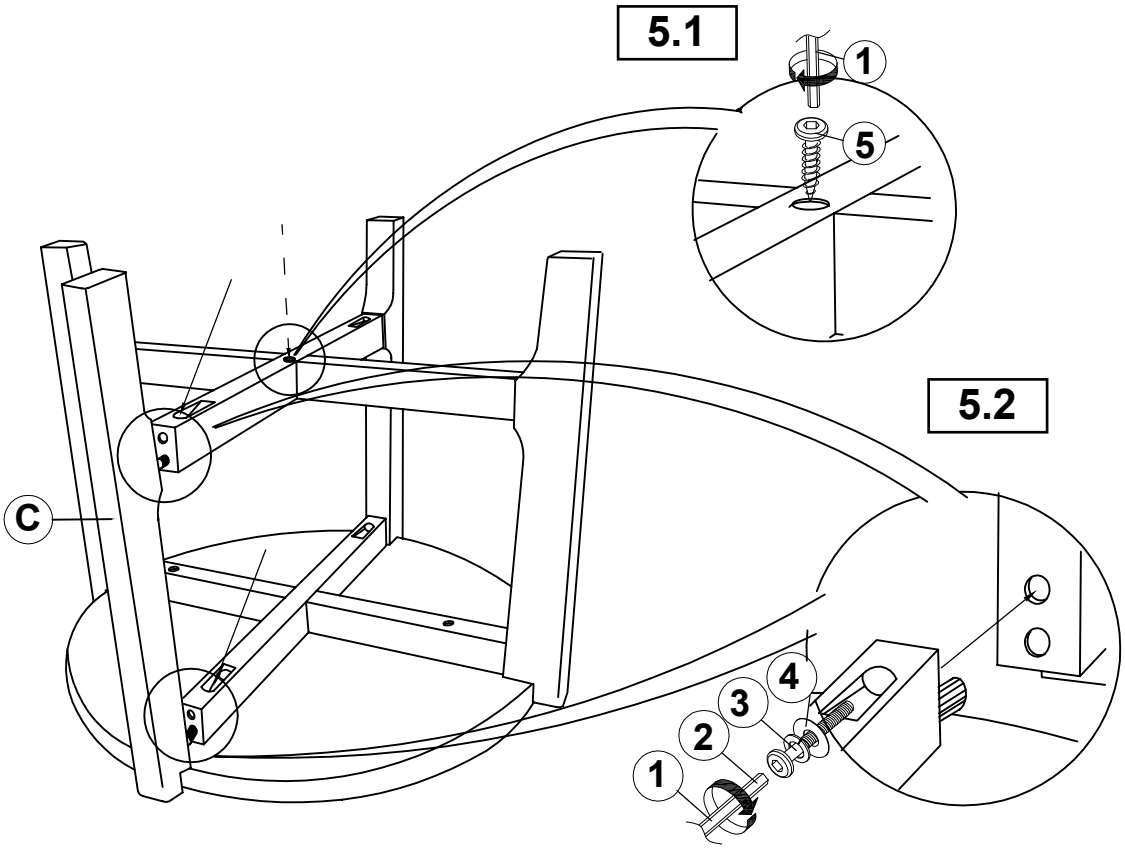

STEP 6

COMPLETE

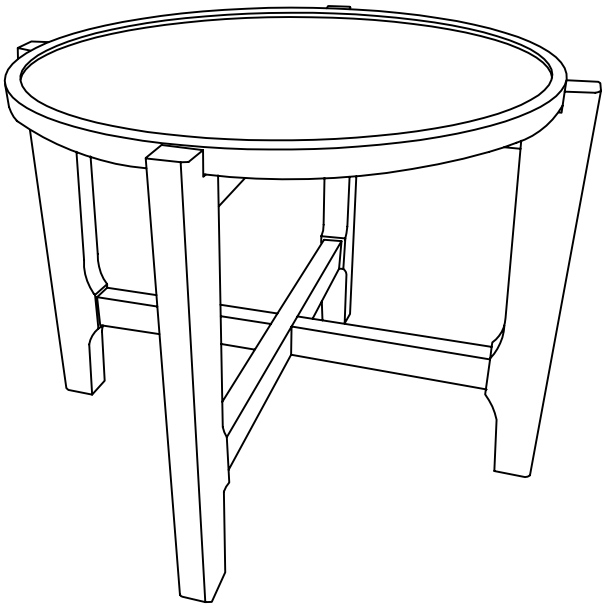

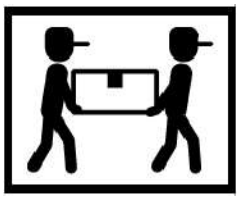

ITEM : **708287**

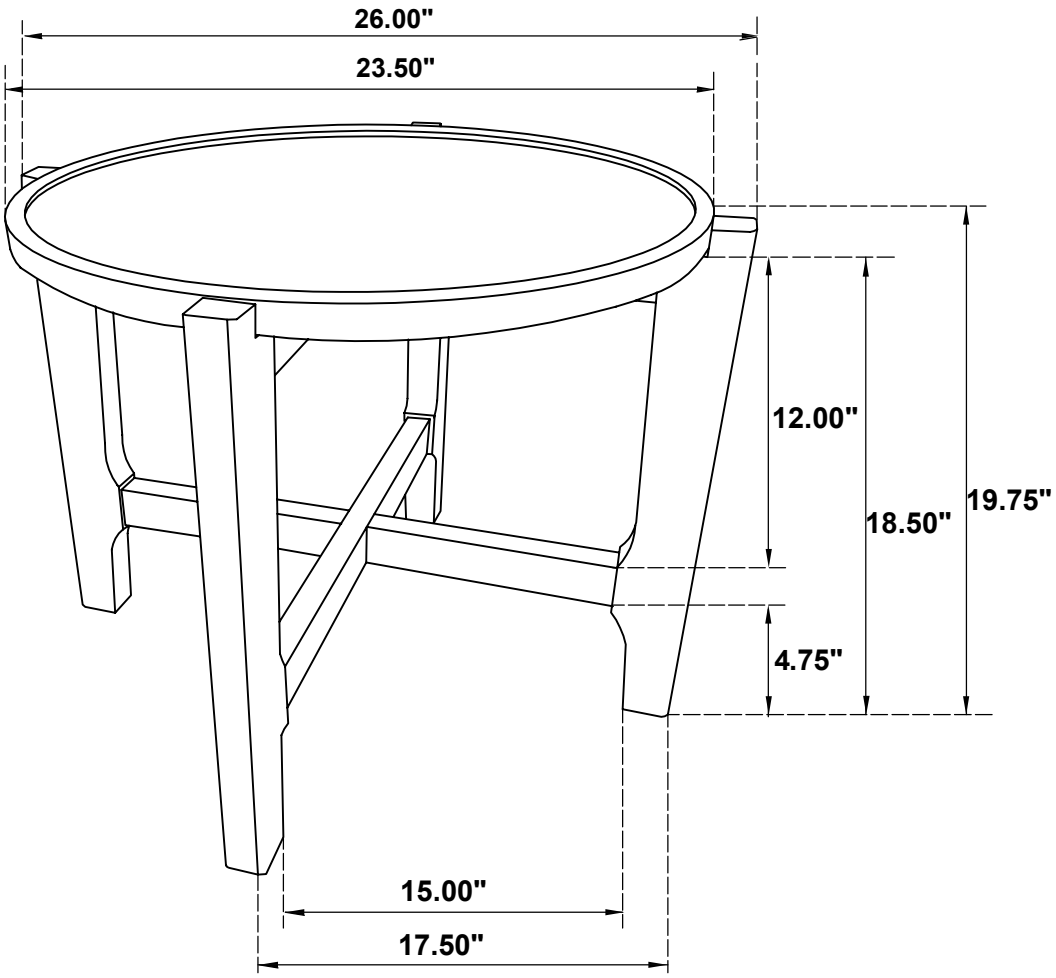

Note: Dimension tolerance ±5%

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

Fine Furniture for every stage of life

708288
Coffee Table

REVISION 0: 10/31/2023

ITEM : **708288**

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING !

1. Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

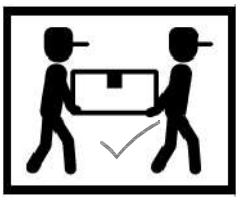

ASSEMBLY TIME | 15 MINUTES

PARTS IDENTIFICATION

A	TOP		1PC
B	LEG FRAME		1PC
C	LEG		2PCS
D	UPPER CROSSBAR		1PC
E	LOWER CROSSBAR		1PC

HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	BOLT (M6 x 50mm - RBW)		12PCS
3	LOCK WASHER (1/4" - BLK)		12PCS
4	FLAT WASHER (M6 x 13mm - RBW)		12PCS
5	HEX HEAD SCREW (M7 x 35mm - RBW)		1PC
6	WOOD DOWEL (M8 x 30mm)		4PCS

ITEM : **708288**

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

STEP 1

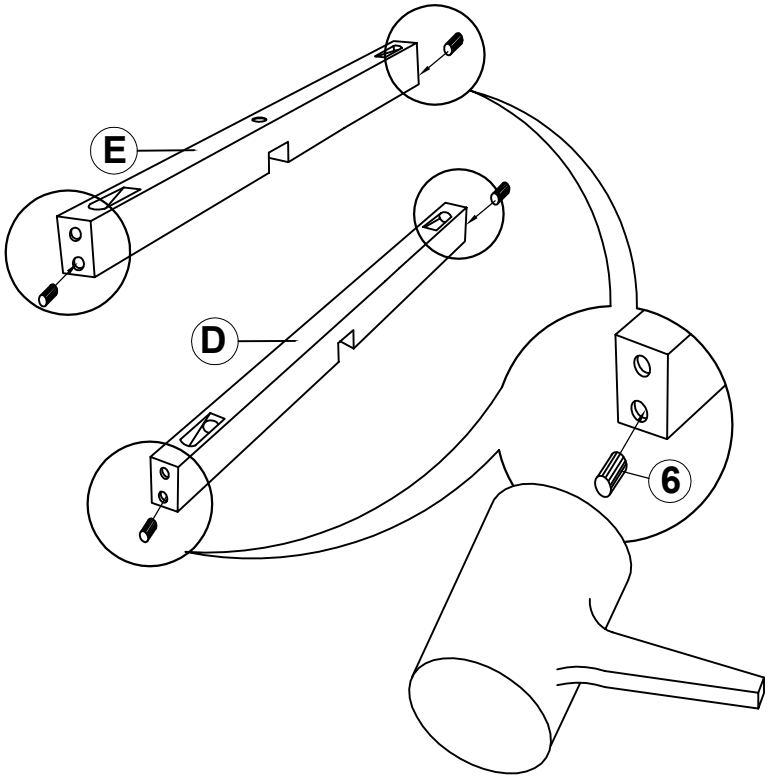

STEP 2

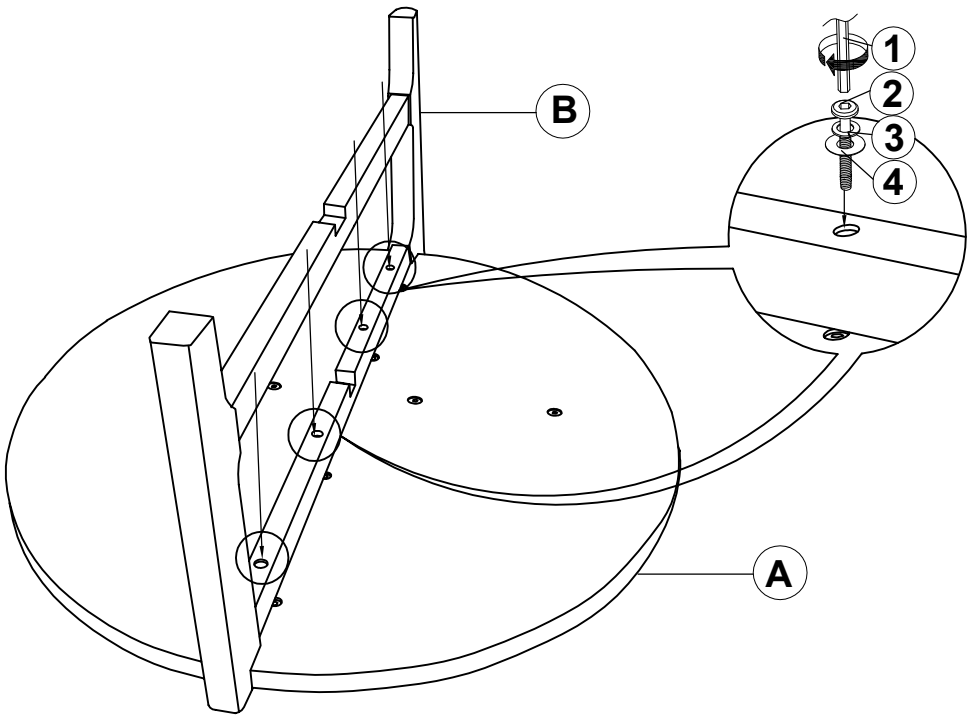

ITEM : **708288**

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

STEP 3

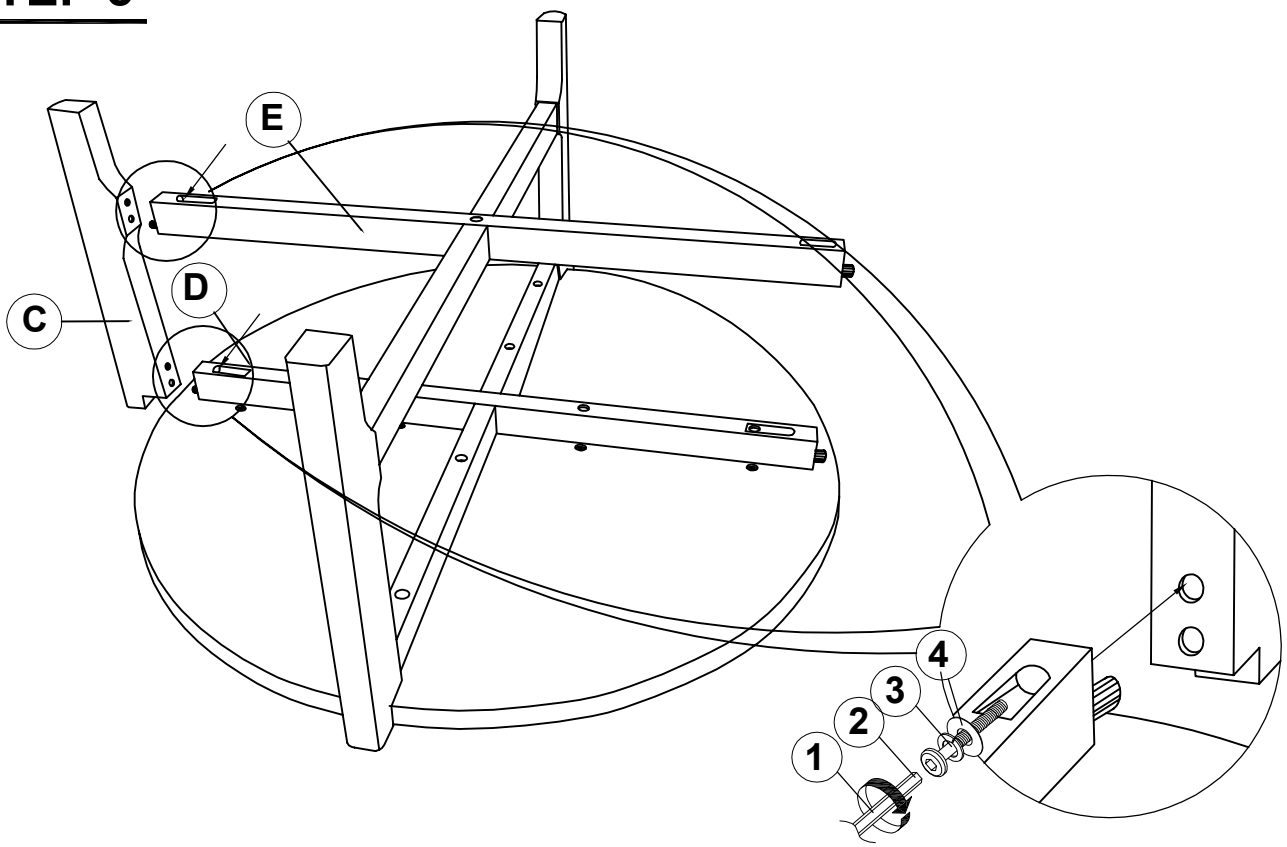

STEP 4

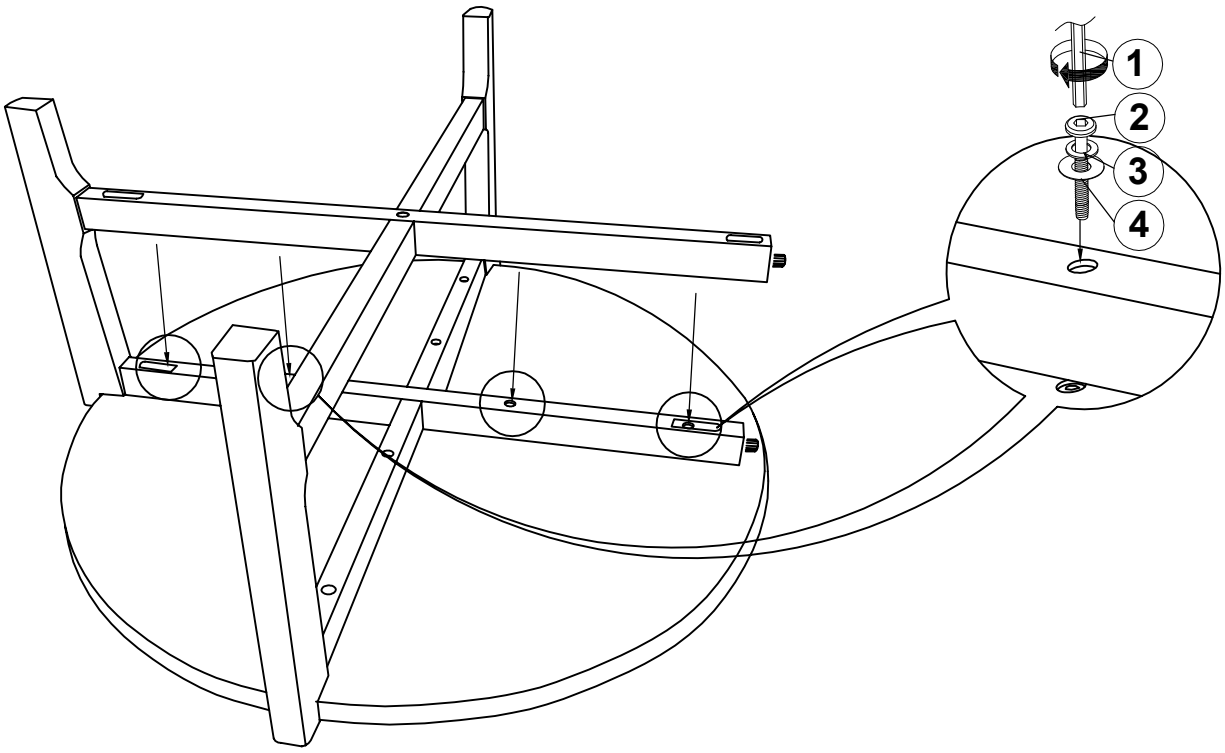

ITEM : **708288**

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

STEP 5

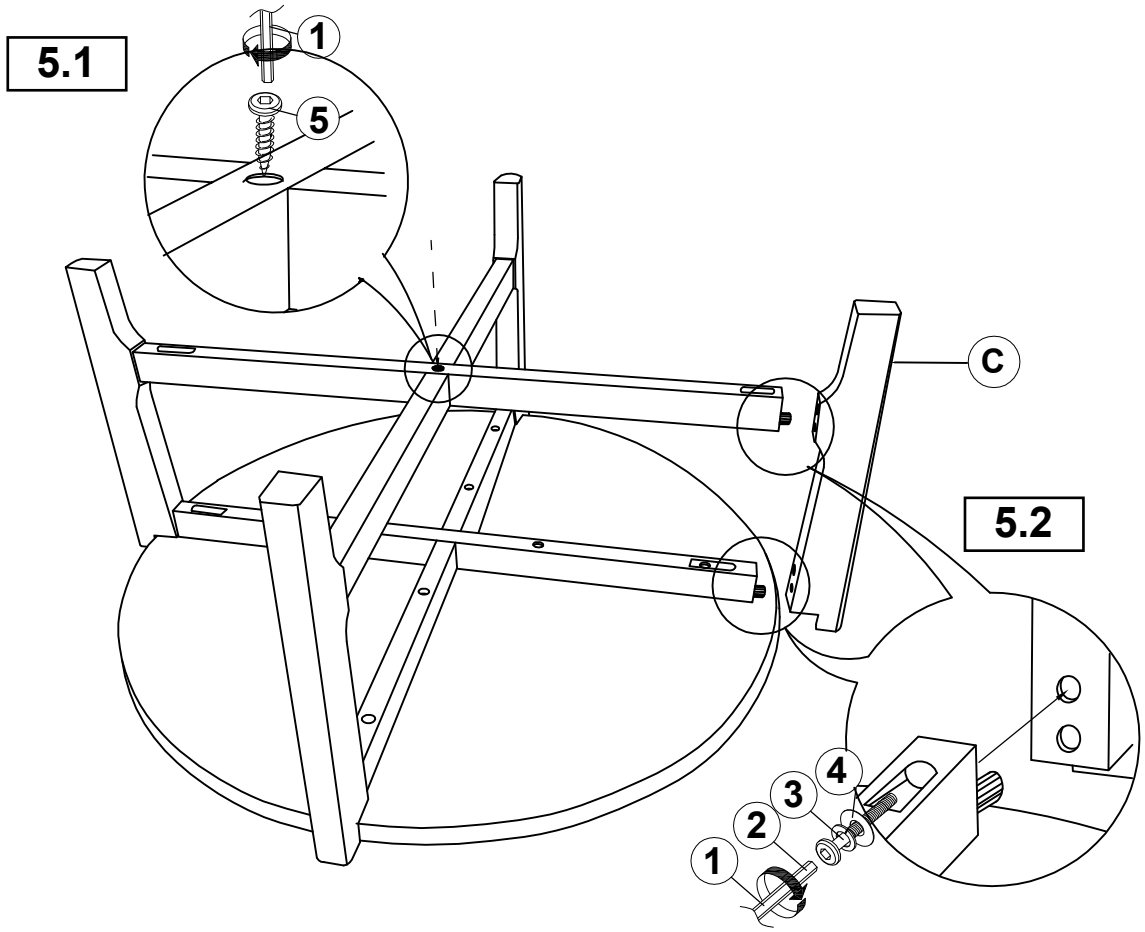

STEP 6

COMPLETE

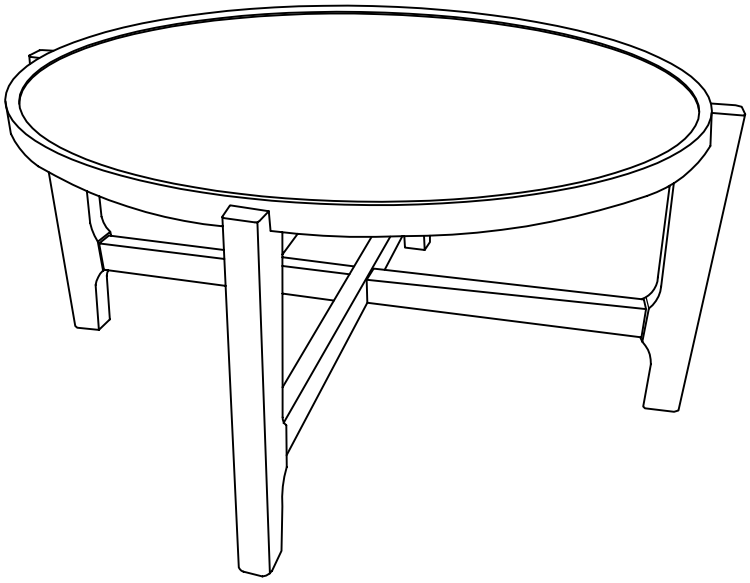

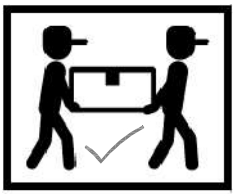

ITEM : **708288**

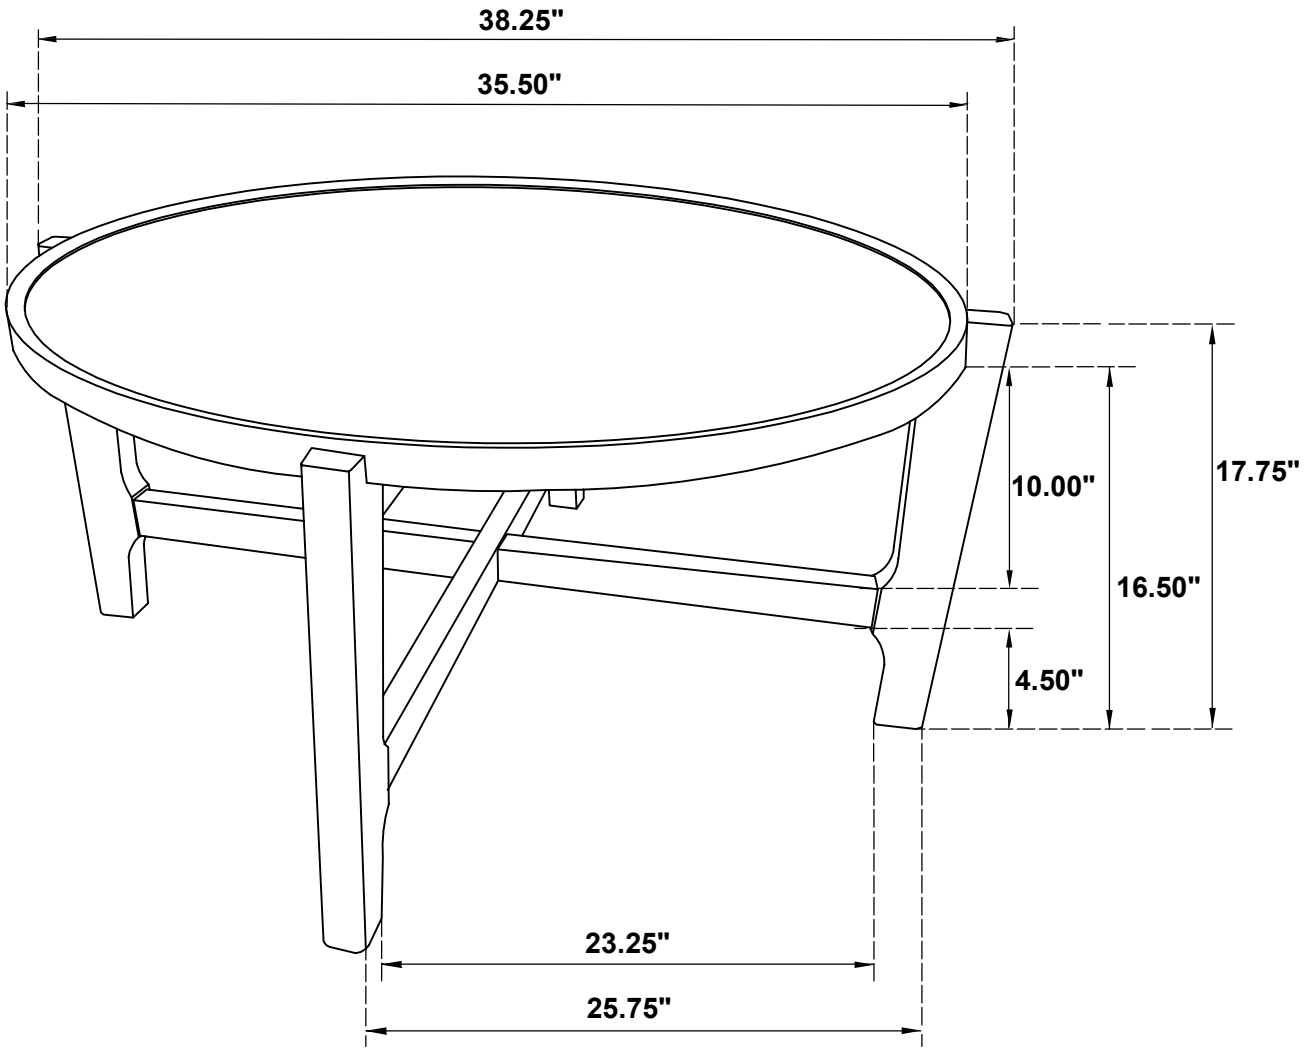

Note: Dimension tolerance ±5%