
Instructions Manual - Issued on 25/08/2025.
Please keep for future reference.

Sonia Adjustable Wall Light & Taper Shade

Item: 27323-27324-27325

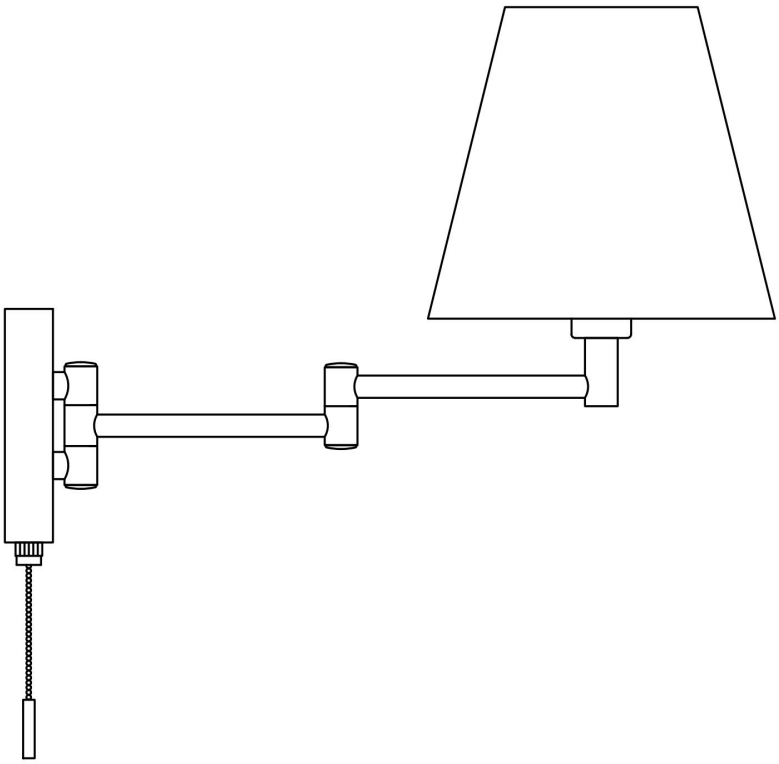

Dimensions

Depth: 275mm

Width: 400mm

Height: 180mm

Ceiling Plate Diameter: 120mm

Weight: 550g

Country of the Origin: Made in China

Please not pulling too hard on the string as it may damage the product

Thank you for purchasing the Sonia Adjustable Wall Light & Taper Shade. This manual will guideyou through the setup and operation of the product. Please rea d the instructions carefully before using the light.

ValueLights, 4 Omega Drive, Irlam, Manchester, M44 5GR


Care and Maintenance Advice

- Before cleaning or maintaining the wall light, always disconnect it from the power source.
- To clean the bulbs (not included), use a soft, dry cloth to remove any dust or debris.
- Dust can accumulate on the surface of the light fixture over time. To maintain its sleek appearance, gently dust the product with a soft, lint-free cloth or a feather duster on a regular basis.
- When cleaning your wall light, refrain from using harsh chemicals, abrasive cleaners, or solvents. Instead, use a mild soap diluted in water. Apply the soapy solution with a soft cloth and gently wipe the surface. Rinse thoroughly with clean water and pat dry to prevent water spots.
- The chrome finish is susceptible to scratches and abrasions. Handle the light fixture with care and avoid dragging or rubbing it against hard surfaces. When disassembling or installing the fixture, place it on a soft, padded surface to prevent accidental damage.
- Although the product is designed for indoor use, ensure that it is installed in a dry environment. Avoid exposing the wall light to excessive moisture, such as in bathrooms or outdoor areas, as this may damage the finish and internal components.
- Periodically inspect the fixture for any signs of wear, loose screws, or other issues. If you notice any problems, contact a qualified technician for assistance. Never attempt to repair electrical components yourself.
- Prolonged exposure to direct sunlight may cause the black colour to fade or discolour over time. Install the wall light away from direct sunlight or use window treatments to protect it from harmful UV rays.
- If you ever need to store or transport the light fixture, ensure that it is securely packaged and protected from impacts or jostling. Use the original packaging whenever possible to provide the best protection during storage or transit.


SPECIFICATIONS

Material:	Steel, Fabric
Finish:	Painted/Plated
Colour:	Matte Black, Brushed Chrome, Brushed Gold
Lampholder Fitting	E14 x 1, LED 7W-10W MAX (not included)
Bulb Technology	LED
Voltage:	240V 50Hz
Protection Class:	Class I (it requires an Earth connection)


Components and Fittings

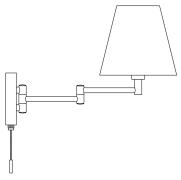

Lighting fitting (pre-wired)

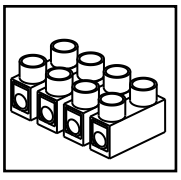

Terminal Block
(Fitted in ceiling plate)

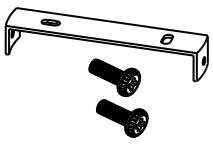

Bracket and Side Screws
(Included in pack)

Suggested tools required (not supplied)


- ✓ Screwdriver - with insulated handle.
- ✓ Pliers - for twisting wire and cutting cable.
- ✓ Drill – choose appropriate drill bits for your chosen location and mounting surface.
- ✓ Wire strippers.




IF AT ALL UNSURE, STOP NOW AND SEEK PROFESSIONAL GUIDANCE


Assembly

- Unpack the product and remove all packaging. Lay the product out on the floor. If the floor is not carpeted, please cover it with a soft cloth to avoid damage to the flooring and surface of the product.
- Ensure power is switched off at mains control unit.
- Unscrew the two side screws to remove bracket from the wall plate. Drill suitable holes into the wall, ensuring that they align with the holes in the bracket and insert the wall plugs. Attach the bracket into the wall plugs using suitable screws. Step 1 & 2
- Connect the supply wires to the terminal block, opposite the corresponding wires from the fitting. (Ensure that connections are tight, and no loose strands of wire are left out of the connector block). Step 3
- Attach the wall plate to the bracket using the side screws provided to securely fasten it in place. Step 4.
- Attach the shade on the lampholder and use lampholder ring to fixed. Step 5 &6
- Insert you E14 bulb. Steps 7
- Switch ON at mains control unit.

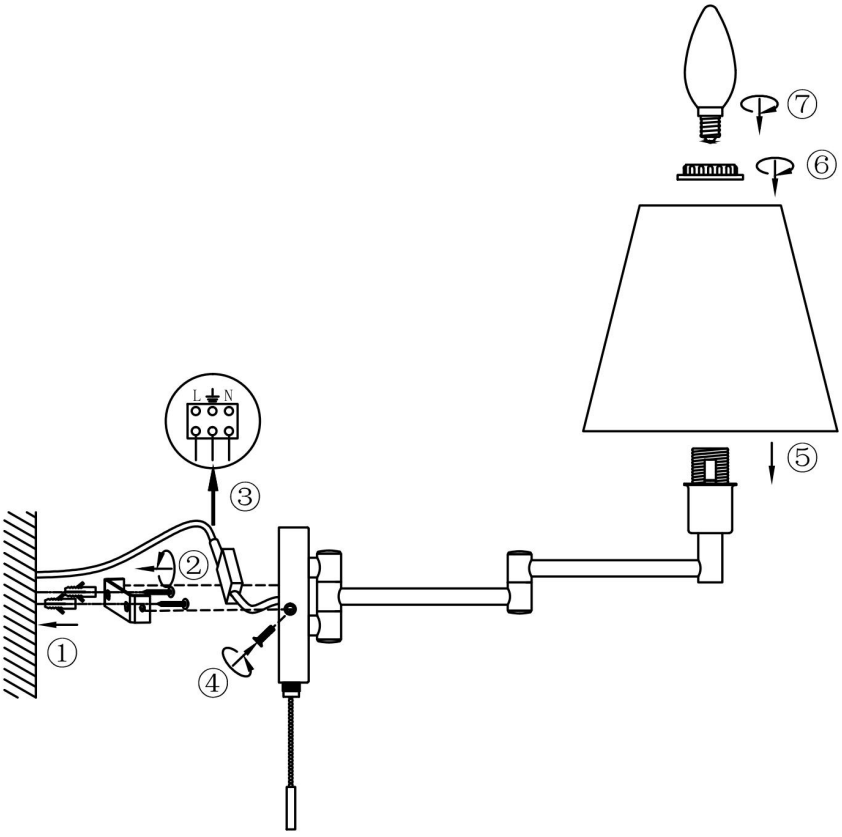

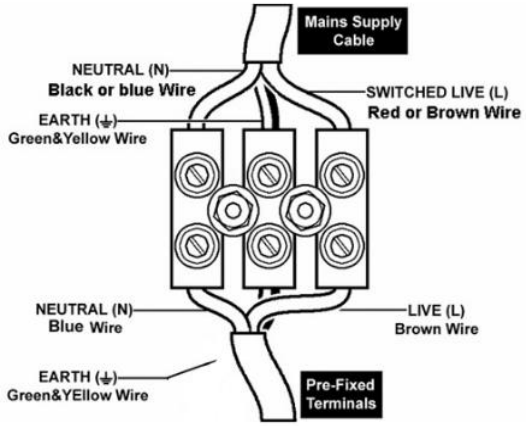

This image is for general guidance only and your supply wiring may be different. If at all unsure, stop and seek professional assistance.

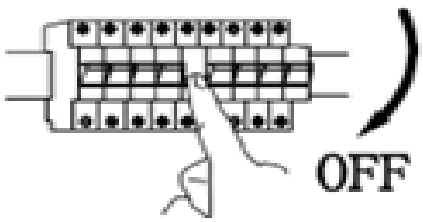

Safety & Position

Safety and Position:

- Use screws and fixings that are suitable for the material of your wall. If the supplied ones are not compatible, select appropriate ones to ensure a secure installation.
- This product is classified as Class I and requires an Earth connection. Ensure proper grounding to reduce the risk of electric shock.
- This fixture must be permanently wired into the electrical system. Always switch off power to the circuit before starting any installation work.
- Do not modify or alter the product before or after installation. Any unauthorized alterations may invalidate the warranty and compromise safety.
- Before inserting or replacing bulbs, ensure the power is switched off, and the bulbs have cooled down to prevent electric shock.
- Cover all connections with suitable insulation tape to protect against accidental contact and potential electrical hazards.
- The terminal block should be housed within the mounting plate or a suitable recess behind the fitting to prevent exposure to live connections.
- All wiring must conform to the current I.E.E regulations to maintain safe electrical connections and compliance with standards.
- Install this product in accordance with national building regulations. If unsure, consult a competent electrician to ensure proper and safe installation.
- Do not mount the fitting in a damp atmosphere.
- Be aware of any sunken pipes or wiring before choosing a location.
- Ensure sufficient access to the fitting to enable safe maintenance.

Customer Service

If you need help or have damaged or missing parts, call the Customer Helpline: 0161 837 6095
Opening Times: Monday to Friday, 9am to 5pm. Closed Saturday and Sunday.
(By contacting the customer service line your statutory rights are not affected)

Please have the following information to hand:

- ✓ Item Description
- ✓ Item Code
- ✓ Batch number
- ✓ Assembly Instructions

You can also e-mail your requests to us at: customerservice@valuelights.co.uk
Alternatively, you can write to us at: Customer Service Department, Value Lights, 4 Omega Drive, Iram, Manchester, M44 5GR.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment.