
# Installation Manual


## 26” Wood Burning Fire Pit w/grill

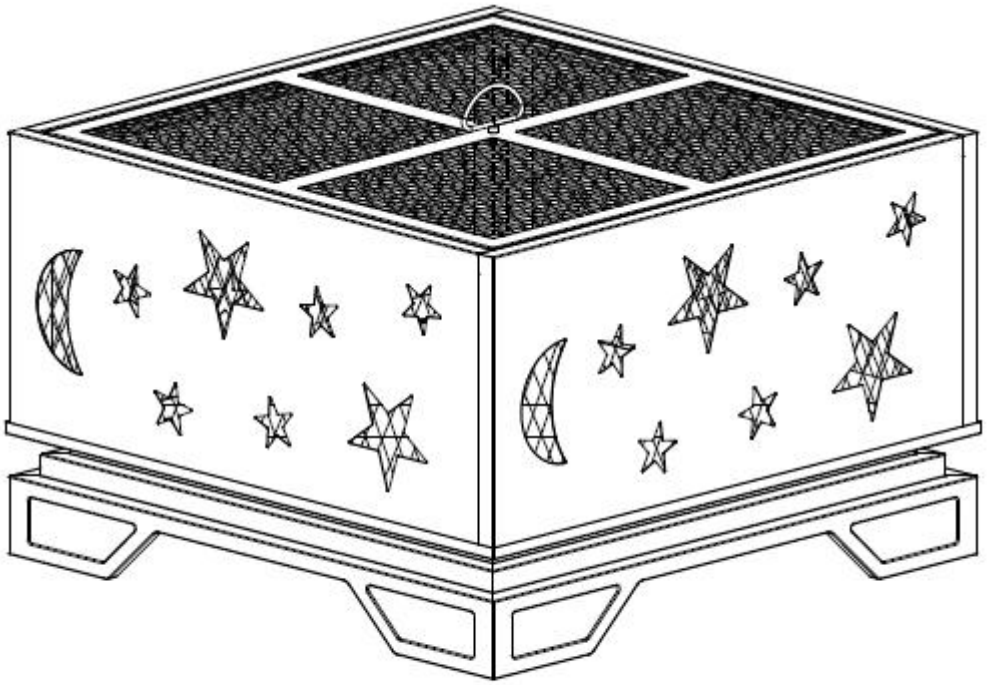




# For Outdoor Use Only

## PACKAGE CONTENTS

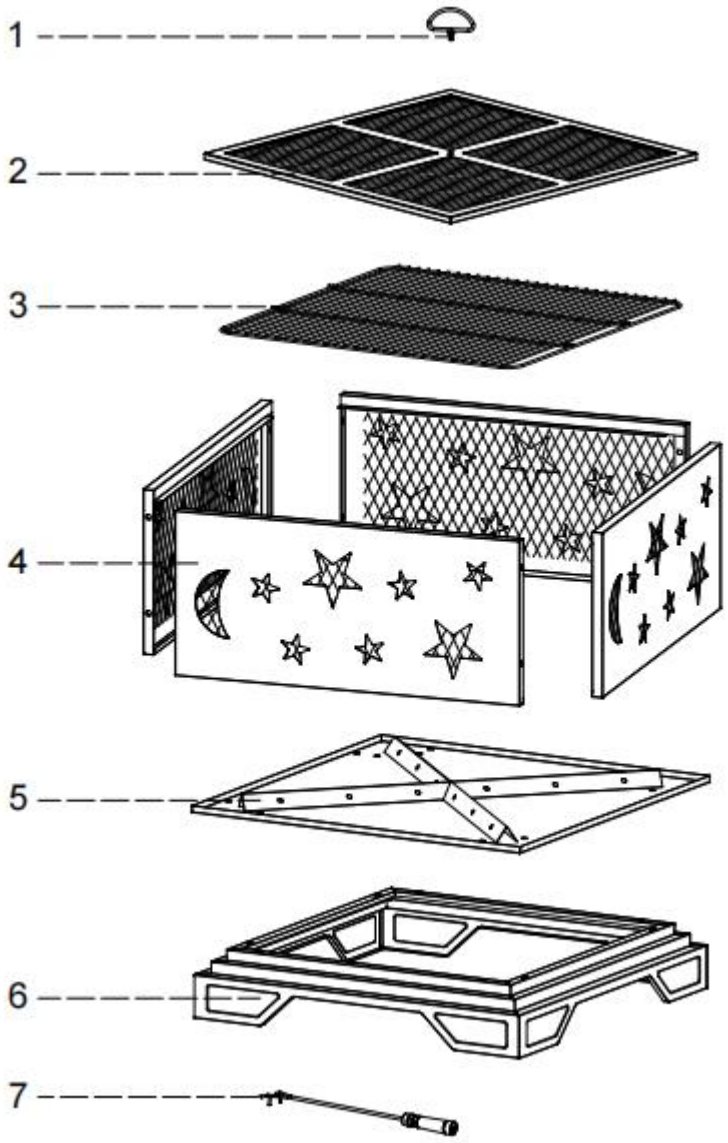


### Hardware Pack

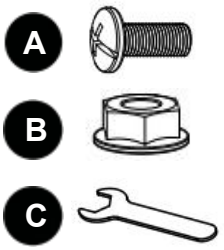


M6x10 Screw
Qty. **25**

M6 Nut
Qty. **1**

M6 Wrench
Qty. **1**

| Part# | Desc. | Qty(pc) |
|---|---|---|
| 1 | Mesh Cover Handle | 1 |
| 2 | Mesh Cover | 1 |
| 3 | Cook Grate | 1 |
| 4 | Side Panel | 4 |
| 5 | Bowl Tray | 1 |
| 6 | Base | 1 |
| 7 | Poker | 1 |

## CARE & MAINTENANCE

Lighting

1. Make sure there is only a small amount of ashin the bottom of the bowl.
2. Place a layer of dry kindling or a natural fire-starter onto the center of the fire bowl.
3. Place above that a layer of dry seasoned hardwood that is no more than 3/4 the length of the bowl diameter.
4. Use a match to light kindling or fire-starter.

Tending the Fire

You may need to shift and/or add logs for an ideal experience.

DO NOT place hot fire pit tools onto combustible surfaces such as grass, wooden deck or furniture.

1. While using a long handled fire pit tool, shift coals and logs to allow additional airflow.
2. DO NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol torelight or enhance an existing fire.
3. Wait until glowing coals have developed before adding any additional wood. If additional wood is required,place wood on top coals, be careful not to shift ashes.


## SAFETY INFORMATION

### ⚠ Please read and understand this entire manual before attempting to assemble, operate or install the product.


- This item is for **outdoor use only**, and shall NOT be used in a building, garage or any other enclosed area. **TOXIC** carbon monoxide(**CO**) fumes can accumulate and cause asphyxiation or death.
- This fire pit is NOT for commercial use.
- This fire pit is NOT to be operated by children.
- This fire pit is NOT to be used in or on boats or recreational vehicles.
- Always use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.
- The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate this fire pit.
- This fire pit is for use with dry, seasoned hardwood. It will burn hotter, more completely and create less smoke.
- **DO NOT burn lump charcoal, manufactured logs, driftwood, trash, leaves, papers, cardboard, plywood, painted or stained or pressure treated wood. Avoid using softwoods such as pine or cedar that can throwsparks.**
- DO NOT alter this fire pit in any manner.
- DO NOT use this fire pit until it is COMPLETELY assembled and all parts are securely fastened and tightened.
- DO NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
- DO NOT store or use an LP gas cylinder within 10 feet (3.05 m) of this fire pit while it is in operation. The fire pit should be placed no closer than 24 inch from walls during use.
- DO NOT use this fire pit near automobiles, trucks, vans or recreational vehicles.
- Keep outdoor area clean and free from combustible materials, gasoline and other flammable liquids.
- DO NOT use this fire pit under an overhead or near any unprotected combustible constructions. Avoid using near or under overhanging trees and shrubs.
- Always use this fire pit on a hard level non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose. DO NOT use on wooden decks.
- Always empty this fire pit before each use.
- DO NOT wear flammable or loose clothing when operating this fire pit.
- DO NOT use in windy conditions.
- DO NOT use gasoline, kerosene, diesel fuel, lighter fluid to start or relight fires.
- Keep all electrical cords away from a hot fire pit.
- All surfaces of this fire pit are hot when in operation. To avoid burns, do NOT touch fire pit until it has completely cooled unless you are wearing protective gear (potholders, gloves, BBQ mittens, hot pads , etc). Never touch ashes to start or coals to see if they are hot.
- DO NOT attempt to move or store this fire pit until ashes and coals are completely extinguished.
- DO NOT remove ashes or coals until they are completely and extinguished.
- Use heat-resistant gloves or hot pads when contacting handles.
- Use long, sturdy fire pit tools when adding or moving logs.
- DO NOT place wood directly into bottom of the fire pit. Place wood only on the center of the fire bowl.
- DO NOT overload the fire pit. DO NOT add additional firewood until the fire burns down. **NOTICE: If any portion of the bowl of this fire pit are glowing red, it is overloaded.**
- DO NOT lean over this fire pit when lighting or when in use.
- DO NOT place hot pit tools onto combustible surface such as grass, wooden deck or furniture.
- Avoid breathing smoke from the fire and avoid getting it into your eyes.
- This fire pit should be thoroughly inspected and cleaned on a regular basis.
- After a period of storage and/or non-use, check for signs of damage and creosote build-up. DO NOT operate until necessary repairs and/or cleanup is executed.
- Death, serious injury or damage to property may occur if the above is not followed Exactly

# ASSEMBLY INSTRUCTION


**STEP 1.**
Attach the Mesh Cover Handle onto the Mesh Cover with 1pc M6 nut(C). Tighten the screws.DO NOT cross thread.

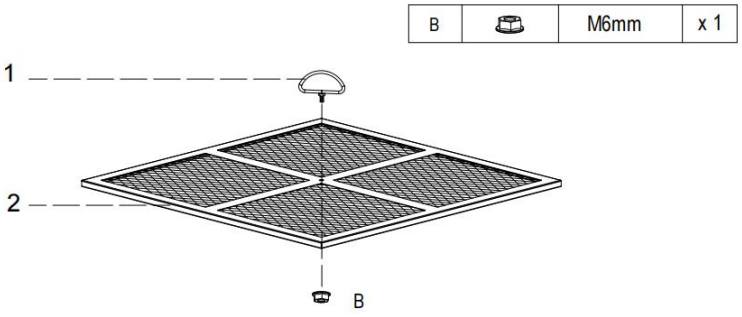



**STEP 2.**
Assemble the Side Panel with 8 pieces of M6x10 screw(A). Tighten the screws .DO NOT cross thread.

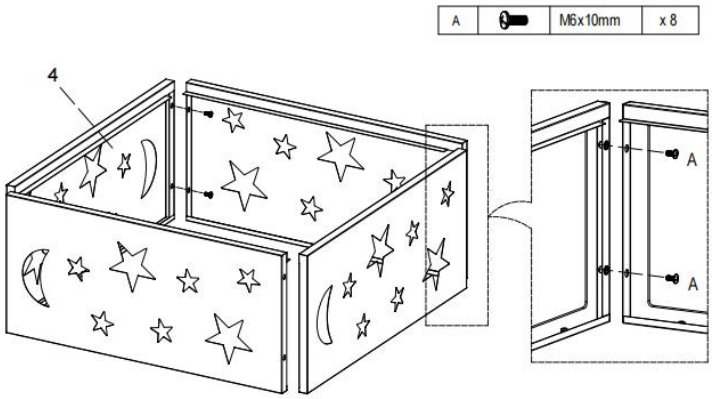


**STEP 3.**
Flip the assembled side panels upside down. Install the Bowl tray with 8 pieces of M6x10mm

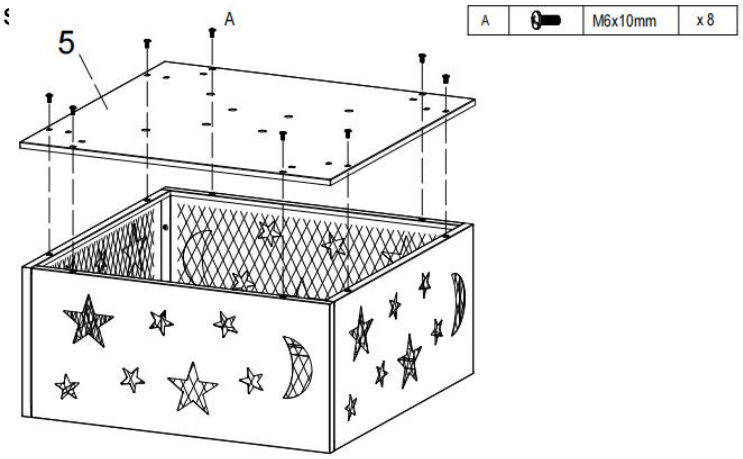


**STEP 4.**
Attach the accembled fire bowl onto the base with 8 pieces of M6x10 screw(A) .Tighten the screws DO NOT cross thread.

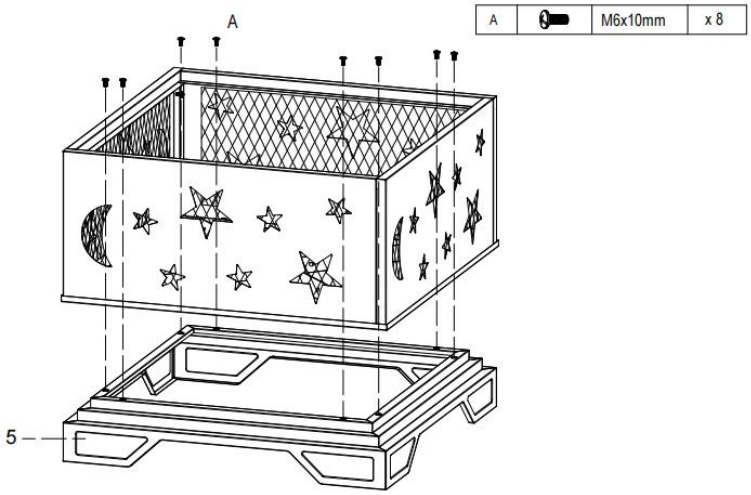


**STEP 5.**
Put cook grate into fire bowl when BBQ use, But for fire pit use, please remove the cook grate and put mesh cover when use.

