
mifasol

USER MANUAL

Warm Steam Humidifier

Model: MFS-JSQ-01

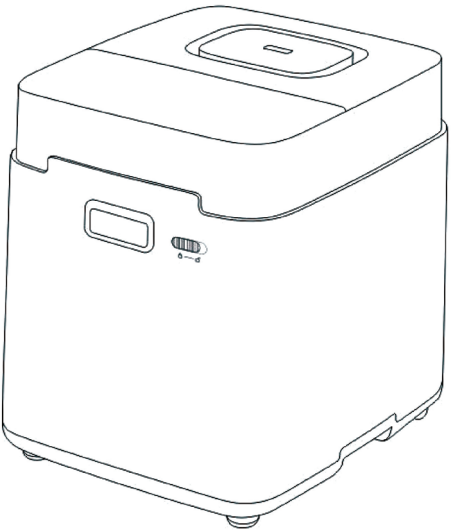

Looking for help?

We provide a one-year warranty.
Any questions or concerns,
please feel free to contact us at

+1 8337371338(En)
Mon.–Fri. 9 AM–1 PM, 2 PM–5 PM (ET)

info@mifasol.vip

Precautions

Thank you for purchasing our humidifier MFS-JSQ-01.

Before using this product, please read this manual carefully and keep it for future reference.

All pictures shown are for illustration purposes only.
Actual products may vary due to product improvement.

For more installation information,
please visit the official website link or scan the QR code:

https://www.feekaa.com/pages/user-guide

Contents

1 Safety Precautions 1-2

2 Product Structure Diagram 3

3 Product Specifications 4

4 Location Requirements 5

5 Using Instructions 6-9

Before Use 6-7

LED Display 8

Control Panel 9

6 Cleaning & Maintenance 10

7 Troubleshooting 11-12

8 Warranty 13

9 Warranty Card 14

Safety Precautions

To prevent injury to the user or other people and property damage, follow all instructions and safety guidelines.

General Safety

- Only use the humidifier as described in this manual.
- Keep the humidifier out of reach from children and infants.
- This humidifier is not to be used by persons (including children) with reduced physical, sensory, or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for the safety.

Operation Safety

- Do not touch hot surfaces.
- Do not open the cover during use.
- Do not cover the steam outlet during use.
- Do not touch the steam outlet and keep hands and face away to avoid scalding.
- Allow appliance to cool before putting on or taking off parts, and before cleaning or storage.
- Be extremely cautious when moving the humidifier or inner pot if it contains hot water.
- Always make sure to place the humidifier on a flat, level surface before operation.
- Do not use the humidifier in wet environments.


Safety Precautions

- Do not place the humidifier near sources of heat, such as stovetops, ovens, or radiators.
- Do not use outdoors. Intended for indoor household use only.
- Only fill the water tank with clean water. Never fill the water tank with any other liquids.
- Do not add essential oils or water filters into the water tank.
- Water amount should NOT exceed the MAX level marked on inner pot.
- Ensure the heating plate is clean and the underside of the inner pot is dry before inserting the inner pot.
- Do not disassemble, repair or modify the humidifier. For any repair, consult Customer Support.

Electricity Safety


- Do not handle the power cord or plug with wet hands.
- Do not immerse the humidifier base, power cord, or plug in water.
- Do not run cord under carpeting, furniture, appliances or similar coverings.
- Always turn the humidifier off and unplug from electrical outlet when not in use and before cleaning.
- Do not let the power cord hang over the edge of a table or counter or touch hot surfaces.
- Do not use this appliance if the cord or plug has been damaged to avoid fire or electric hazards.

Product Structure Diagram

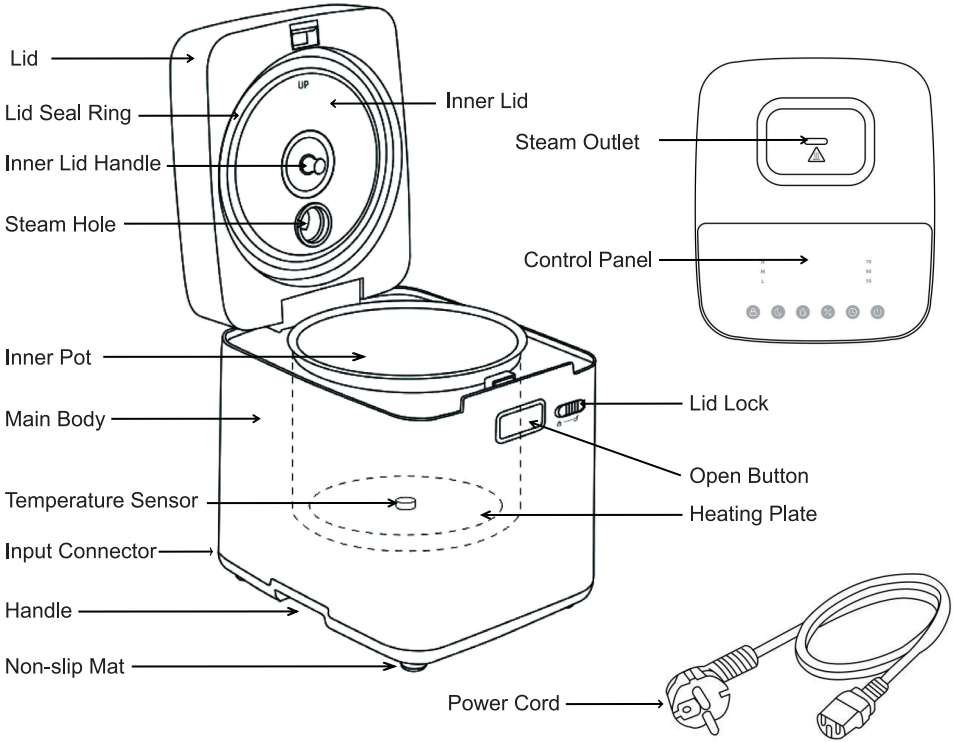

Product Specifications

Product Name	Warm Steam Humidifier		
Model Number	MFS-JSQ-01		
Operation Mode	Low	Medium	High
Humidifying Time	About 9H	About 7H	About 4H
Rated Power	800W		
Rated Voltage	120V~		
Rated Frequency	60Hz		
Dimensions	30.3 x 25.5 x 29.3 cm / 11.9 x 10 x 11.5 in		
Weight	4.2 kg / 9.3 lb		

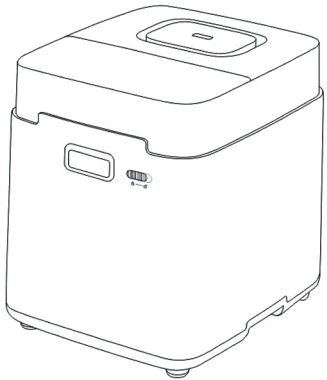


Location Requirements

Place the humidifier on a flat, level surface, keeping at least 32 cm/13 inches (all around), and 100 cm/40 inches (above) from walls or any major obstacles.

Avoid using the humidifier in the following situations to prevent water leakage, signal jamming, damage, or injury:


- In direct sunlight.
- On an unstable platform.
- In high temperatures, humidity, or dust.
- Areas within reach of children and infants.
- Near heat sources like air conditioners, heaters, stoves, or any other objects that emit heat.
- Near precision instruments like mobile phones, computers, and other electronic devices.
- Near objects that emit radio waves such as radios.
- Near areas that can be damaged by steam (such as walls, cupboards, tables, curtains or carpets).

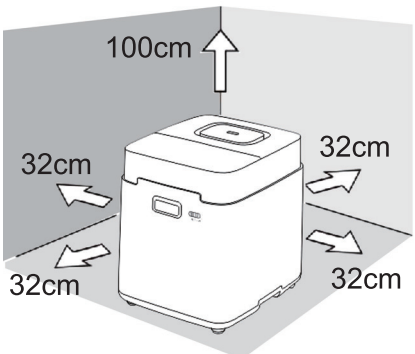


Please follow these guidelines carefully to ensure the safe and proper operation of your humidifier.

If you have any questions or concerns, please refer to the user manual or contact customer support.


Using Instructions（Before Use）

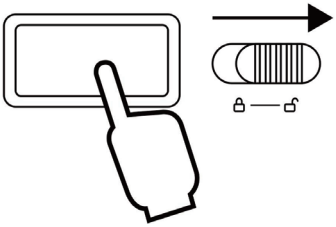


1. Slide lid lock to right to the unlock position, then press open button.

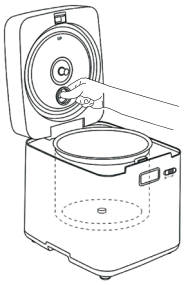


2. Hold the steam hole on inner lid and remove it.

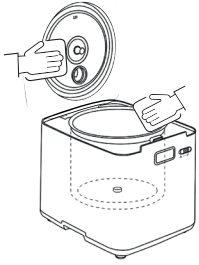


3. Wash the inner lid and inner pot with hot, soapy water and a non-abrasive sponge.

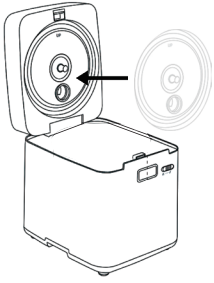


4. Reinstall the inner lid, making sure to align the steam hole.

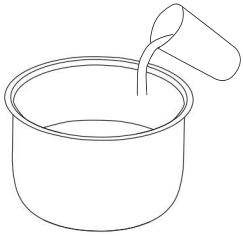


5. Add clean water to the inner pot.
   Note: Do not exceed the MAX level mark.

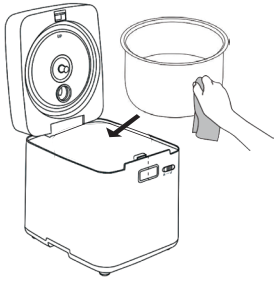

6. Dry the bottom and around the inner pot.
   Place it in the humidifier.

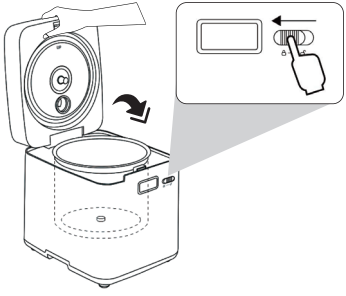

7. Close and press the lid downward. Then slide the lid lock to left to the lock position.

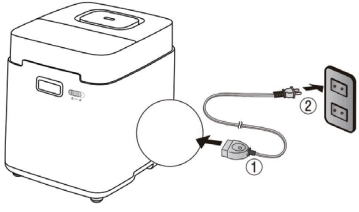


8. Plug the power cord into an electrical outlet.

Using Instructions（LED Display）

1：Mist Level Indicators　　2：Relative Humidity (RH) Percentage

3：Timer Hour Indicator　　4：Humidity Level Indicator

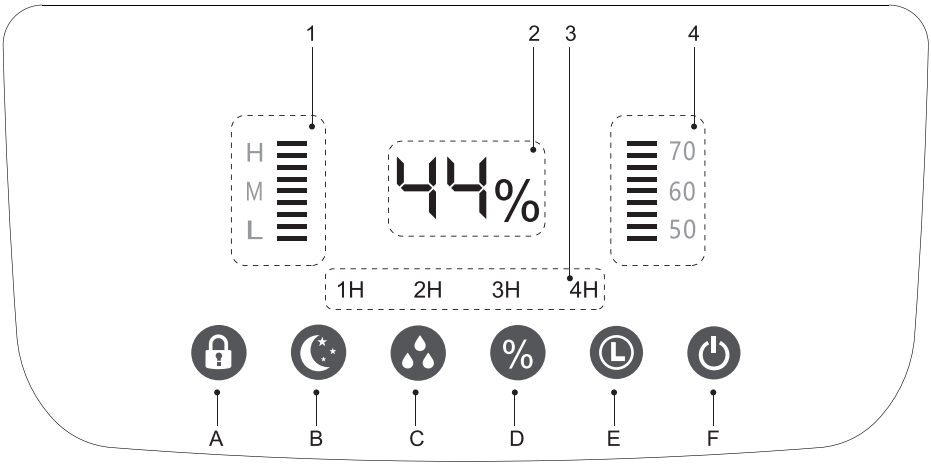

A：Child Lock Button　　D：Humidity Setting Button

B：Sleep Mode Button　　E：Timer Button

C：Mist Level Button　　F：Power Button

Using Instructions（Control Panel）

Power Button

- Turn the humidifier on/off.
- Press to enter "standby mode", the power button's white light will be on.
- The display shows current humidity levels in the humidifier's environment.

Mist Level Button

- Switch between High/Medium/Low mist level.
- Mist level indicator as shown on the right



Humidity Setting Button

- You can switch target humidity level between 70%/60%/50%.
- The panel displays current ambient humidity, not target humidity.
- Humidity level indicator as shown on the right



Timer Button

- Press to cycle through timer options from 1–9 hours.
- Press repeatedly to cycle through options in increments of 1 hour.
- To stop this function, press repeatedly until the hour indicator light turns off.

Timer	1 hour	2 hour	3 hour	4 hour	5 hour	6 hour	7 hour	8 hour	9 hour
Display	1H	2H	3H	4H	1H 4H	2H 4H	3H 4H	1H 3H 4H	2H 3H 4H

Sleep Mode Button

- Except for sleep indicator, the other display lights will be turned off.
- When Sleep Mode is on, tap any other button to wake up the display.
- In Sleep Mode, the humidifier will switch to low mist.

Child Lock Button

- Long press for 3 seconds to enable or disable the child lock function.
- Only power button can shut down the device in child lock mode, and other function buttons are unavailable.

Cleaning & Maintenance


Cleaning

Note:

- Change the water daily to avoid bacteria growth.
- If not using for 1 week or longer, do not leave water inside. Clean and dry the humidifier instead.
- Before cleaning, turn off and unplug the humidifier and allow it to cool completely.
- Do not immerse the humidifier base, power cord, or plug in water.
- Do not use abrasive cleaners, metal scouring pads, or metal utensils on any part of the humidifier. These will scratch or damage their surfaces.


Main Body

- Wipe the surface with a soft towel/sponge. If it is very dirty, clean it with a neutral detergent.
- You can use a vacuum cleaner to remove dust from hard-to-clean areas.

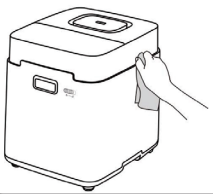

Inner Pot

- Please clean 1~2 times a week
- Wash with hot, soapy water and a soft towel/sponge.
- The stainless steel inner pot is dishwasher-safe.

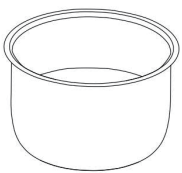

- To descale (remove mineral buildup), we recommend cleaning with neutral detergent/ distilled white vinegar/ citric acid. Soak for 15-20 minutes if necessary.

Storage

1. Clean and dry the humidifier and all accessories.
2. Place the inner pot in the humidifier. Close the lid.
3. Store the humidifier in an upright position. Do not store anything on top.

Troubleshooting

Problem	Possible Solution
Humidifier does not work.	Make sure the humidifier is plugged into a working outlet and the mains voltage corresponds with the voltage indicated on the humidifier.
No mist comes out.	This humidifier works by heating water to a boil to produce steam. Please be patient for 15-30 minutes.
Display shows Error Code "  " and makes a beeping noise.	1. The tank is short of water. Please re-fill the water tank. 2. The scale in the water tank has not been cleaned for a long time. Please descale the water tank.
Display shows Error Code “E1”.	The thermistor is open-circuited. Immediately unplug humidifier, and contact customer support.
Display shows Error Code “E2”.	The thermistor is short-circuited, or the heating plate is too hot. Immediately unplug humidifier, and restart it after cooling down. If not, please contact customer support.
There is scale in the water tank.	Tap water contains minerals that can adhere to objects. You should descale the water tank regularly.

Troubleshooting

Problem	Possible Solution
The area around the humidifier is damp or wet from condensation.	1. The humidity may be too high. Turn down the mist level, humidity level, turn off the humidifier. 2. The humidifier may be placed in a non-ventilated area. Open a window to ensure proper airflow for the humidifier, or move the humidifier to a more well-ventilated room.
Display shows an incorrect humidity percentage.	Please note that the humidity sensor and hygrometer in the room may have an error range of 5-10% depending on the sensing method and structure.
Why is the fire on the stove turning red?	The composition of tap water can react with the flame, so keep the humidifier away from the stove.

If your problem is not listed, please contact Customer Support.

Warranty

Warranty Period

- Our company provides a one-year warranty starting from the date of purchase.
- If you need to return the product, please make sure that it is intact and the packaging boxes and accessories are completely assembled.

Non-Warranty Policy

The following conditions are not covered by the warranty:

- Damage that occurs after the warranty period has expired.
- Damage caused by natural disasters or other force majeure events.
- Any damage caused by use that does not follow the requirements outlines in the User Manual.
- Failure or damage caused by the forced use of the product.
- The user disassembles or repairs the product without authorization.

Warranty Requirements

In order to receive warranty service, please follow these steps:

- Provide the warranty card and the order number.
- Describe the problems you are experiencing in detail and provide pictures or videos if possible.
- Send an email to ***info@mifasol.vip***

Please note that we cannot provide warranty service without the above information.

Thank you for choosing our product, and we hope you enjoy using it. If you have any questions or concerns, please don't hesitate to contact us.

Warranty Card

Model	MFS-JSQ-01
Warranty Period	Within 1 year from the date of purchase
Date of Purchase	Year Month Date
Purchase Store	
Order ID	
Customer	Name
	Address
	Phone Number

mifasol