















User’s Manual

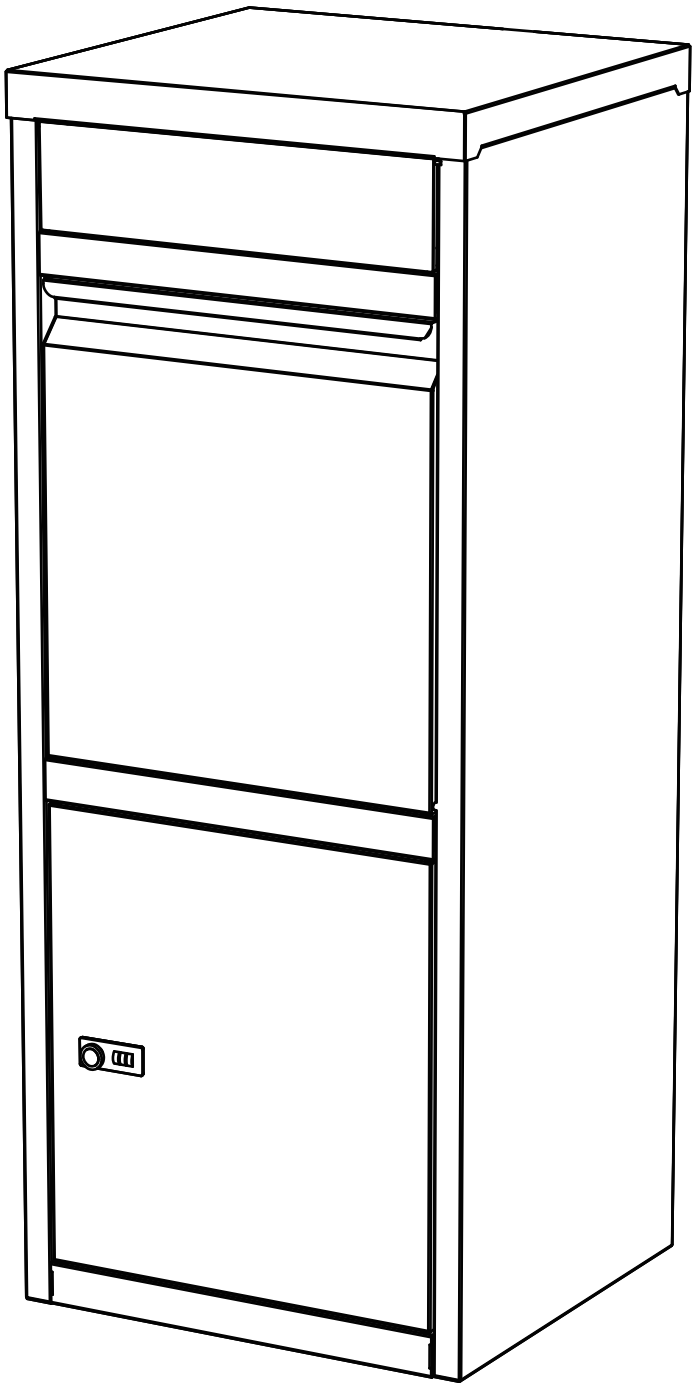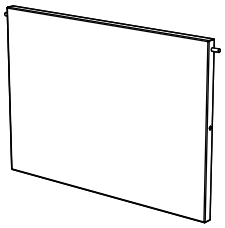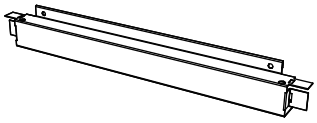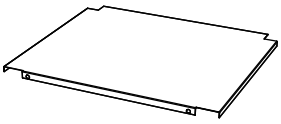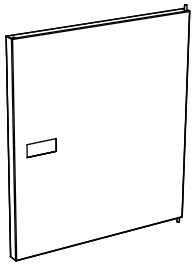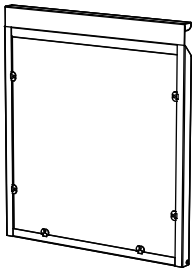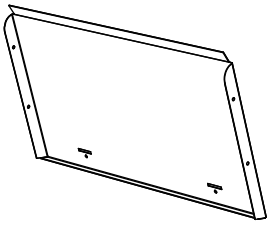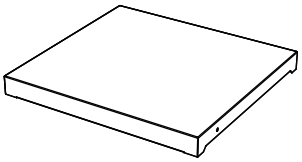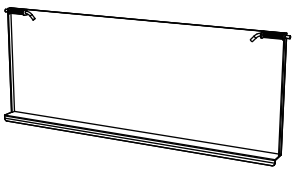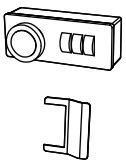



PART LIST

 Ax1pc	 Bx1pc	 Cx1pc	 Dx1pc
 Ex1pc	 Fx1pc	 Gx2pcs	 Hx1pc
 Jx1pc	 Kx1pc	 Mx1pc	 Nx1pc
 Px2pcs	 Ux1pc	 Vx1pc	

 Wx1pc	 Yx2pcs	 Zx1pc	 Sx4pcs	 S1x4pcs	 Rx20pcs	 TOOLS

1

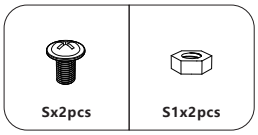


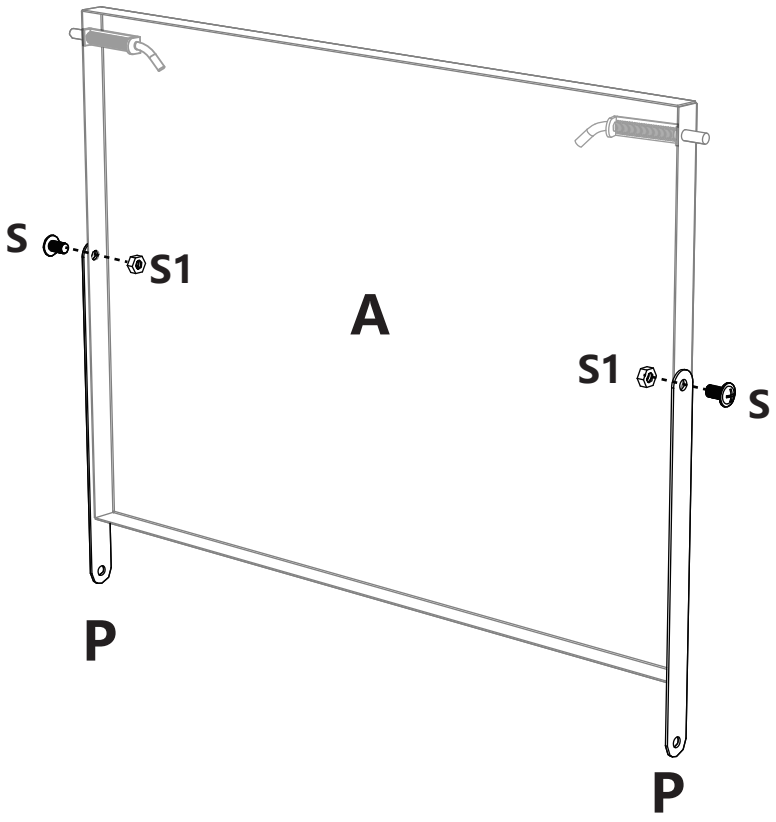

2


Step 1: Insert the left spring lock into the hole.

Step 2: Pull the spring lock on the right side and insert it into the hole.

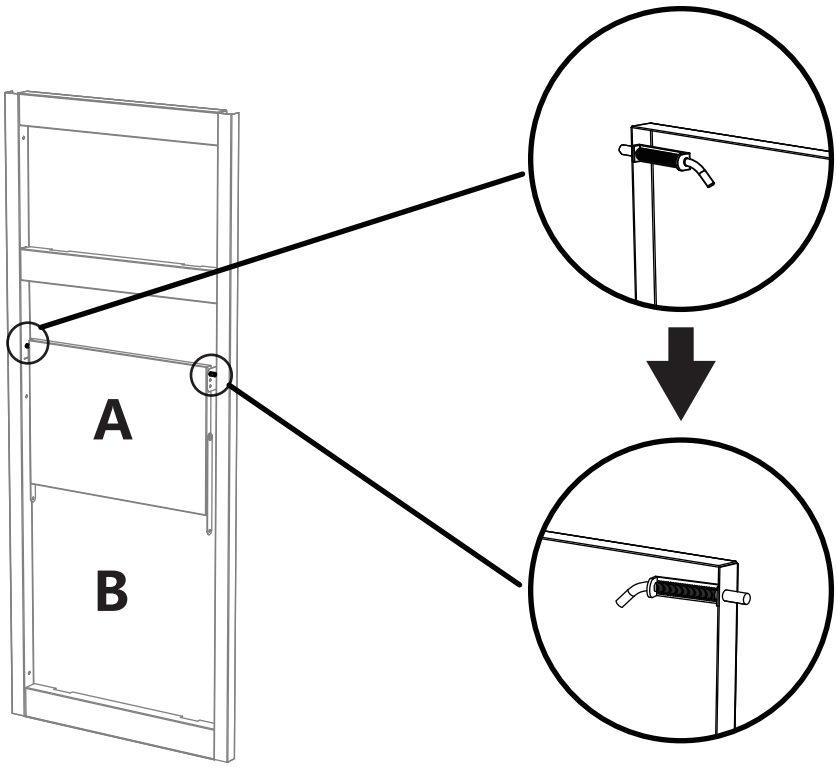


3



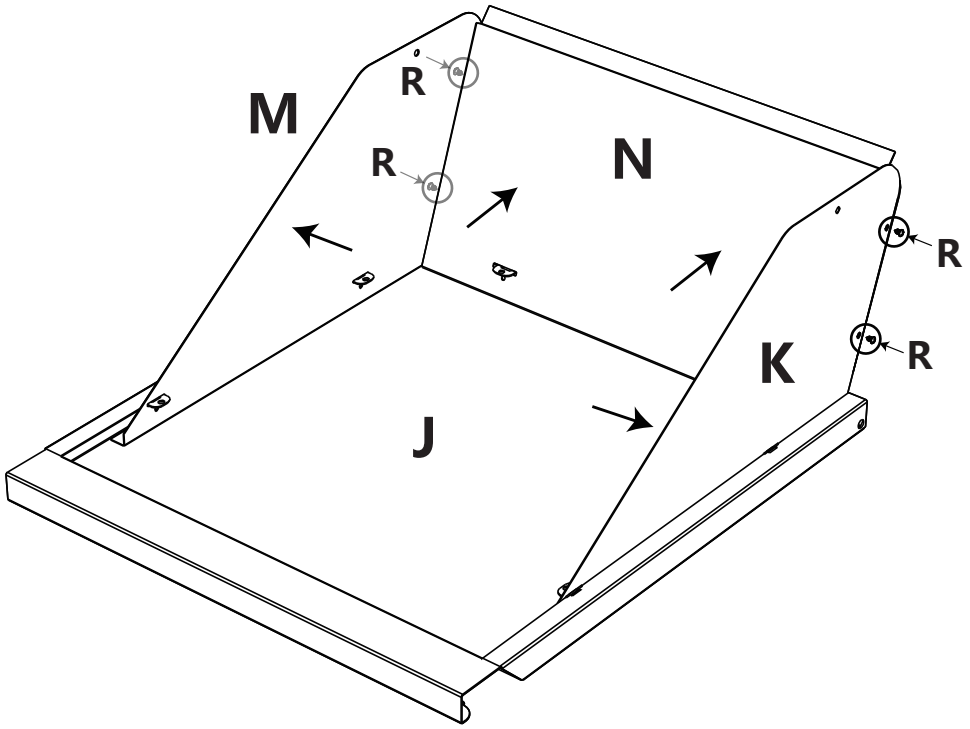


4

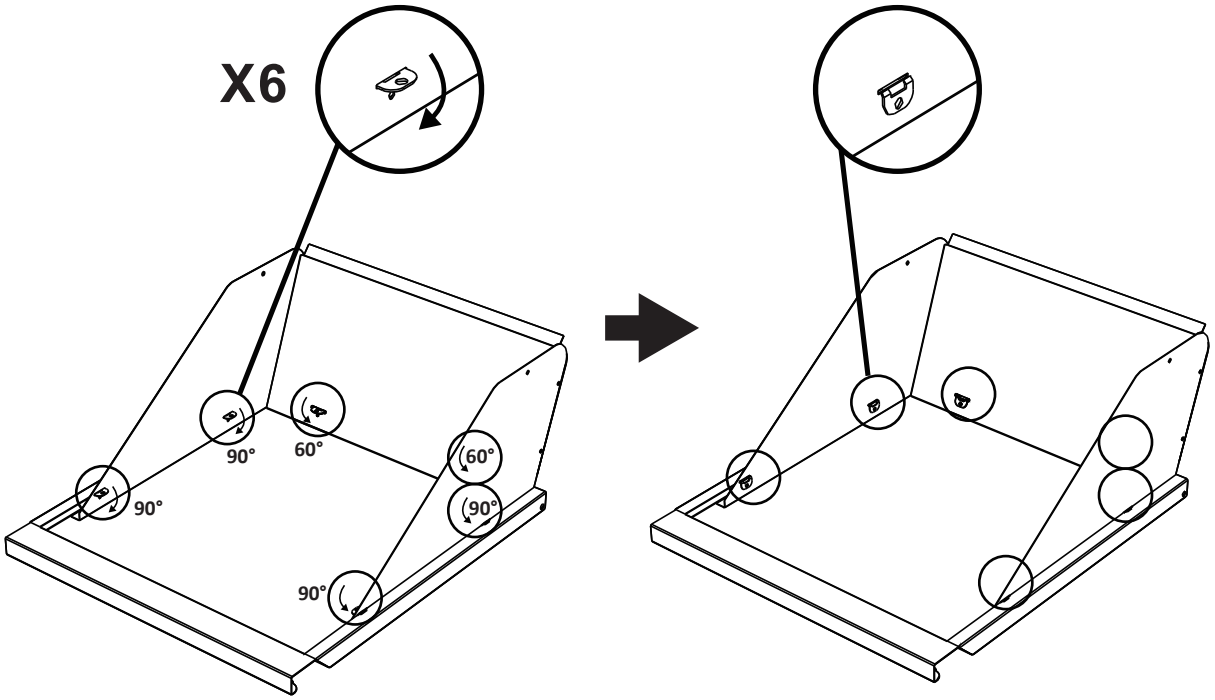


5



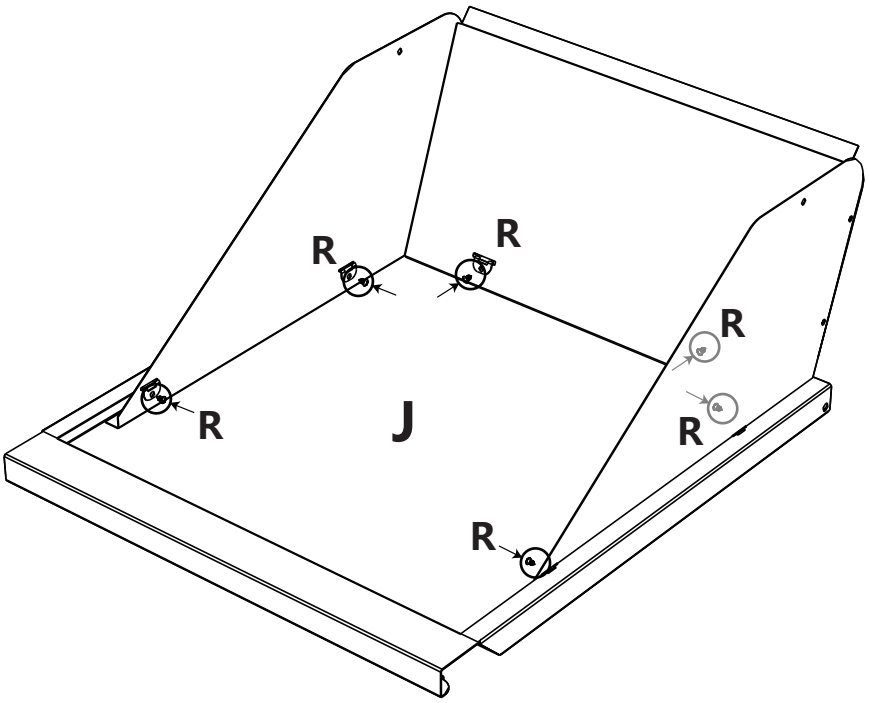


6

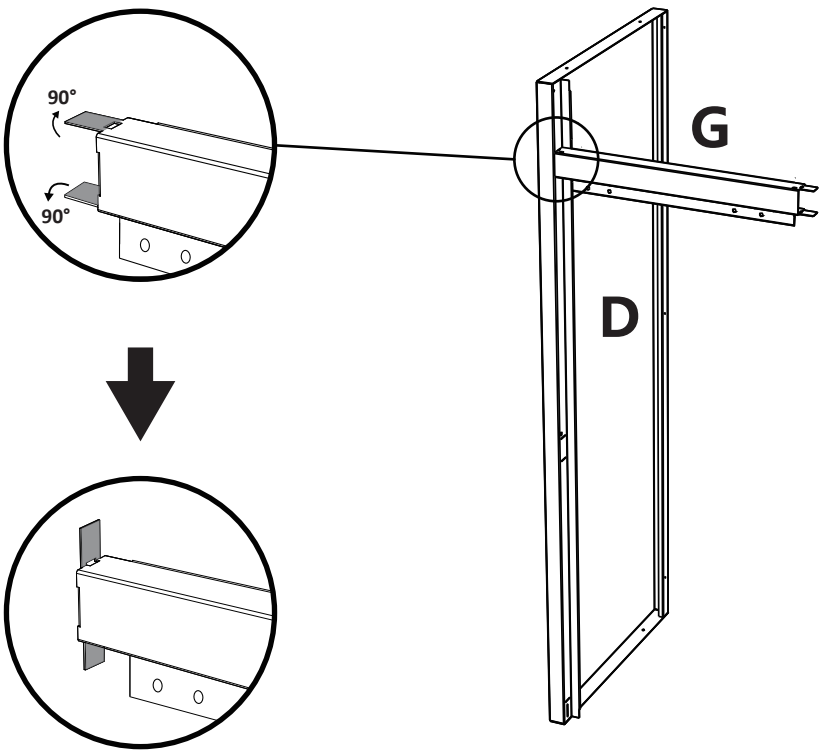


7

Insert the left spring lock into the hole.

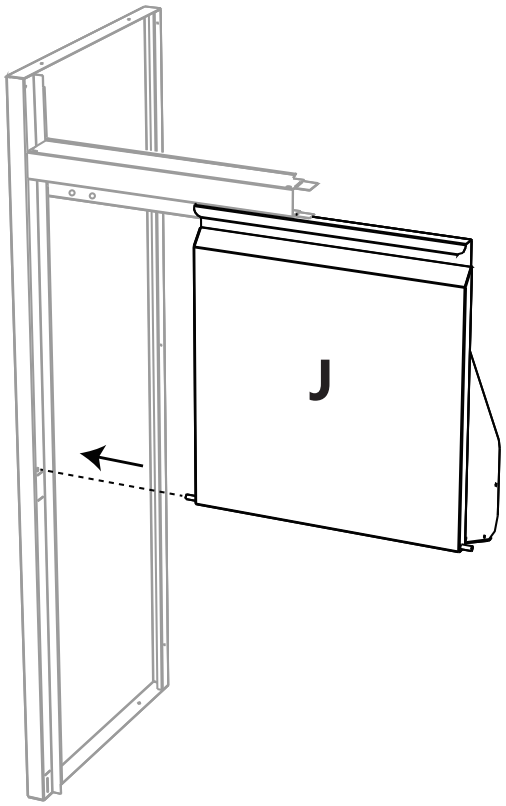


8

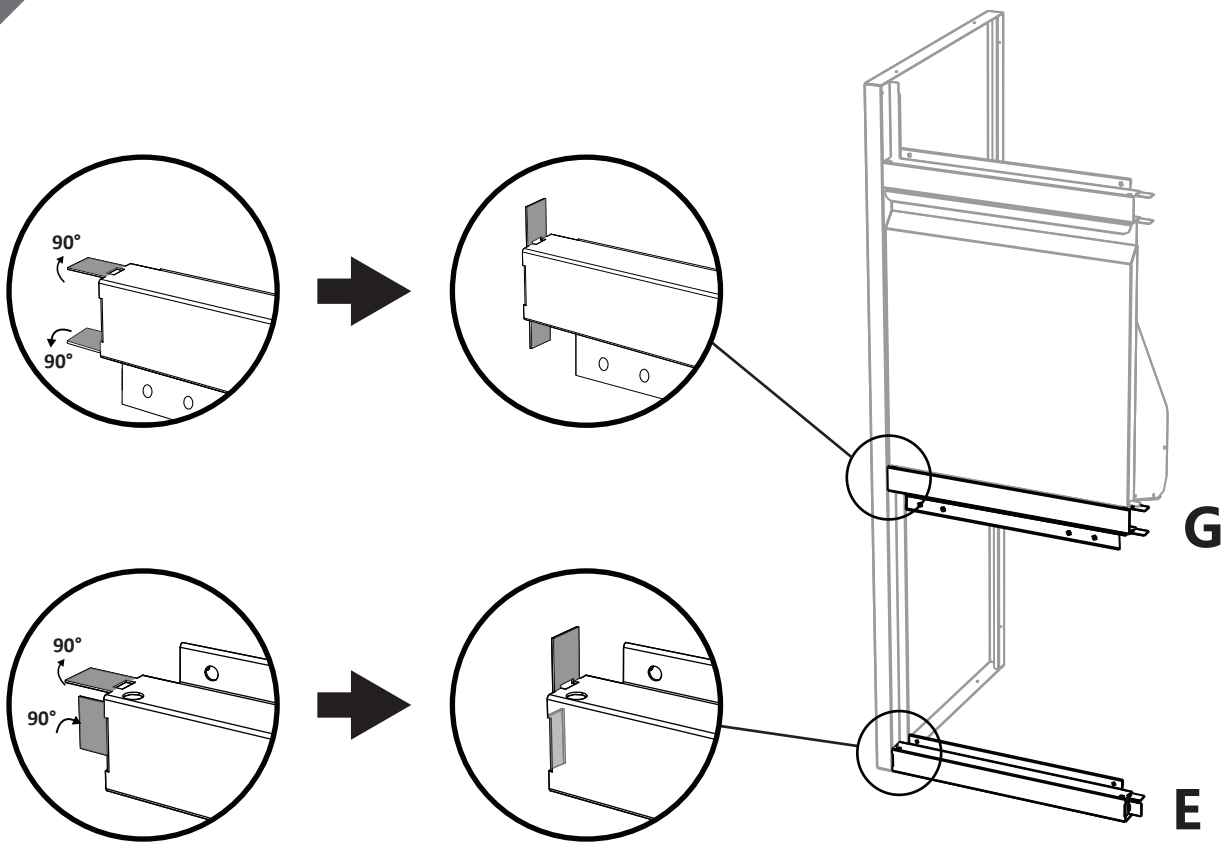

9


X2

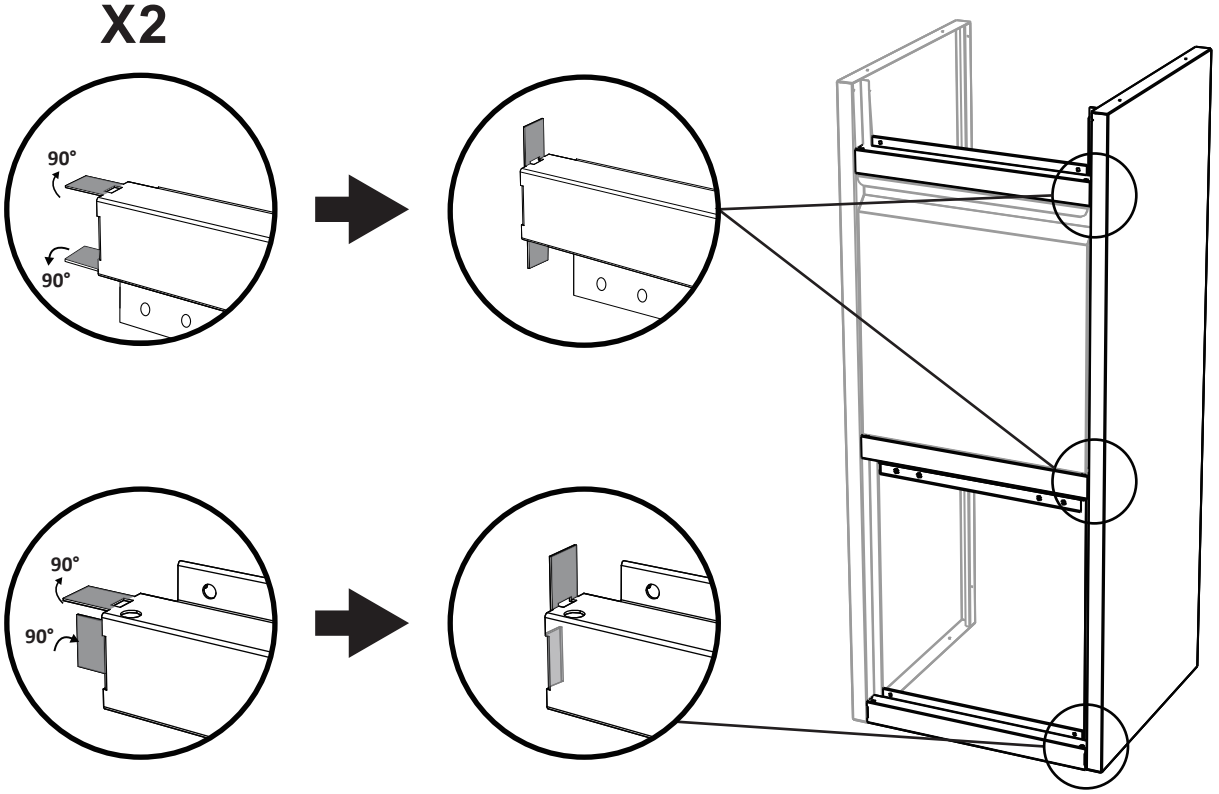

10

Insert the back plate (B) assembled in step 2 into the frame, and then push it in the direction of the arrow until it is securely fastened.


B

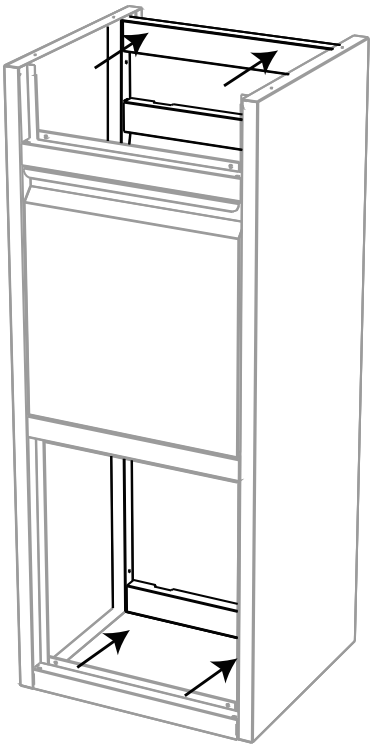

11


Note: There are a total of 6 hole positions on both sides of the interior of the backplane (B) that require screw fixation.



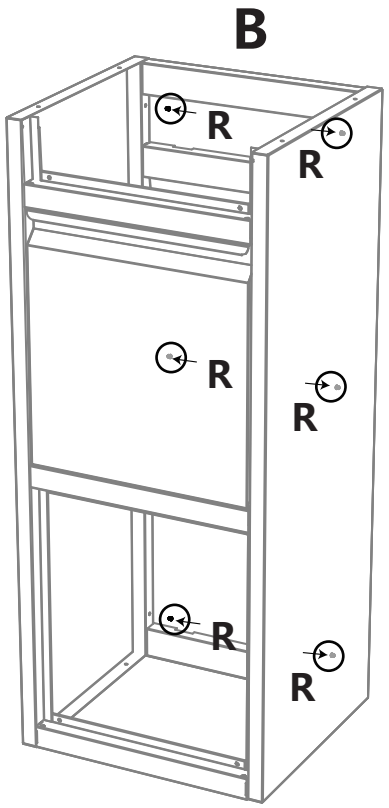


12



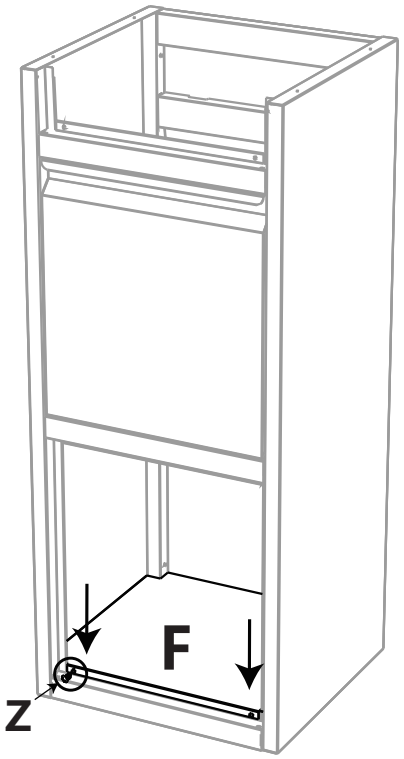



13


Step 1: Insert the lock diagonally on the front side.
Step 2: Insert the metal fastener on the back along the direction of the arrow.
Step 3: Insert the spring lock below into the hole.
Step 4: Pull down the upper spring lock and insert it into the hole.

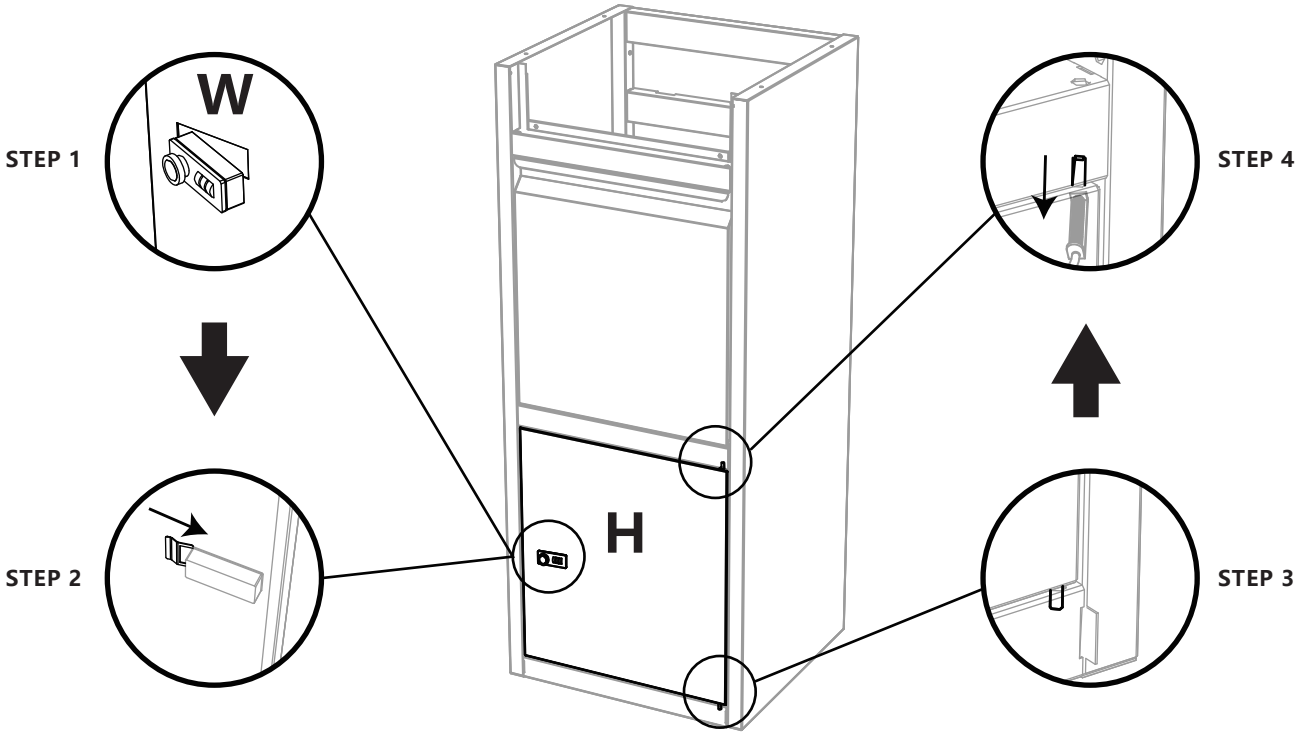

14

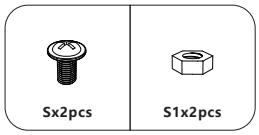


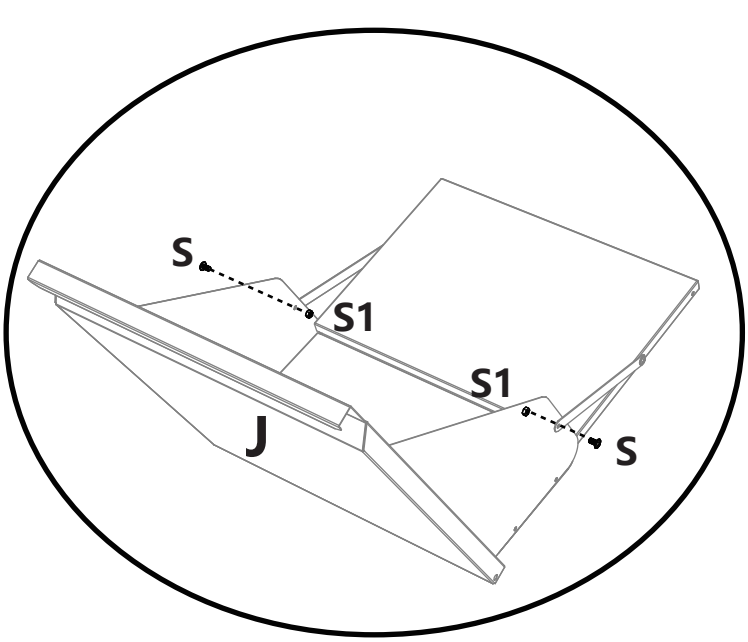

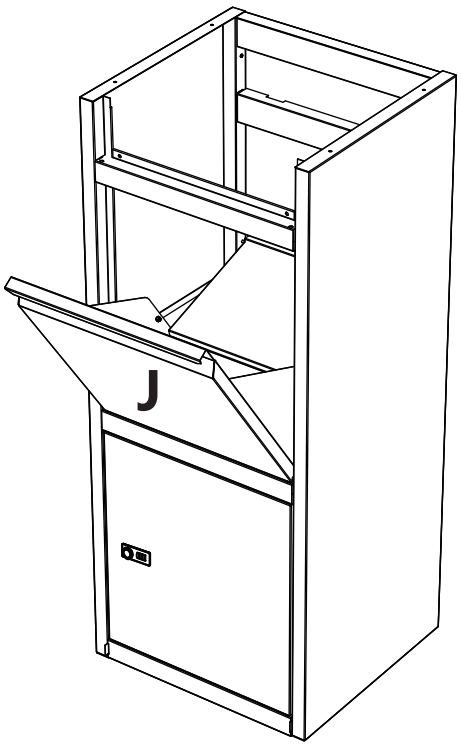

15




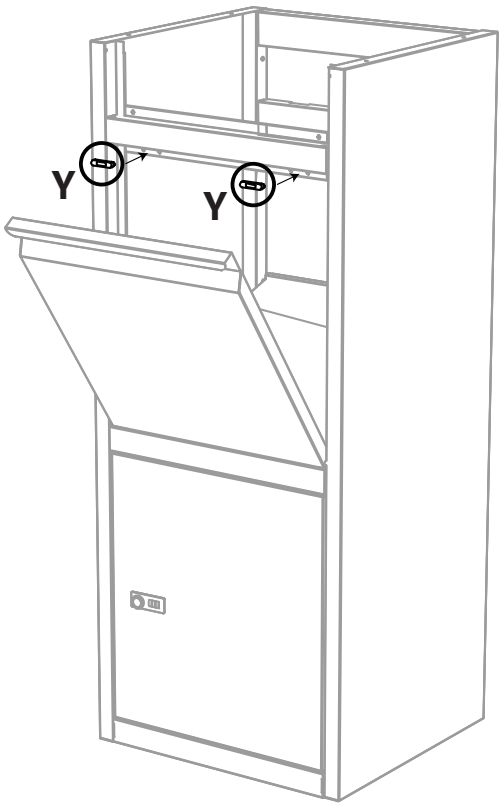

16

Step 1: Insert the pin on the left side.

Step 2: Pull the spring lock on the right side and insert it into the hole.

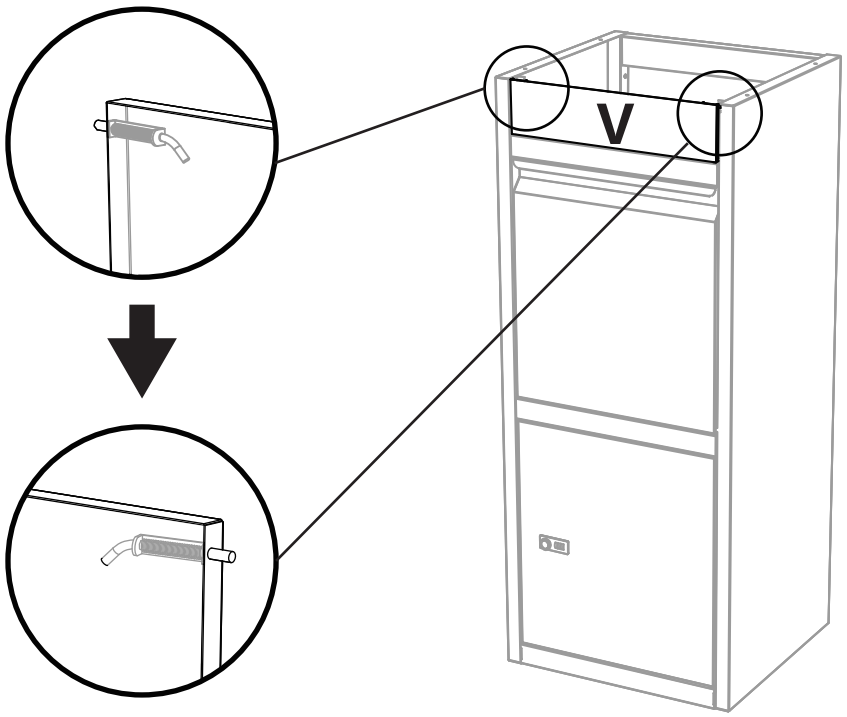

17

