
INSTALLATION GUIDE

Solid Wood Round-Pole Double-Layer Coat Rack

Redesigned Installation Instructions
Model: **1105C**

Before assembly, confirm that all components and hardware are present. Assemble on a clean, flat surface and keep small parts away from children.

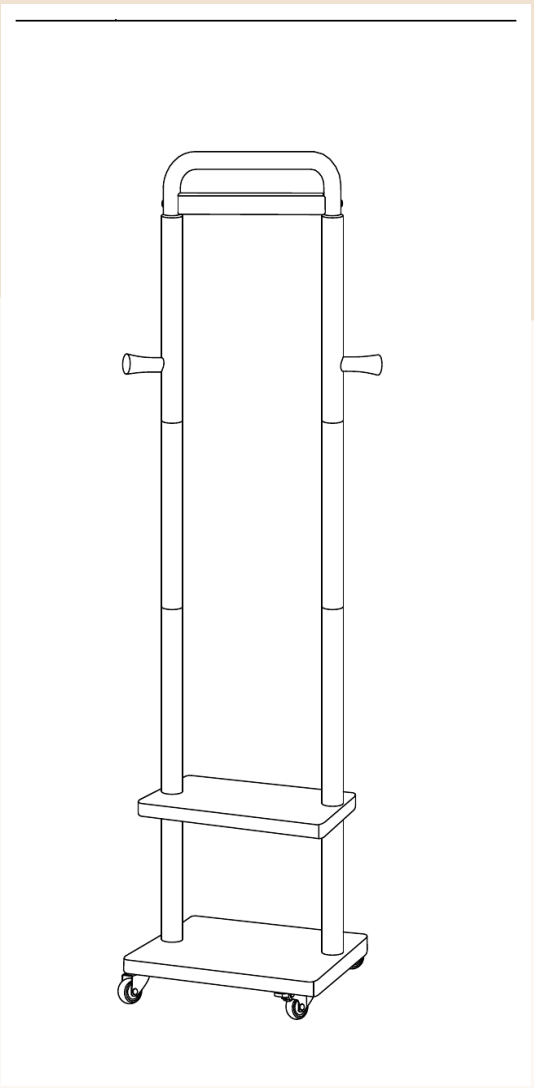

Assembly Required	Indoor Use	Keep Level

Quick Safety Reminder
Do not climb, sit, jump on, or use this product as a step platform. Use only on a flat floor and stop using it immediately if any part is damaged, loose, or deformed.

Parts & Hardware Checklist

Check each item before starting. If anything is missing or damaged, stop assembly and contact the seller/store where the product was purchased.

Main Parts

No.	Part Name	Specification	Qty
1	U-shaped tube	355 x 115 x Φ25 mm	1
2	Upper side pole	430 x Φ35 mm	2
3	Middle side pole	430 x Φ35 mm	4
4	Lower side pole	300 x Φ35 mm	2
5	Clothing rod	315 x 20 x 35 mm	1
6	Hanging post	70 x Φ32 mm	2
7	Shelf board	380 x 240 x 20 mm	1
8	Base plate	400 x 300 x 20 mm	1

Hardware & Tools

No.	Hardware Name	Specification	Qty
9	Wheel	M6 x Φ25 x H58 mm	4
10	Flat-head screw	M6 x 45 mm	2
11	Flat-head screw	M8 x 35 mm	2
12	Gasket	M8 x 19 mm	2
13	Anti-slip washer	M8	2
14	Open-end wrench	#14 mm	1
15	Hex key	M5 x 50 mm	1
16	Hex key	M4 x 50 mm	1

Note: The source manual lists two hex keys with the same item number. This redesigned guide separates them as No. 15 and No. 16 for clearer assembly reference; specifications and quantities remain unchanged.

Before You Begin

Recommended setup
Use a clean, flat surface. Place a soft cloth or packaging sheet under wooden parts to avoid scratches. Do not fully tighten screws until the main frame is aligned.

Estimated difficulty
Simple household assembly. Two people are recommended when aligning tall side poles and base parts.

Pre-Installation

1. Confirm all product components are complete before assembly.
2. Follow the assembly sequence to assemble correctly and safely.
3. Keep assembled parts and small hardware out of the reach of children.

Maintenance

1. Stop using the product if it becomes damaged or deformed.
2. Inspect screws, wheels, shelves, and poles about every three months. Stop using it if any safety hazard is found.
3. Do not repair, alter, or modify the product by yourself.

Use Instructions

1. Do not jump on this product or use it as a platform to retrieve items.
2. Use on a flat surface to help prevent overturning, deformation, or damage.
3. Do not use the product for purposes other than clothes and daily-item storage.


After-Sales

1. For questions, quality issues, missing accessories, or installation difficulties, contact the seller/store where purchased.
2. Damage or loss caused by natural disasters, improper repair, or unauthorized modification is not covered by this guide.
3. Dispose of packaging materials properly after assembly.

Assembly Steps


The following steps use the numbered components from the checklist. Assemble in order for best alignment.

STEP 1 Install the upper posts and clothing rod

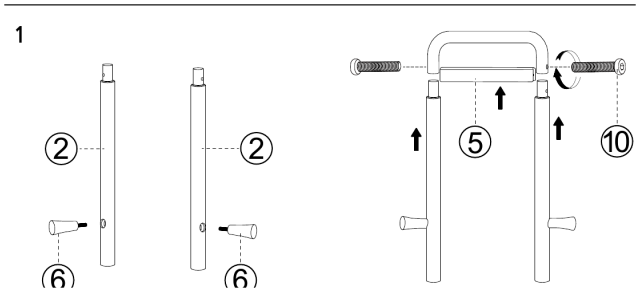

Screw No. 6 hanging posts onto the No. 2 upper side poles in a clockwise direction. Place No. 5 clothing rod in the center of the upper frame, then align it with No. 1 U-shaped tube and secure with No. 10 screws.


STEP 2 Connect the middle side poles

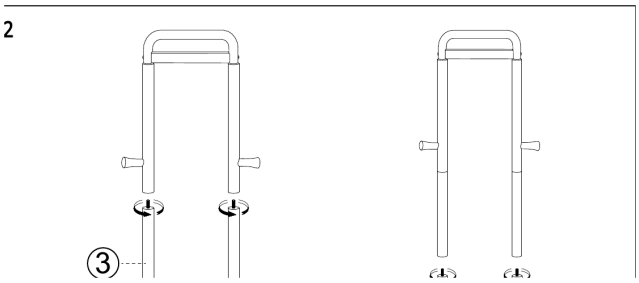

Rotate the No. 3 middle side poles clockwise into the bottom of No. 2 upper side poles. Make sure both sides are tightened evenly and remain parallel.


Assembly Steps - Continued

STEP 3 Install shelf board and base plate

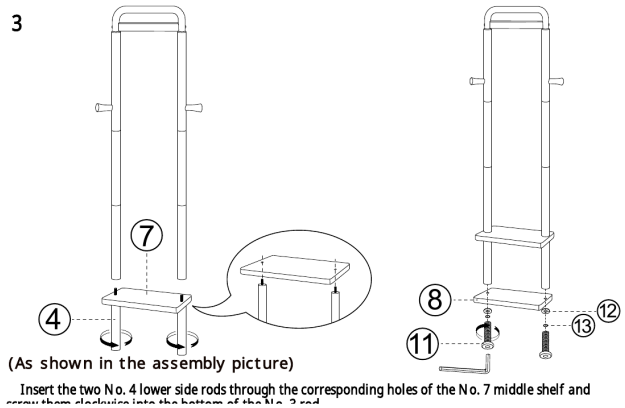

Insert the two No. 4 lower side poles through the matching holes of No. 7 shelf board. Rotate the lower poles clockwise into the bottom of the No. 3 poles. Then position No. 8 base plate under the lower poles, add No. 12 gaskets and No. 13 anti-slip washers, and secure with No. 11 large screws.

STEP 4 Install wheels and finish assembly

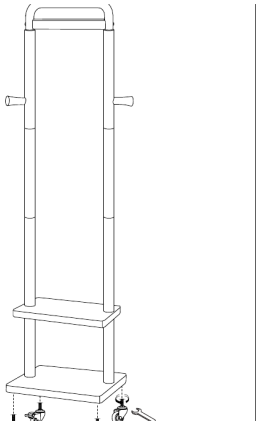

Turn each No. 9 wheel clockwise into the corresponding screw hole on the base plate. After all wheels are installed, place the rack upright on a flat floor and check that the frame is stable.

Final Check: Ensure all posts are fully tightened, shelf and base are secure, wheels rotate properly, and the coat rack stands level before use.

Care, Cleaning & Troubleshooting

Issue	Possible Cause	Suggested Action
Rack is not level	Uneven floor or loose wheel connection	Move to a flat floor and tighten each wheel clockwise.
Frame feels loose	Side poles or screws not fully tightened	Re-check connections at No. 2, No. 3, No. 4, No. 8, No. 10 and No. 11.
Shelf shifts during use	Shelf board not seated evenly	Remove load, realign shelf, and tighten the lower side poles evenly.
Wood surface needs cleaning	Dust or everyday residue	Wipe gently with a soft dry or slightly damp cloth. Do not soak the wood.

Safe Use Guidelines

1. Distribute hanging items evenly on both sides to reduce tipping risk.
2. Do not overload hooks, rods, shelves, or baskets beyond normal household use.
3. Do not allow children to climb on or play with the product.
4. Periodically check wheels, screws, rods, and shelves for looseness or damage.
5. Store this instruction guide for future disassembly, relocation, or maintenance.

Packaging Disposal: Keep plastic bags, small screws, and packaging away from children. Dispose of all packaging materials in accordance with local requirements.