
K1306 Installation Instruction

and User Manual

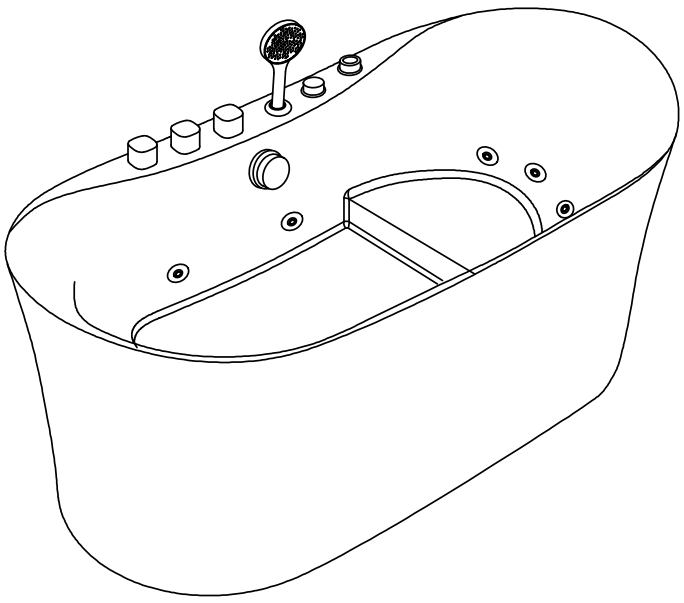


Please read this manual carefully before using.

Safety instructions

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Connection requirement:
   The appliance must be fitted with means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection under overvoltage category III conditions and these means must be incorporated in the fixed wiring in accordance with the wiring rules.
4. the pressure of water 0.1MPa~0.4MPa.
5. 5.1：earthed appliances must be permanently connected to fixed wiring;
   5.2：parts incorporating electrical components, except remote control devices, must be located or fixed so that they cannot fall into the bath;
   5.3：the appliance should be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30 mA.
   5.4：parts containing live parts, except parts supplied with safety extra-low voltage not exceeding 12 V, must be inaccessible to a person in the bath;

Tools

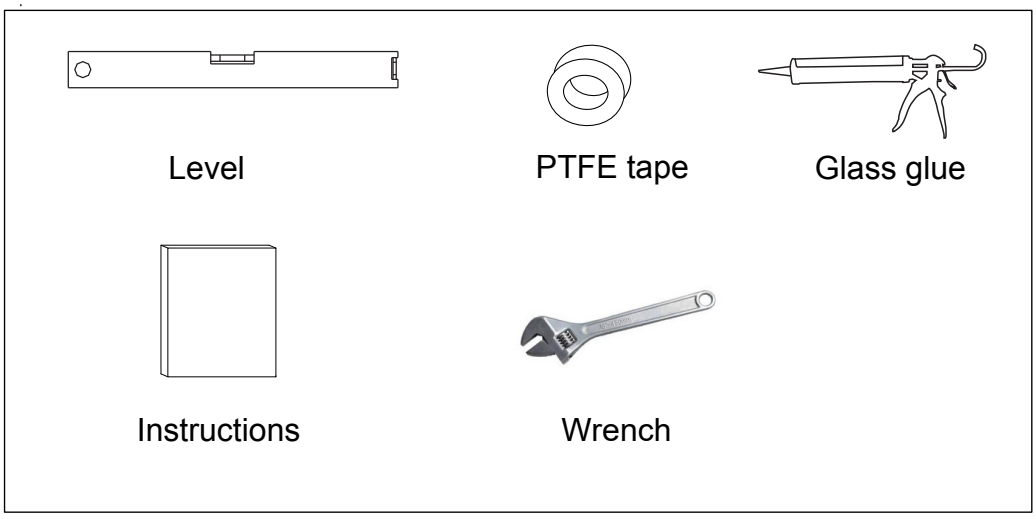

1.Safety notice:

- Cardiopathy, hypertension and person who is unwell or after drinking, please no not use the massage bathtub to avoid risk happening.
- Children should be accompanied by the adult while using the massage bathtub.
- Power plug must be assembled with creepage protector and connected with the terra wire, and follows the rules to operate. Power socket must be install out of reach of water.
- The massage bathtub must be assembled by the careerman.
- When switch on the hand shower and inlet faucet, please adjust the suitable water temperature firstly, to avoid scalding and destroy the products.
- Advisable water temperature: lower 60℃.

2.Usage instruction:

- Press the Power On/Off button on the Digital Controller to turn on power.
- Use the Hand shower VS Inlet Faucet Selector to select Inlet Faucet to fill the tub (during bathing, you can select hand shower for showering). Turn the Hot and cold water mixing valve to fill water in and tune a appropriate water temperature for bathing. (Forbid to fill hot water above 140℉ or it will damage the tub).
- Fill the bathtub till the water line is 1 inch above the higher jet nozzles.
- Use the Digital Controller to turn on Hydro Massage, Warmth-keeping, RGB Lighting at user's will. If Hydro Massage is in use, please tune Hydro Massage Intensity and Bubble Volume Regulator (Massage intensity higher then bubbles are more).
- If you will not use the massage bathtub for a long time, please cut off the power source and power off massage bathtub.

3.Installation Steps:


- Level the ground and wall corner, connect cool & hot water hose correctly, assemble wire terminals and referring to the size parameter to prepare the drain outlet.
- Place the massage bathtub in the confirmed position, adjust all the tub feet to make them meeting the ground and levelling.
- Throw a spot of water into the bathtub, turn on the drainer, check the draining is fine as all water should be drained. If not, please check point 2.
- Connect the cool & hot water pipe correctly,insert the draining hose into the drainer, wiring the terminals correctly.

- Examine all the functions (Refering to below introduction of components and digital controller)


4.Maintenance:

- Daily cleaning with general liquid scour, please do not clean the bathtub with doughty acid, doughty alkali, latex , acetone and the chemical which containing methacrylic, formaldehyde, or it will make the bathtub face paled, or destroy the bathtub.
- Polish the face scar with 1000# levigation sand paper firstly, then polish with 1500# sand paper, polishing with soft cloth and toothpaste at last.
- Clean away the scale on the bathtub face with citric acid or vinegar.
- Scrape the stubborn blotch with sort cloth and toothpaste.
- After using for a long time,you can renew the bathtub with luster wax.

5.H/C mixing valve connection:

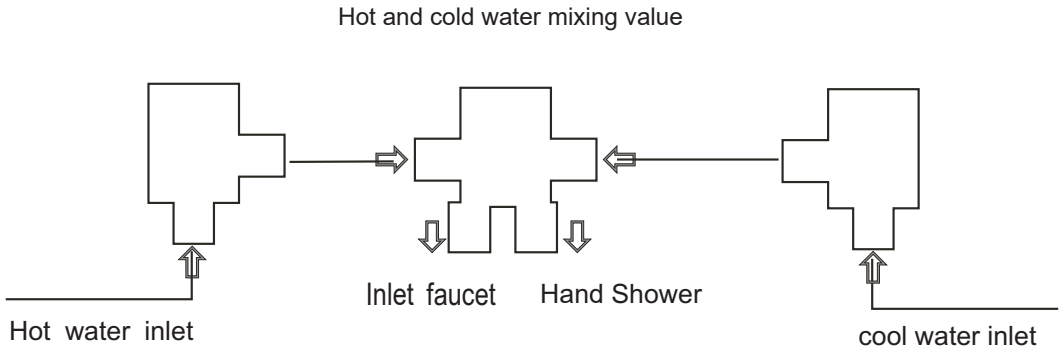

6.Electric diagram:

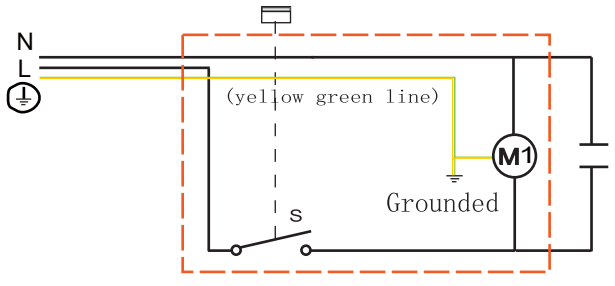


S ----- pump switch


M1 ----- water pump


7.Trouble-shooting:

SYMPTOMS	PROBLEMS	SOLUTIONS
Motor does not turn	Power supply	Check whether the power supply is normal and whether the power plug is inserted tightly.
	The pneumatic switch does not work, whether the leather bag is broken	Adjust the pneumatic switch, replace the leather bag.
	Pneumatic switch connection tube is not inserted tightly or bent	Insert tight or straighten the air tube.
	There are debris stuck in the motor impeller	Clear impeller debris or replace impeller.
	Air switch or capacitor in the motor is damaged	Repair or replace the motor.
Motor does not turn	The motor coil is short-circuited	Repair or replace the motor.
Motor noise is too loud	The foot screw is not flat	Level the foot screws.
	The connection between the pump and the motor bracket is loose	Tighten the nut.
Air pump does not work	Power supply	Check whether the power supply is normal, and whether the power plug is tightly inserted.
	There are debris blocking the air outlet	Clear the debris in the pipe.
	Air pump into the water burned	Replace the air pump.
Can't turn on the electricity leakage switch	User power supply is connected wrongly	Reconnect the power cord.
	Capacitor or coil short circuit in the water pump	Replace capacitor or motor.
	The transformer in the water bottom class is short-circuited	Replace transformer.
	Leakage protection plug has been bad	Replace the leakage protection switch.
Underwater light does not light up	The bulb is broken	Replace light bulb.
	Wires are not connected properly	Reconnect.
	Led controller is damaged	Replace Led controller.
The control panel has no display. Operation does not work	Control panel signal line contact is not good	Reconnect panel signal line.
	Panel keys are not working	Replace the panel.
No water in the bathtub	No water in the water pipe	Open the water inlet connector to see if there is water.
	Water valve is blocked	Clean the water inlet valve.
	Water inlet hose bent	Smoothing water inlet hoses.
No drainage	Clogged water drain	Mobile bathtub cleaning.
	Clogged user water	Move the bathtub to clean it.
Drainage is not clean	Uneven bottom of the tank	Adjust the bracket, and balance the bathtub.
Massage bathtub leaking	Poor hot and cold water hose connector	Replace the rubber gasket and well-locking joint.
	Poor sealing of parts and cylinder	Replace the seal rubber ring.
	Poor bonding of water pipe joints	Re-gluing.
	The joint is not locked tight	Lock the connection nut.
	Water pipe rupture	Replace the water pipe.
Water Switch leaks	Damaged cartridge	Replace the cartridge.

8.Water and electric installation illustration：

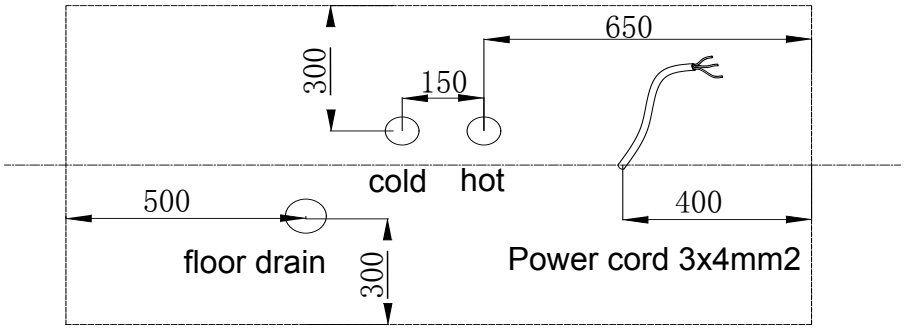


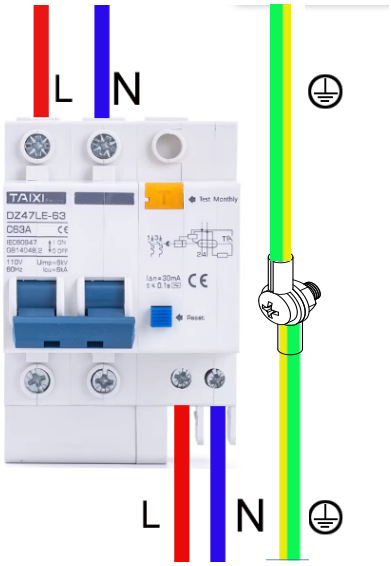

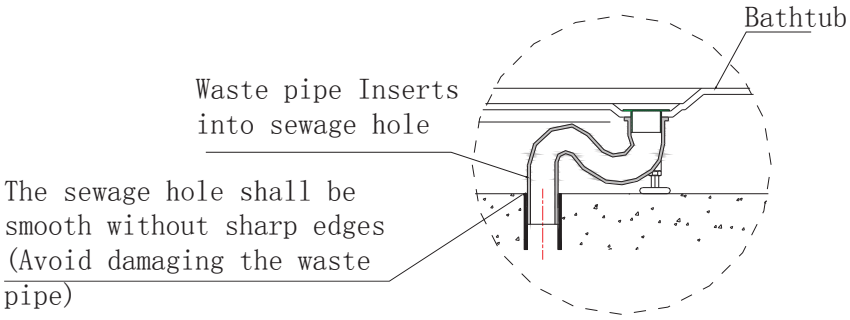


During installation, please avoid harming the waste pipe with sharp objects (e.g. knife).

9.Key Components:

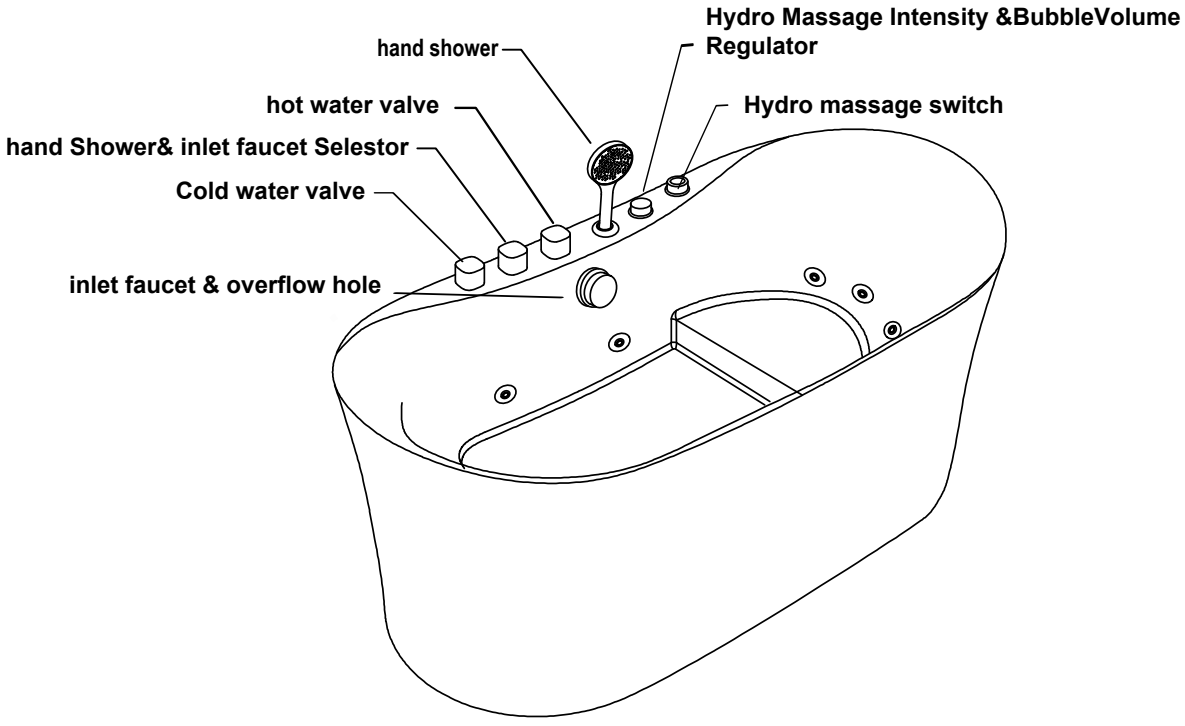

Reference size

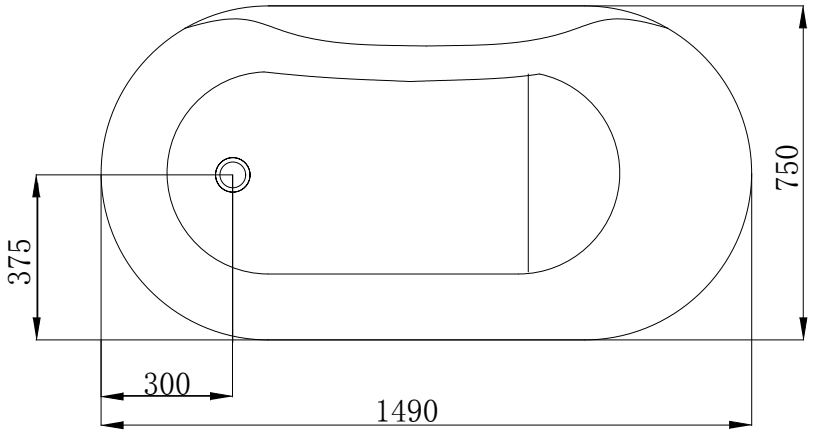

10. Technical data:

1、 Power Supply:AC110V 60Hz **750W**

2、 IP Grade of Waterproof: IPX5