
RPC70FP42A

Assembly Instructions

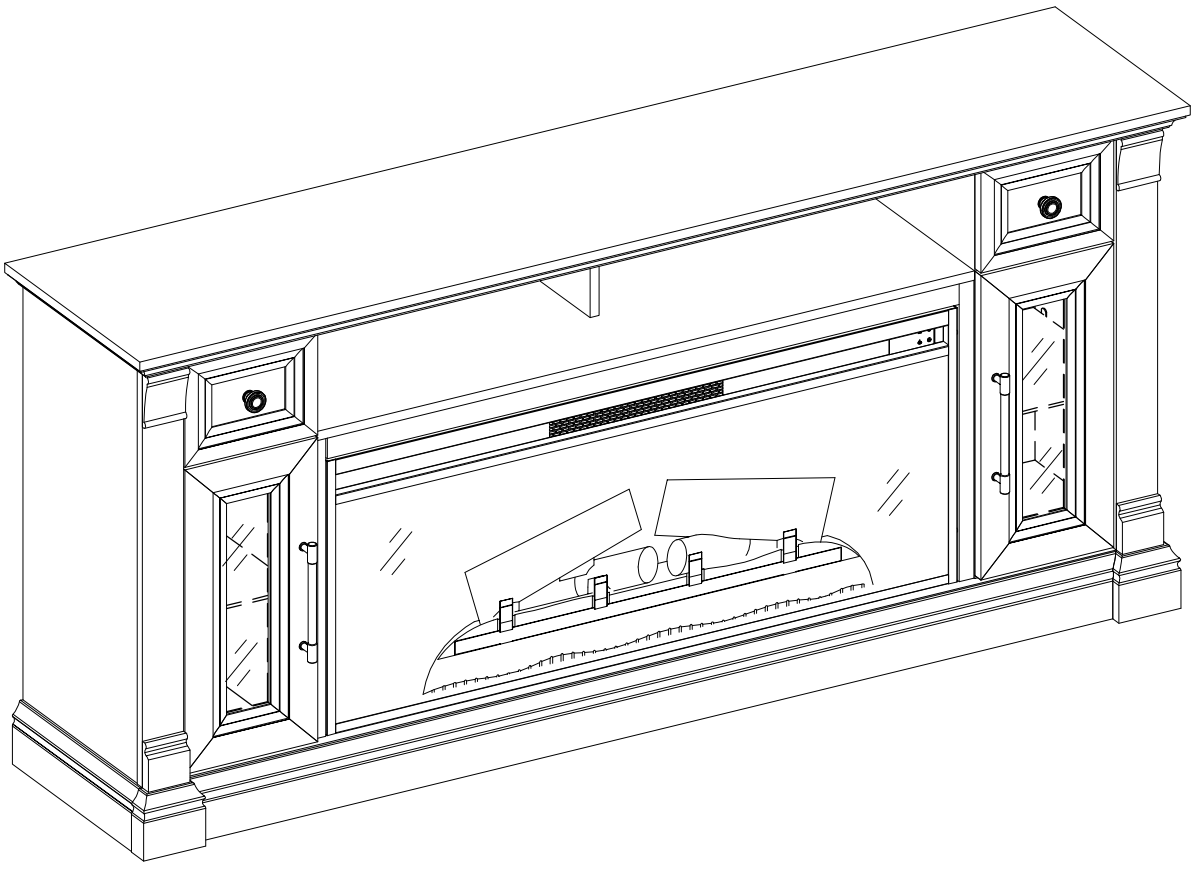


General Assembly Guidelines

I. Ensure that all parts and hardware are available before beginning assembly.


II. Follow each step carefully to ensure the proper assembly of this product.

III. Two people are recommended for ease in the assembly of this product.


IV. A Phillips head screwdriver is required for the assembly of this product .

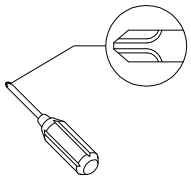

V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

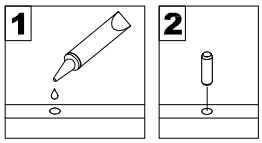

In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

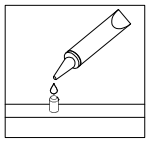


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.


2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.

3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.


4.Use the sticker to conceal the Cam.

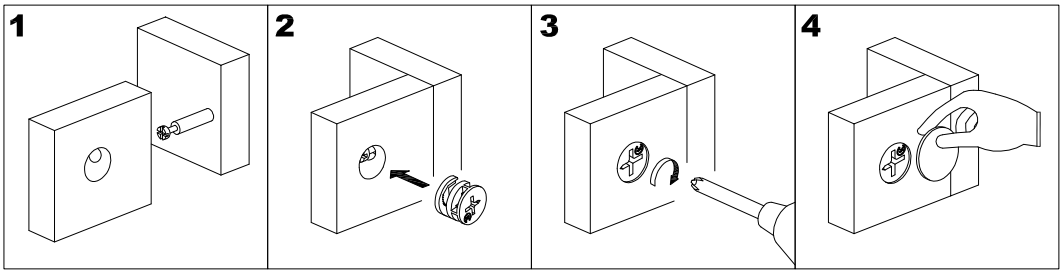







VII. Power tools should not be used to assemble this product .

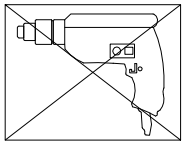




Parts List

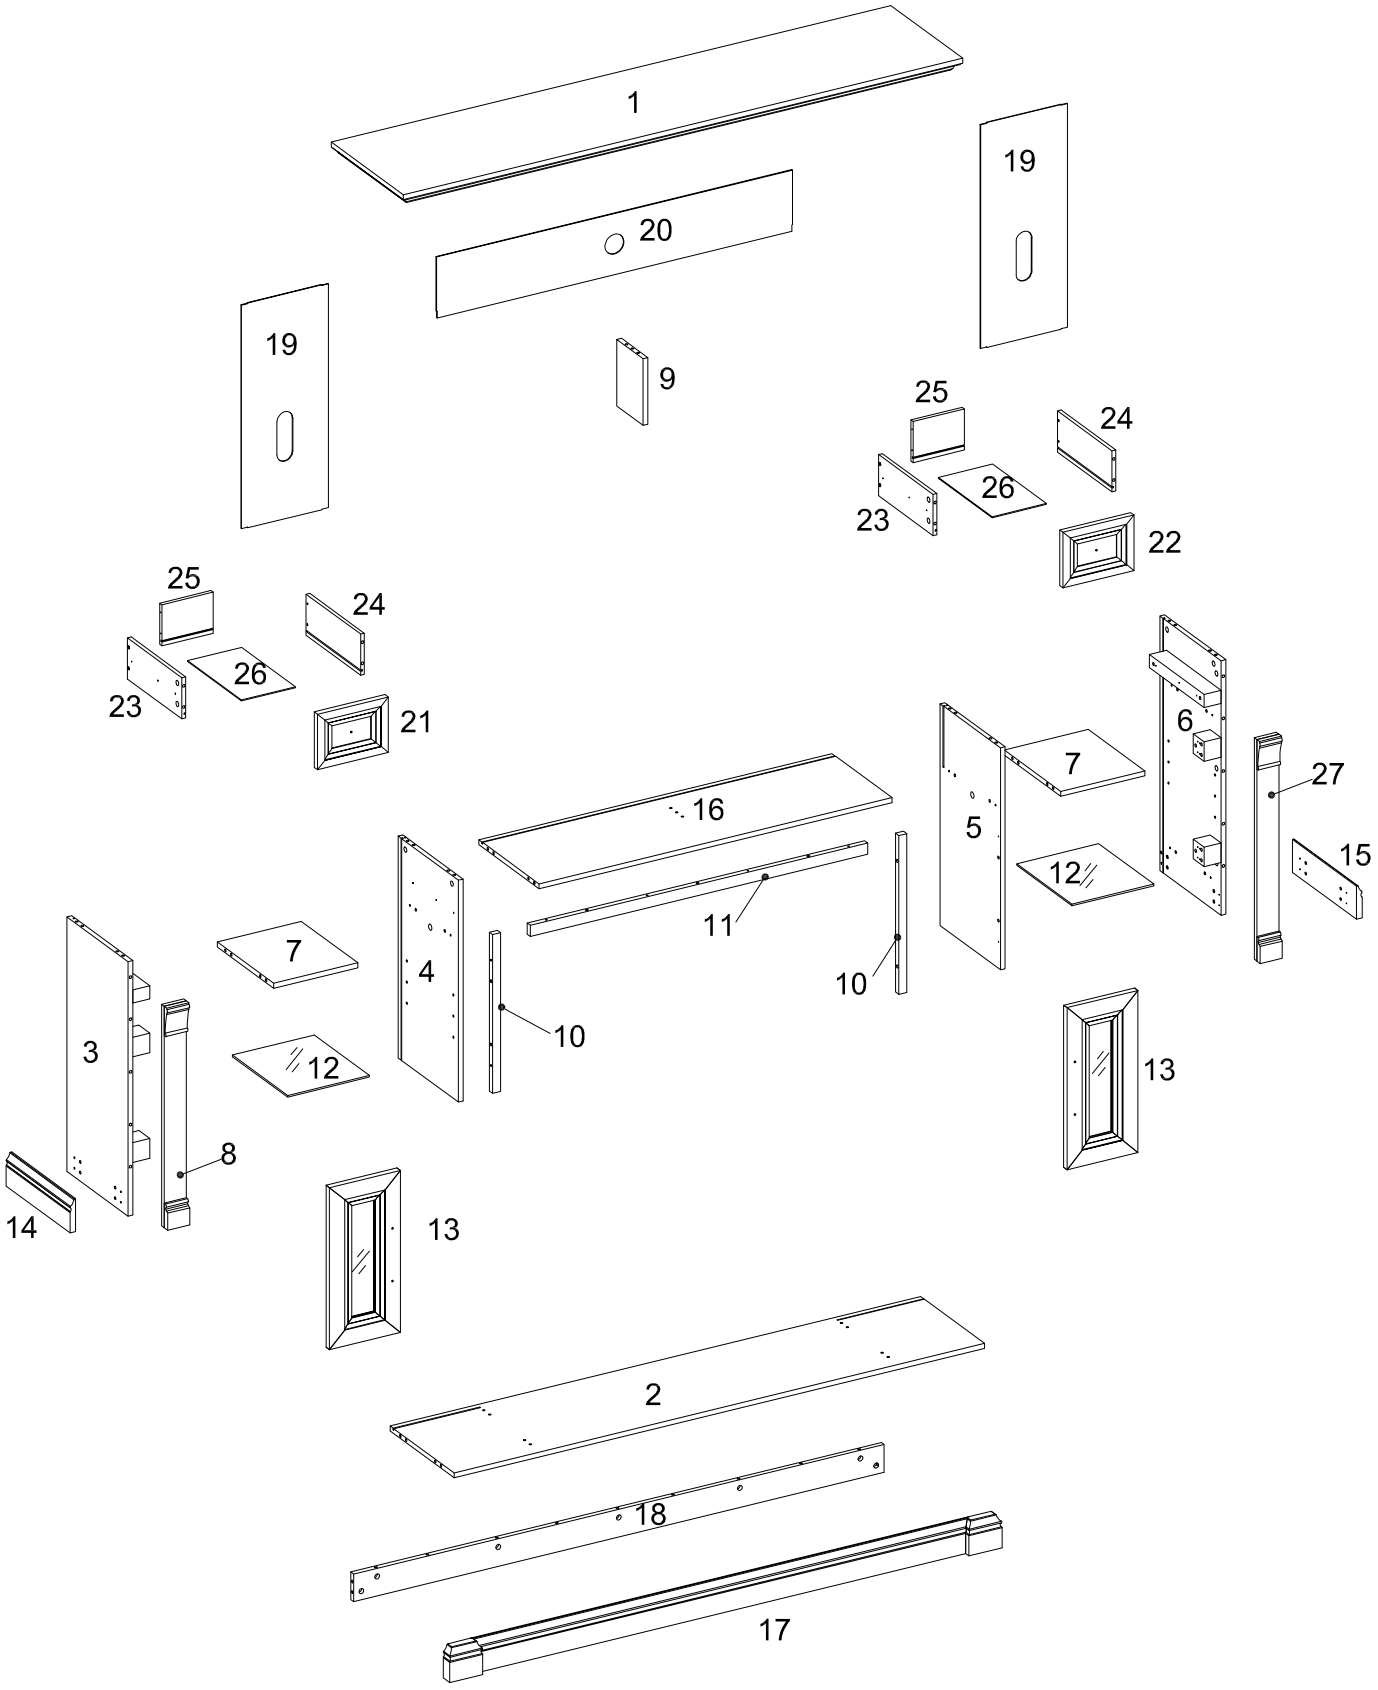

1
20
19
19
9
25
24
26
23
22
25
24
26
23
21
6
7
27
16
5
15
12
11
10
7
4
10
3
12
13
8
14
13
2
18
17

Hardware List

A		Ø8x30mm	Wood dowel	47 pcs
B		Ø6x35mm	Cam bolt	47 pcs
C		Ø15x11mm	Cam lock	39 pcs
D			Sticker	47 pcs
E		Ø15x9.5mm	Cam lock	8 pcs
F			Shelf support pin	8 pcs
G		Ø6x13mm	Bolt	10 pcs
H			Glue	1 pc
I		Ø6x50mm	Screw	6 pcs
J			Plastic wedge	18 pcs
K		Ø3x17mm	Flat-head screw	18 pcs
L		M 4	Hex key	1 pc
M		Ø3x12mm	Screw	12 pcs
N			Clip	6 pcs
O		Ø4x38mm	Screw	12 pcs
P			Connector	5 pcs
Q			Handle	2 pcs
R		Ø4x12mm	Handle bolt	2 pcs
S		Ø4x25mm	Handle bolt	4 pcs
T			L shape bracket	2 pcs
U		Ø4x12mm	Screw	4 pcs
V		12"	Drawer slider	2 sets
W		Ø3.5x12mm	Screw	24 pcs


Hardware List

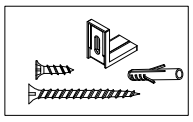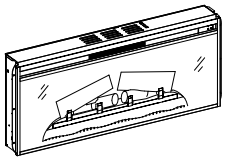X		Ø35mm	Europe hinge	4 pcs
Y		Ø3.5x14mm	Hinge screw	32 pcs
Z			L shape bracket	4 pcs
AA			Led strip light	2 pcs
BB			Knob	2 pcs
CC		Ø4x25mm	Screw	12 pcs
DD		Ø8x20mm	Wood dowel	8 pcs
EE		Tipping Restraint Hardware		2 sets
FF		RV42V80L-MT3	Fireplace Insert	1 pc

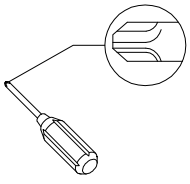


Philips head screwdriver required for assembly
(not included)


Step 1

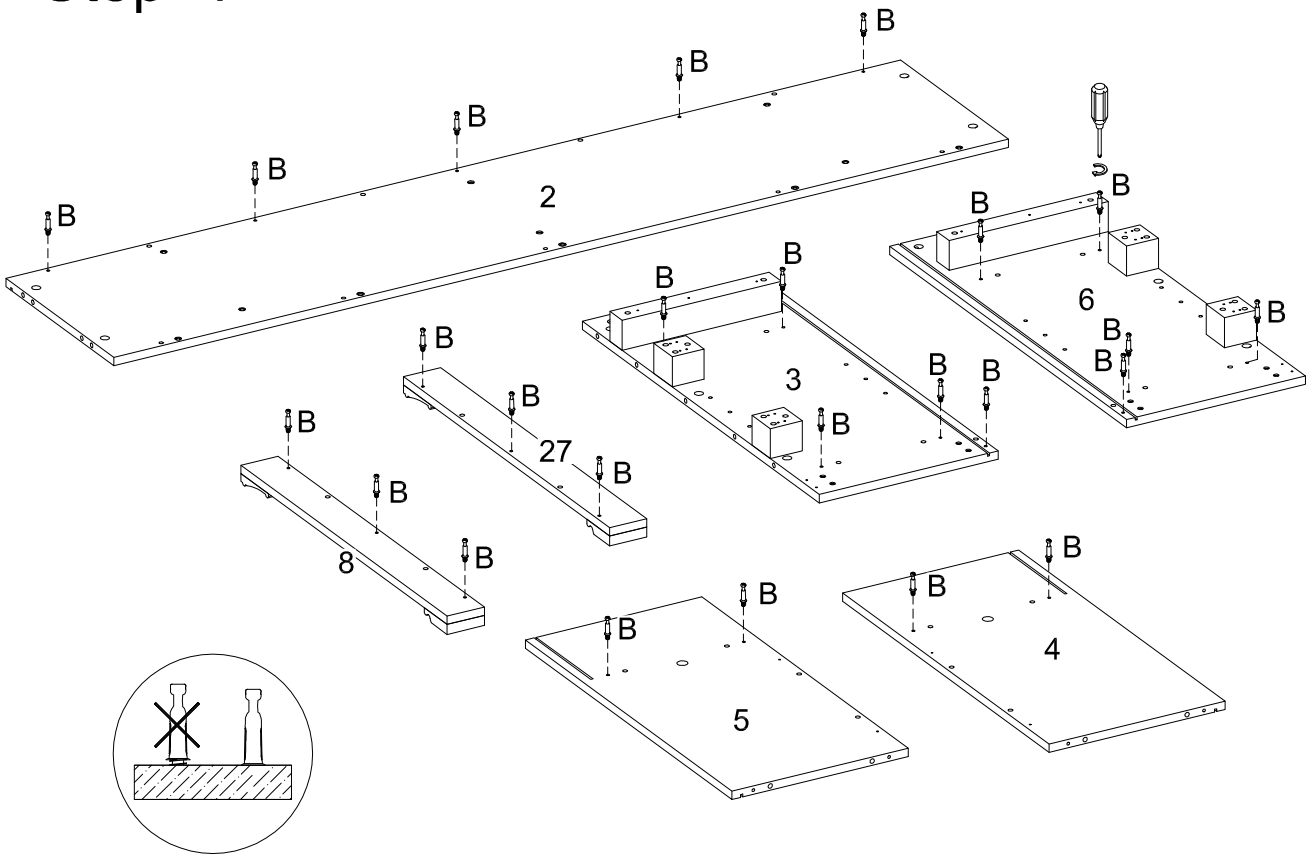
B
2
6
3
27
8
4
5


Step 2

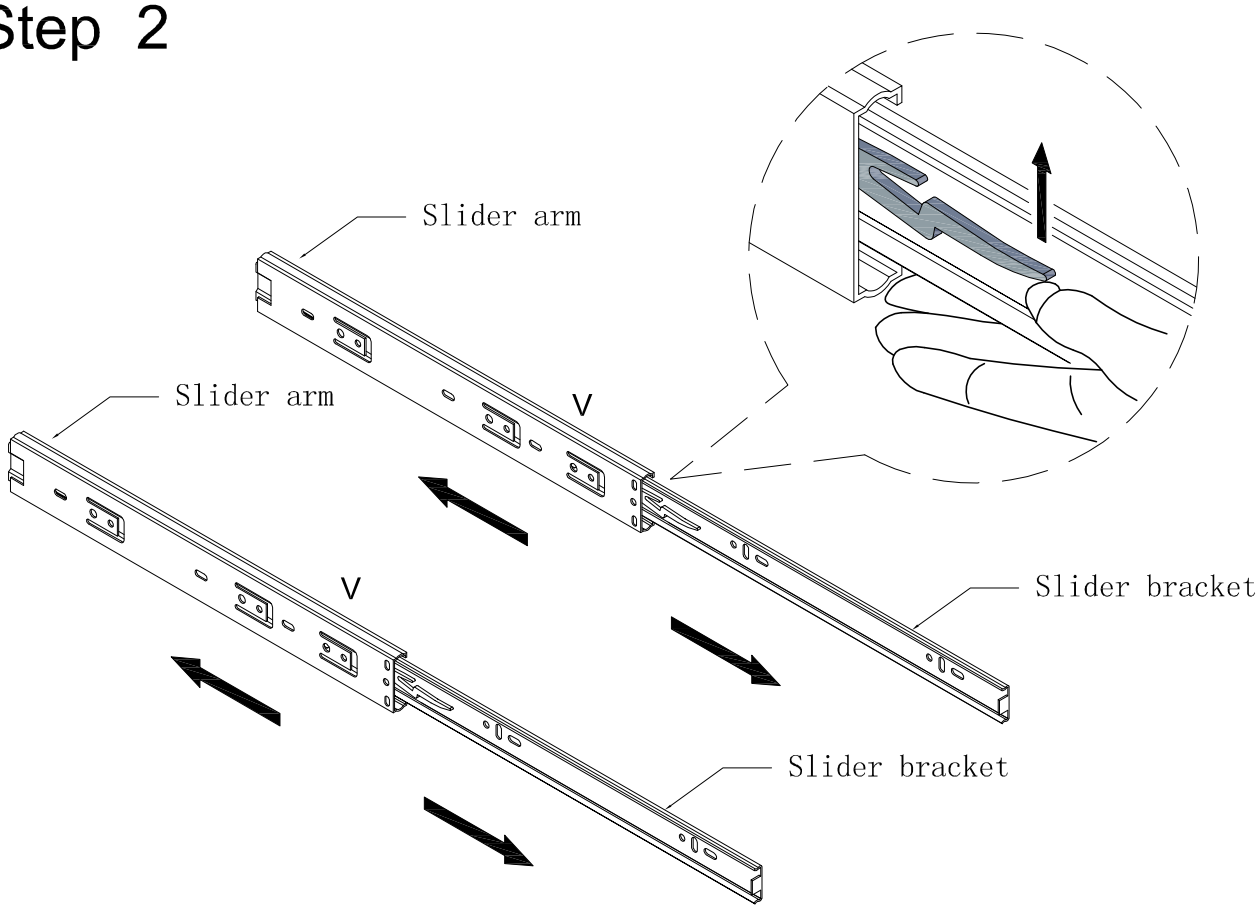
Slider arm
Slider arm
V
V
Slider bracket
Slider bracket


Step 3

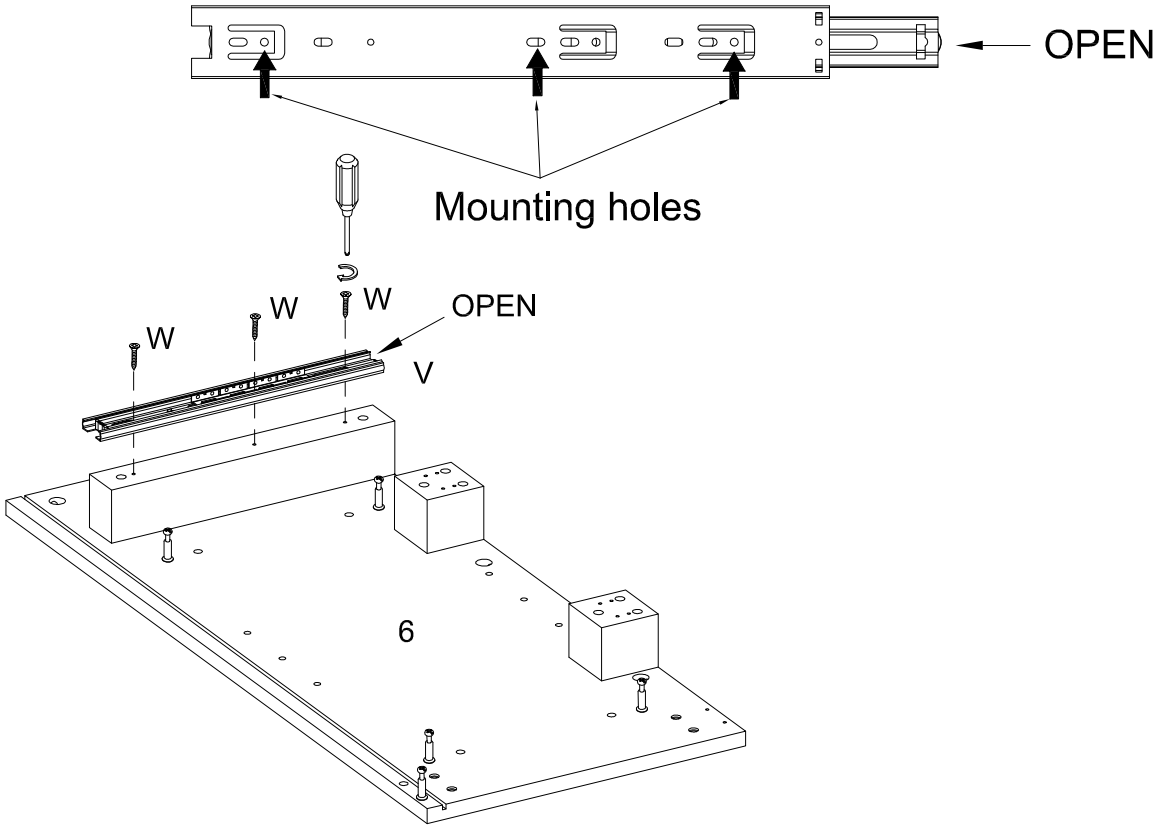
OPEN
Mounting holes
W
W
W
OPEN
V
6


Step 4

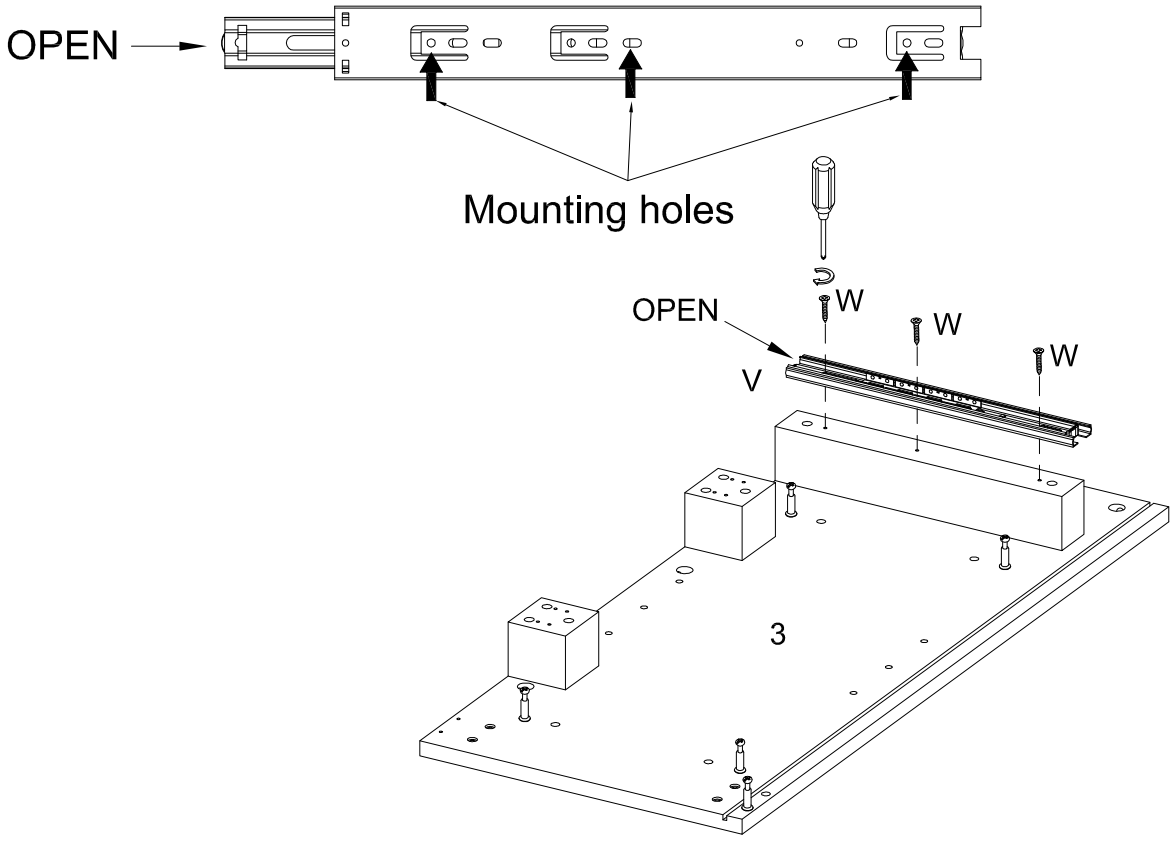
OPEN
Mounting holes
OPEN
W
W
W
V
3


Step 5

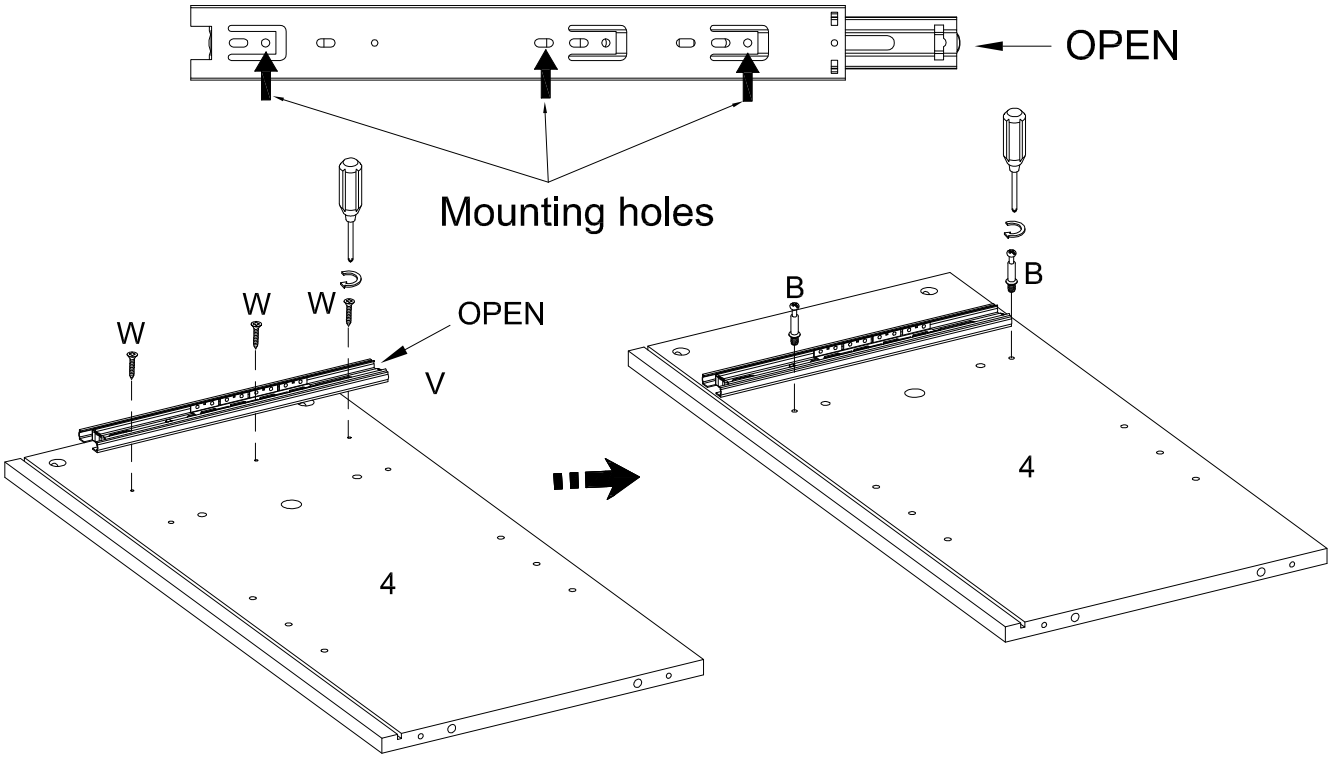
OPEN
Mounting holes
W
W
W
OPEN
V
4
B
B
4


Step 6

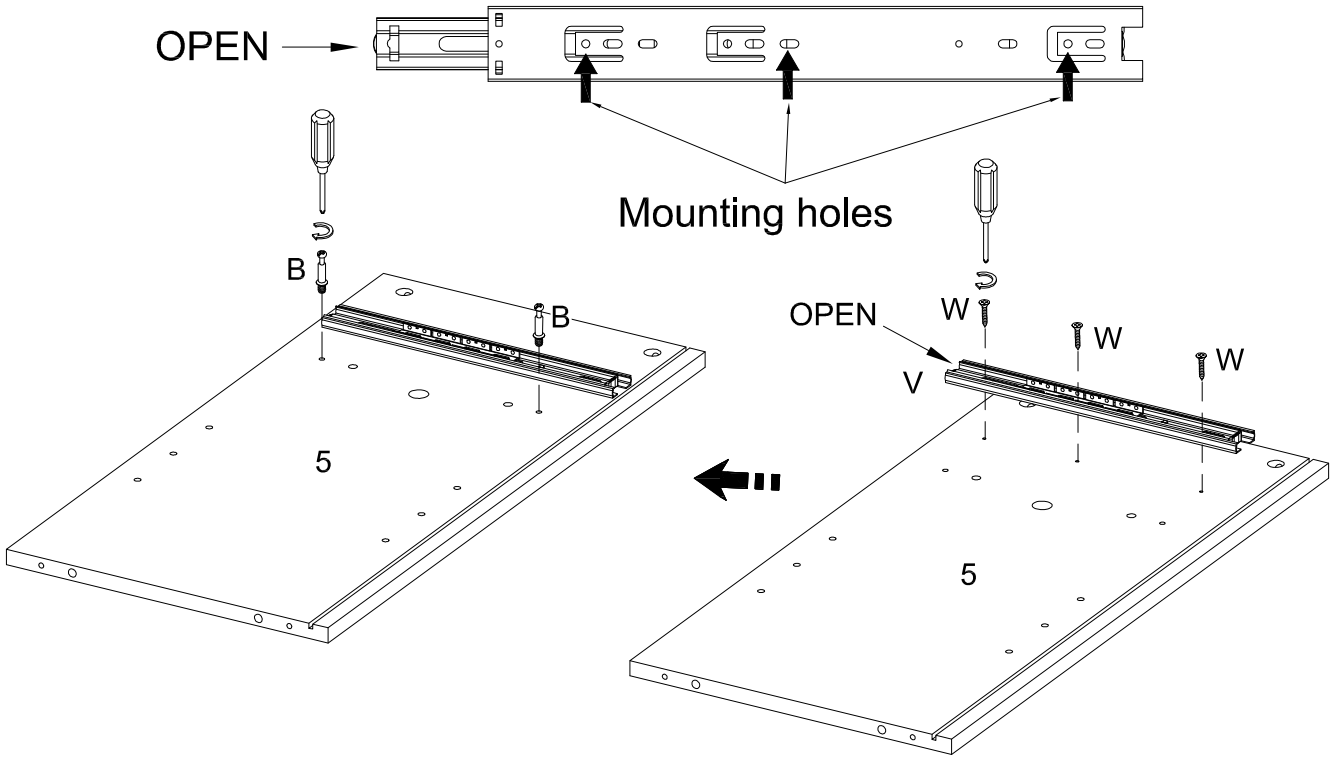
OPEN
Mounting holes
B
B
5
OPEN
W
W
W
V
5


Step 7

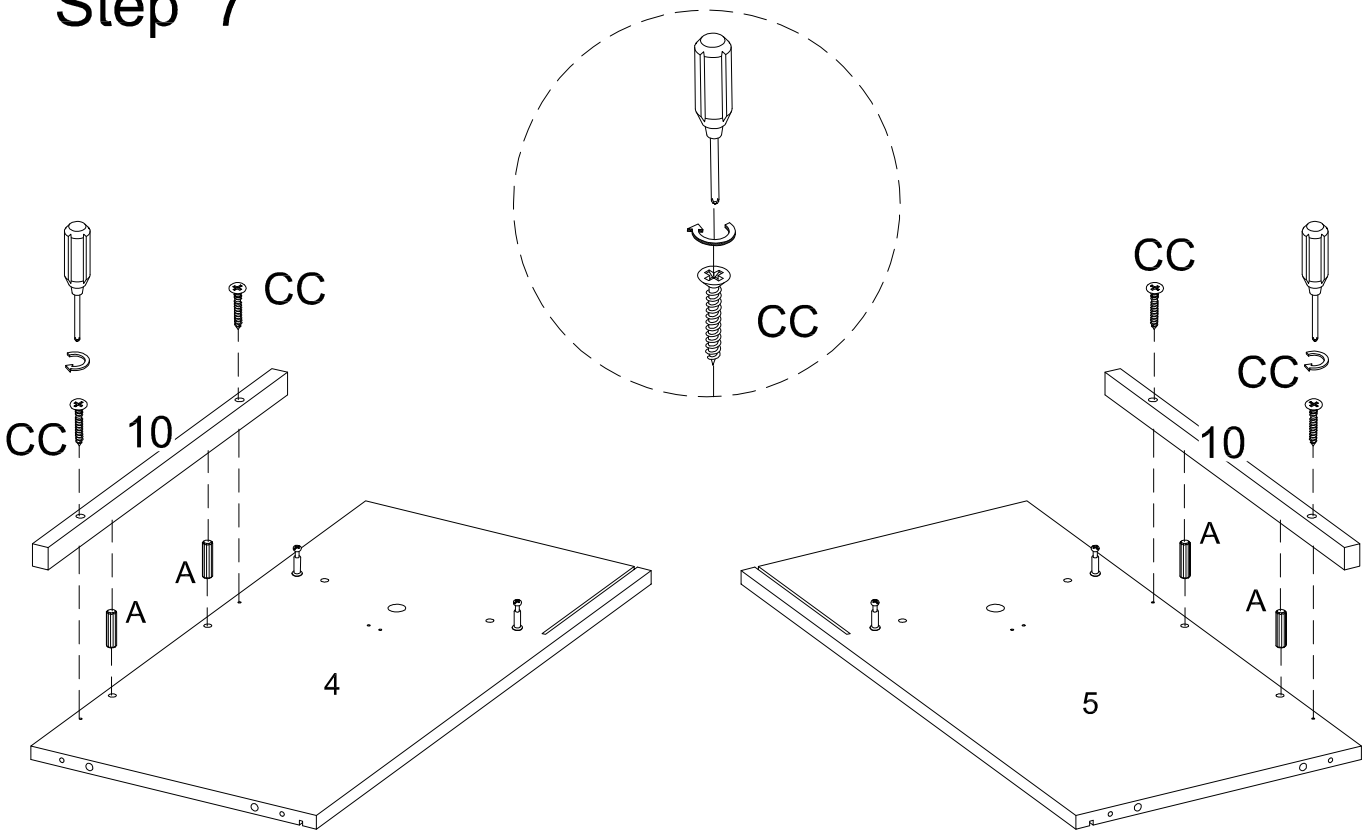


Step 8

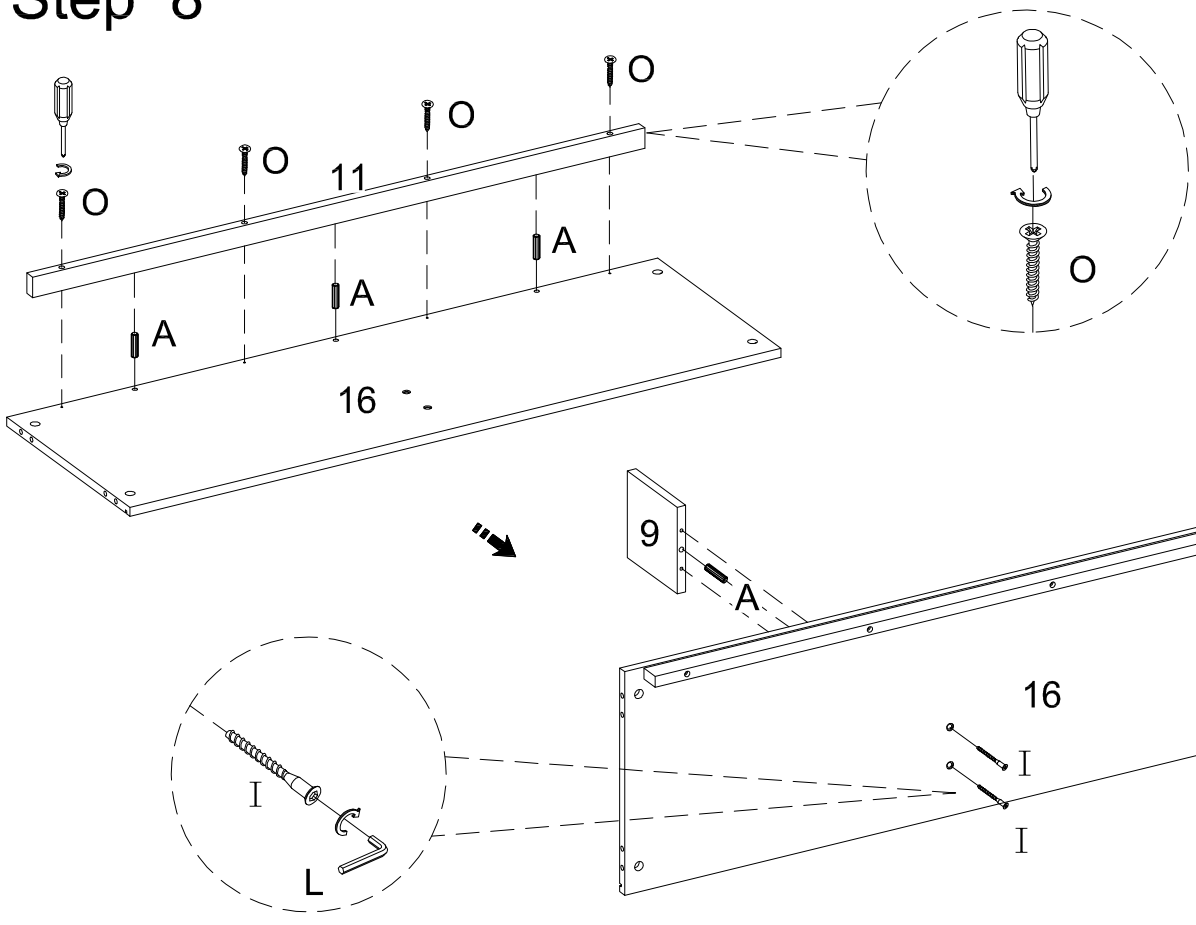


Step 9

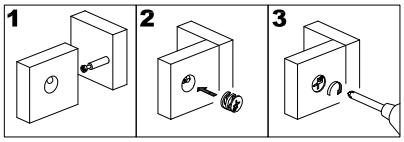


Step 10

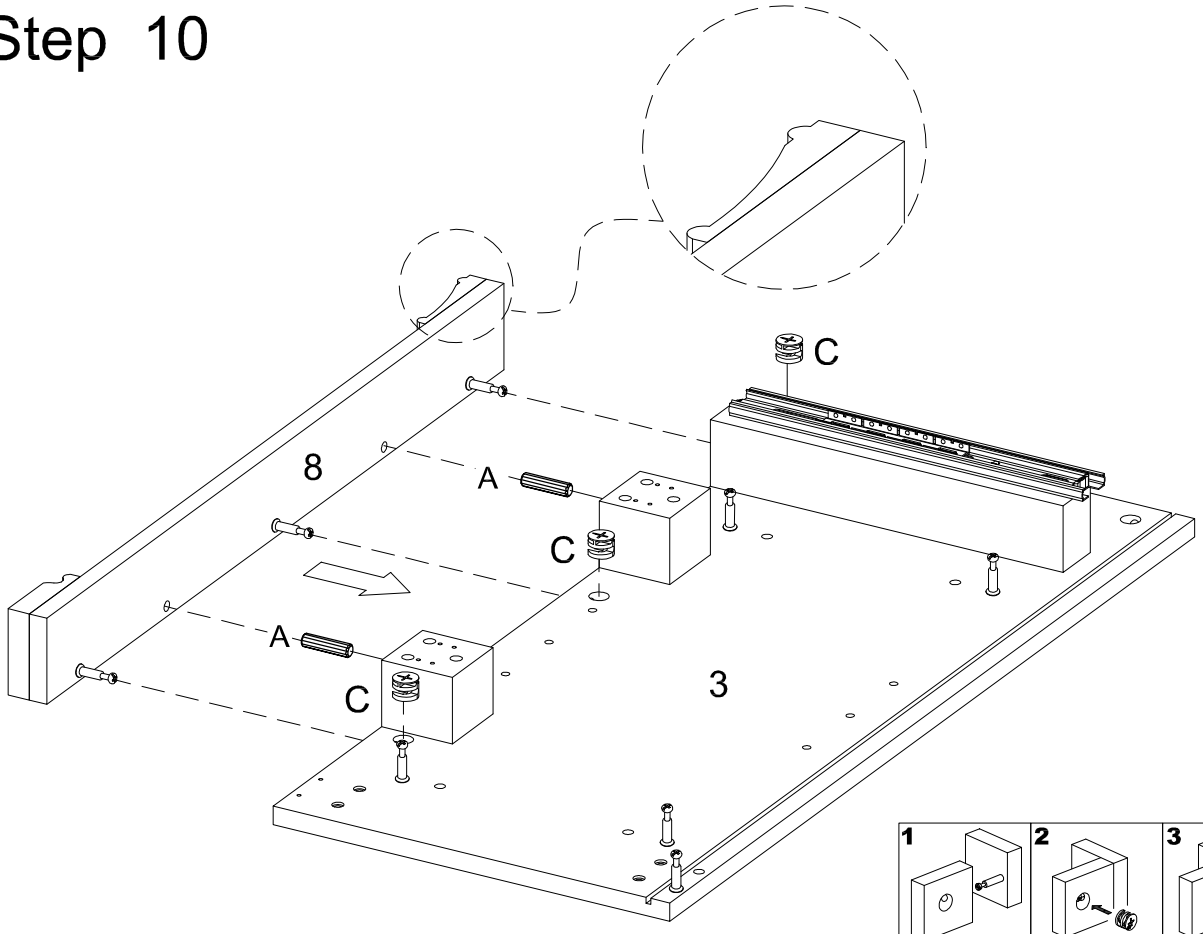


Step 11

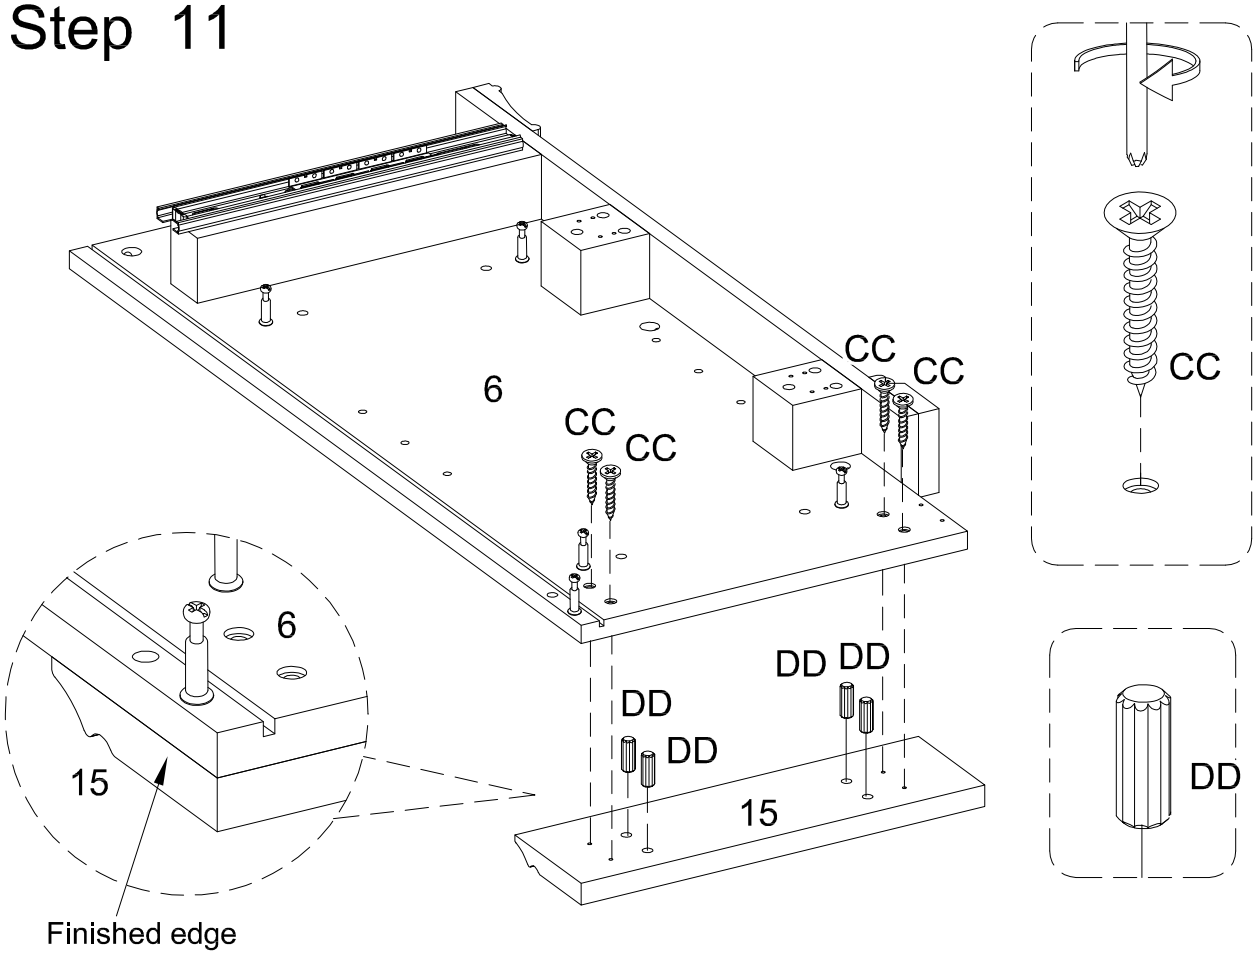


Step 12

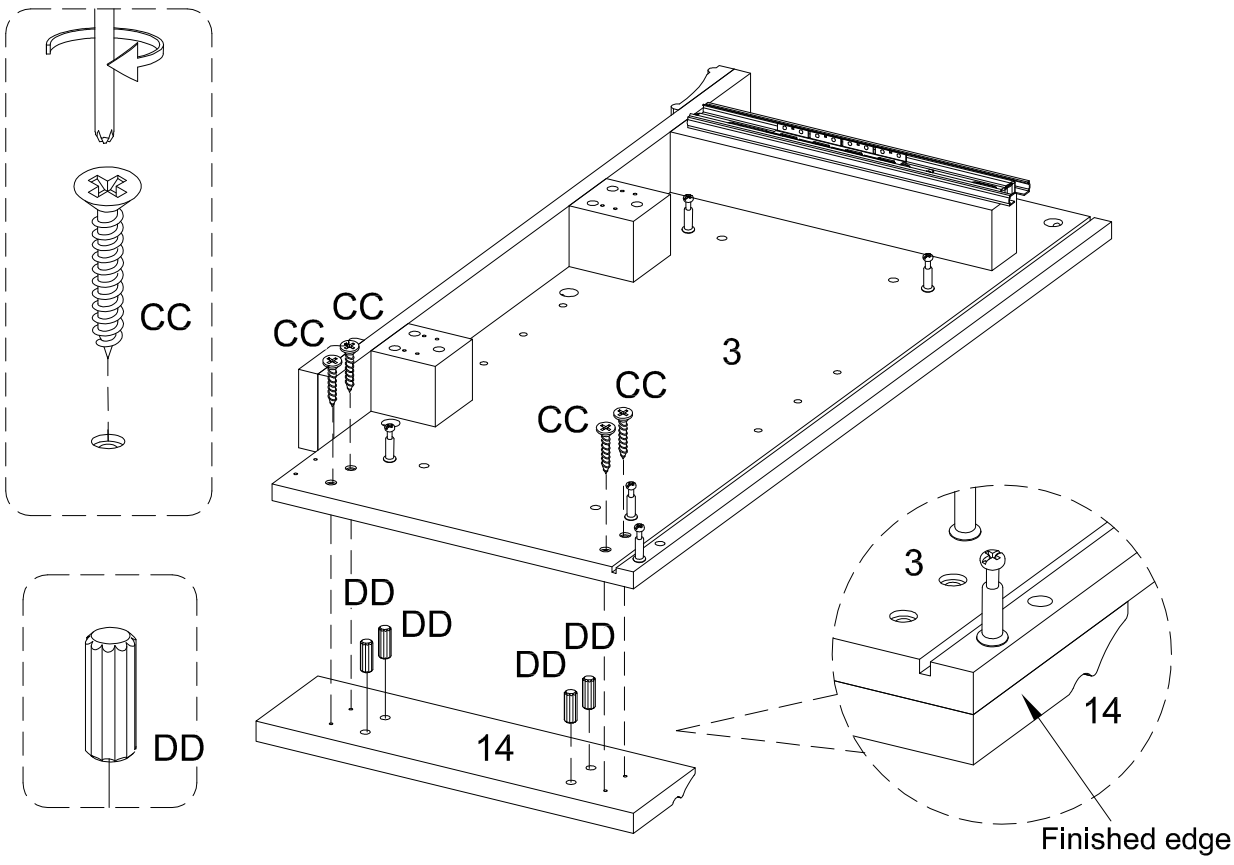



Step 13

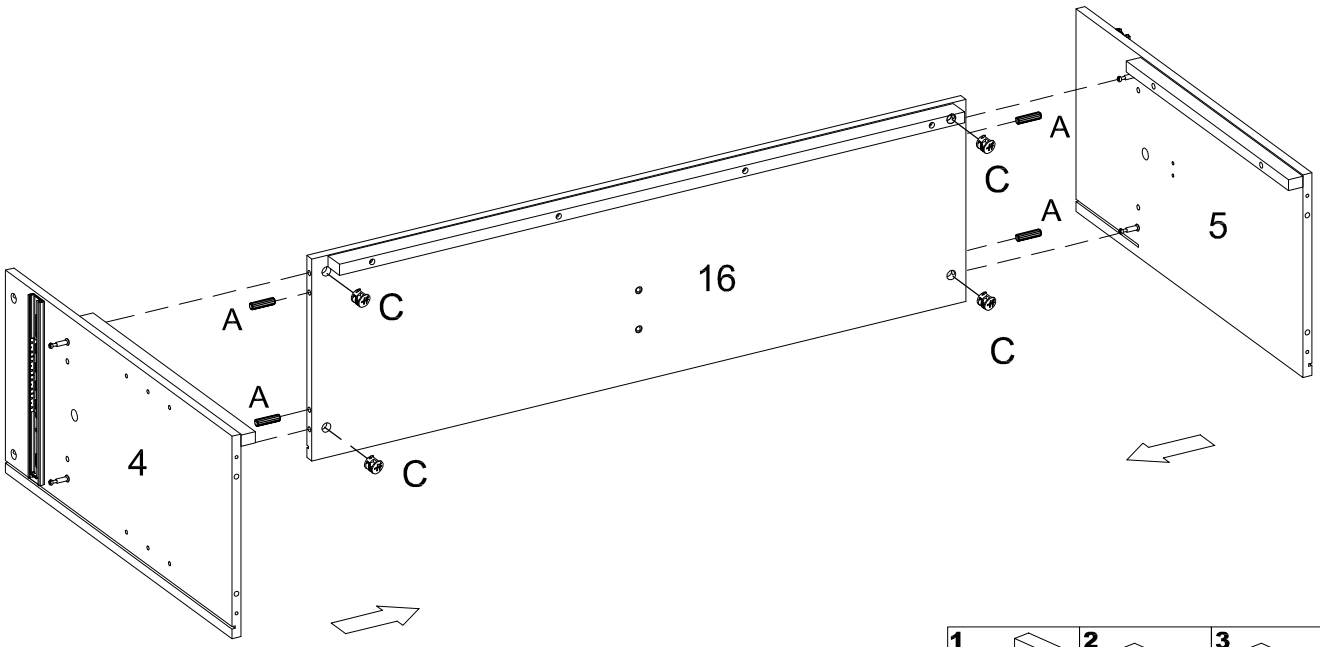

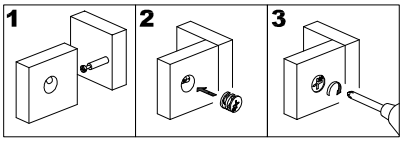



Step 14

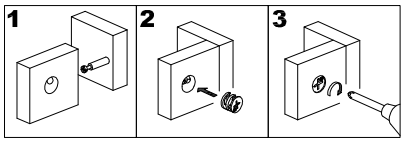

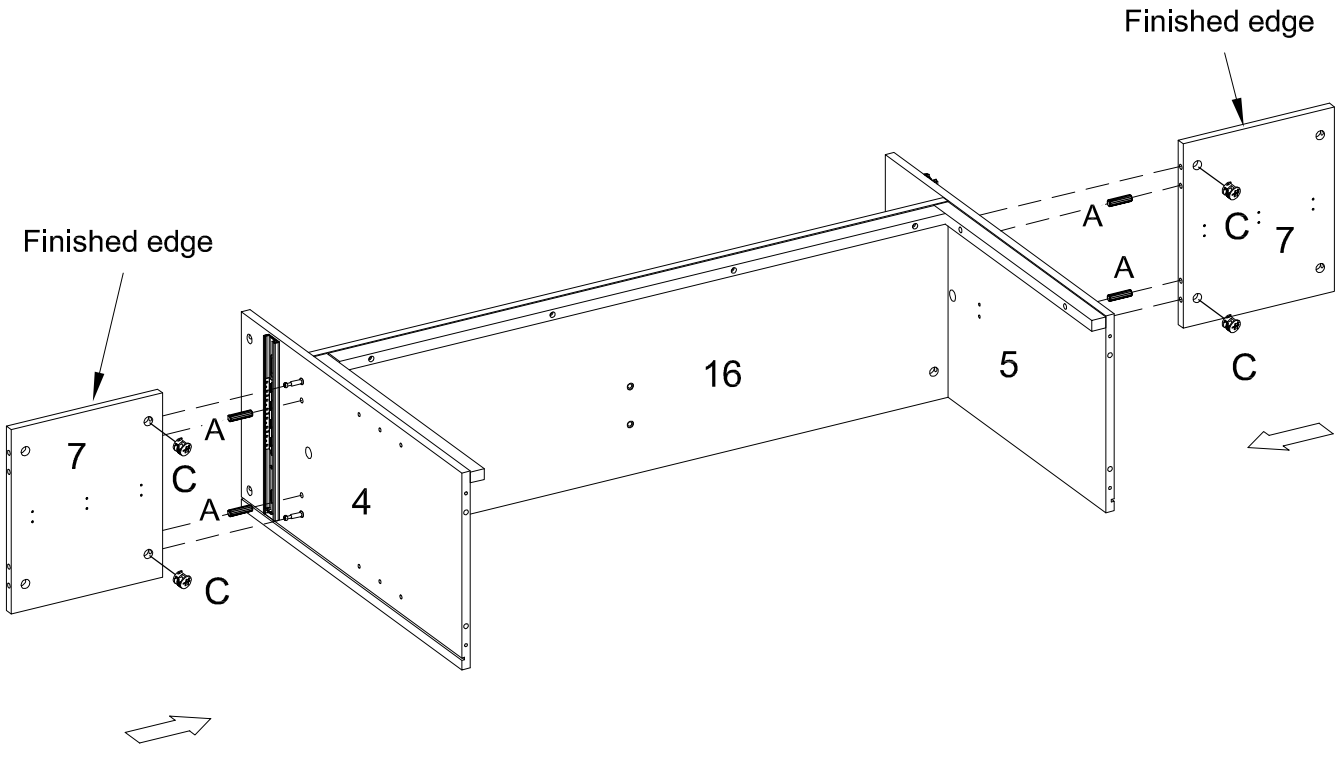


Step 15

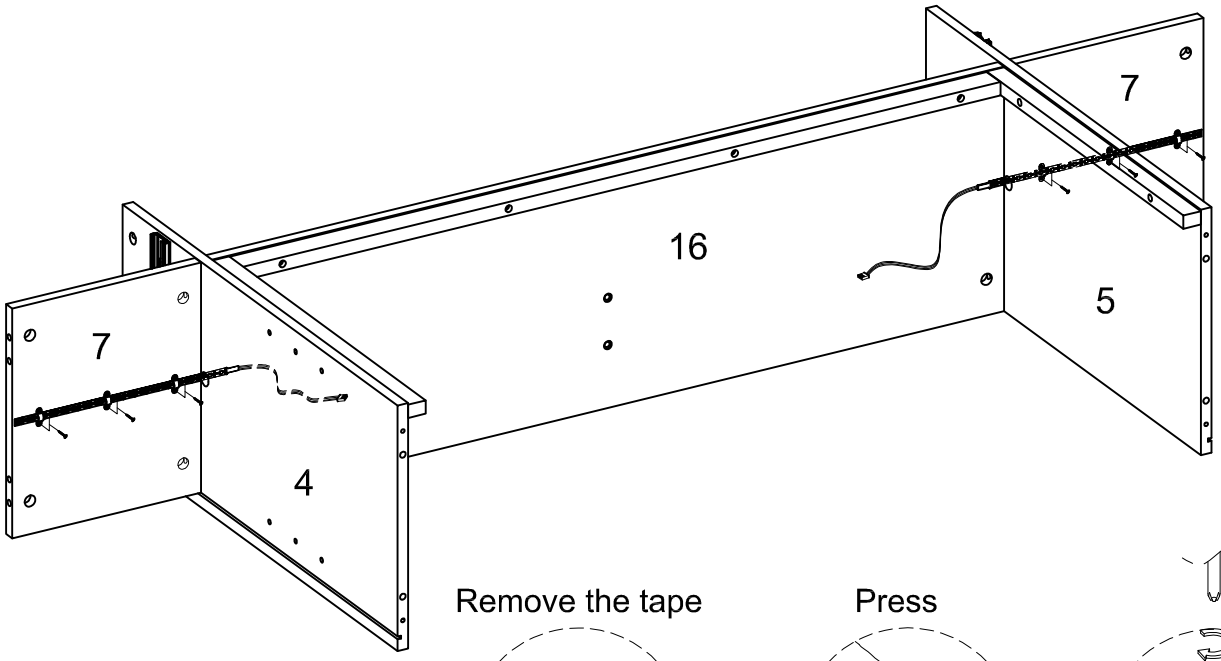


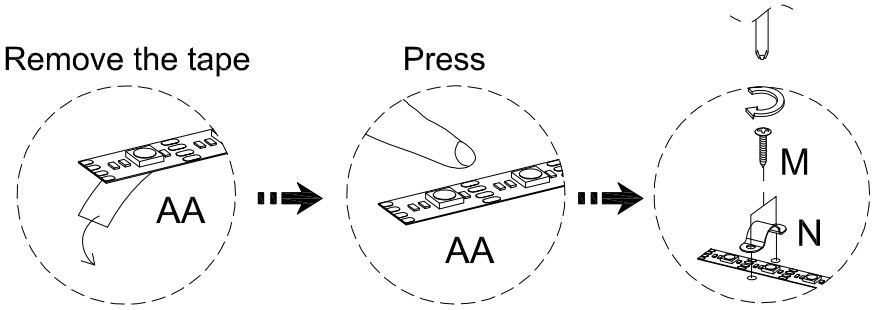


Step 16

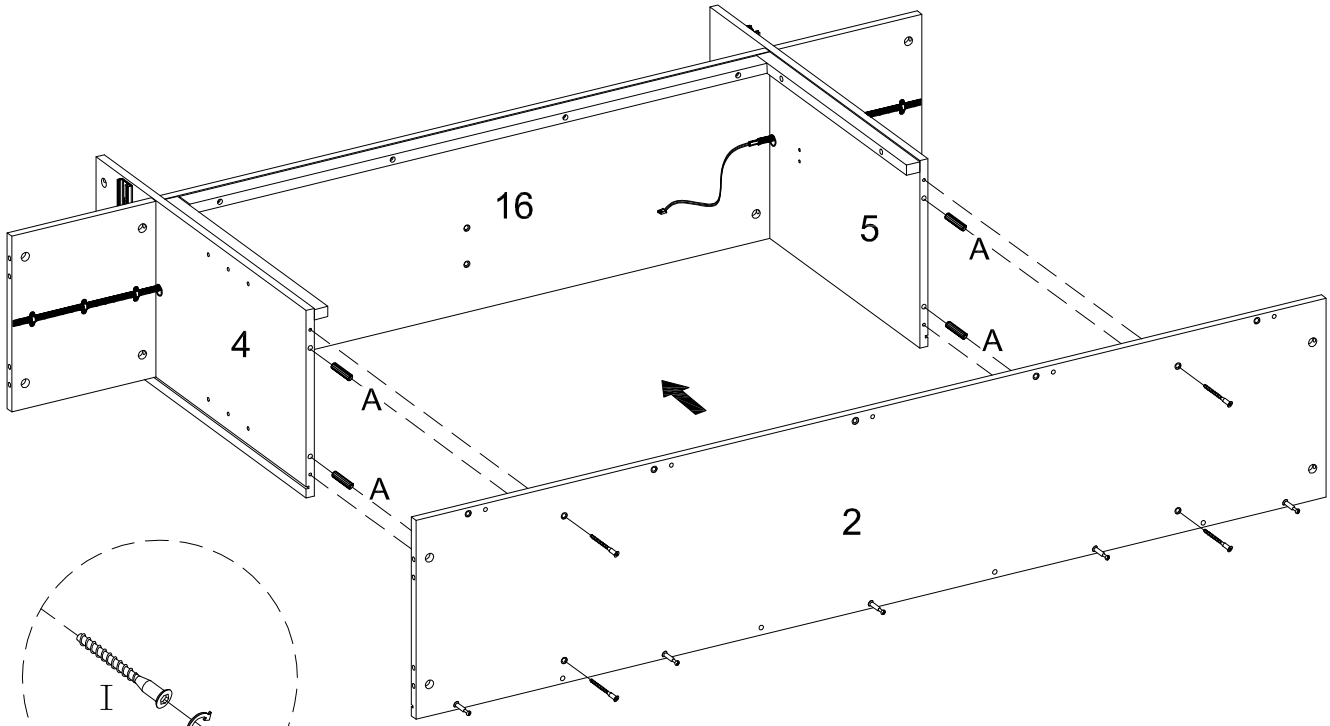


Step 17

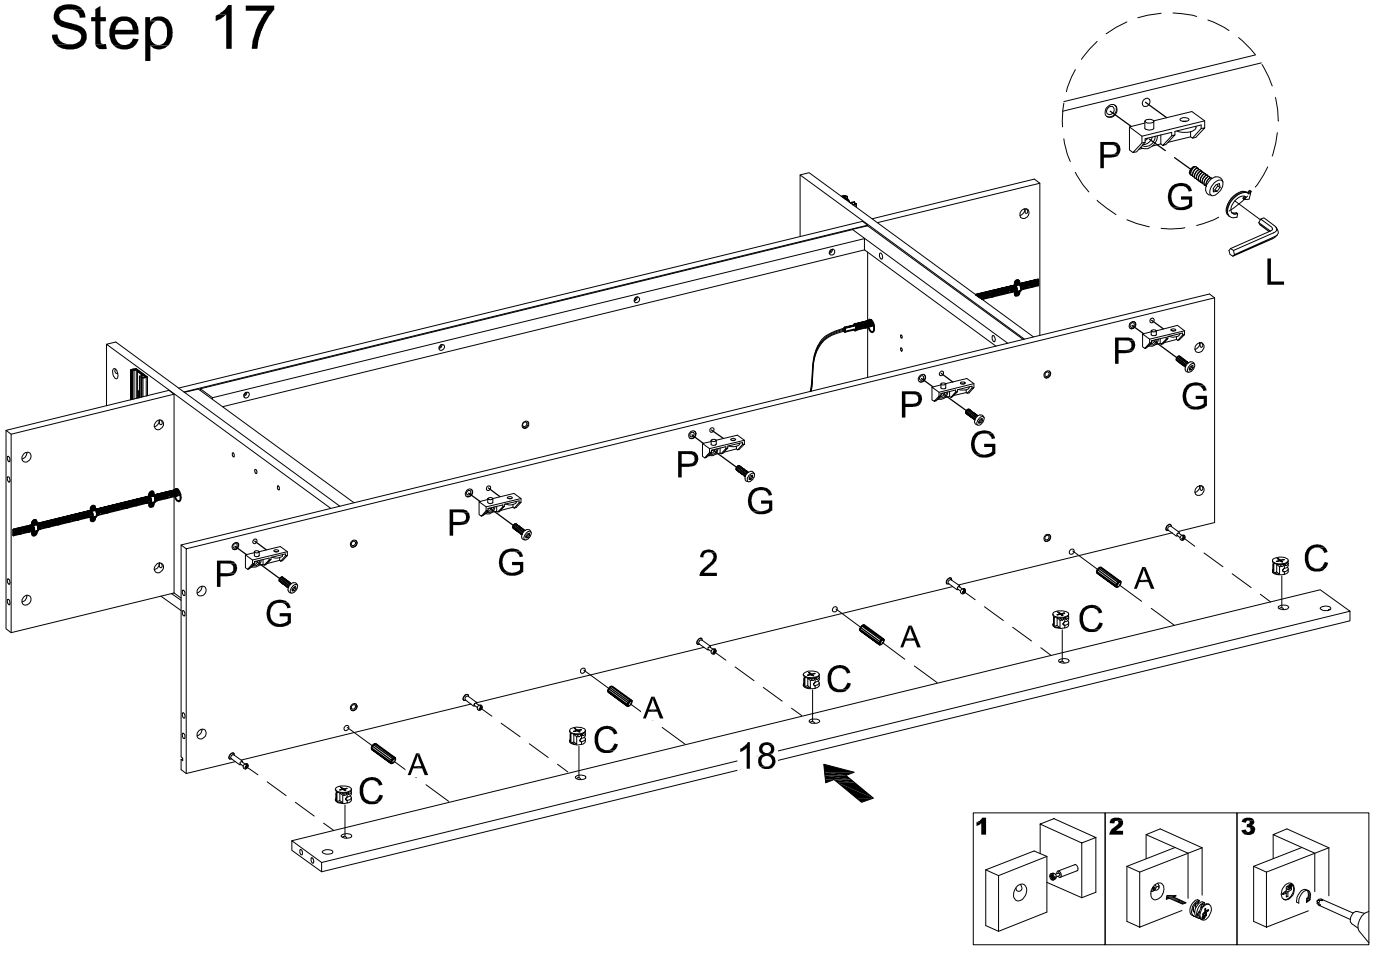



Step 18

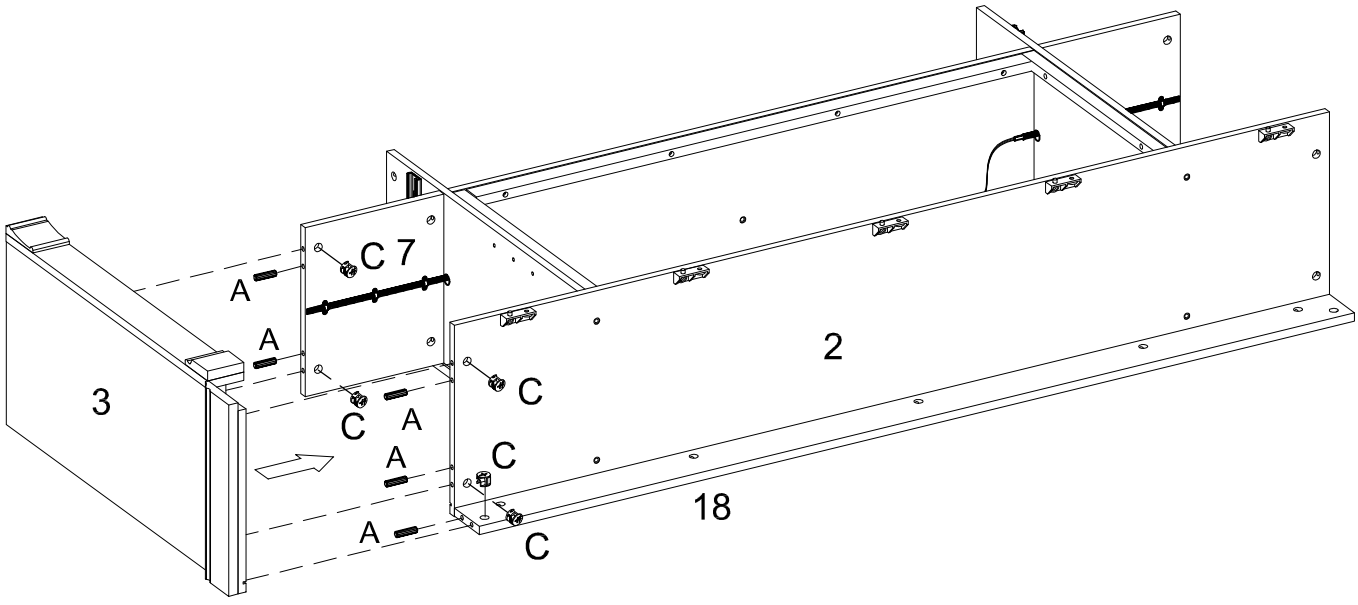

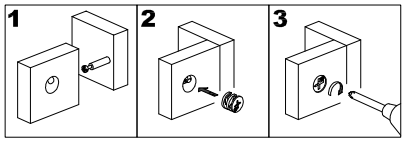



Step 19

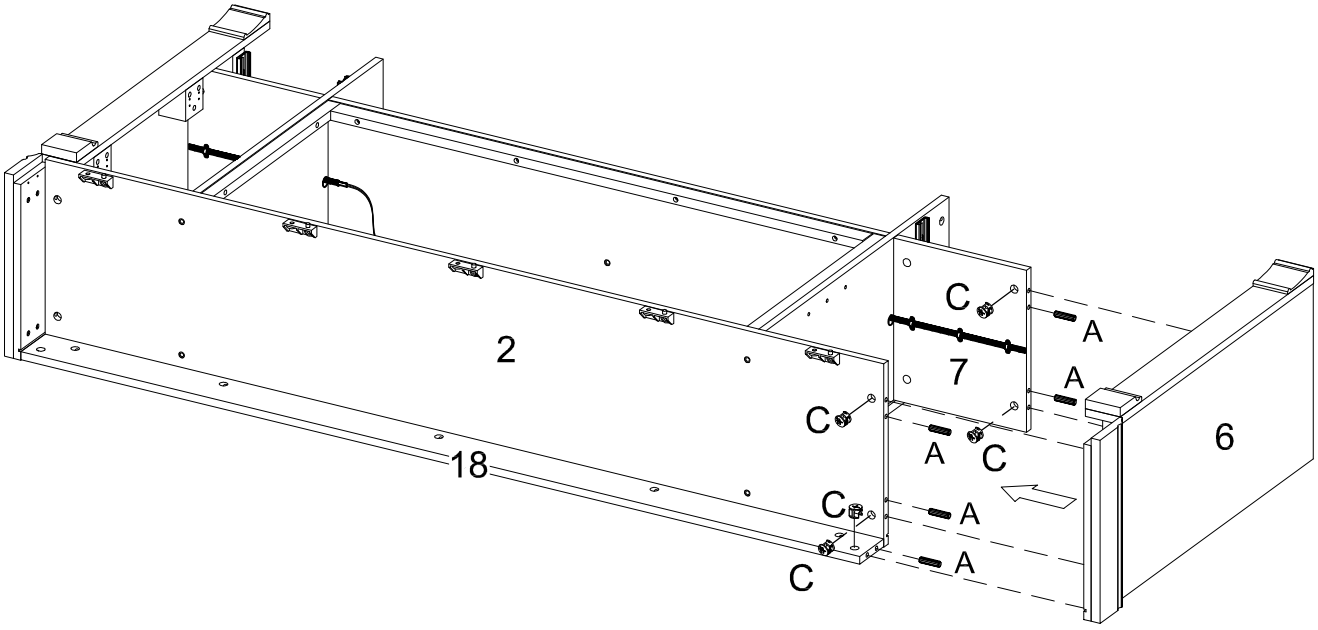

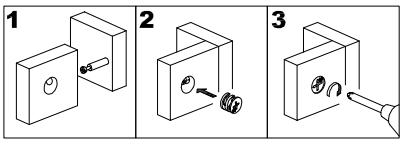


Step 20

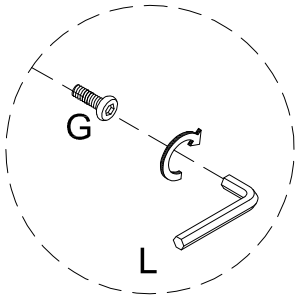


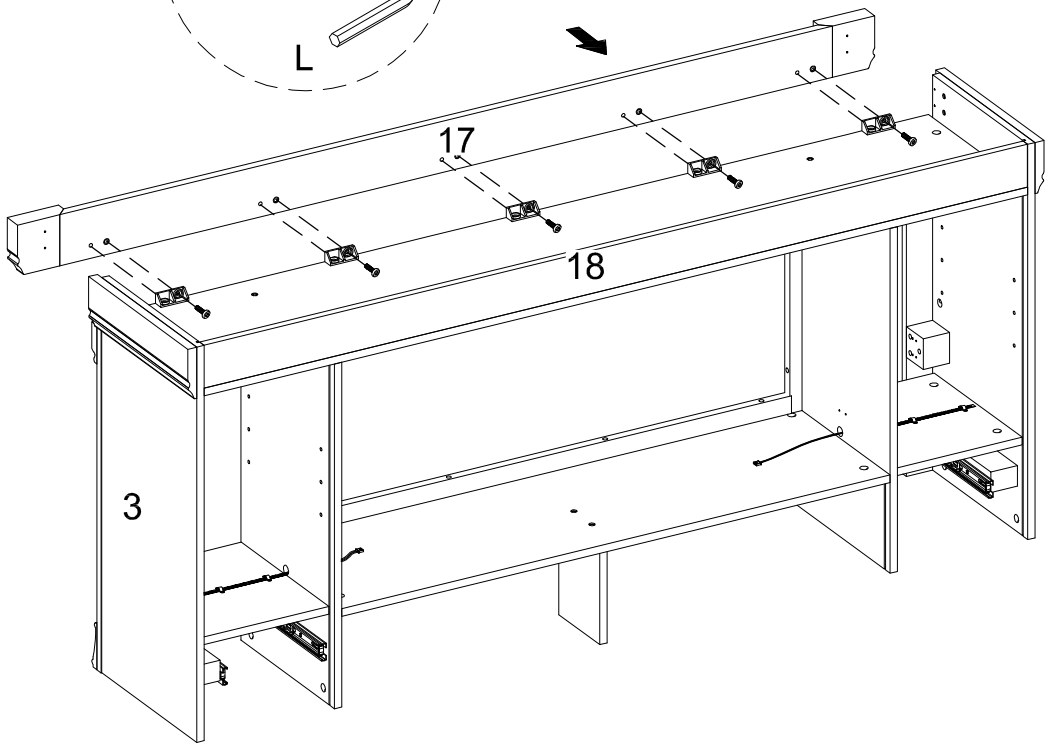


Step 21

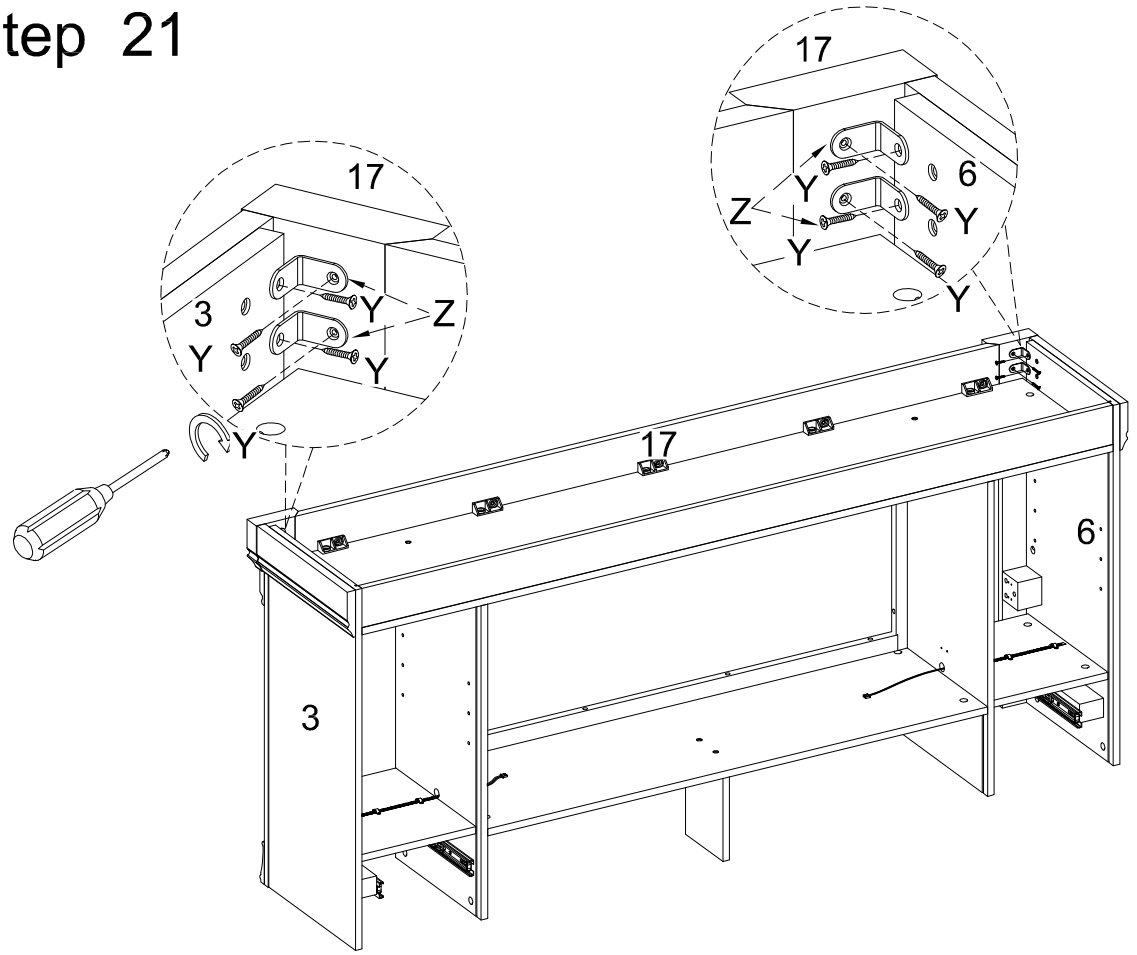


Step 22

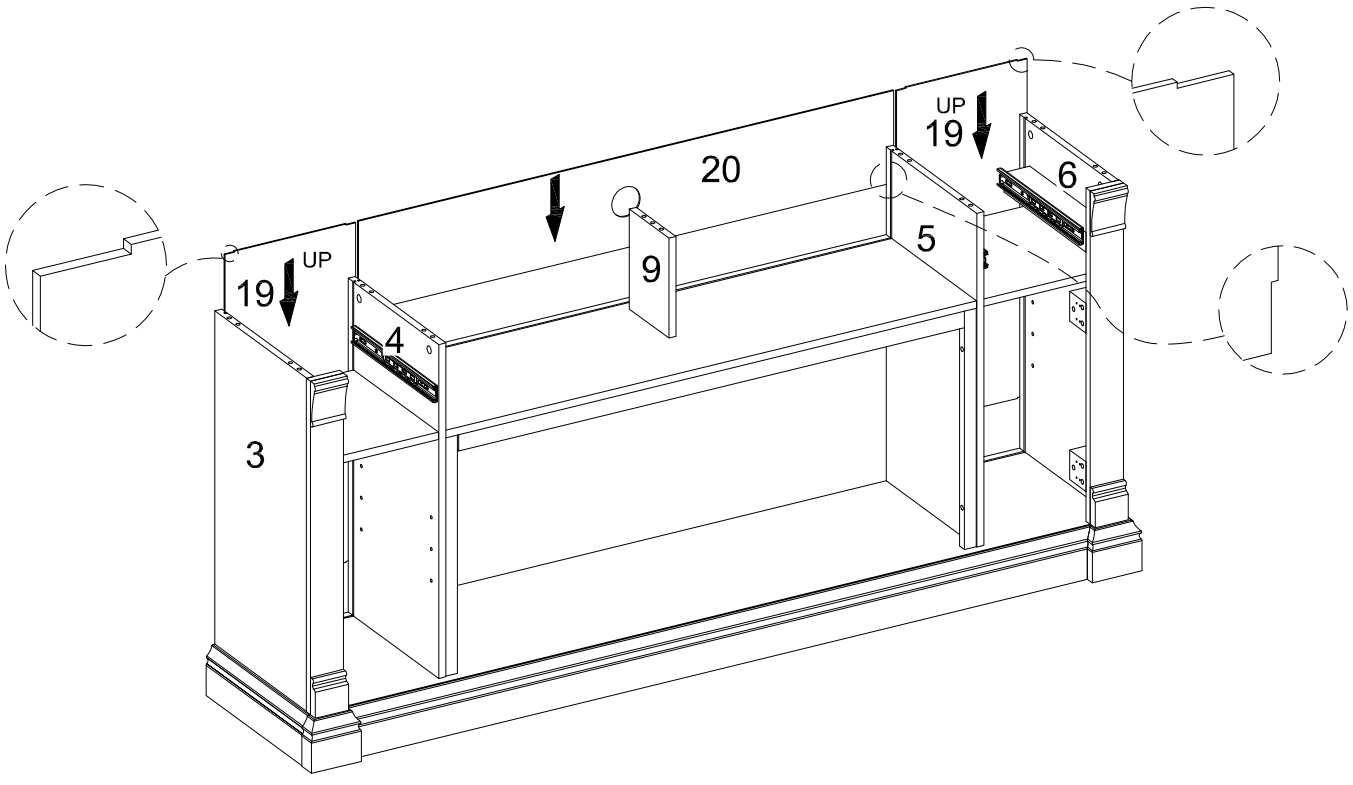


Step 23

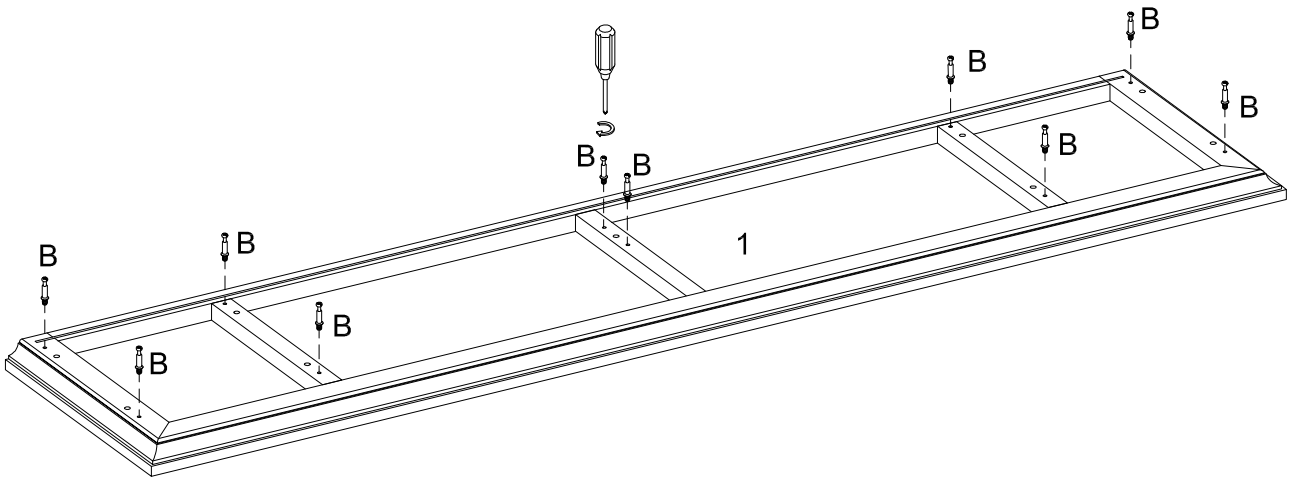


Step 24

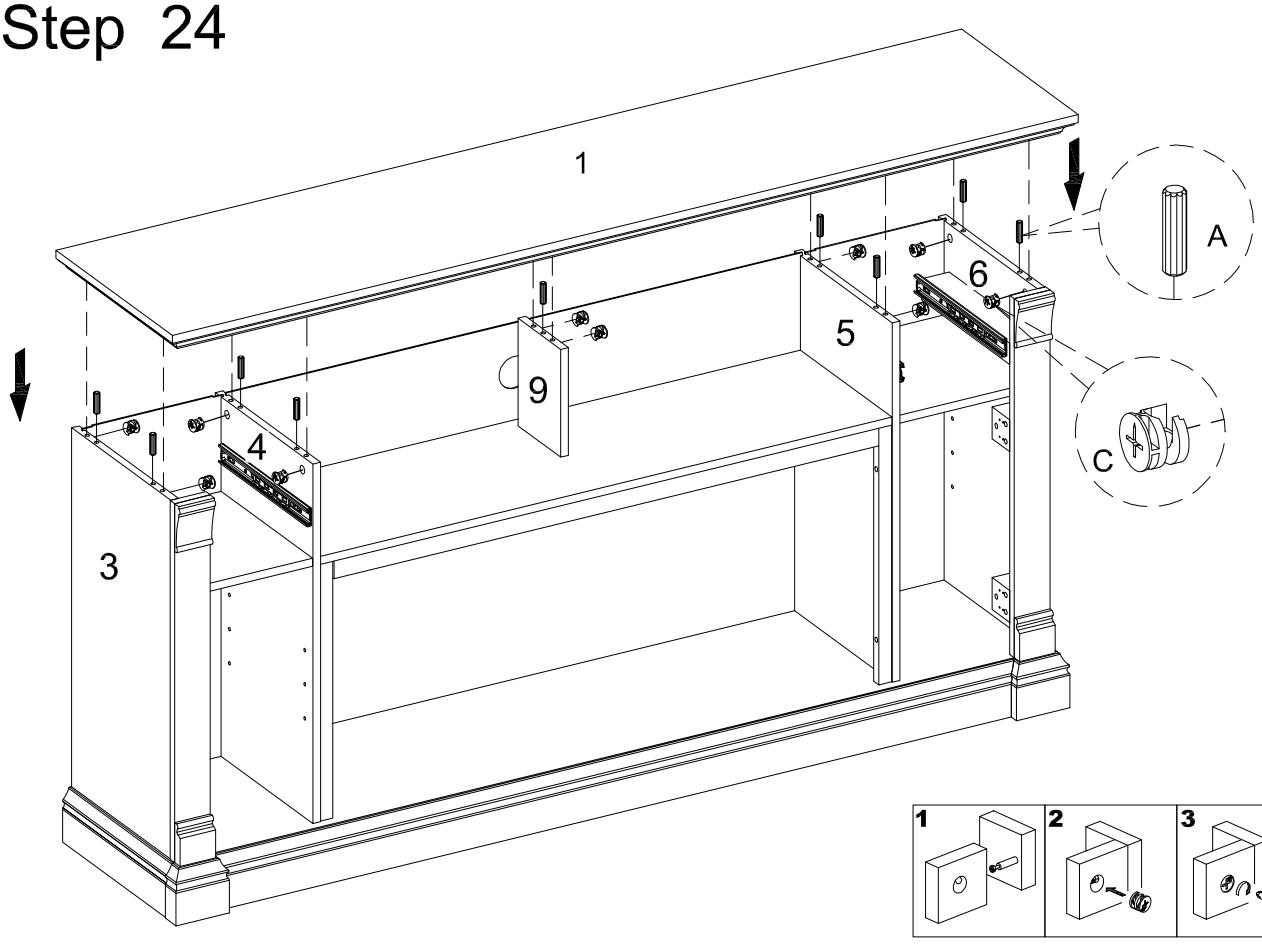


Step 25

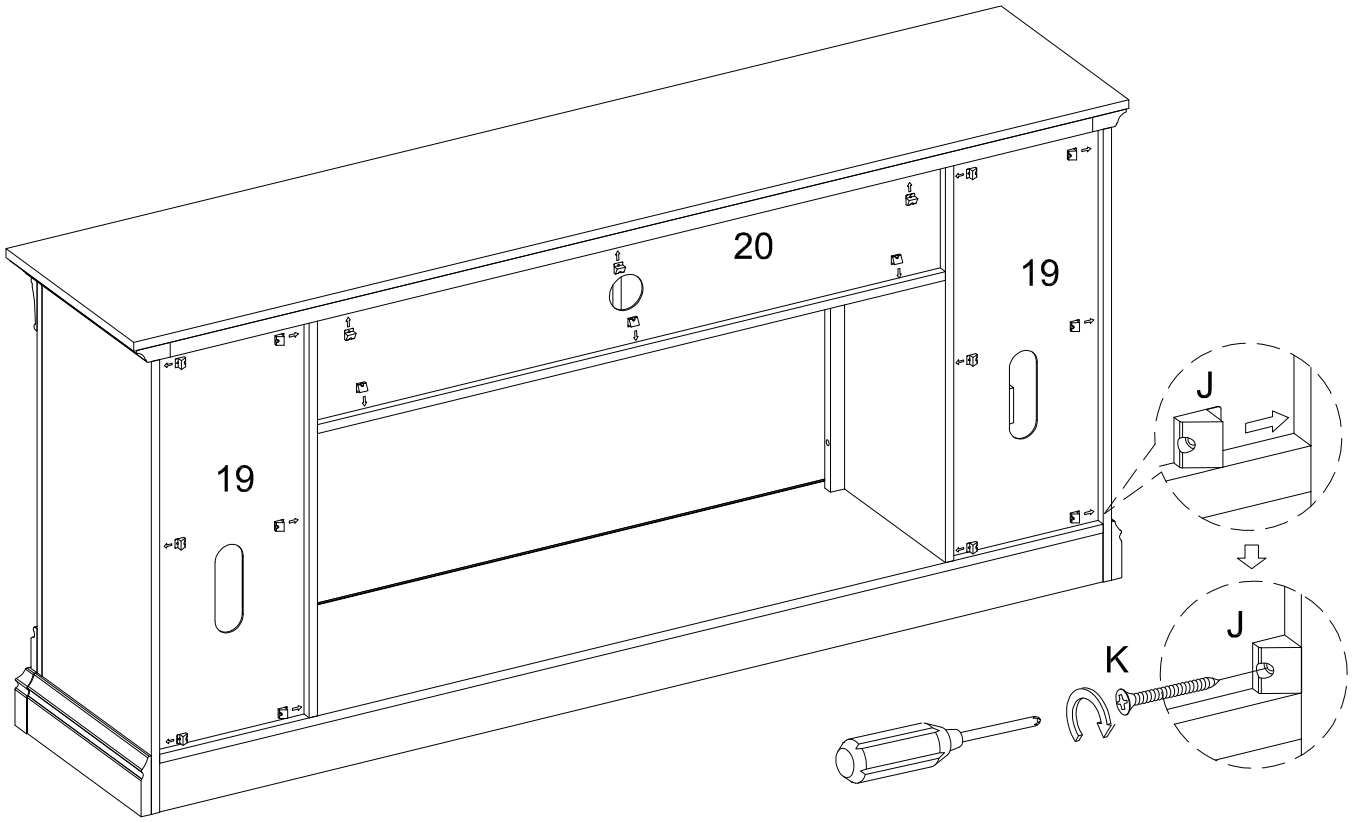


Step 26

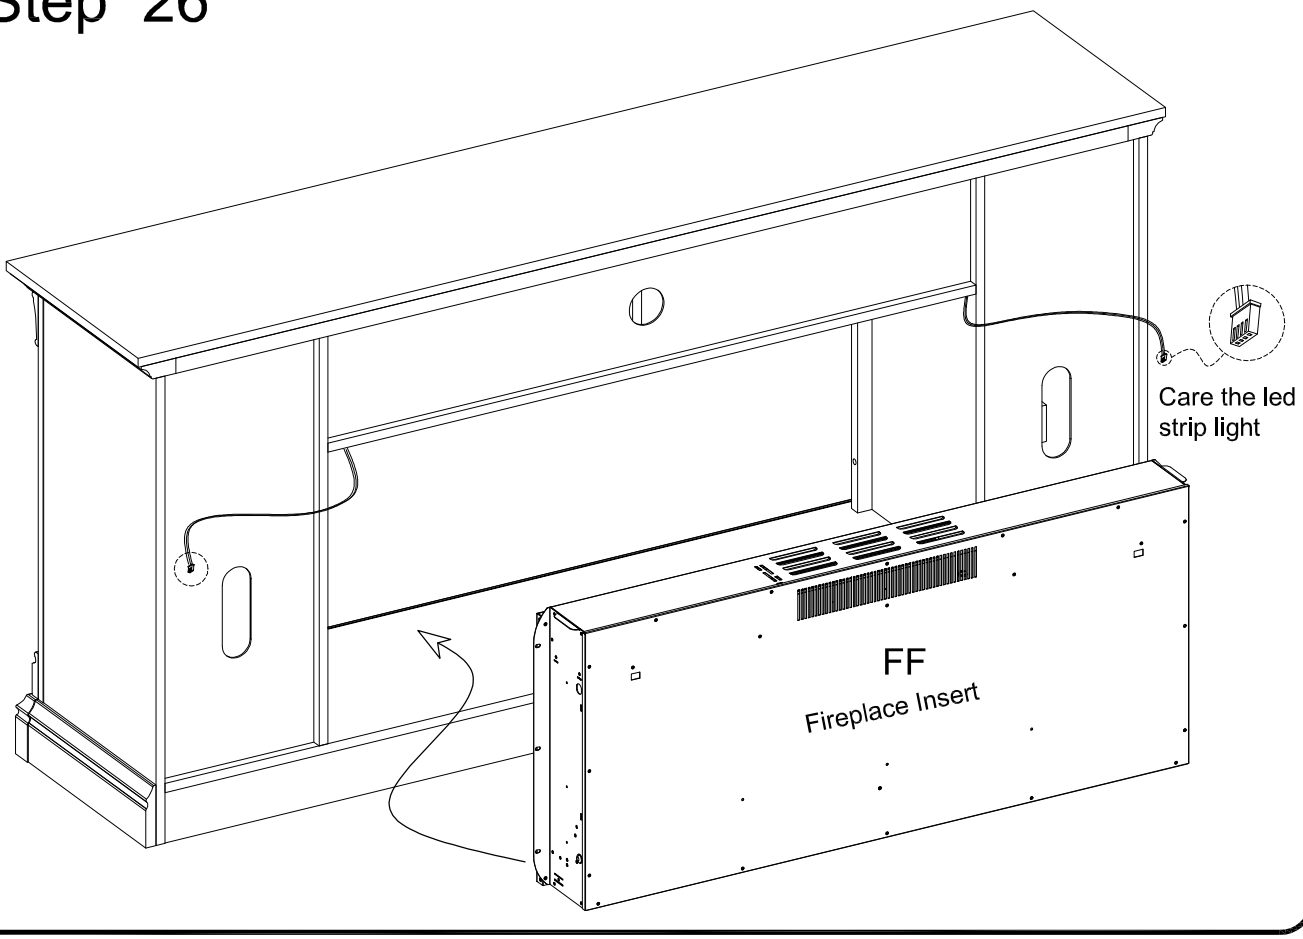


Step 27

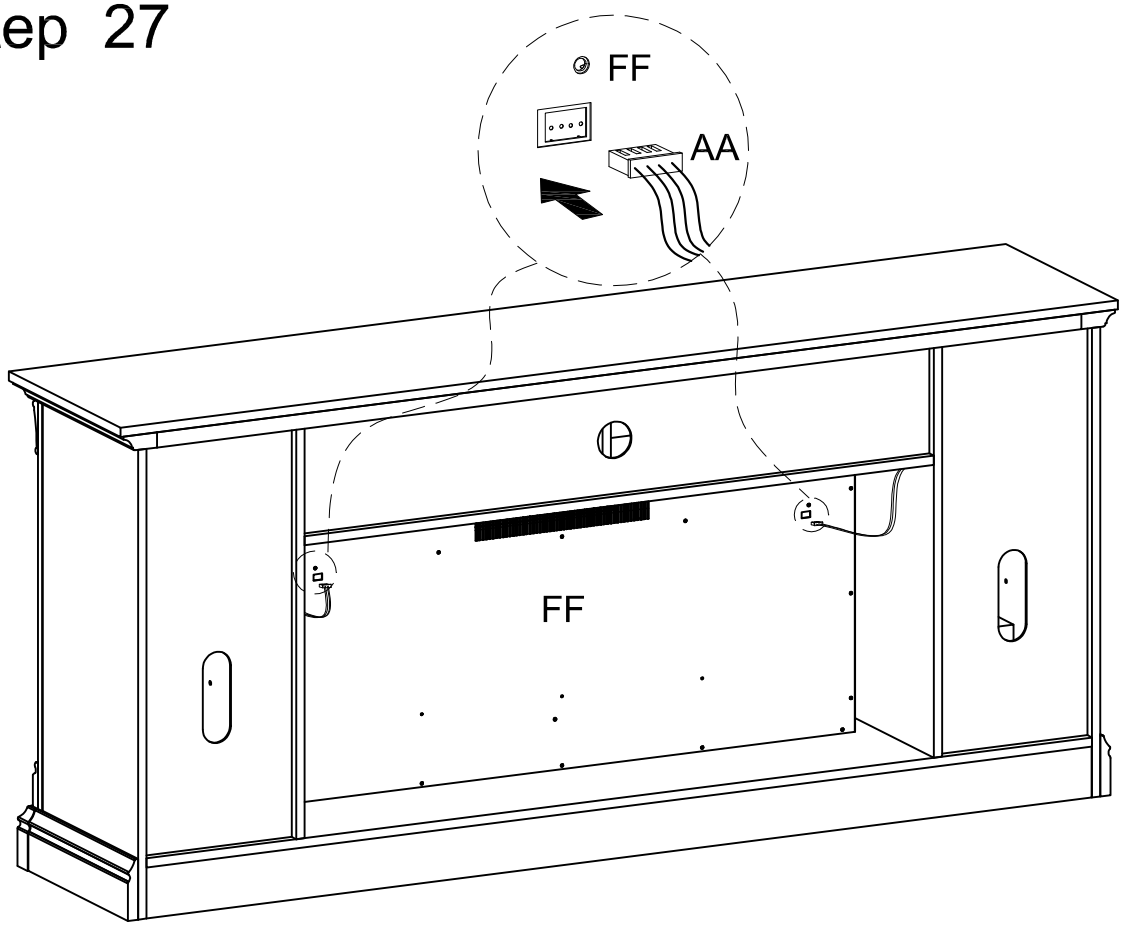


Step 28

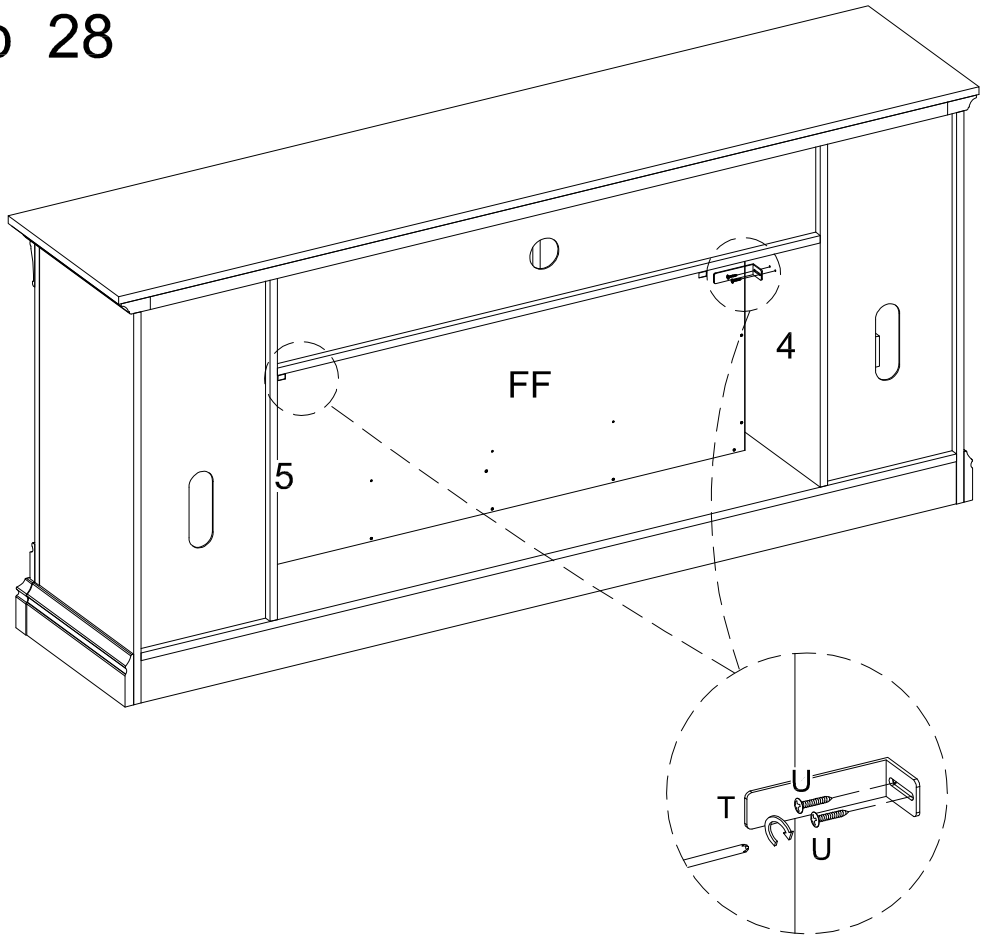


Step 29 x2

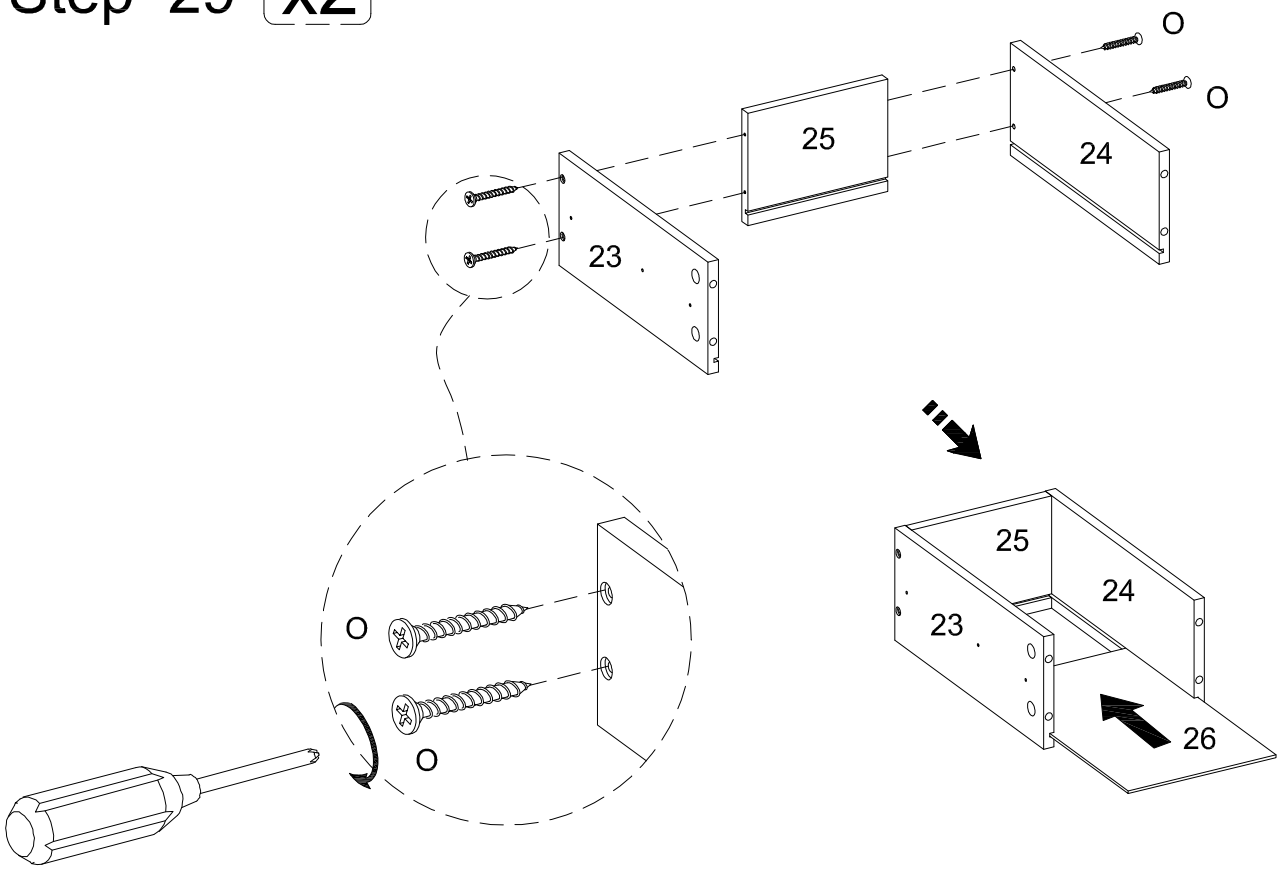


Step 30

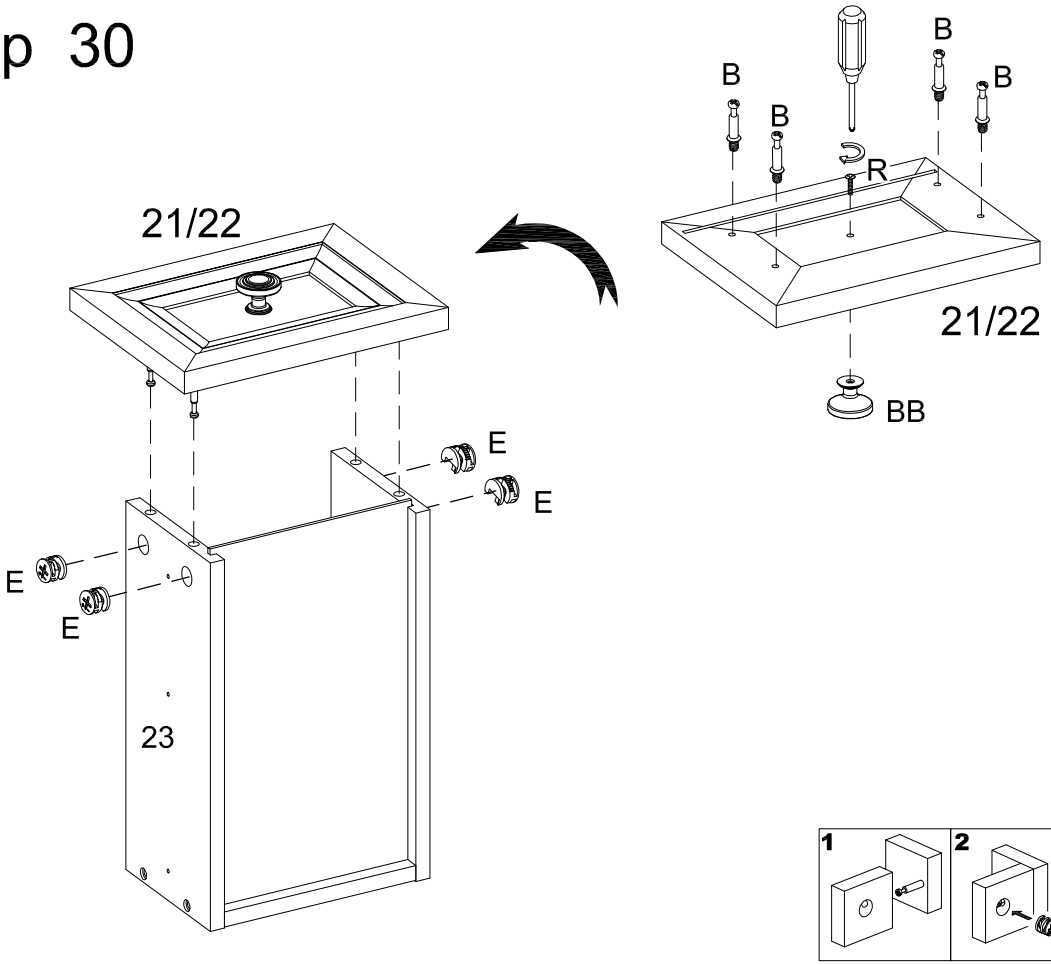


Step 31

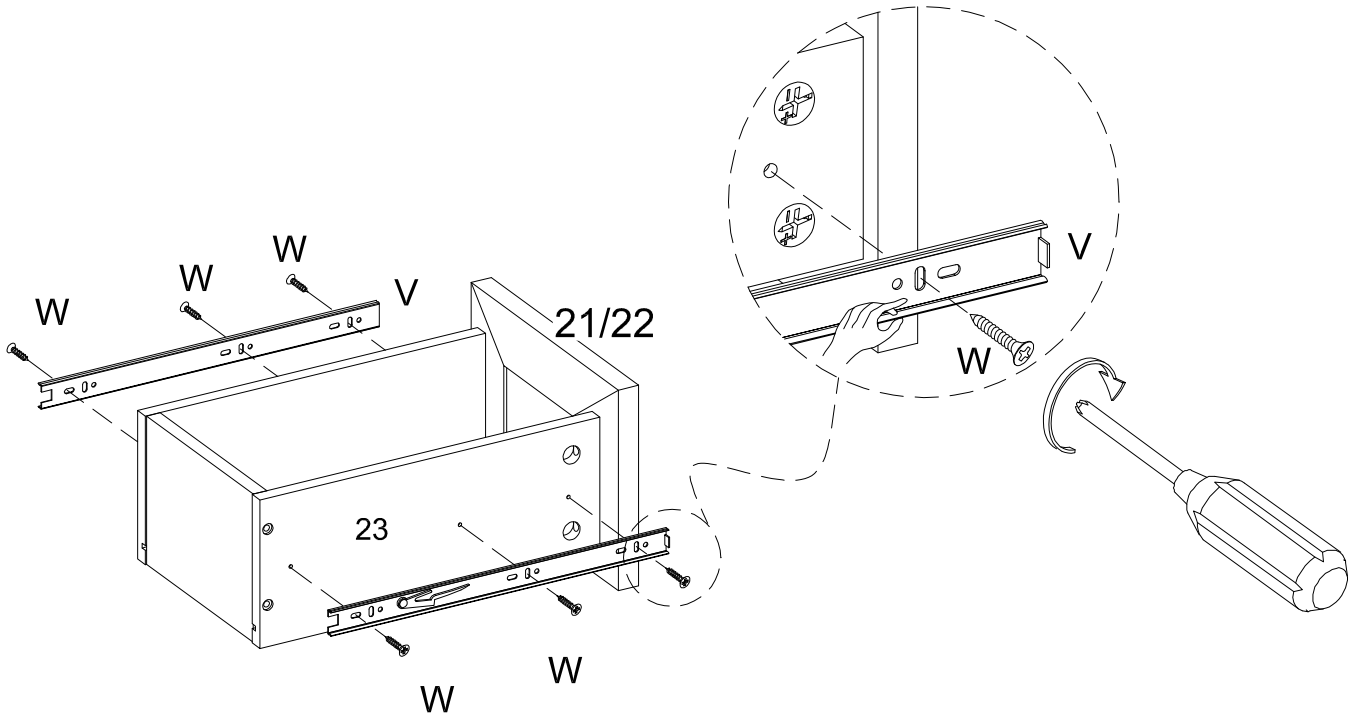


Step 32

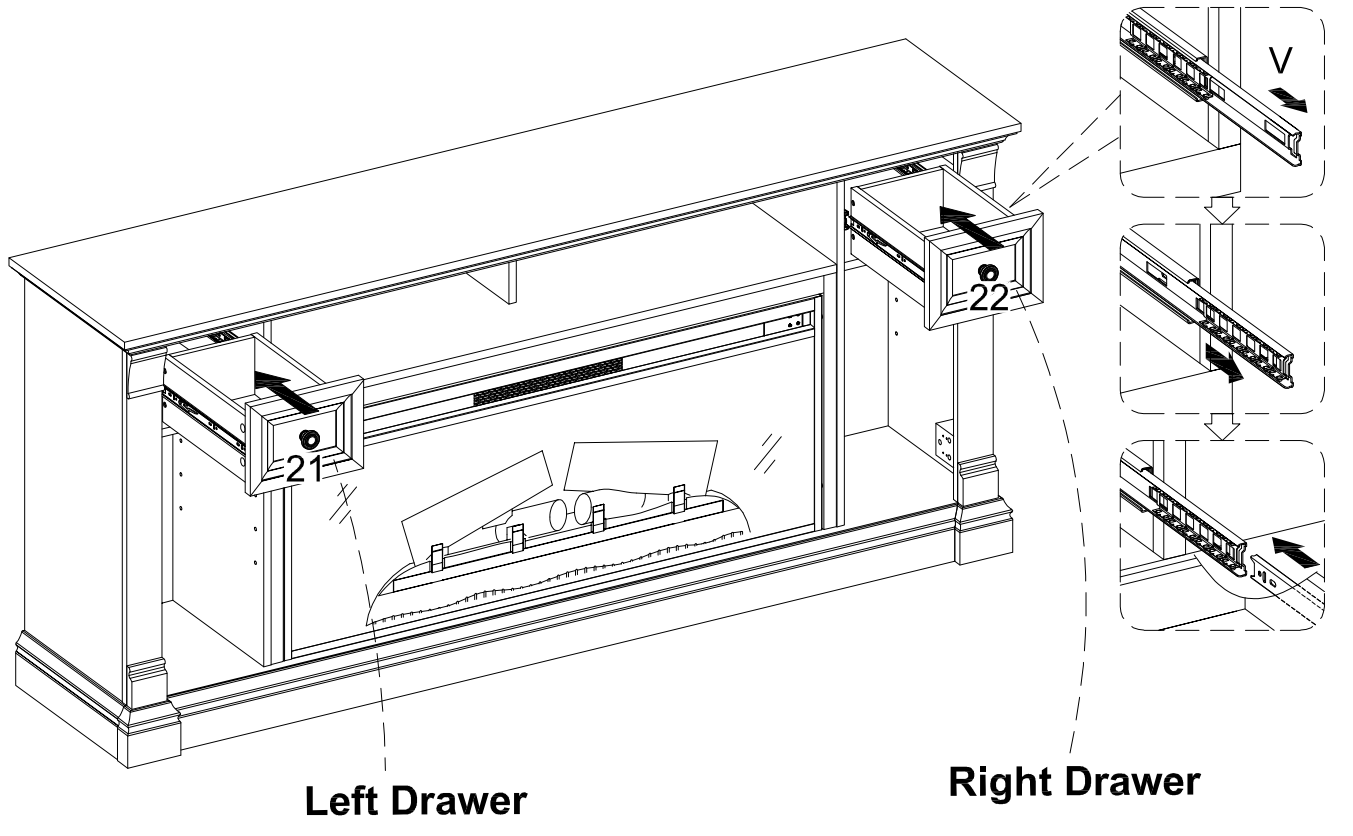


Step 33

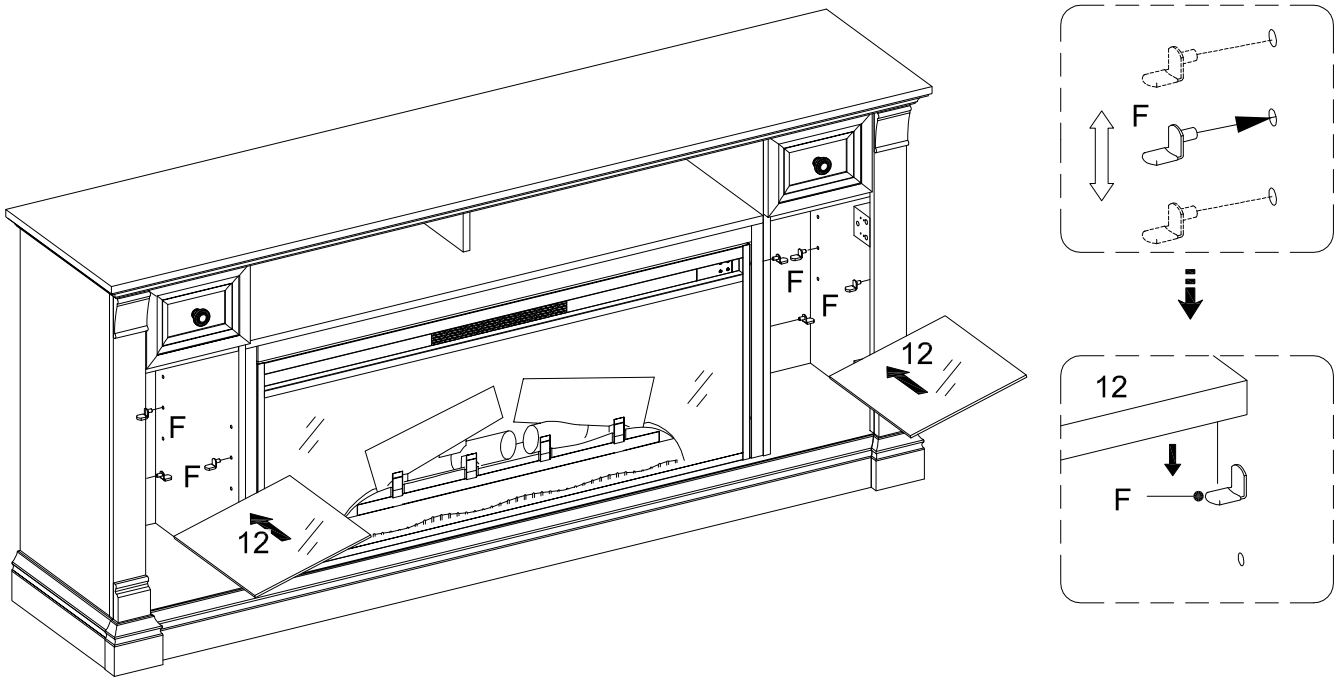


Step 34 x2

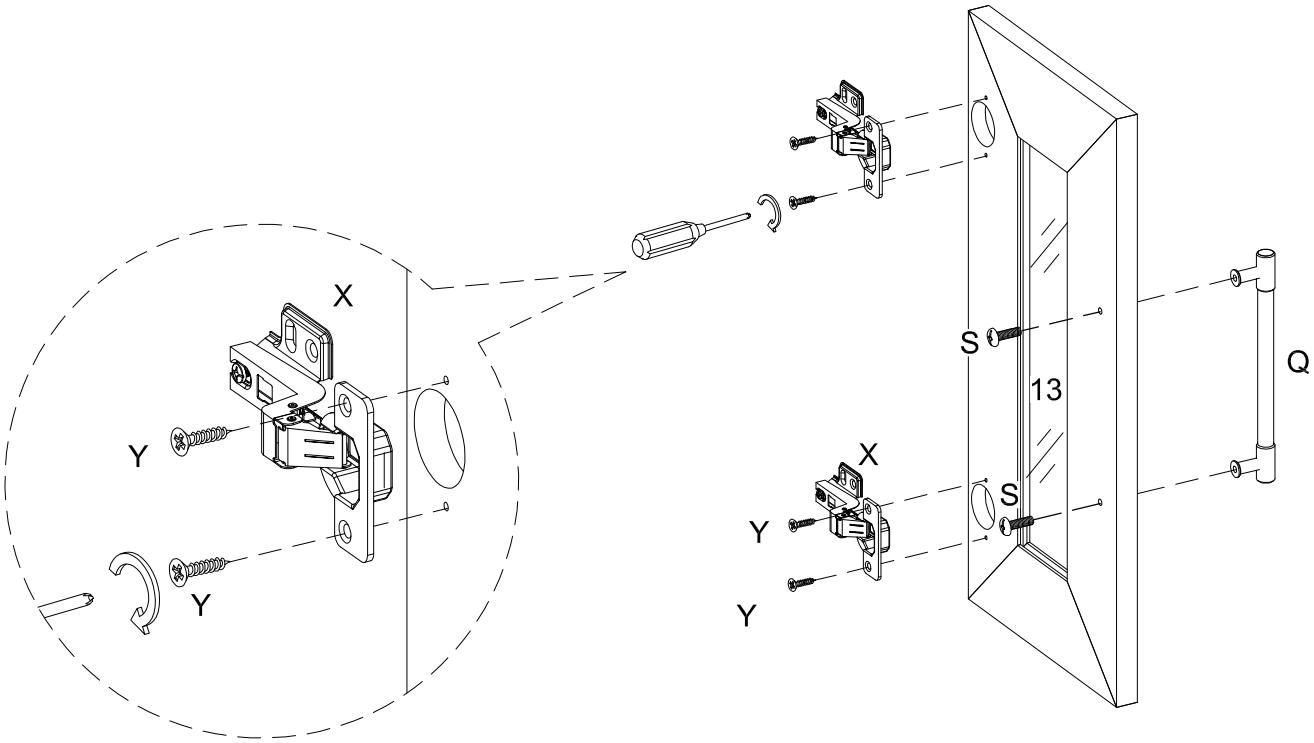


Step 35

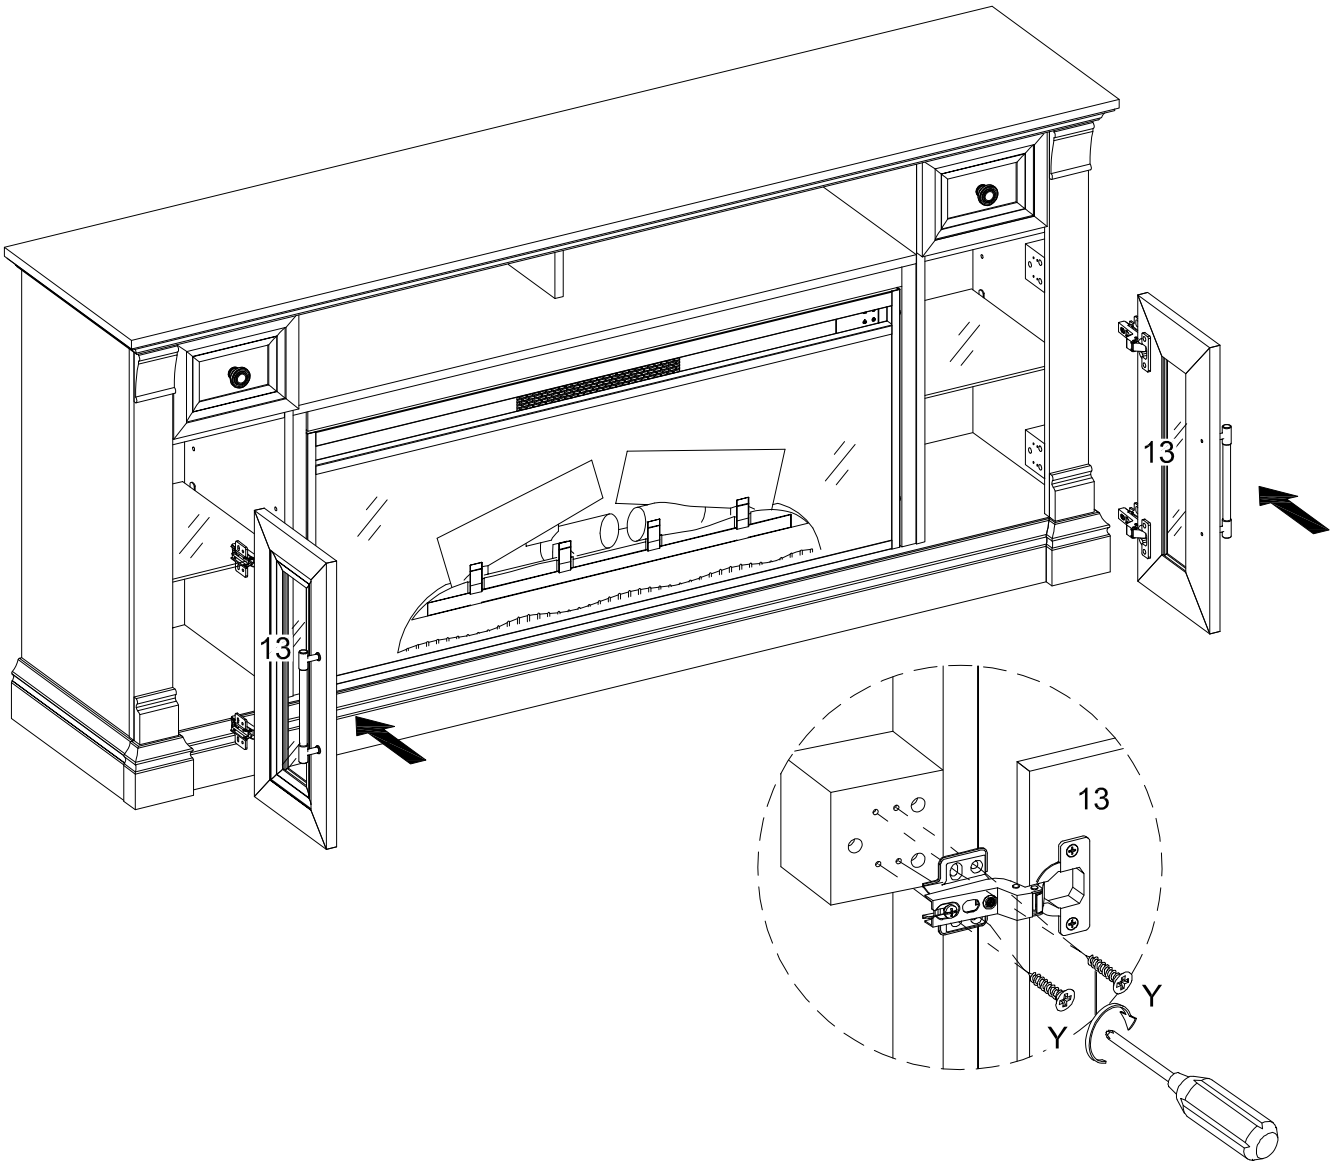


Concealed hinges are three-way adjustable.

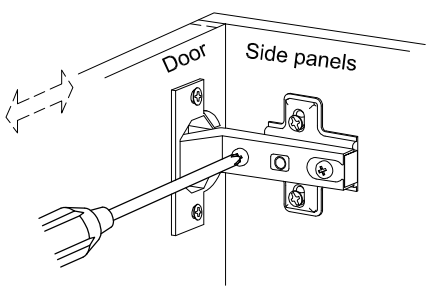

Horizontal
by screw adjustment

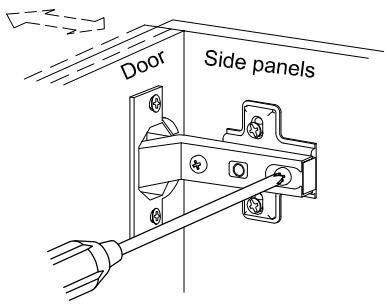

In-and-Out
by loosening the hinge-arm mounting screw or via cam adjustment

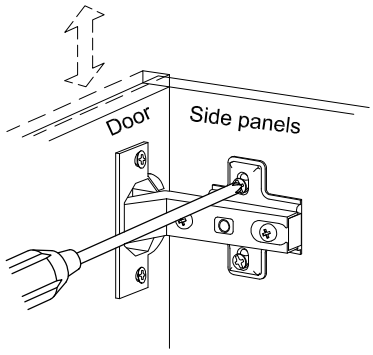



Vertical
Via slots in the mounting plate or via cam adjustment


Step 36

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

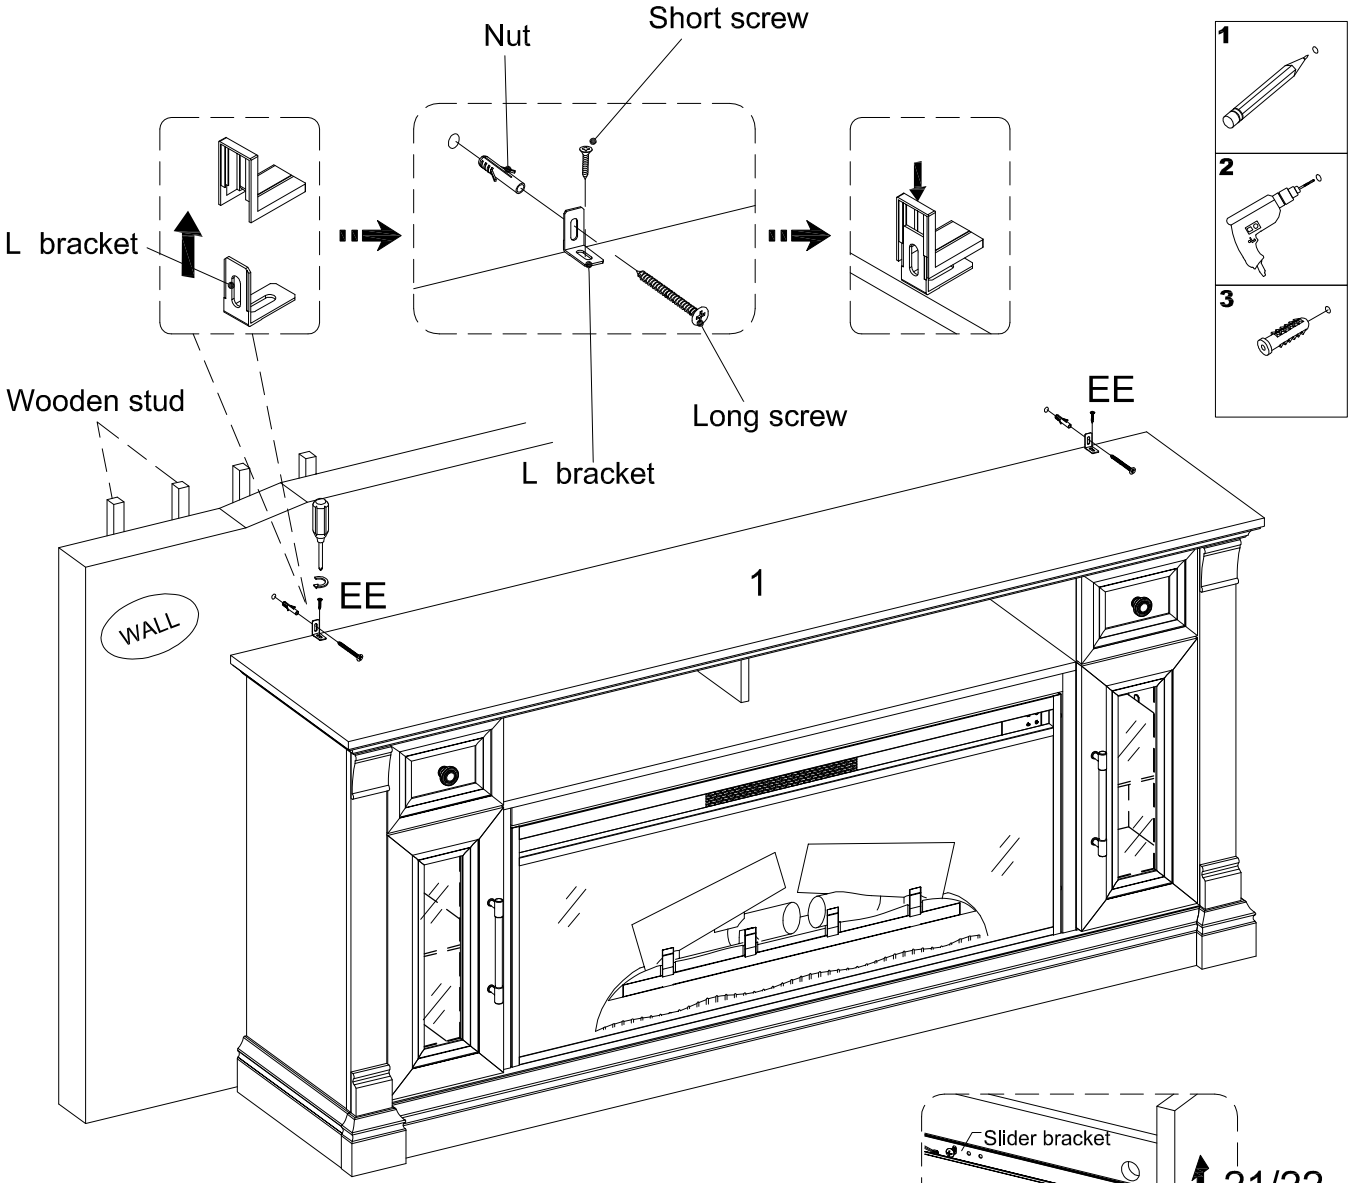

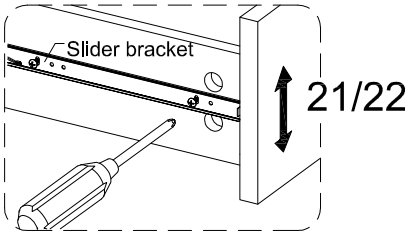

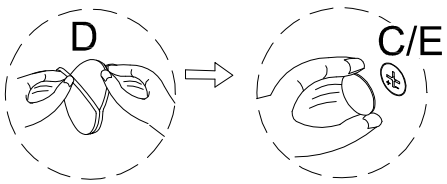

Use stickers(D) to conceal cam locks(C,E)

Note :
If the drawer does not go in smoothly.
Press or lift the plastic release lever.
Pull out the slider bracket from the slider arm.
Loosen the screws (W) on slider brackets,
You can adjust up or down by a few mm.
Then tighten back up.
Finally re-assembled the drawer until they were going in smoothly well.

Final Assembly