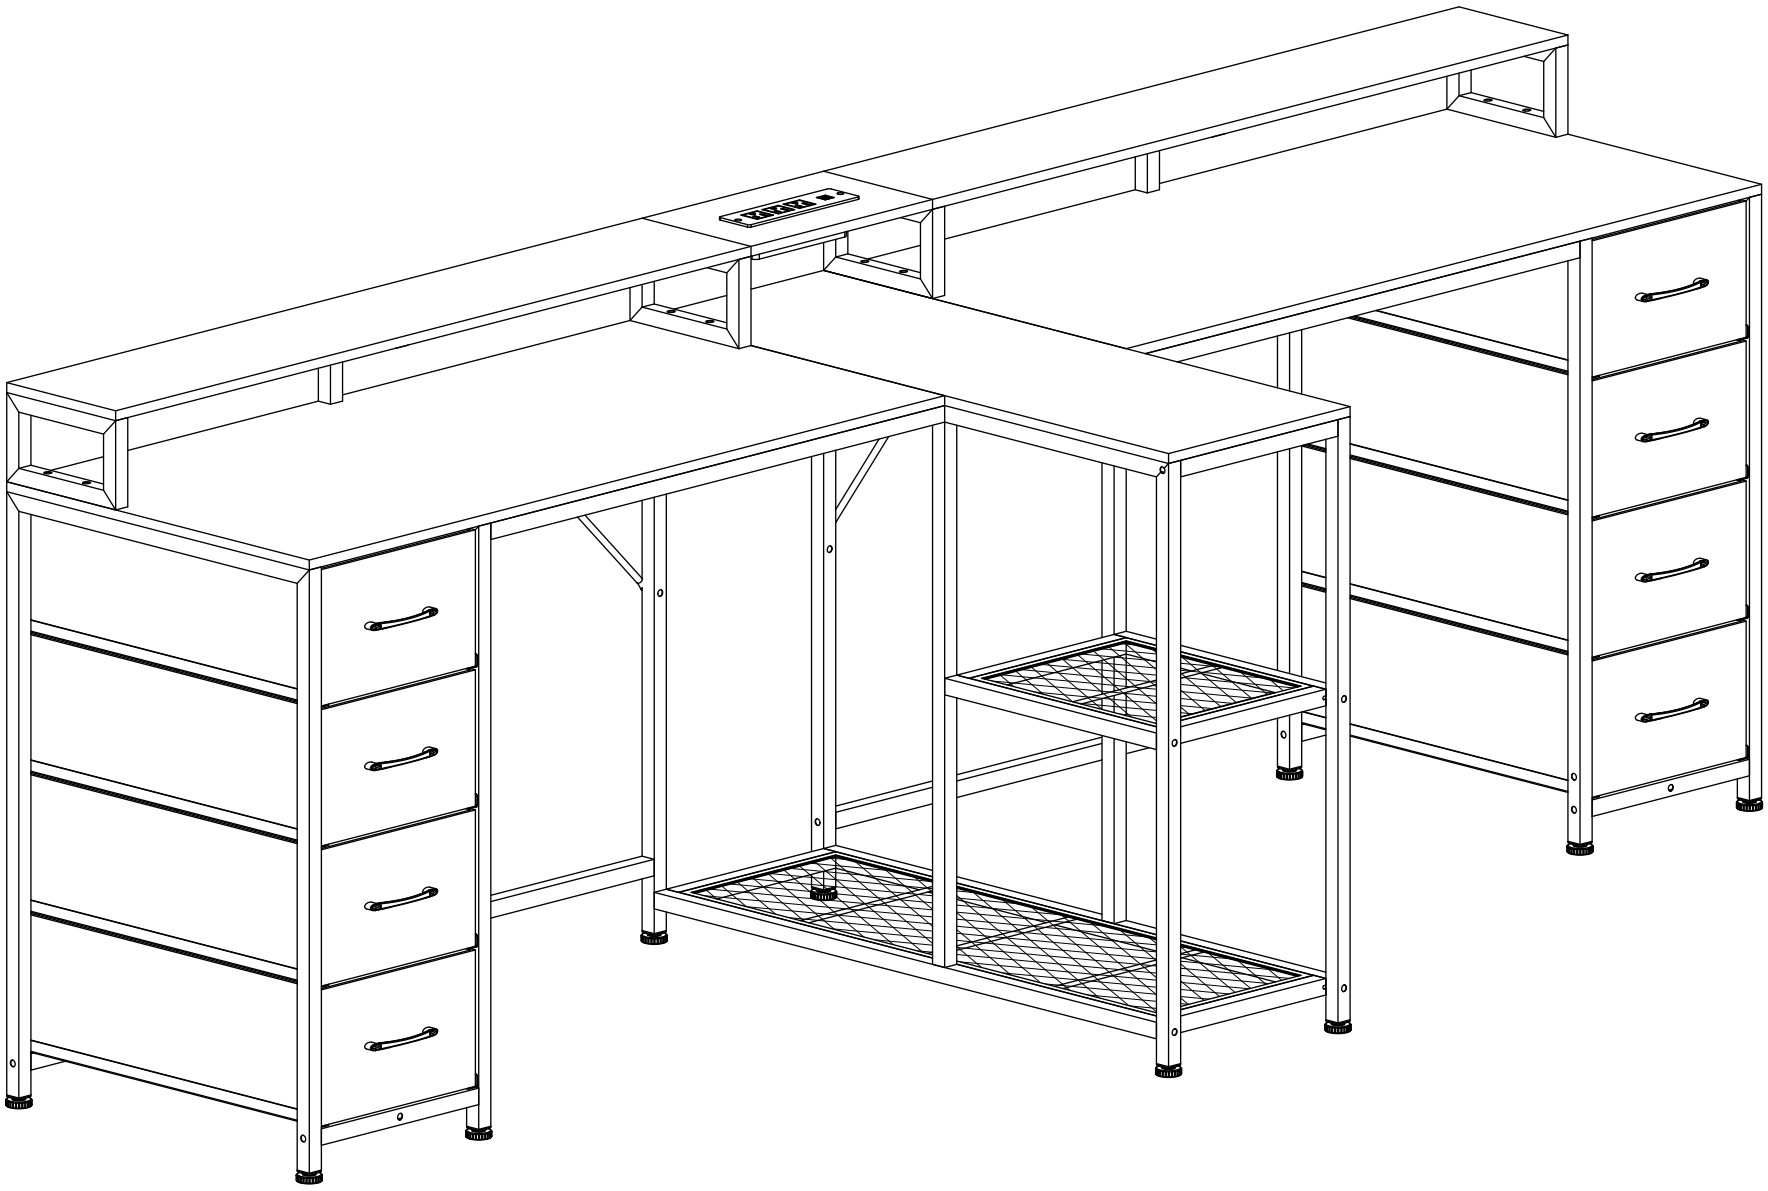
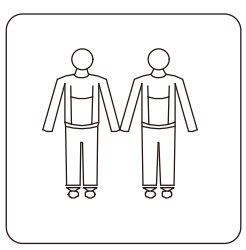
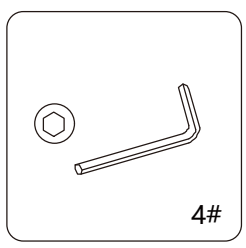
CORNER TABLE


User Manual




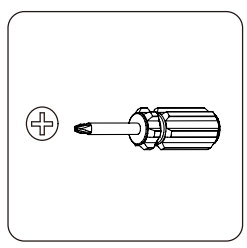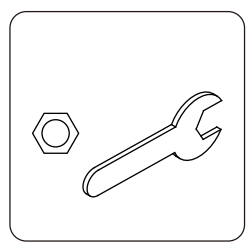DJ504259










Warning : Please read this instruction manual carefully before using the product.

version: 1.0

Package Contents

Plates and iron components	Assembly tool kit	Instruction manual

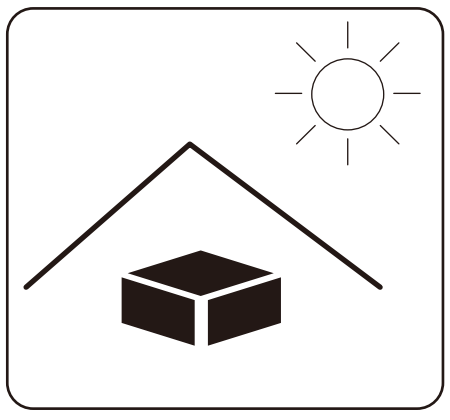
Precautions




1.Avoid long-term direct sunlight exposure



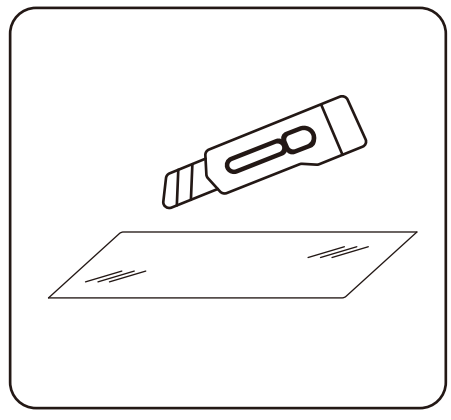
2.Stay away from fire



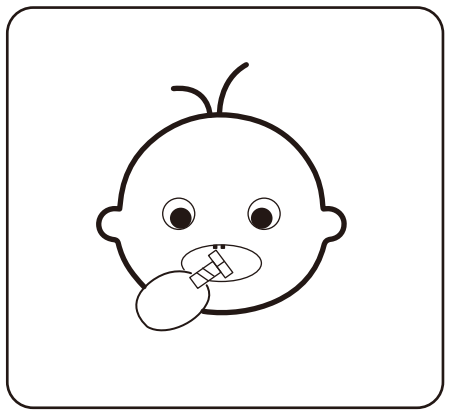
3.keep away from sharp objects



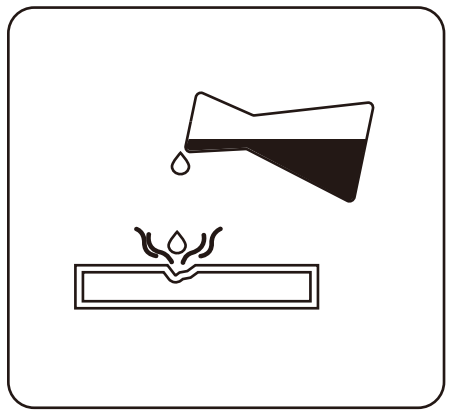
4.Keep infants/children away from assembly parts to avoid choking and suffocation.



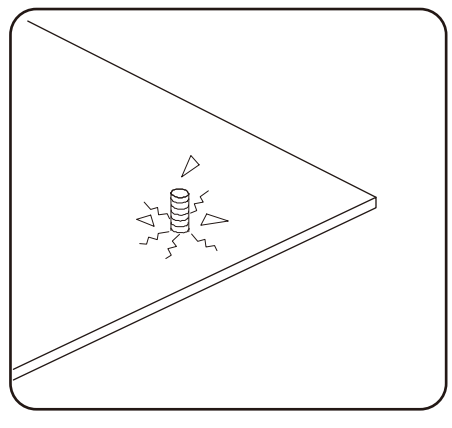
5.keep away from corrosive substances



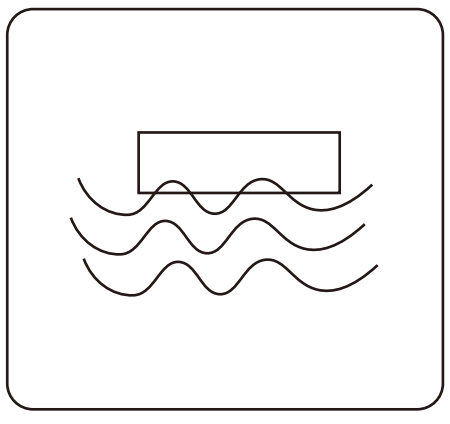6.Pay attention to avoid cver-tightening fasteners, orthey may induce cra-cking within the board.



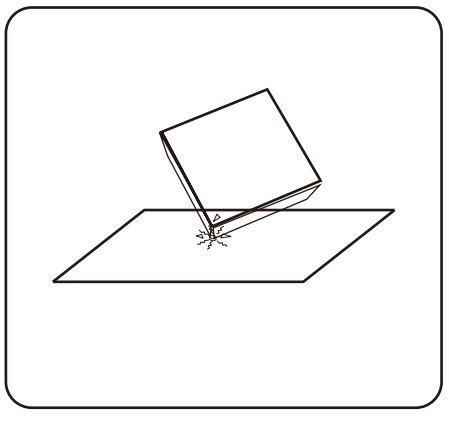7.Prevent objects from being damaged by immersion in water




8.Prevent object collision and damage



















9.Be careful to avoid collisions









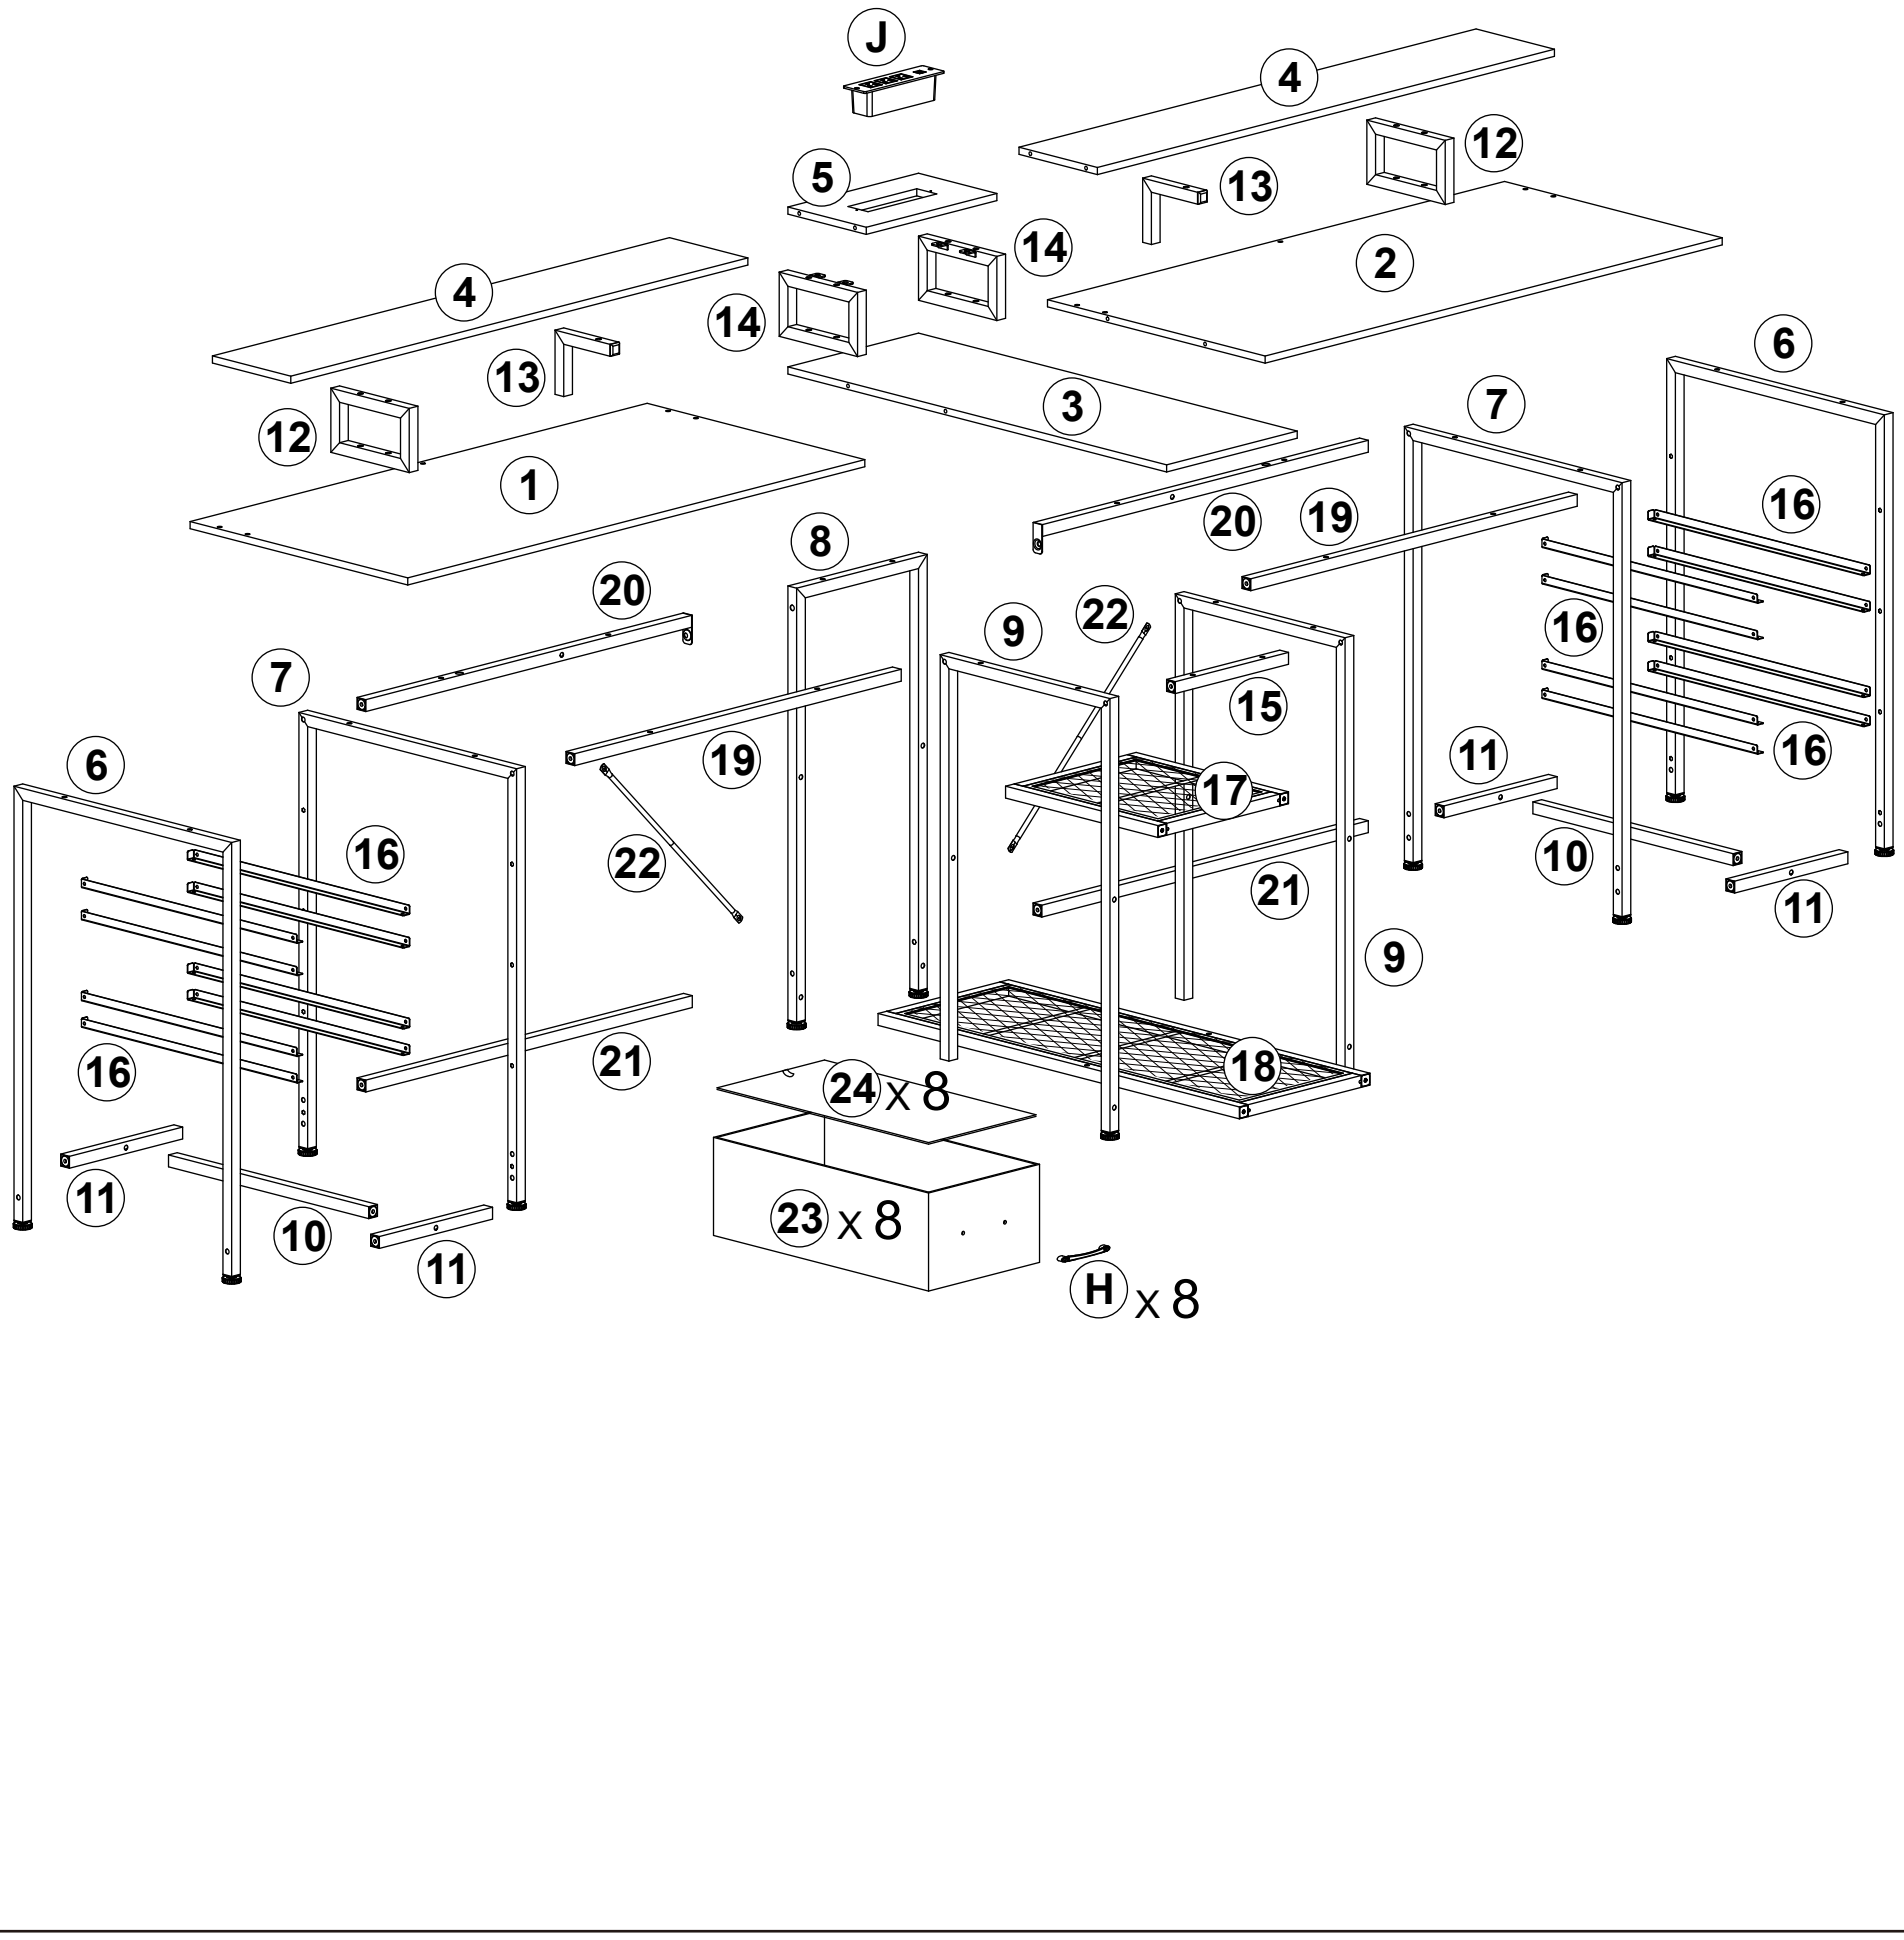
Disassembly Diagram
















Parts List

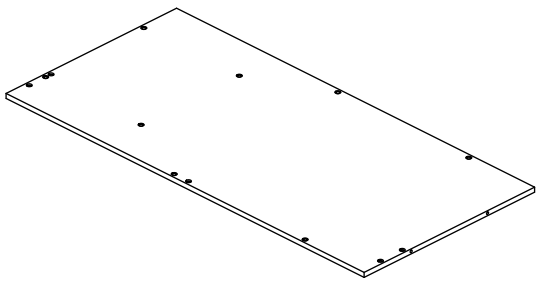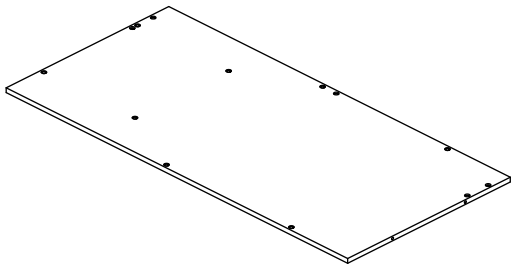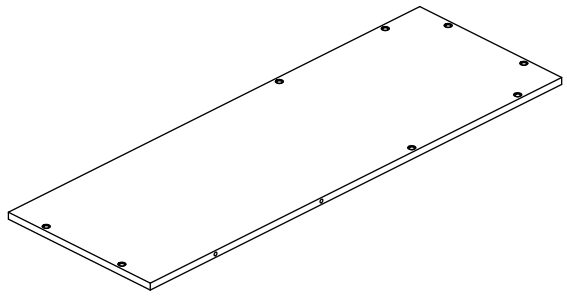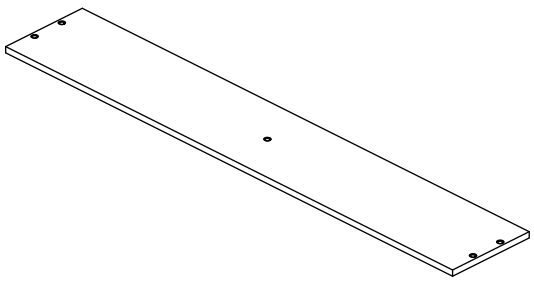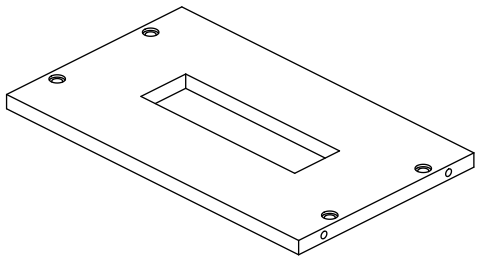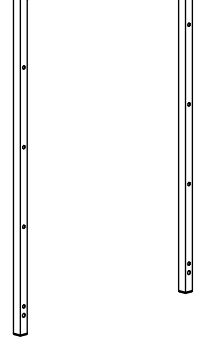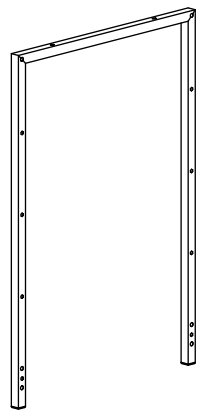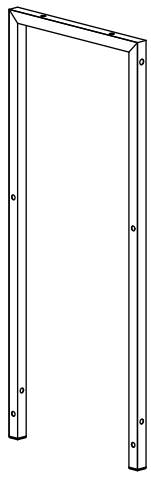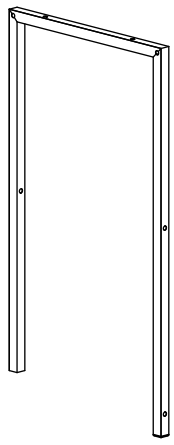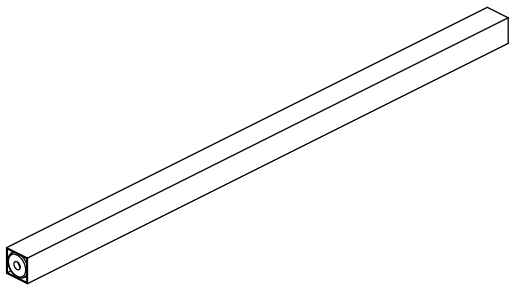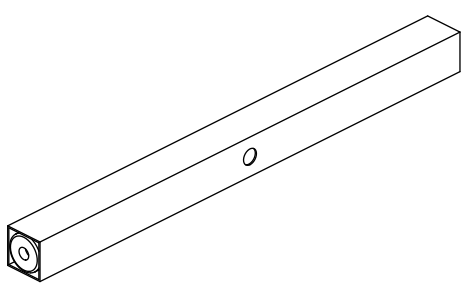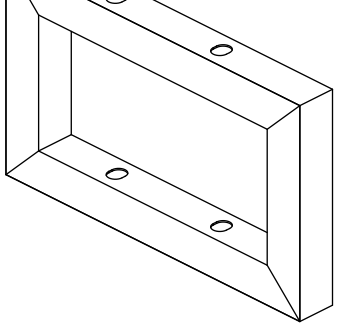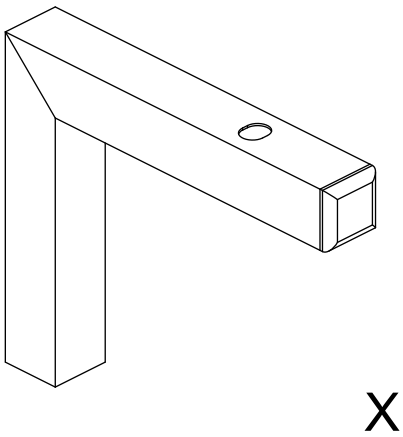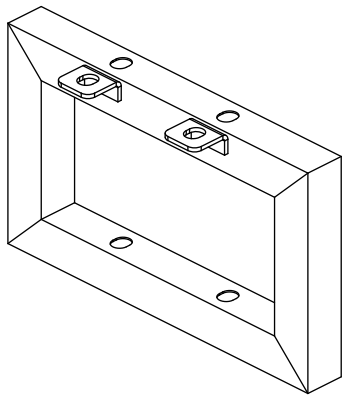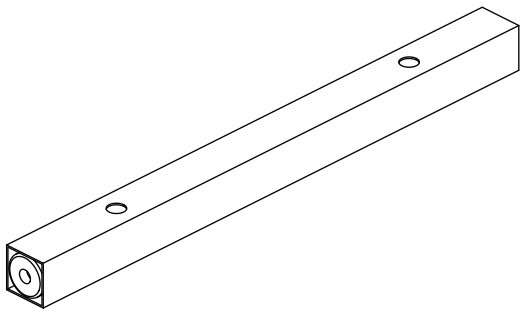1 	2 	3 
4  x 2	5 	6   x 2
7  x 2	8 	9  x 2
10  x 2	11  x 4	12   x 2
13  x 2	14  x 2	15 

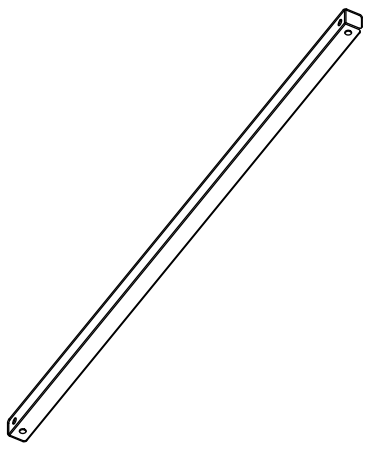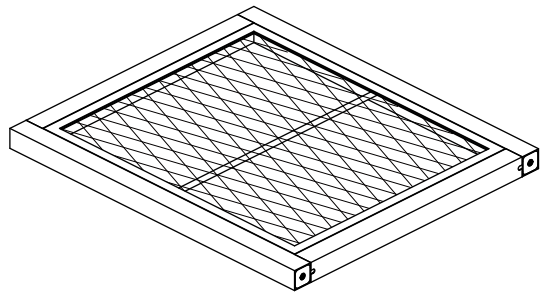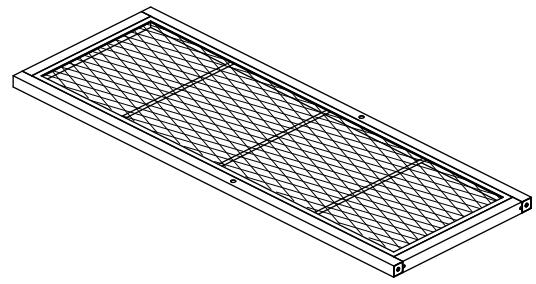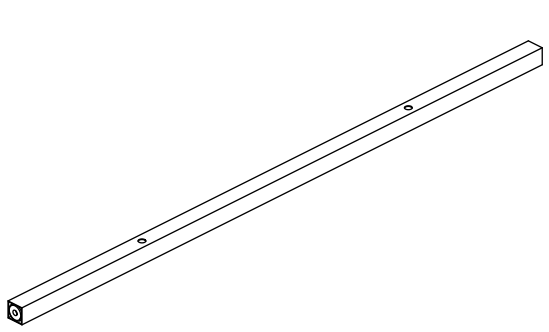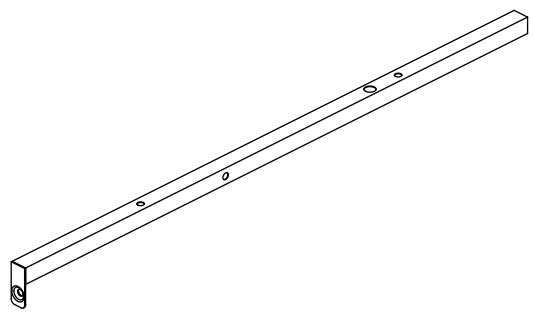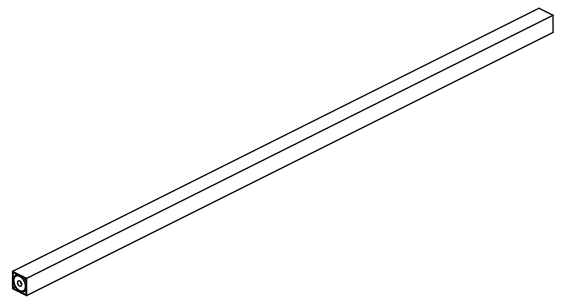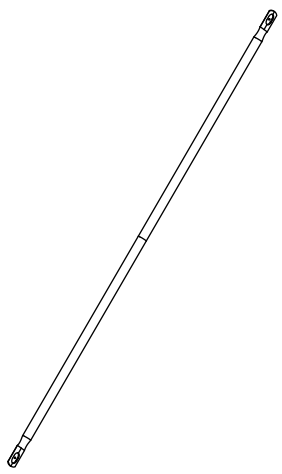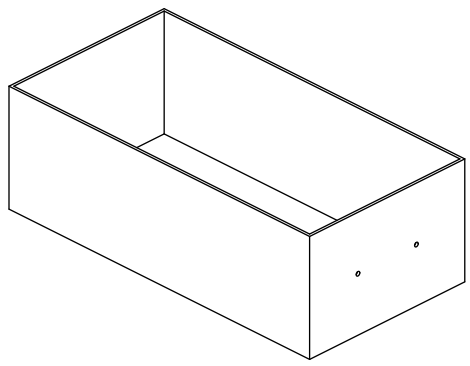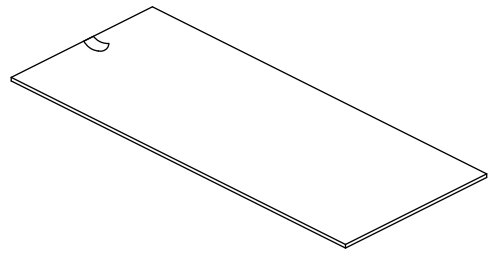Parts List


16  x 16	17 	18 
19  x 2	20  x 2	21  x 2
22  x 2	23  x 8	24  x 8

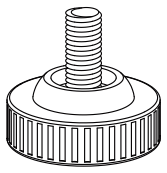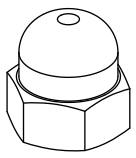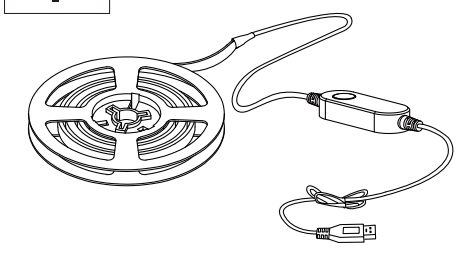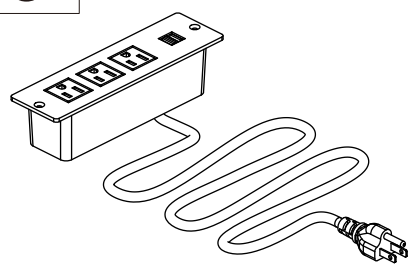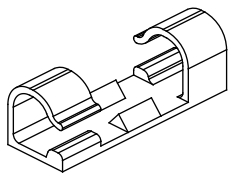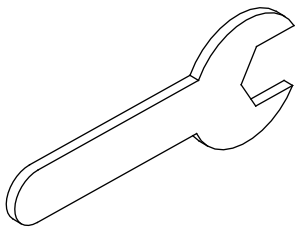
Tool sheet

A M6  X12+2	B M6x10MM  X6+1	C M6x28MM  X82+6	D M4x8MM  X32+4
E ST4x10MM  X2+1	F M6  X4+1	G Ø6x40MM  X8+1	H  X8
I  X1	J  X1	K M4x6MM  X16+2	L  X3
M M4  X1+1	N  X1	O  X1	

ASSEMBLY INSTRUCTION

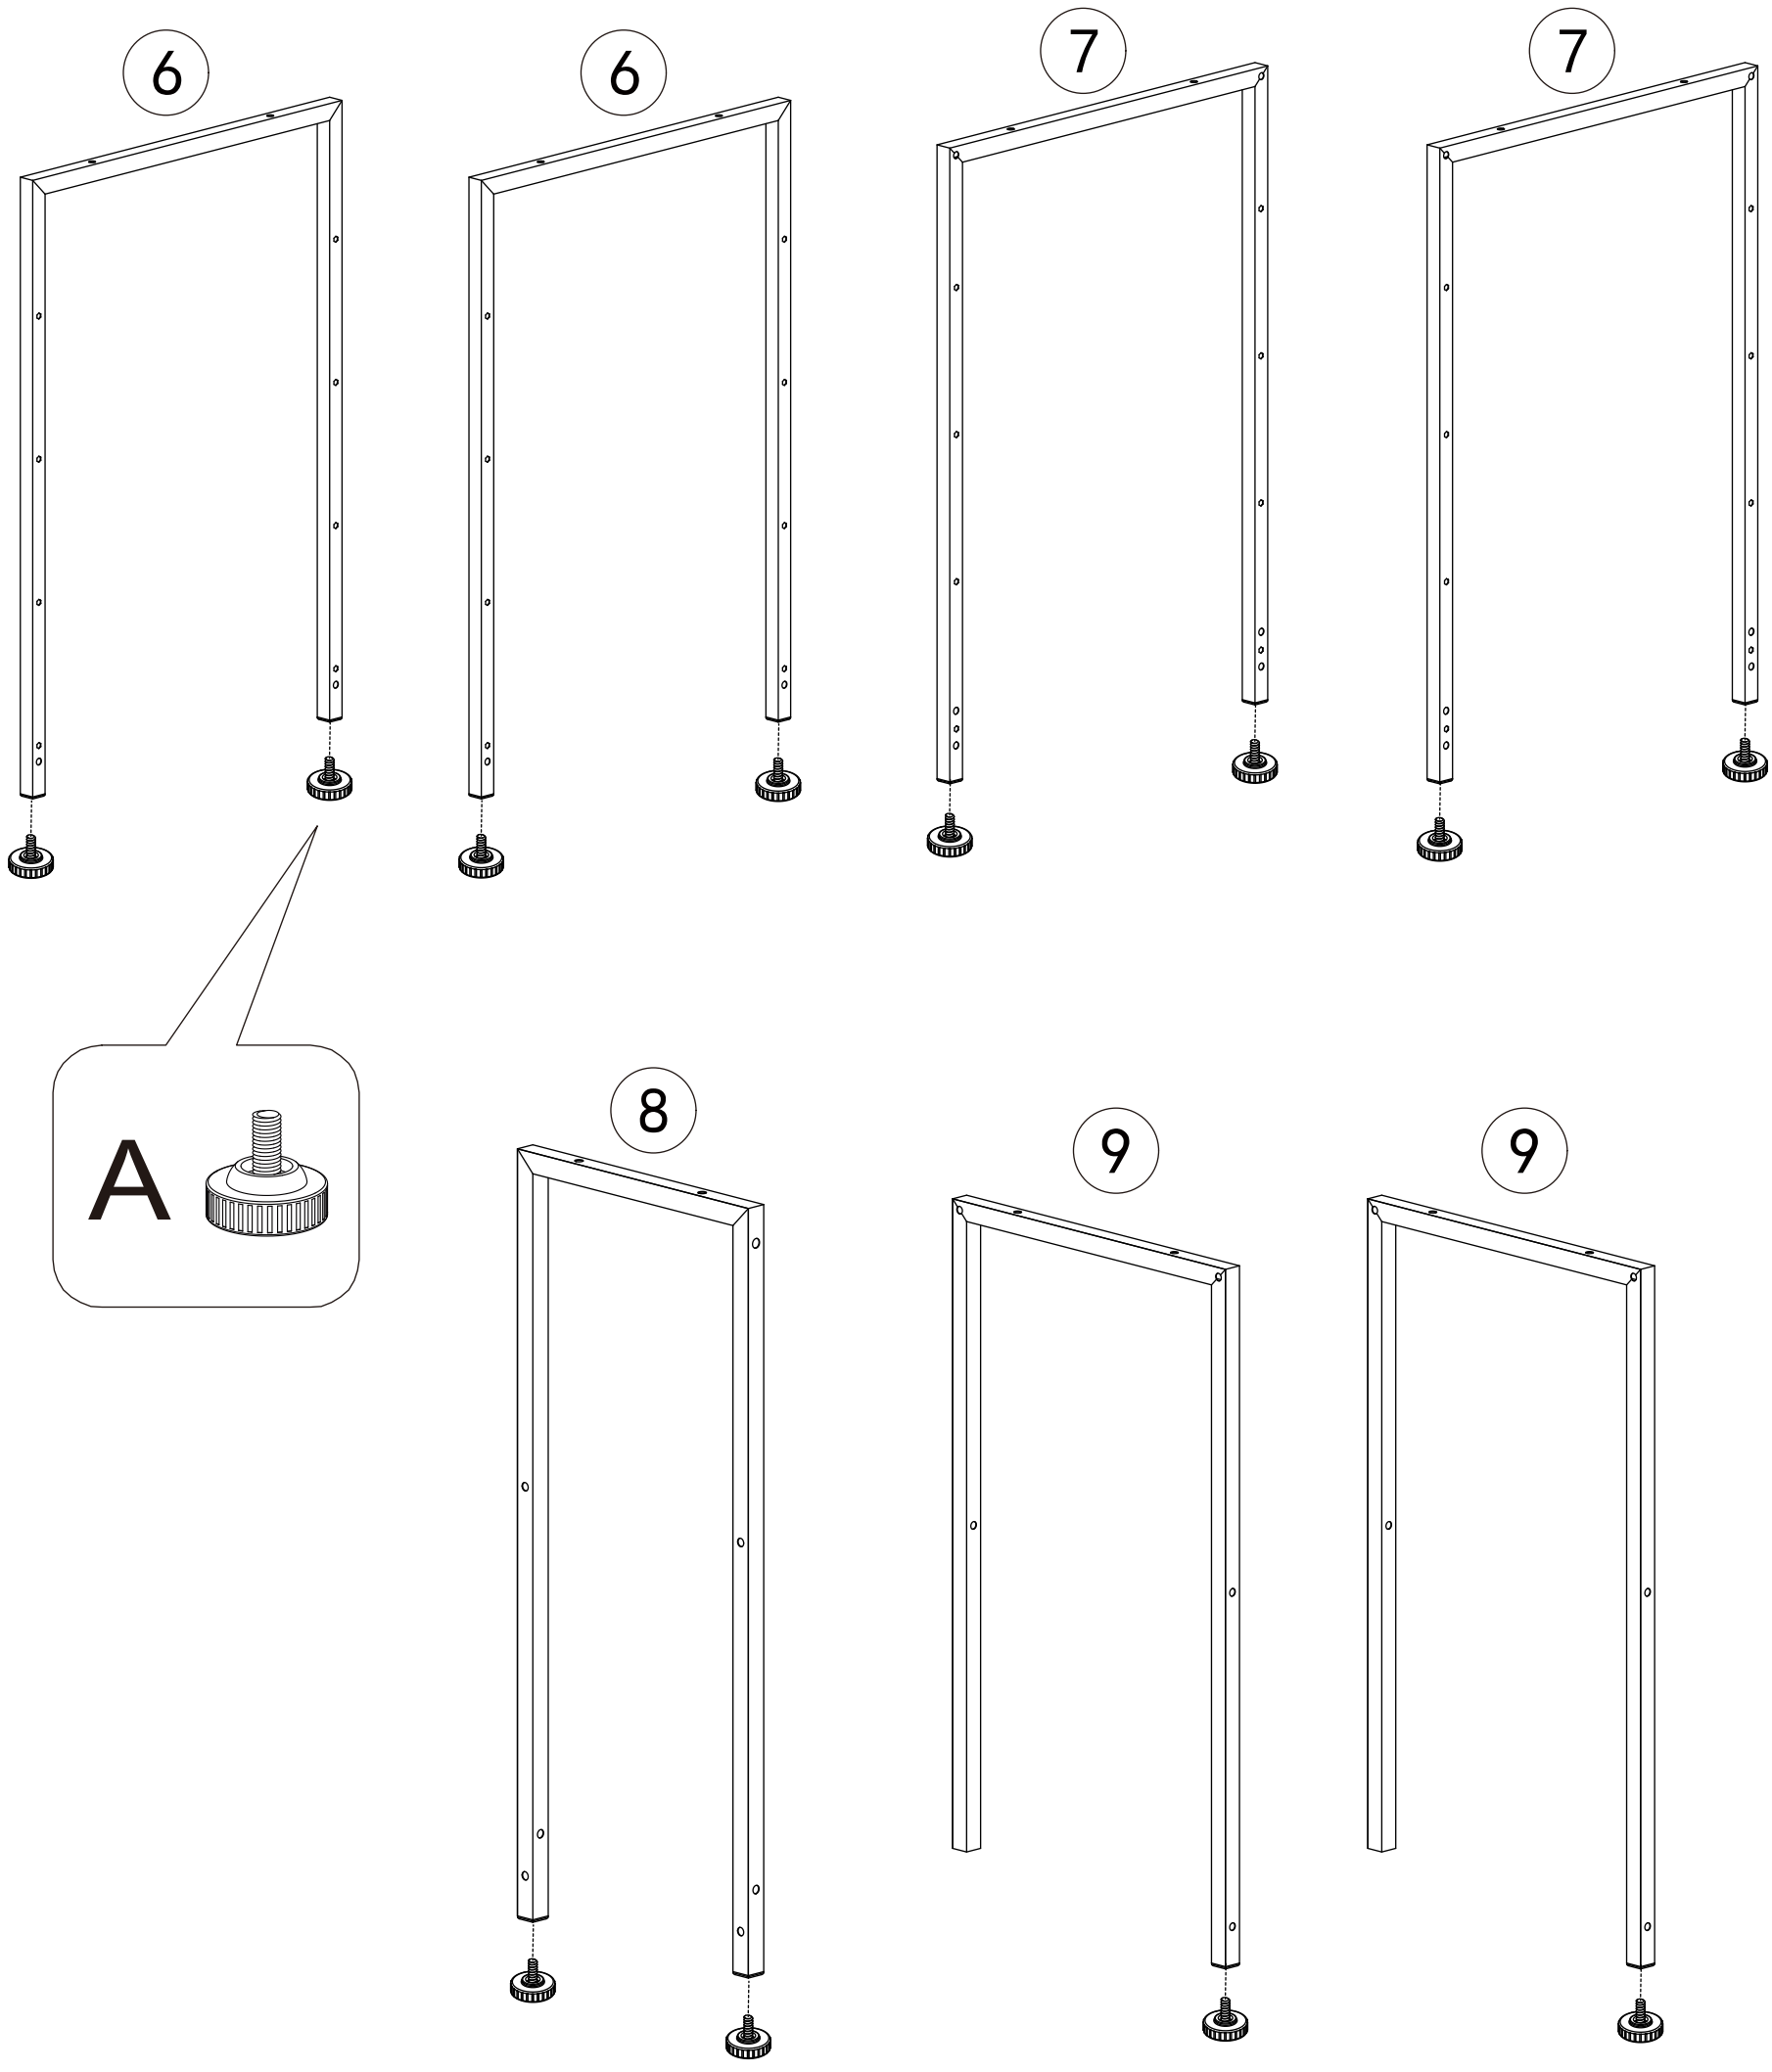
Step 1




A	x12
	
M6	


ASSEMBLY INSTRUCTION

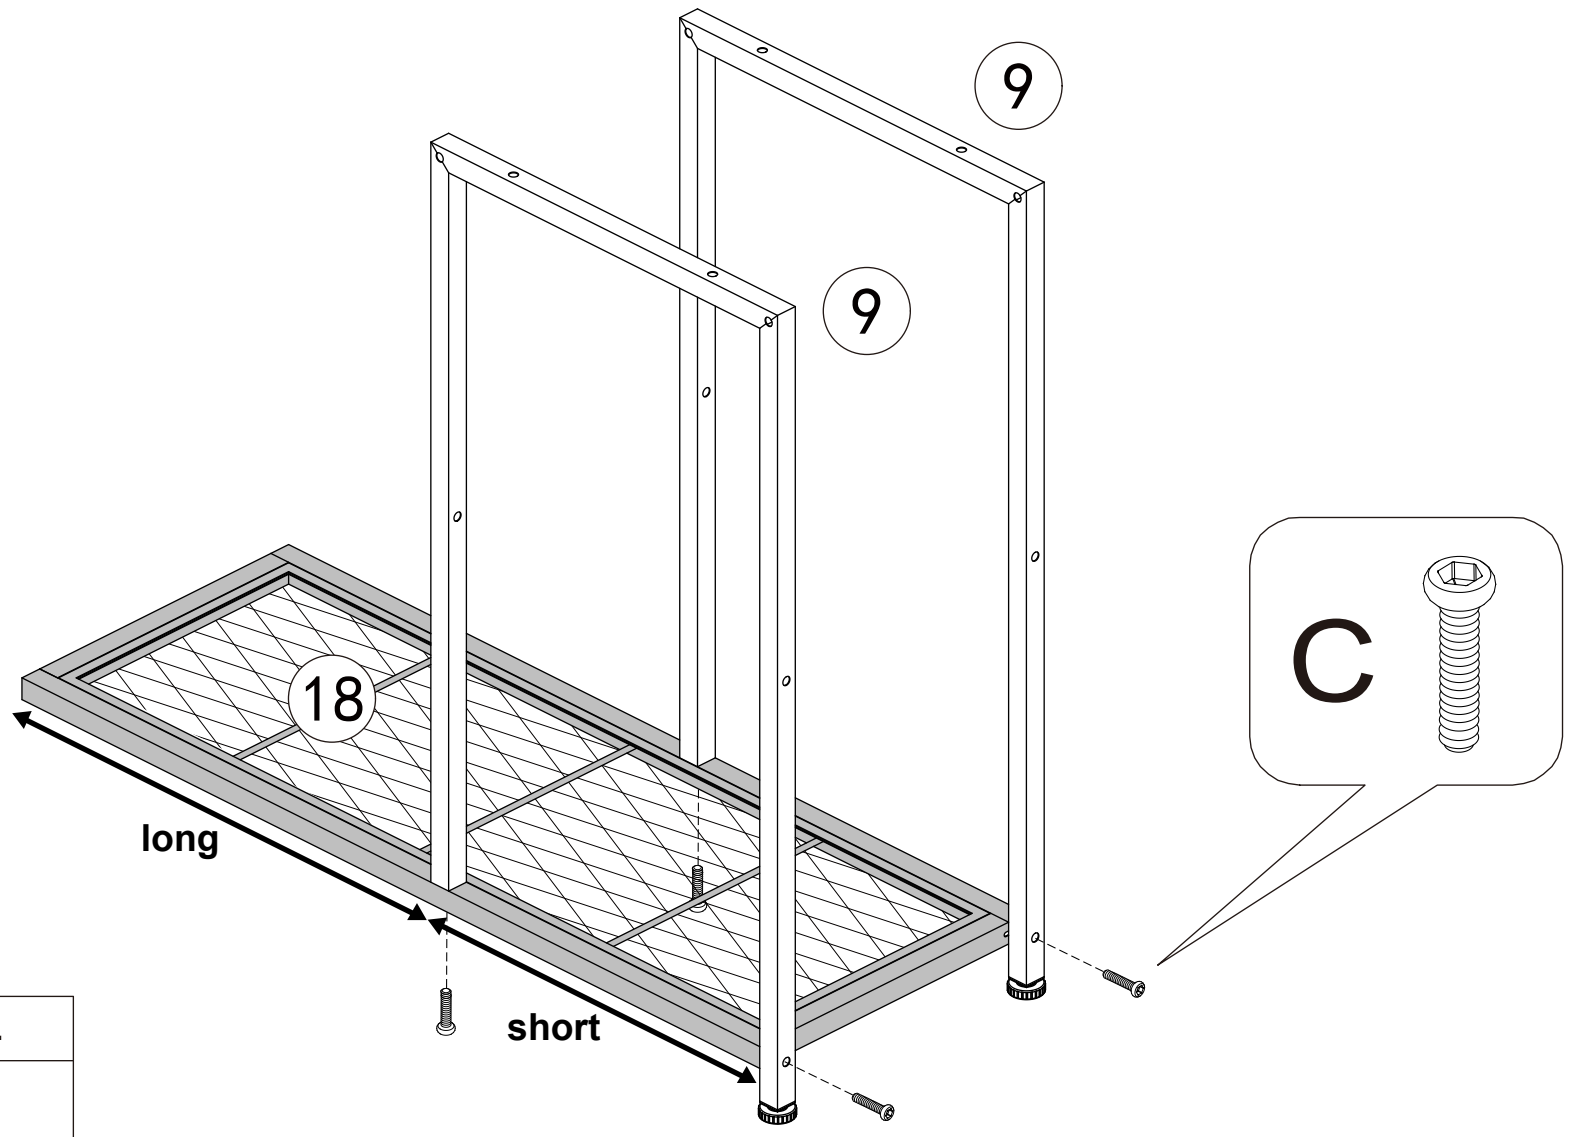
Step 2



C	x4
	
M6x28MM	

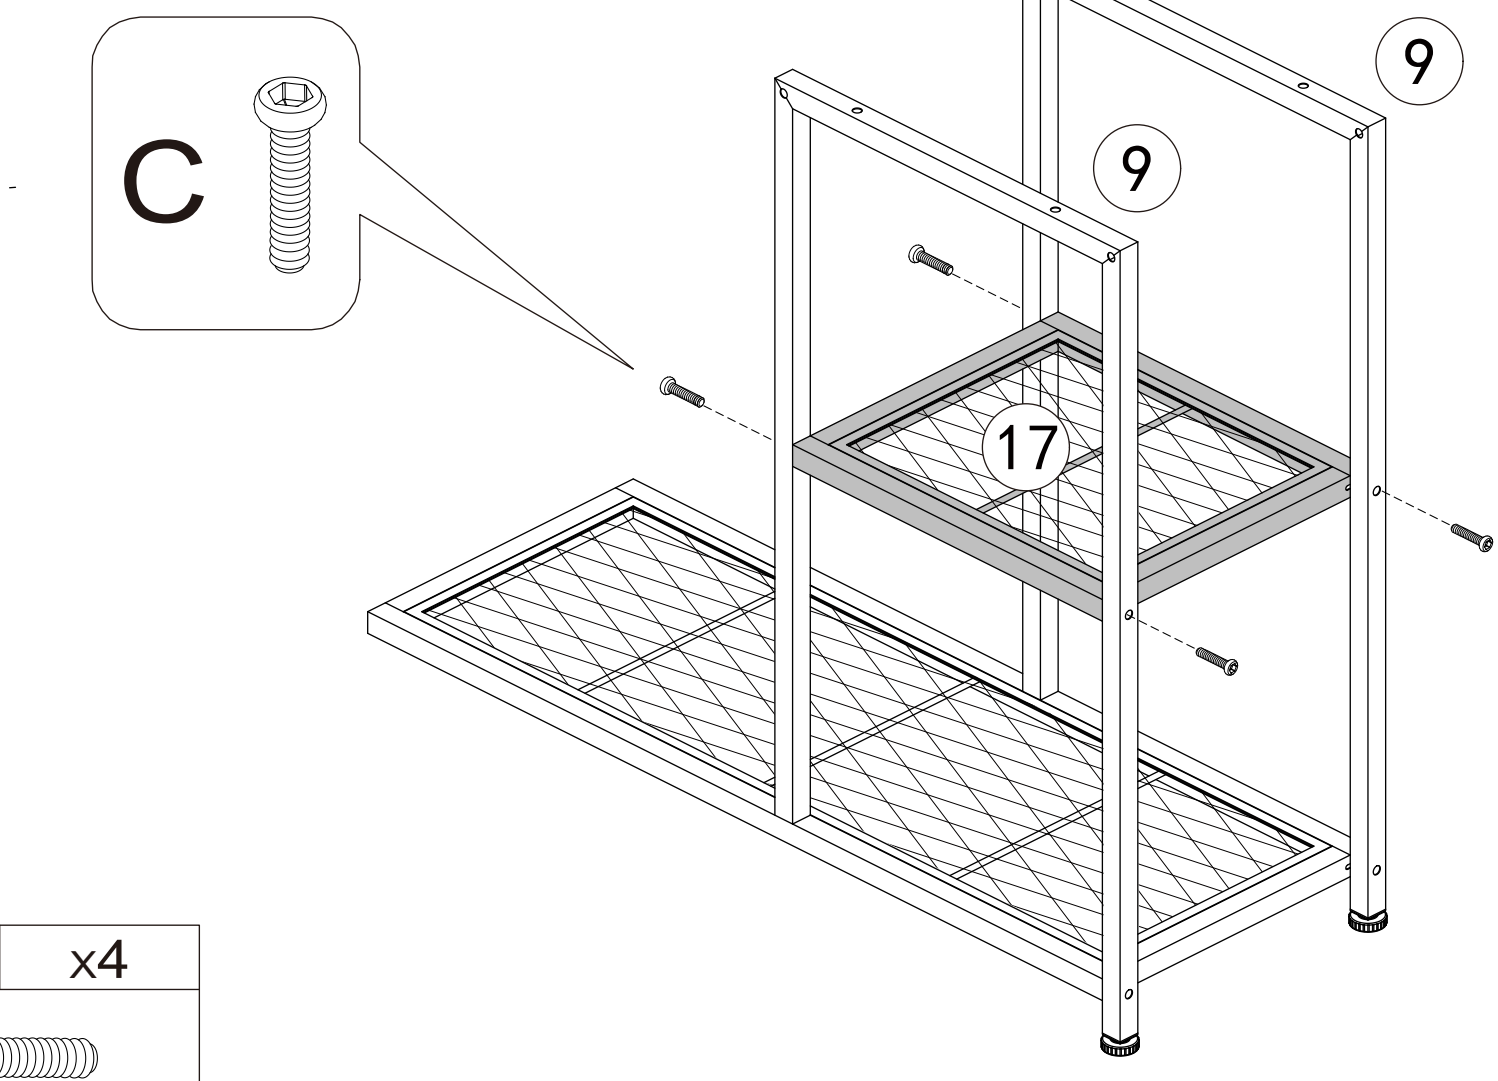
Step 3




C	x4
	
M6x28MM	


ASSEMBLY INSTRUCTION

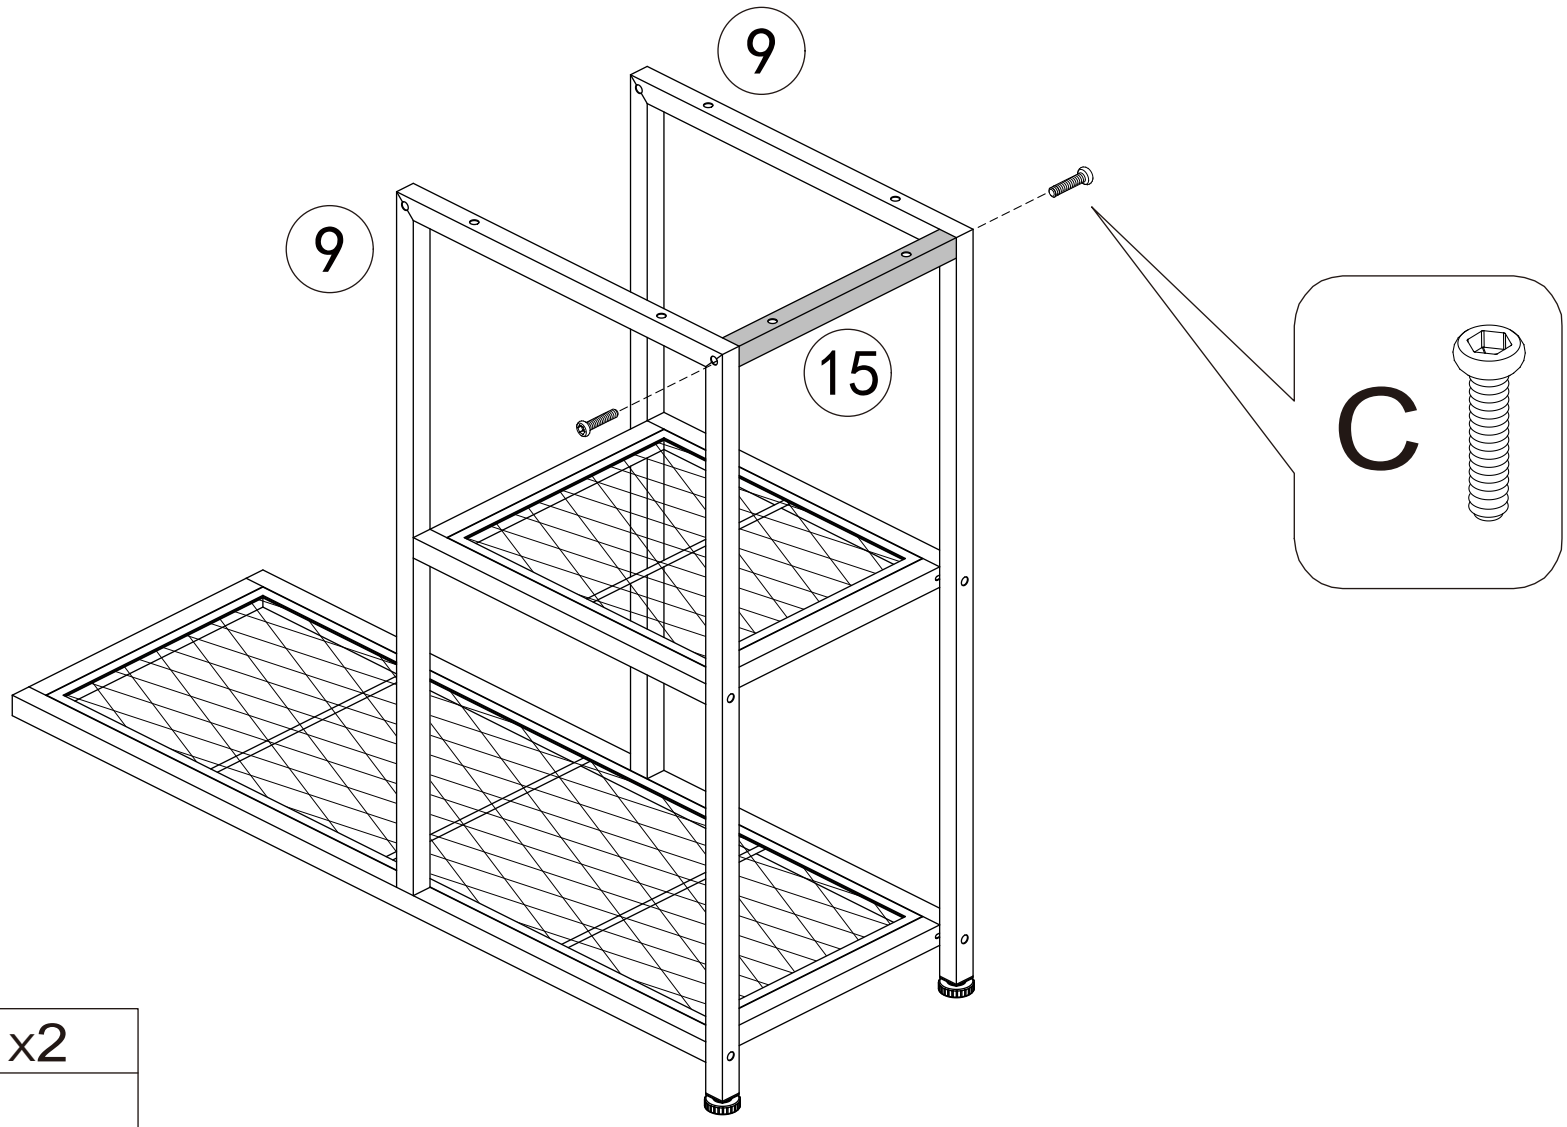
Step 4



C	x2
	
M6x28MM	

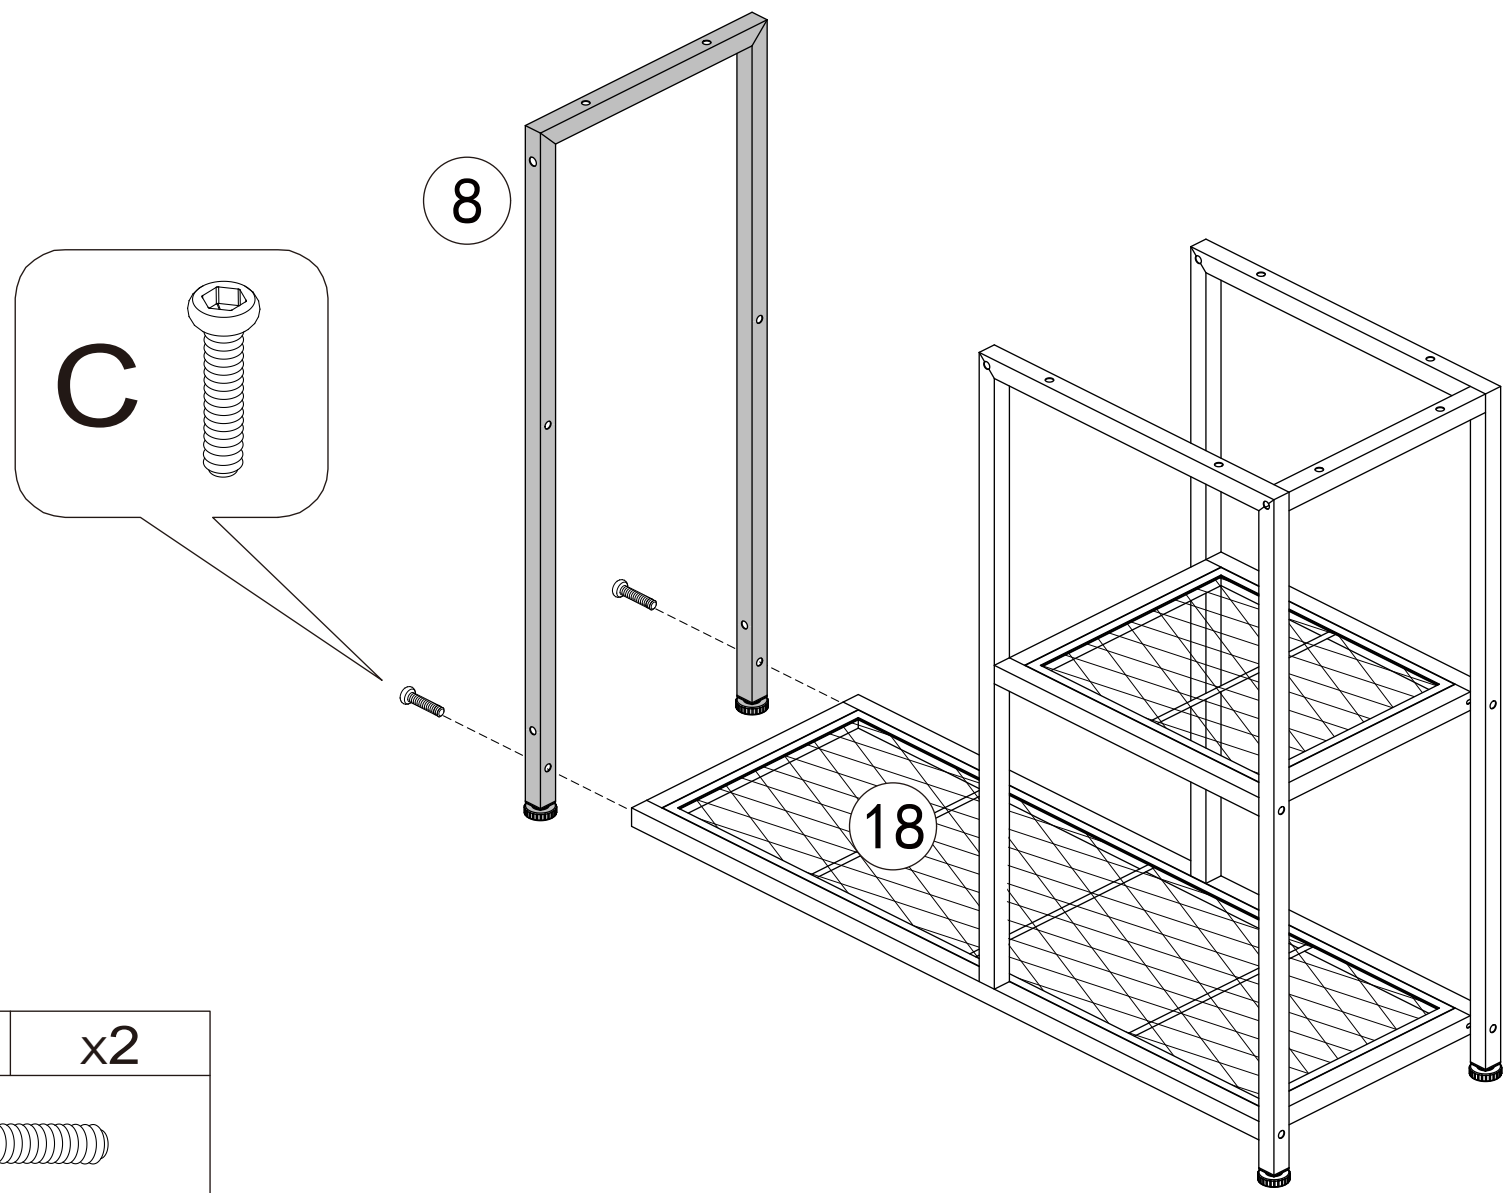
Step 5





C	x2
	
M6x28MM	


ASSEMBLY INSTRUCTION

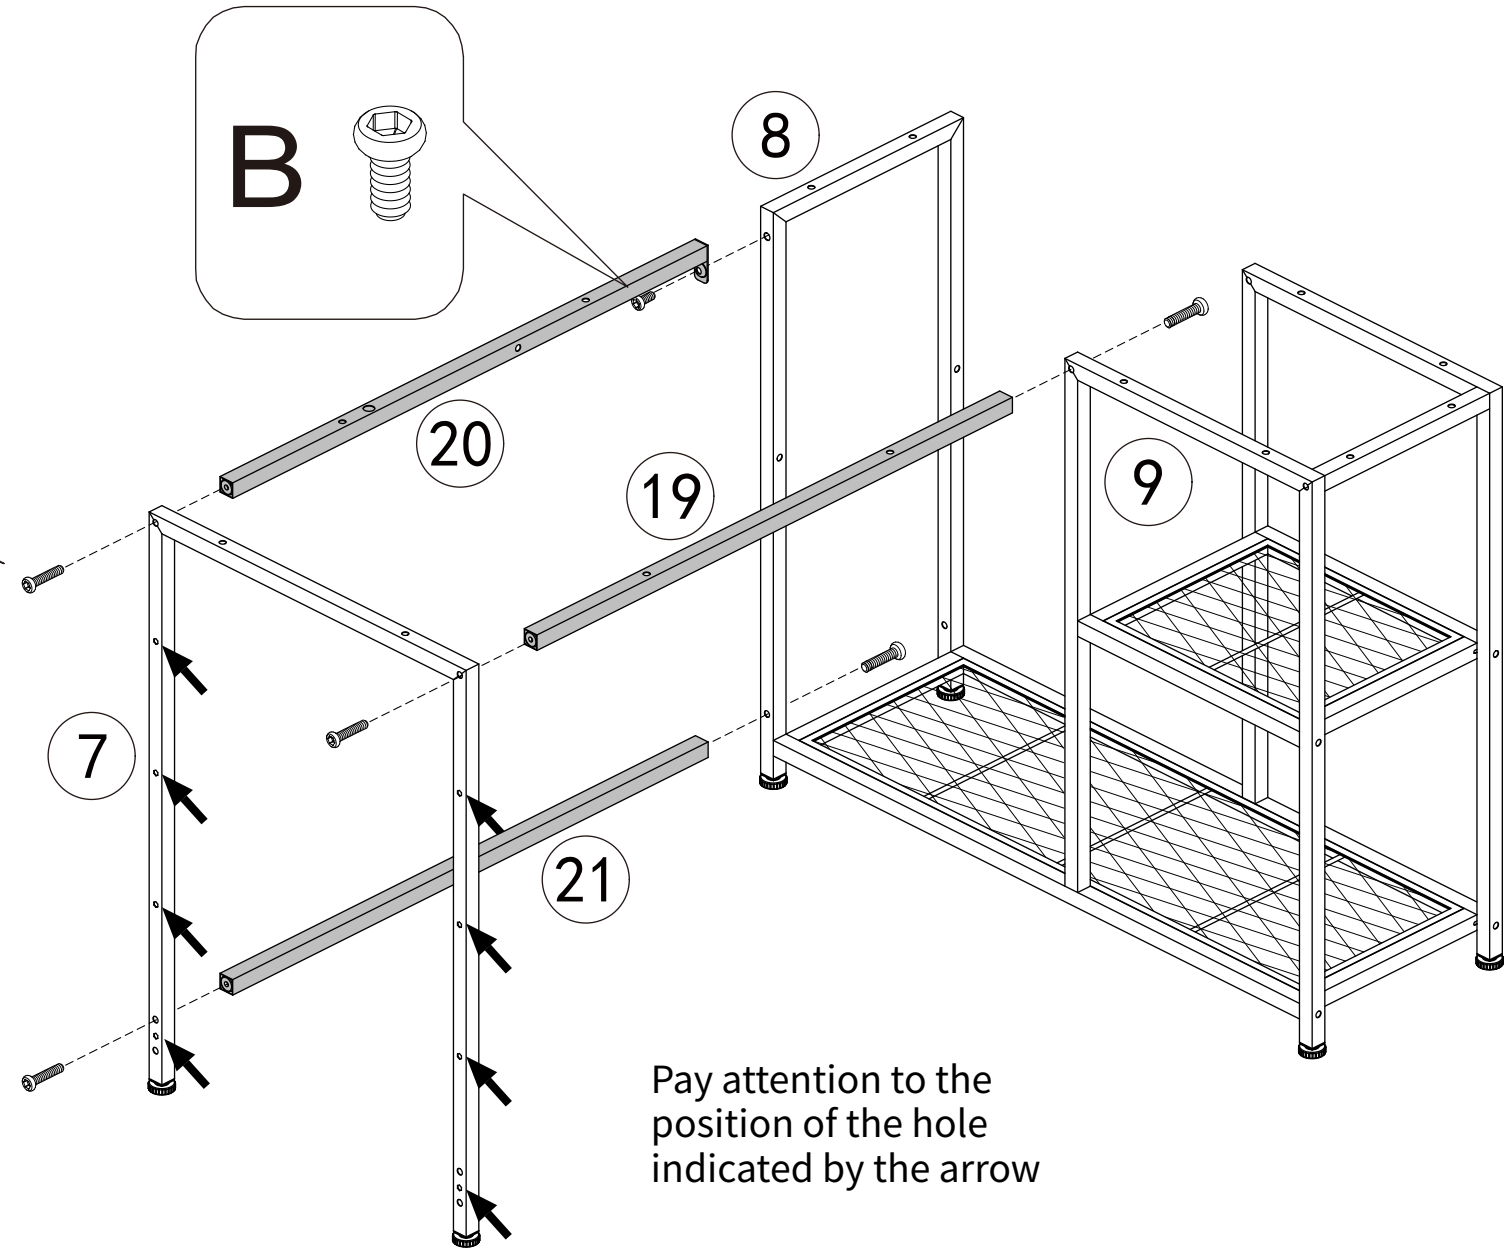Step 6




B	x1
	
M6x10MM	
C	x5
	
M6x28MM	

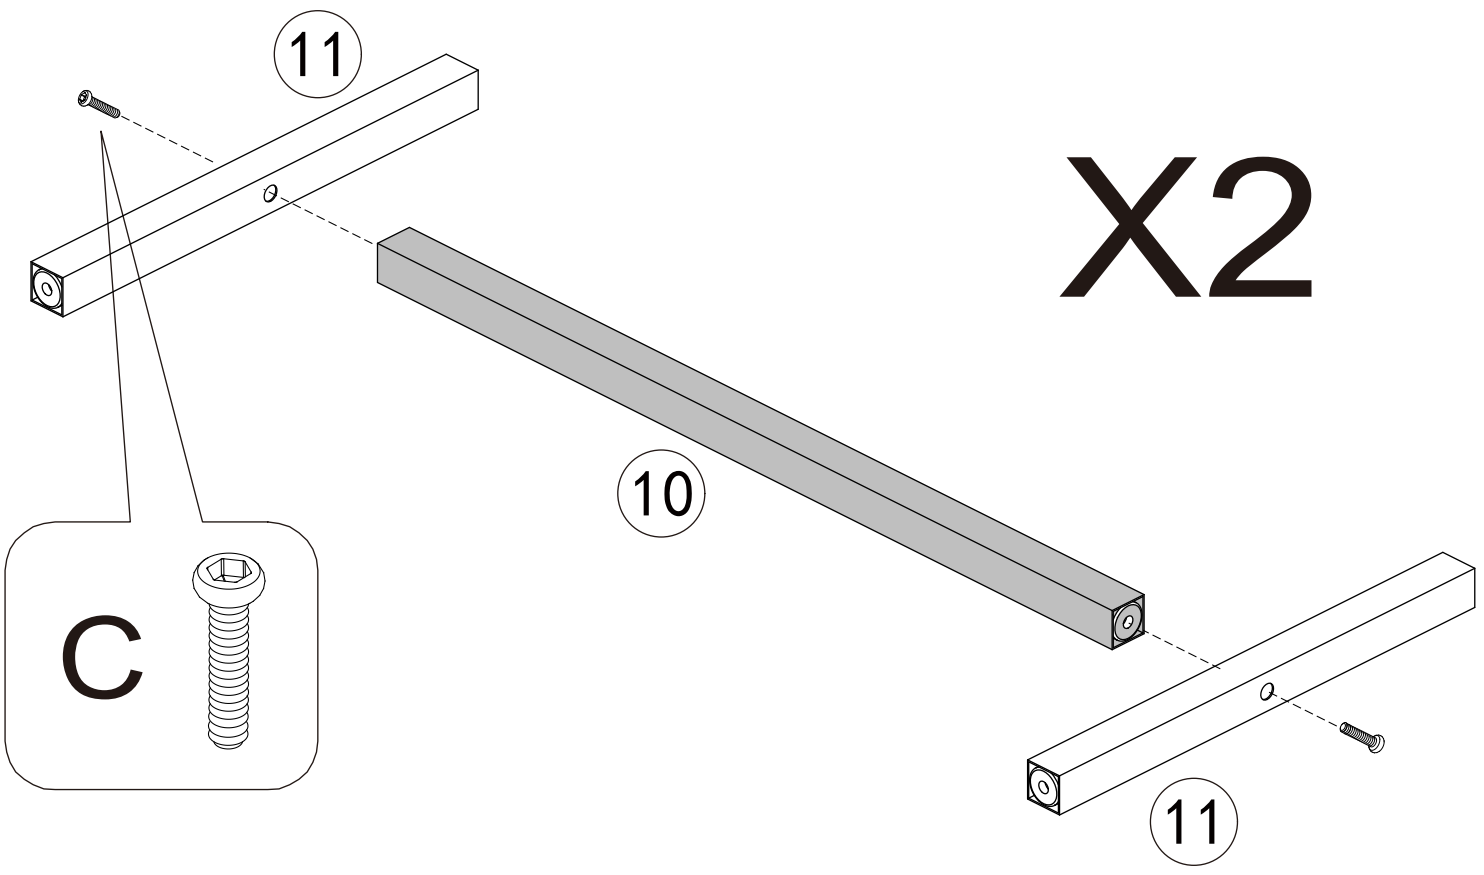
Step 7




X2

C	x4
	
M6x28MM	

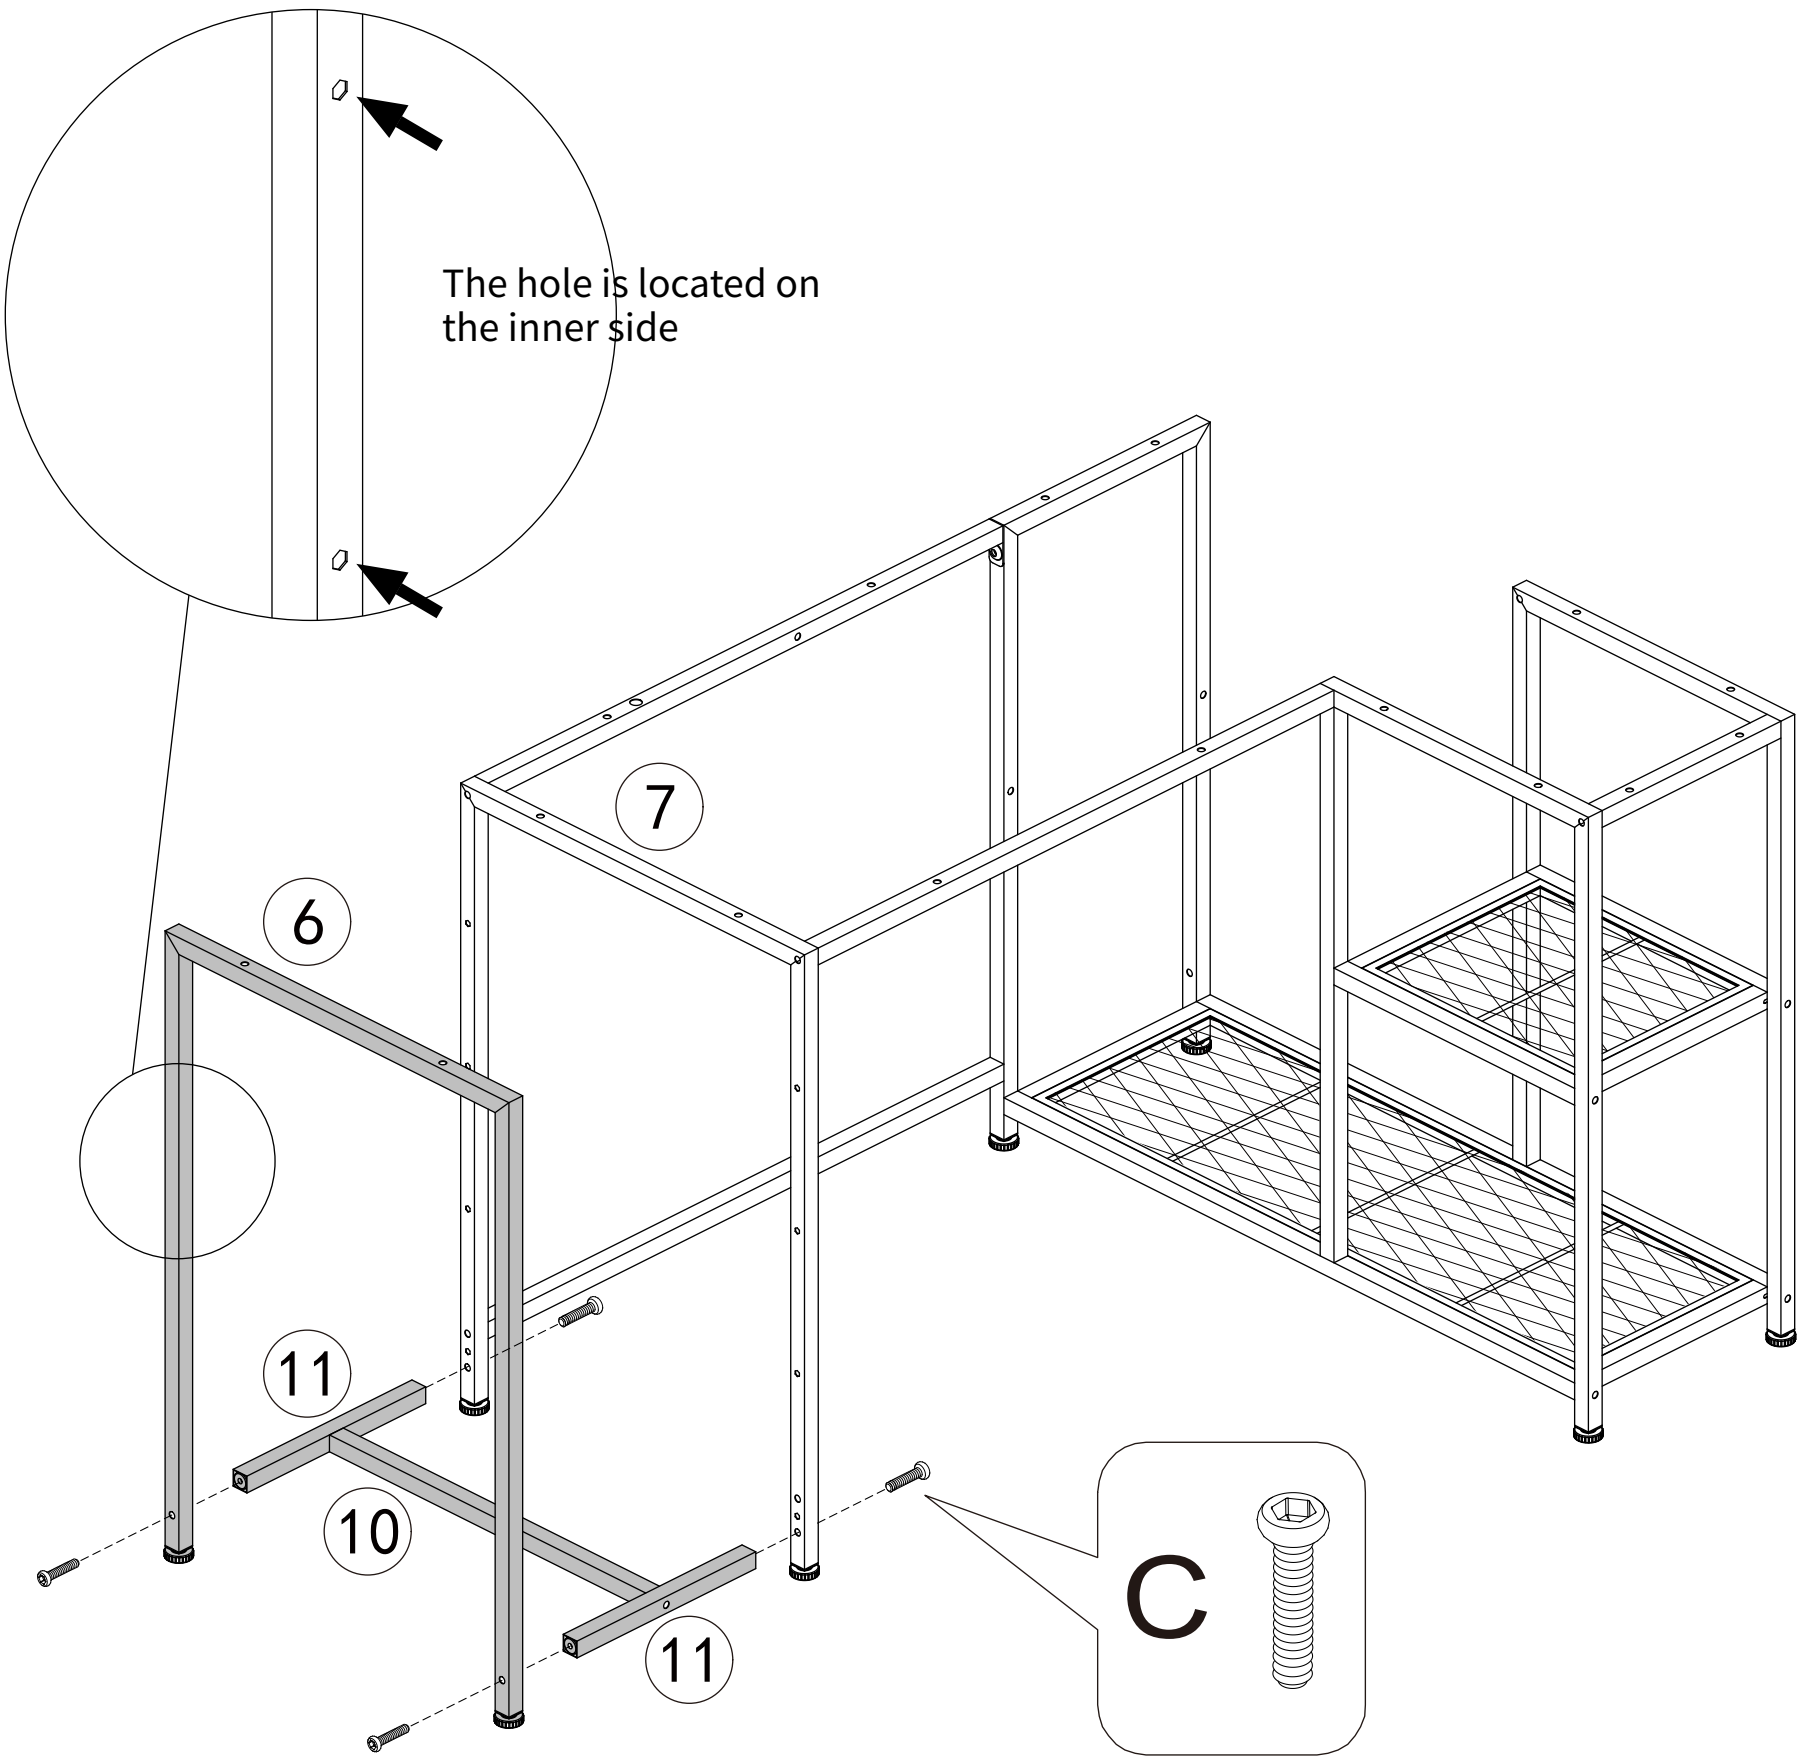
Step 8




C	x4
	
M6x28MM	

ASSEMBLY INSTRUCTION

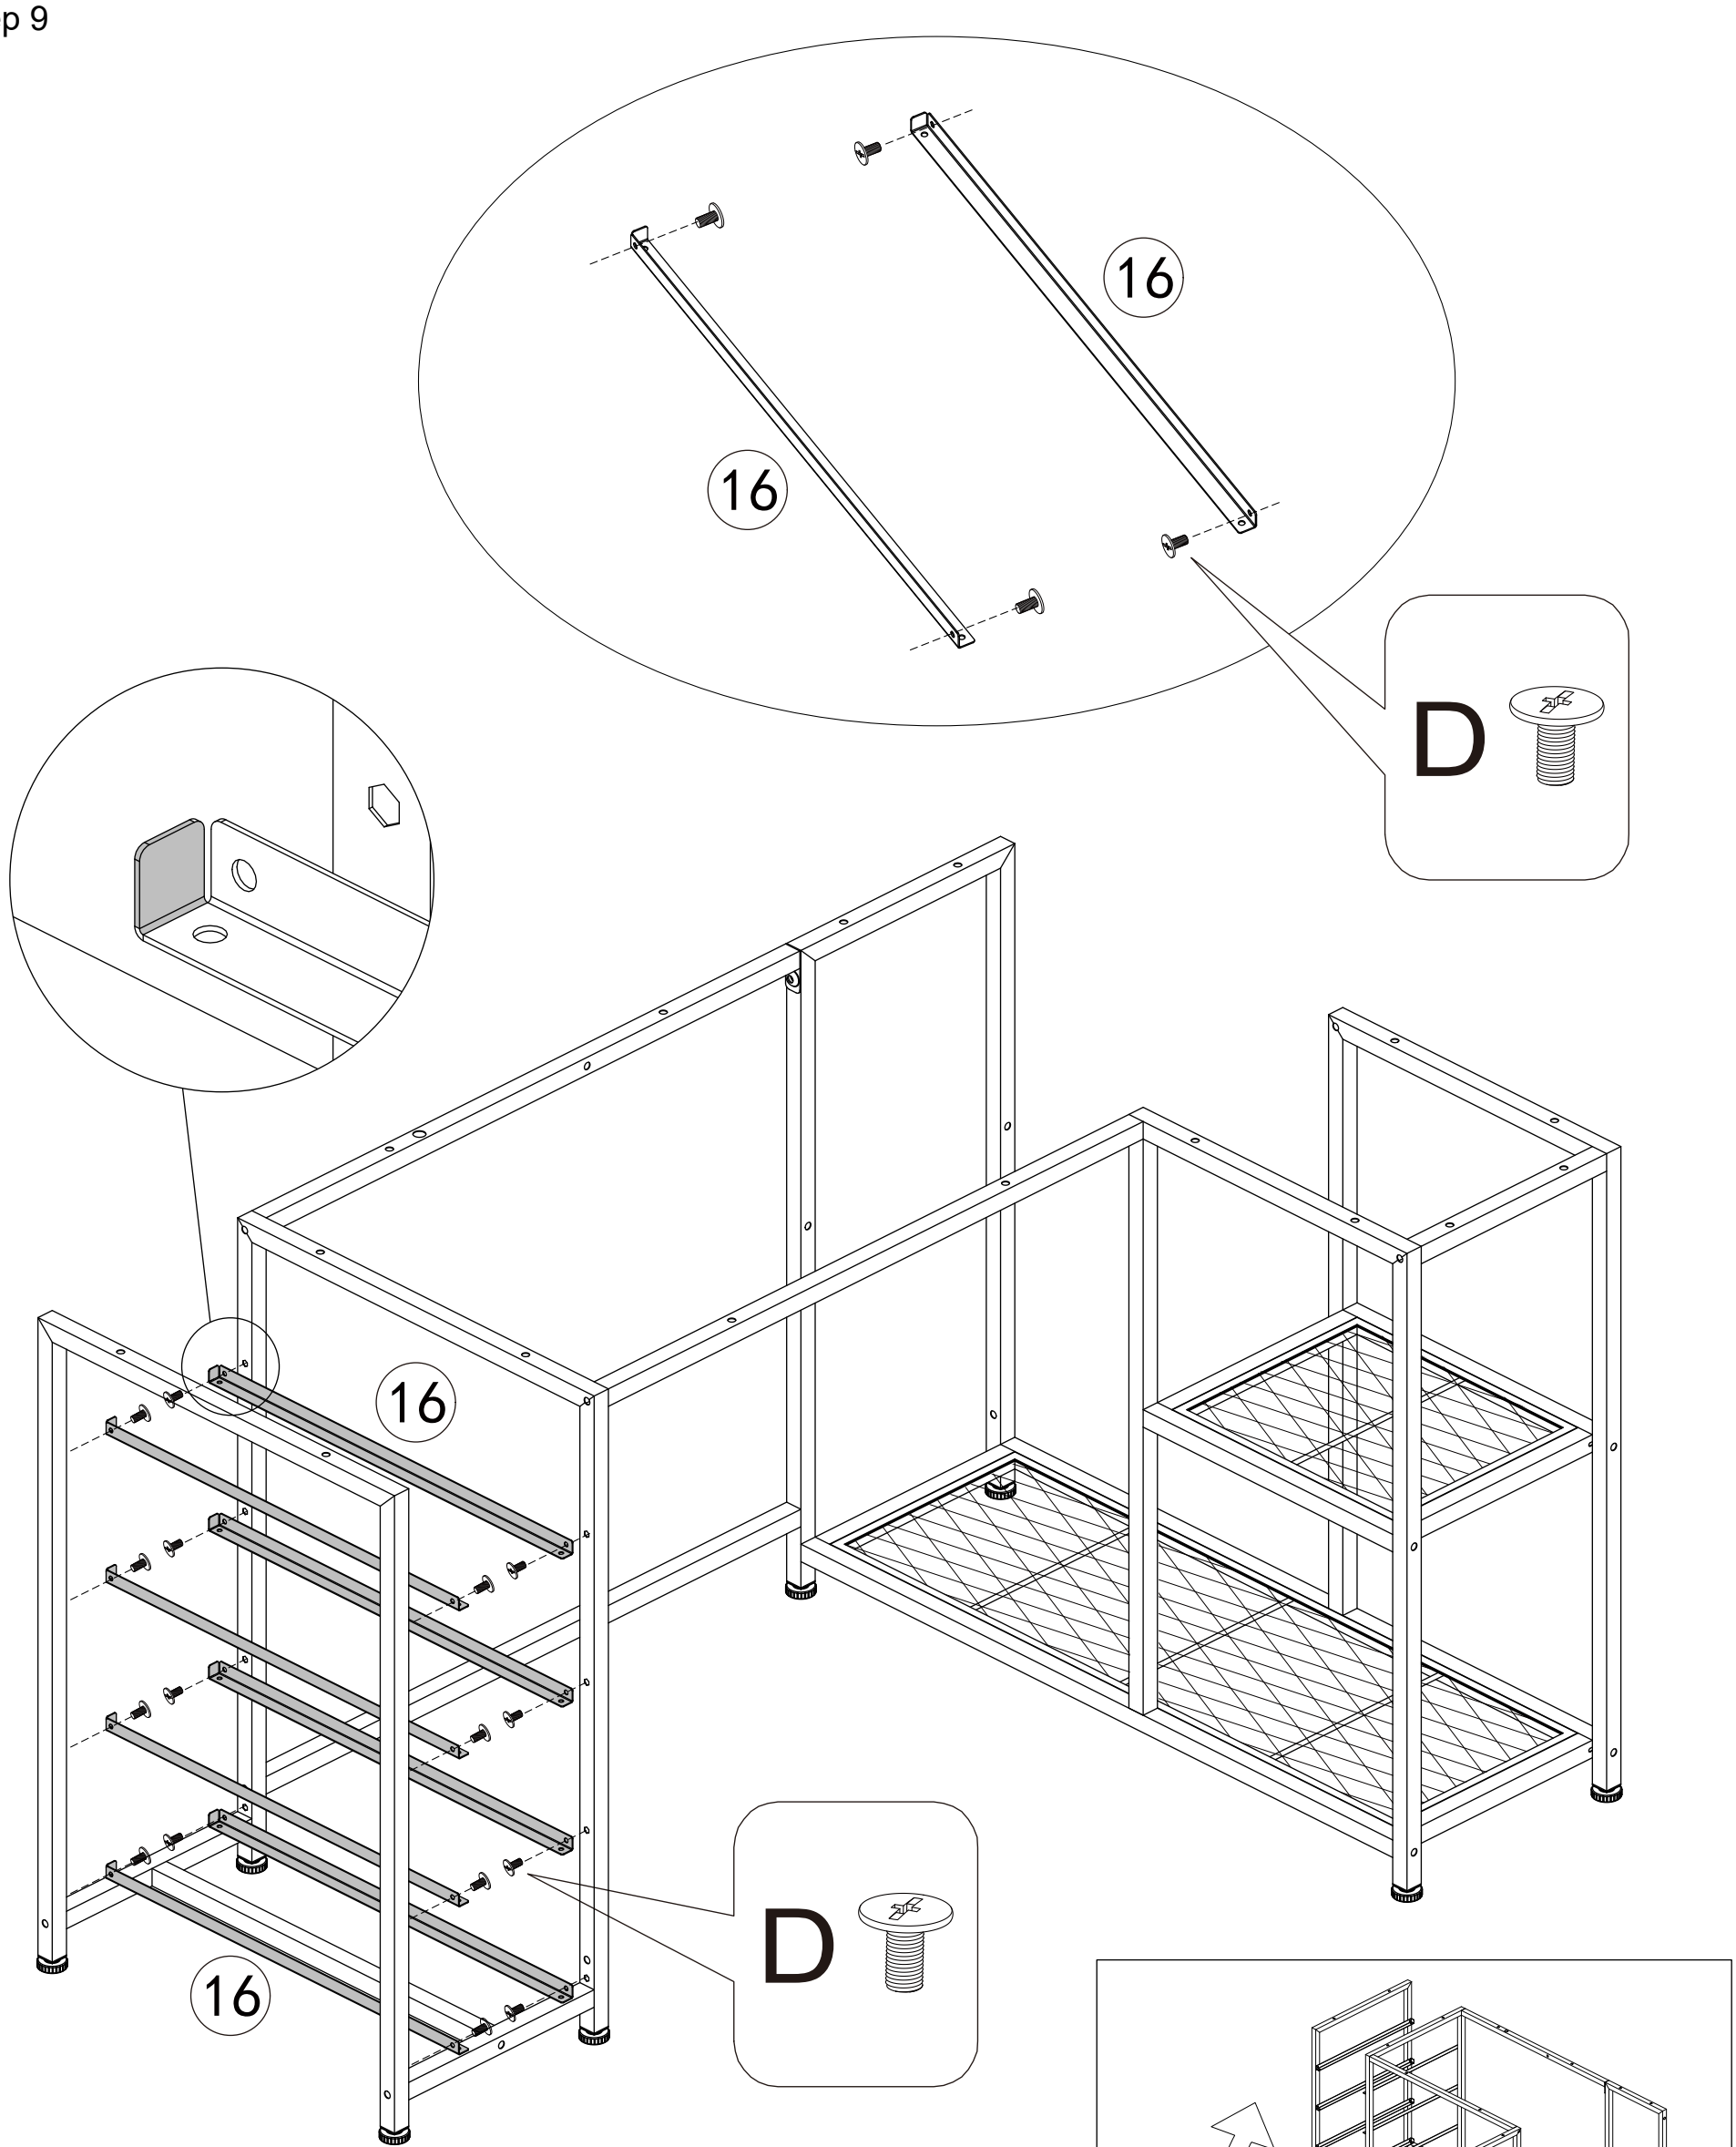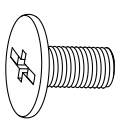
Step 9





D	x16
	
M4x8MM	

ASSEMBLY INSTRUCTION

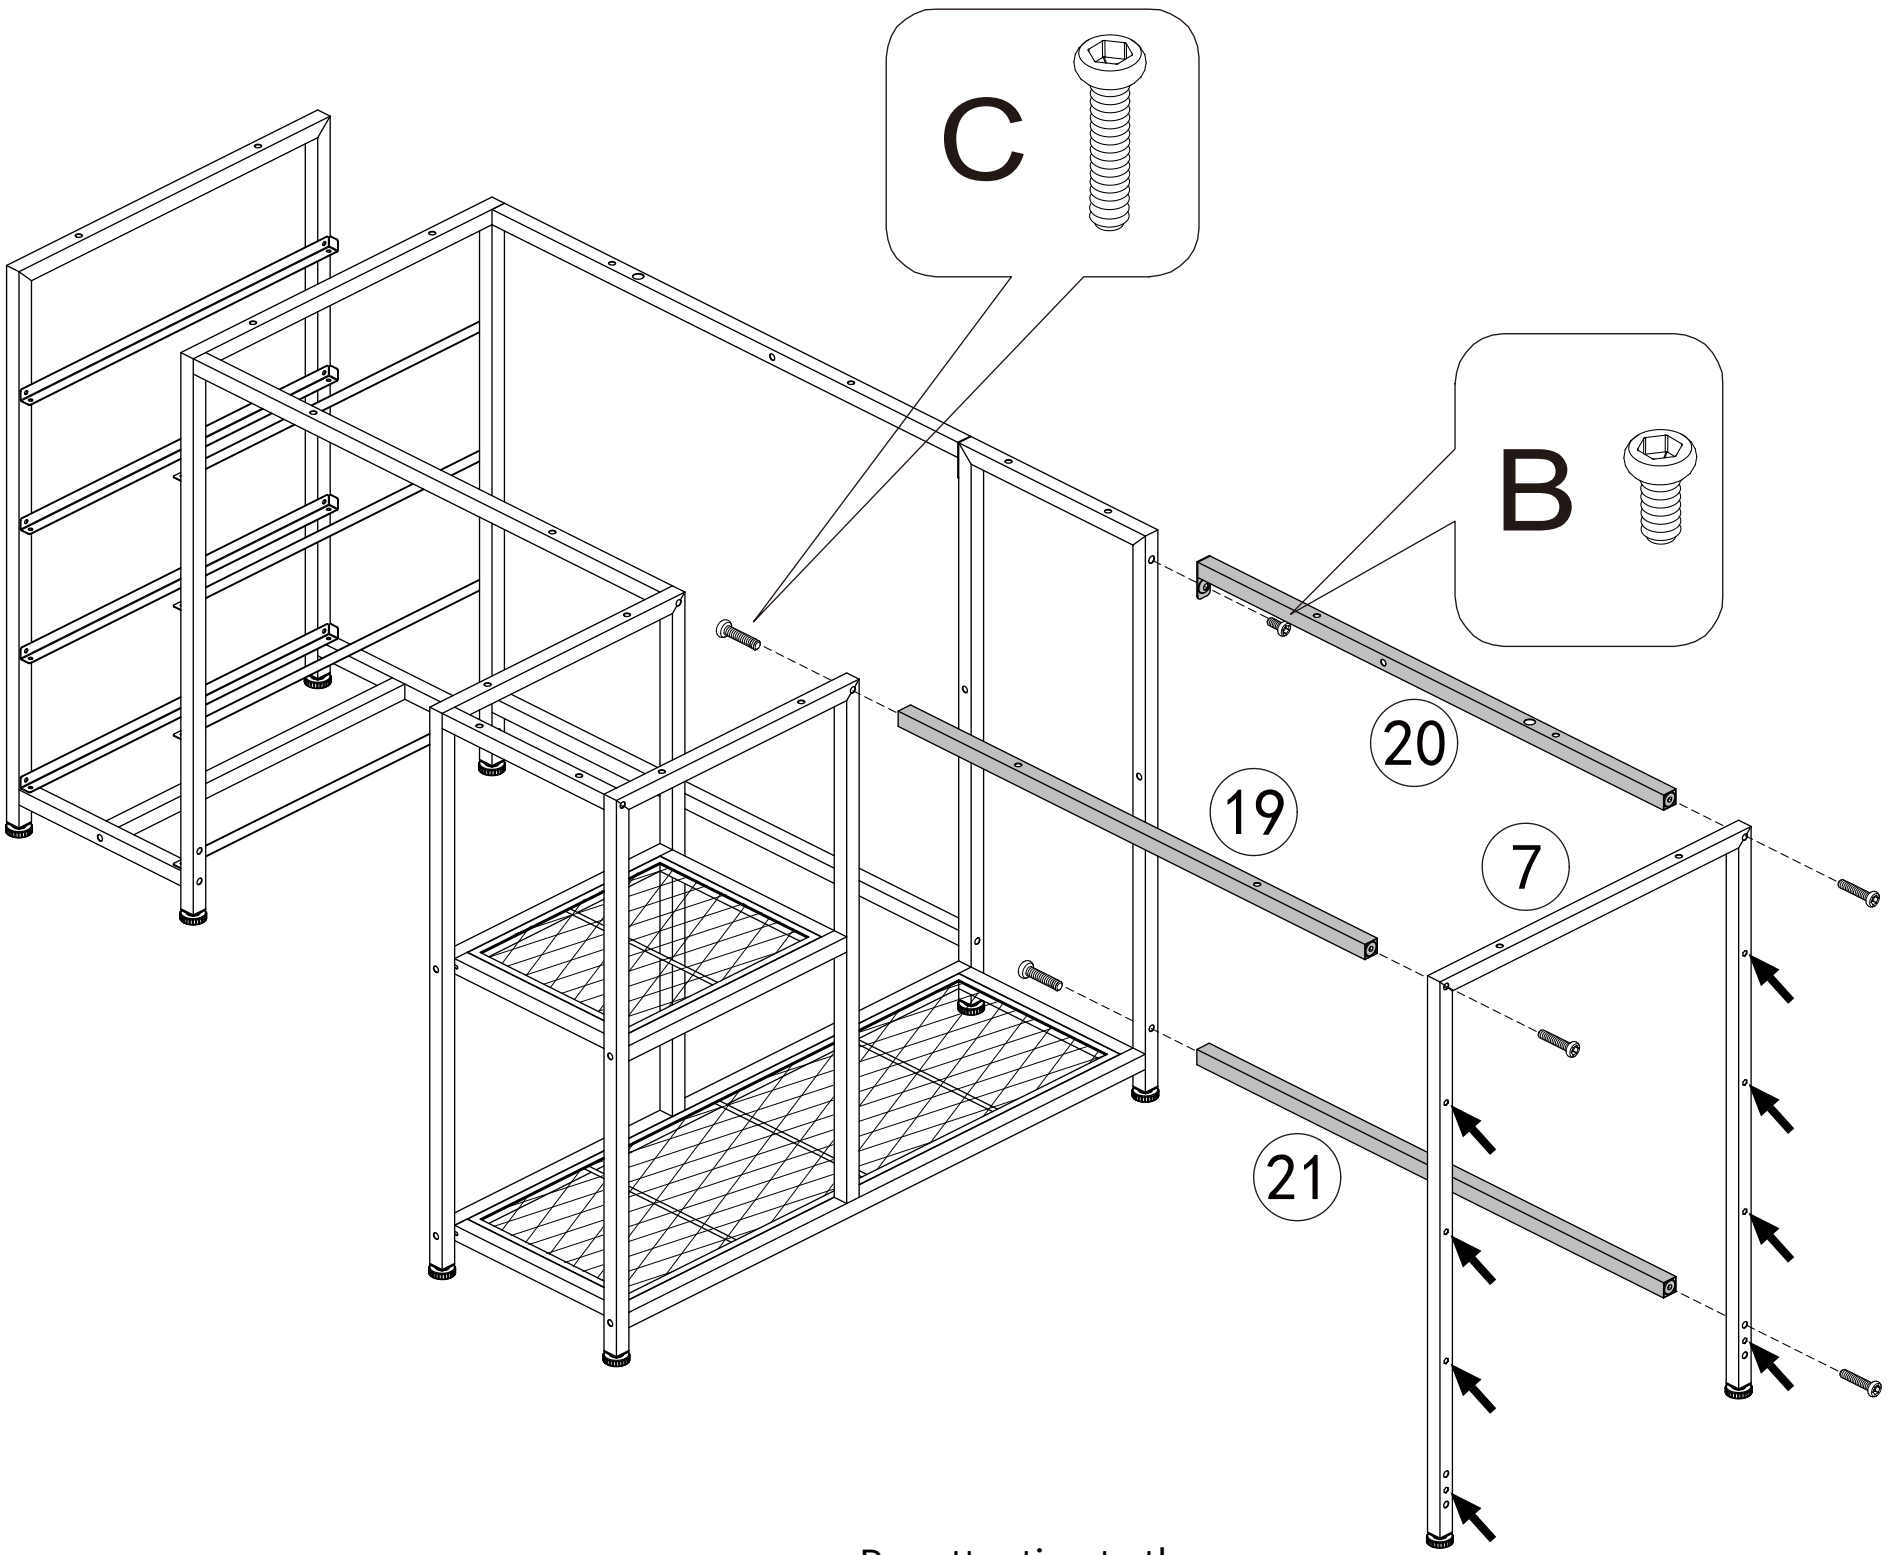Step 10





Pay attention to the position of the hole indicated by the arrow

B	x1
	
M6x10MM	
C	x5
	
M6x28MM	

ASSEMBLY INSTRUCTION

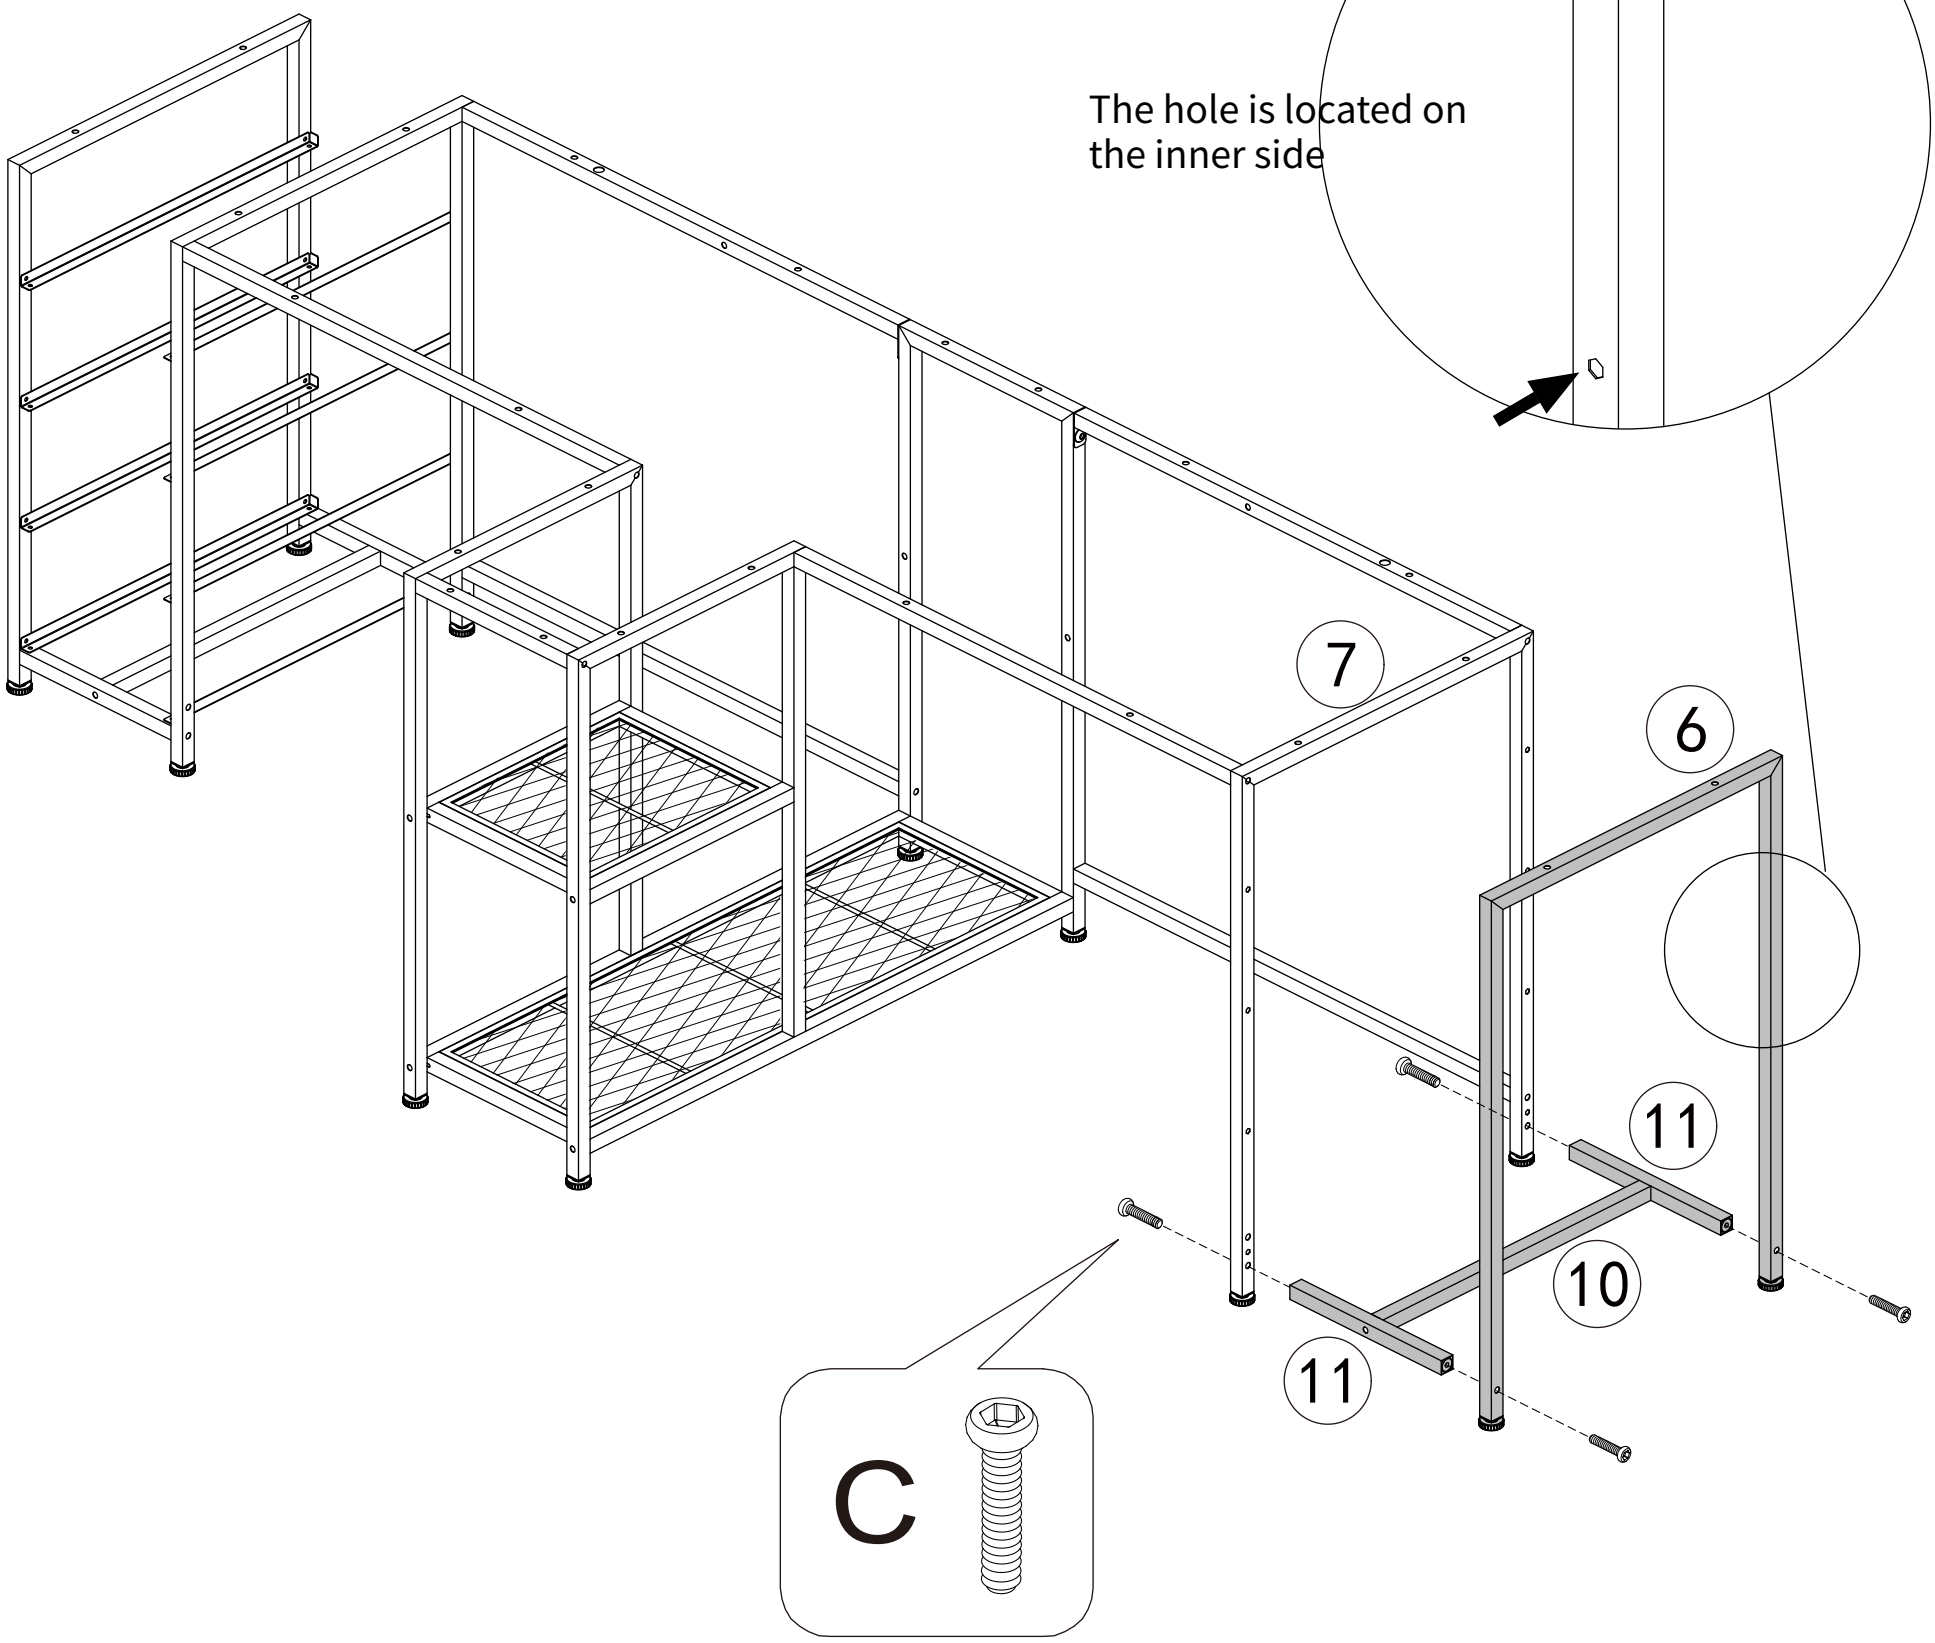
Step 11




C	x4
	
M6x28MM	

ASSEMBLY INSTRUCTION

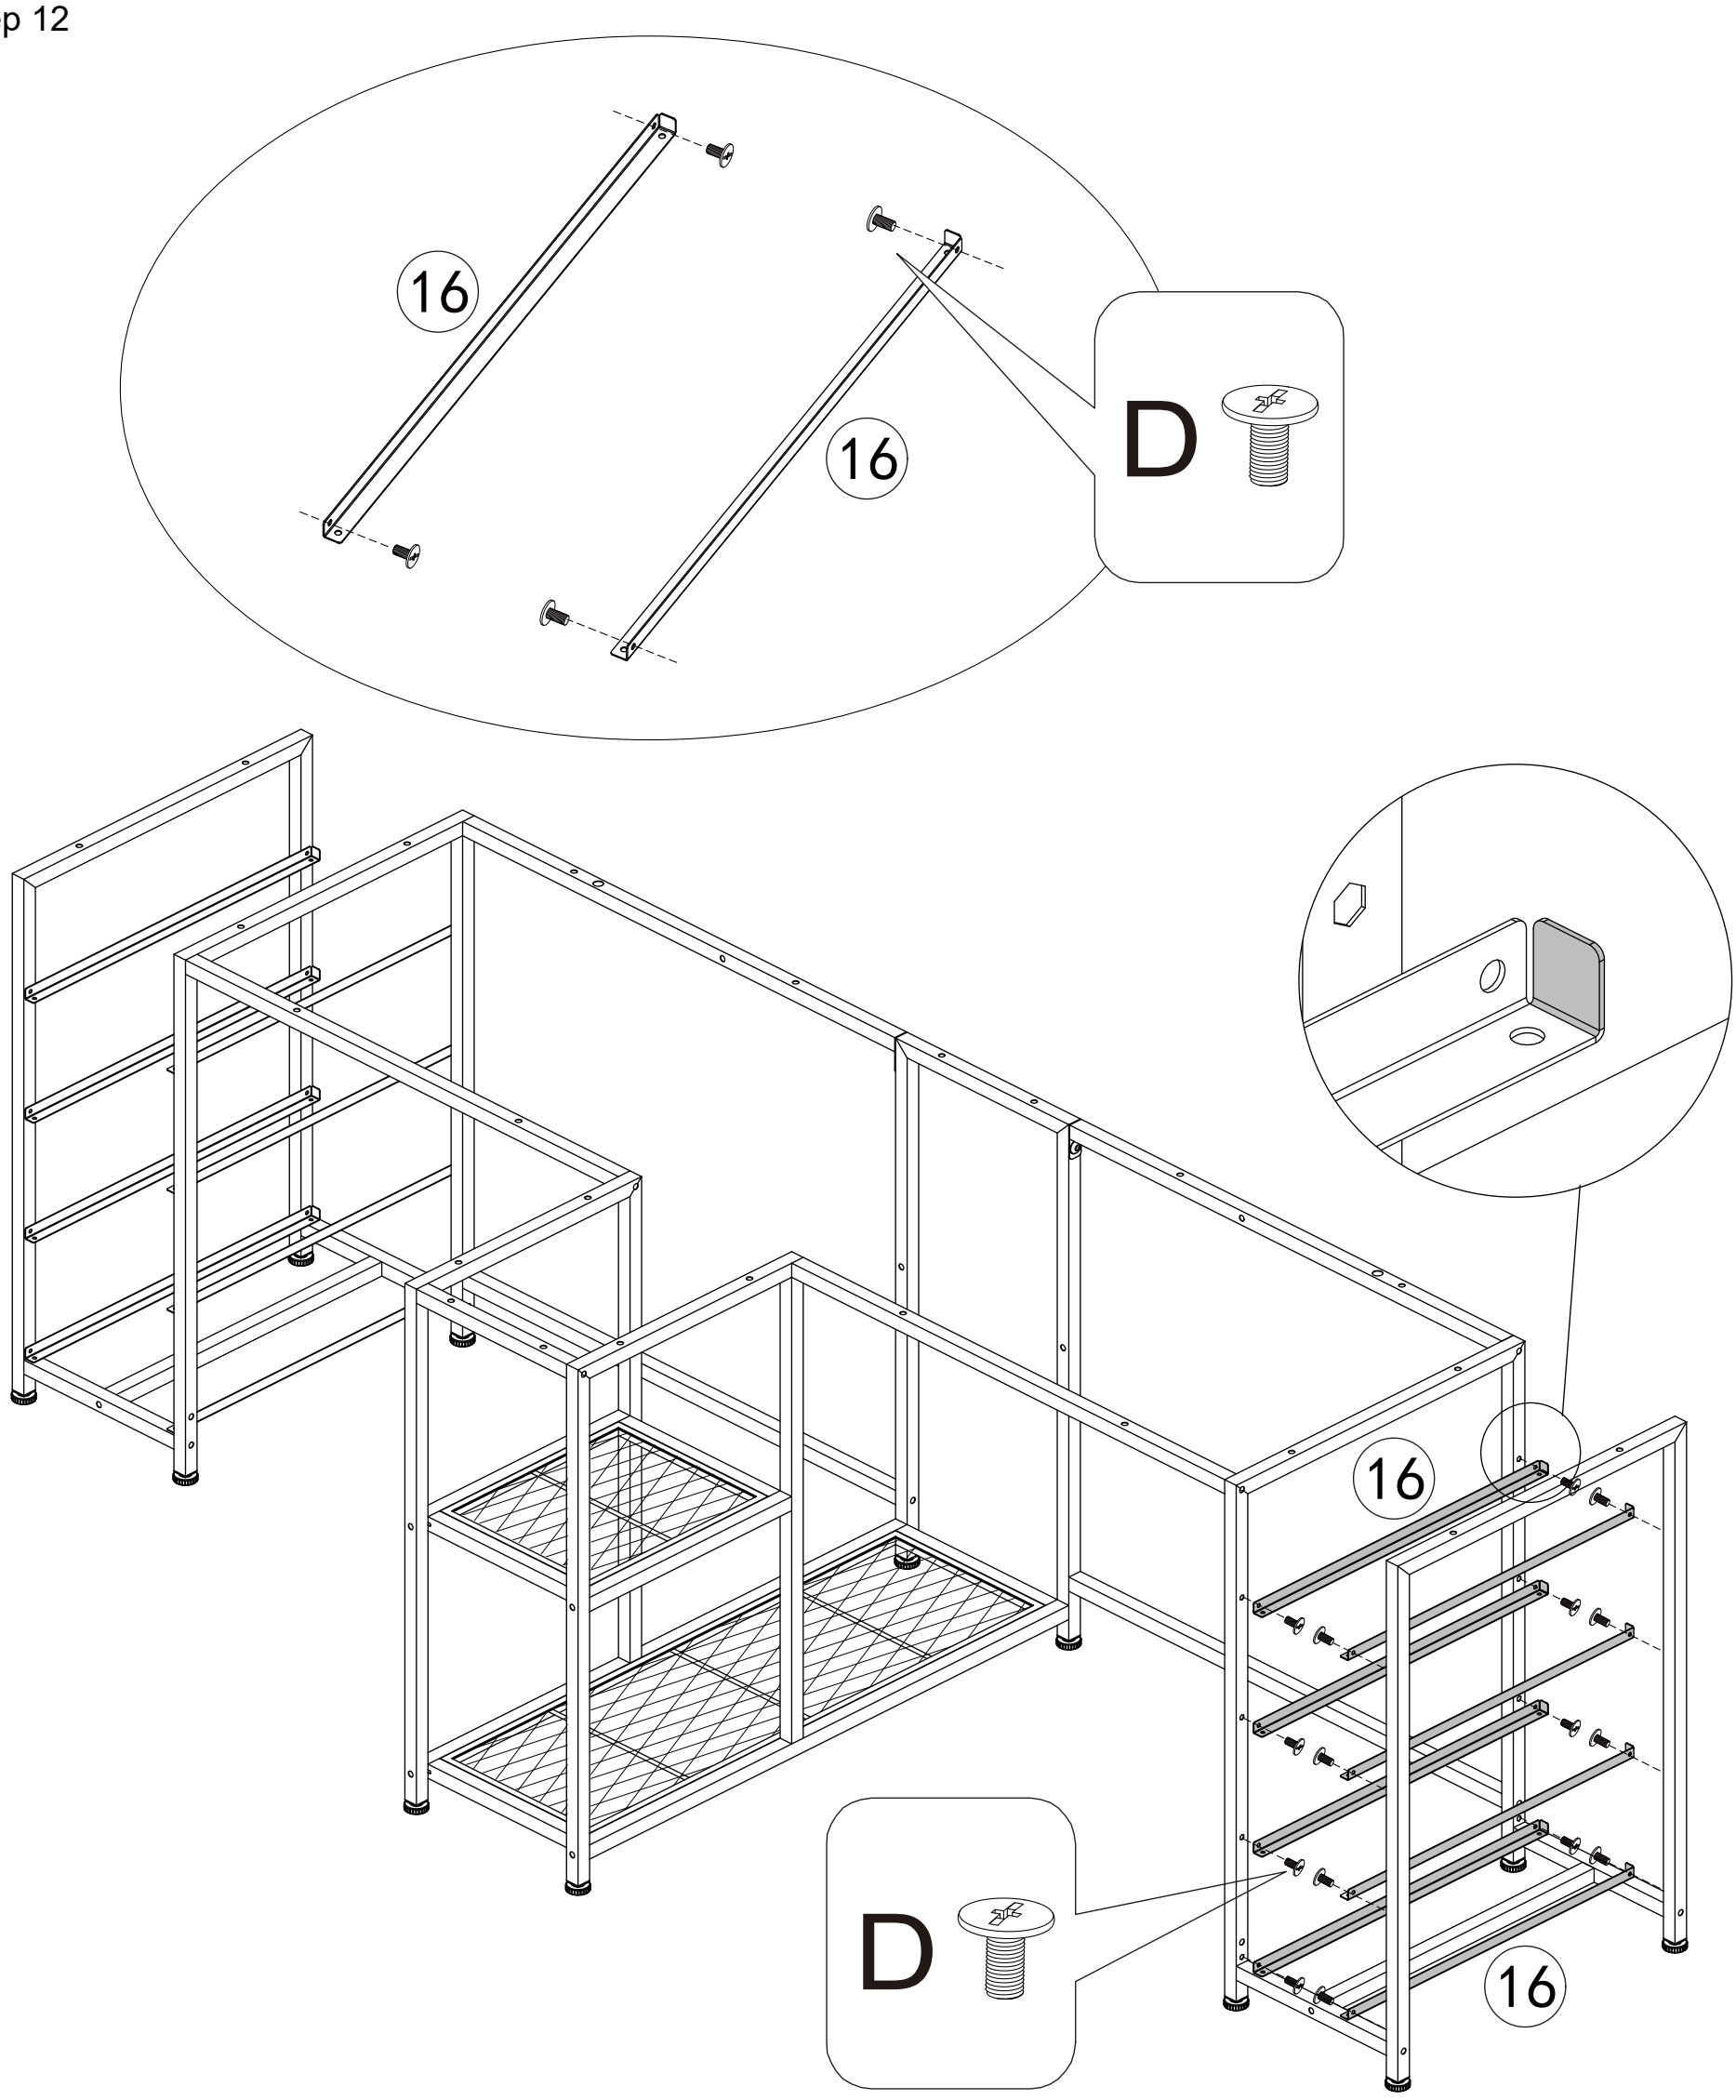
Step 12





D	x16
	
M4x8MM	



ASSEMBLY INSTRUCTION

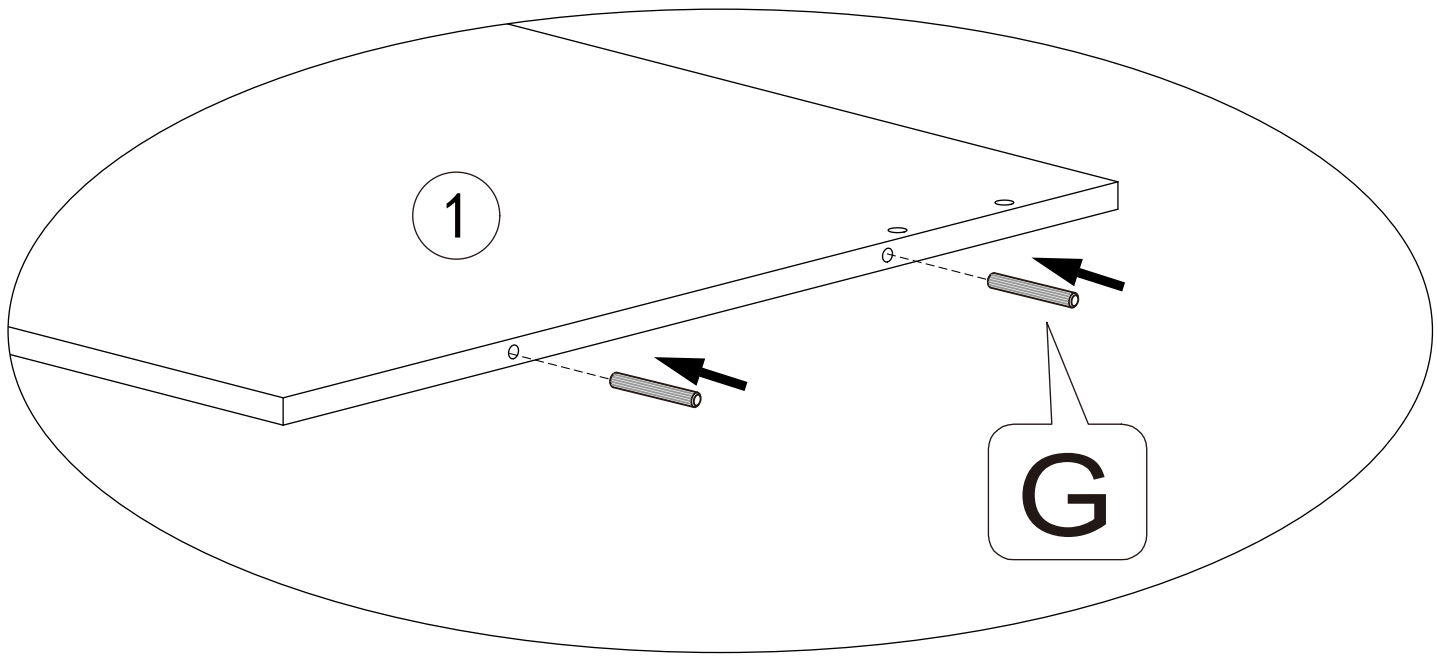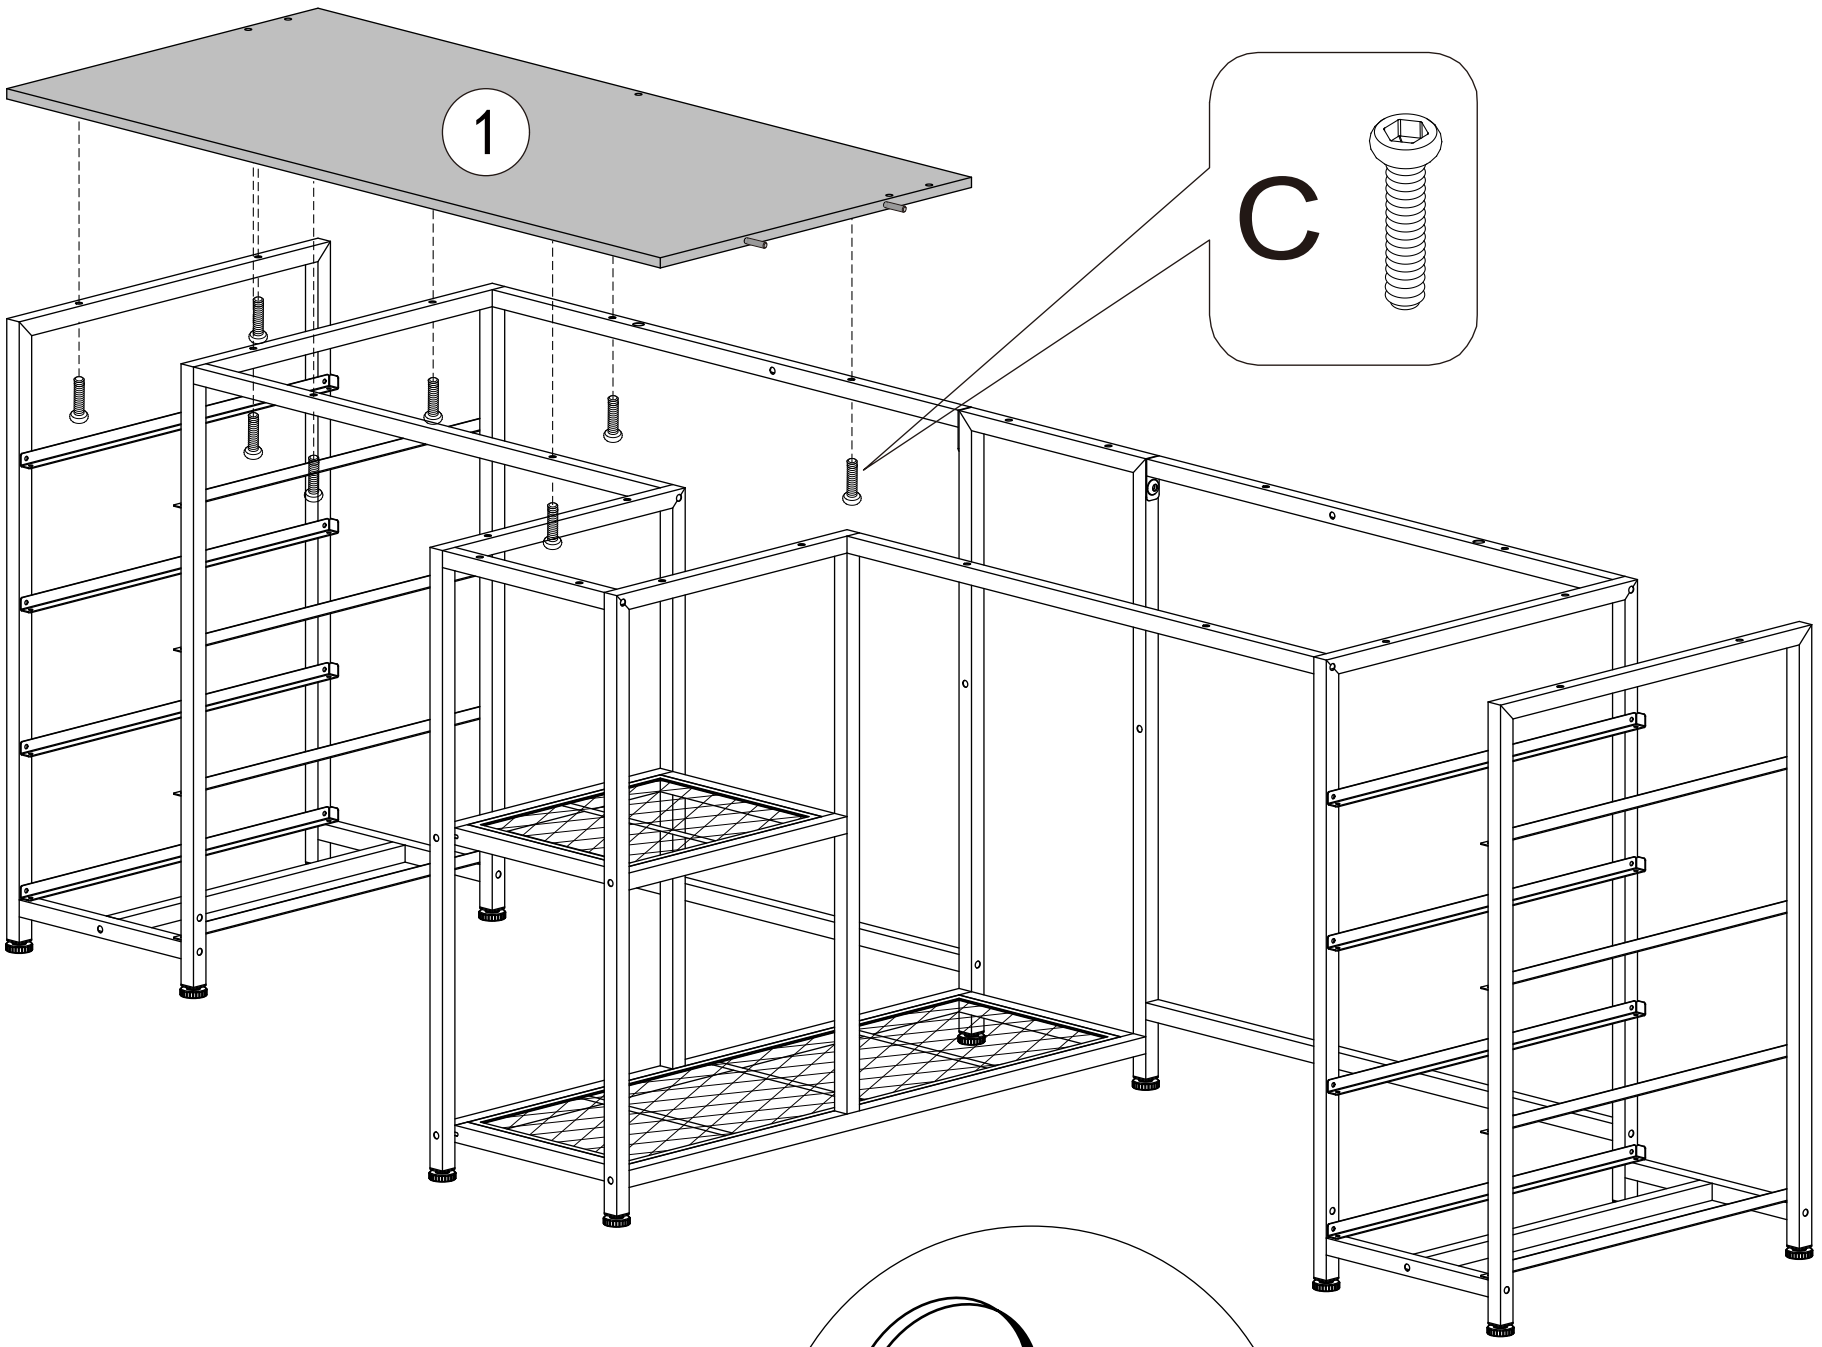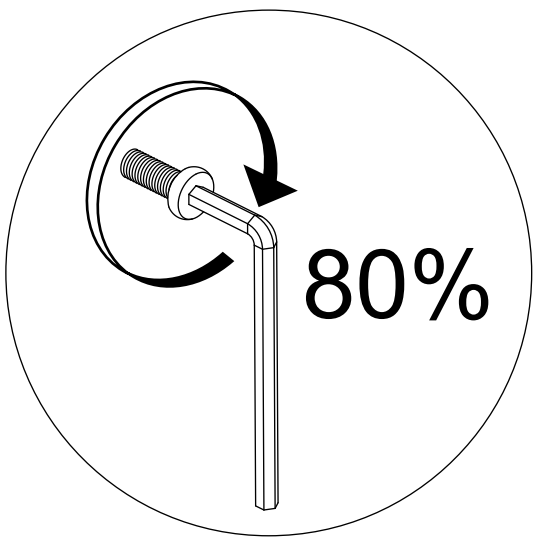Step 13









C	x8	G	x2
			
M6x28MM		Ø6x40MM	

ASSEMBLY INSTRUCTION


Possible problems during installation:

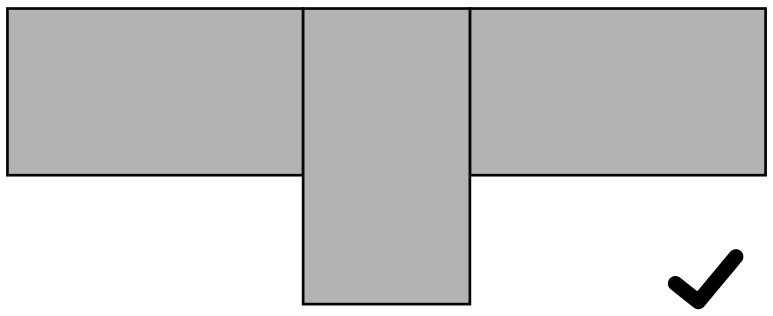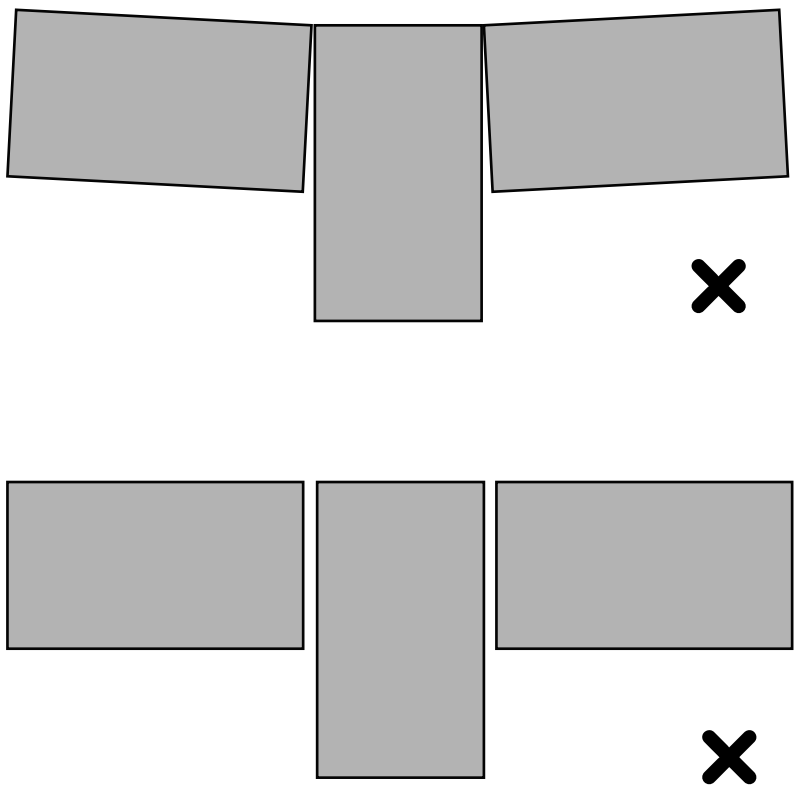- There is a gap between the 2 boards






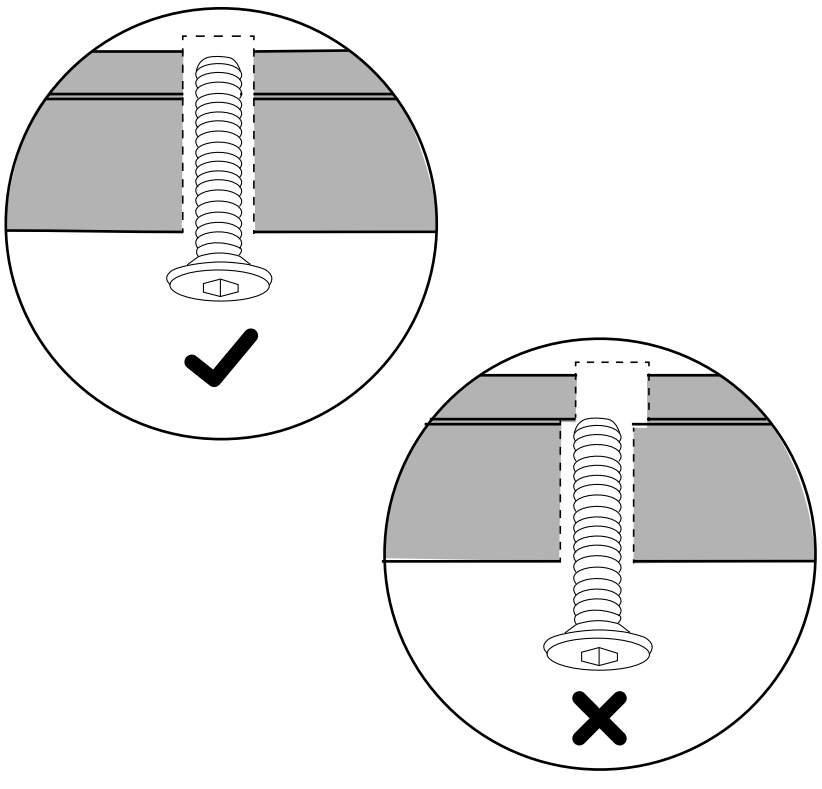- The hole in the bar is not aligned with the hole in the board, and the screw can not be installed.




Recommended solution:

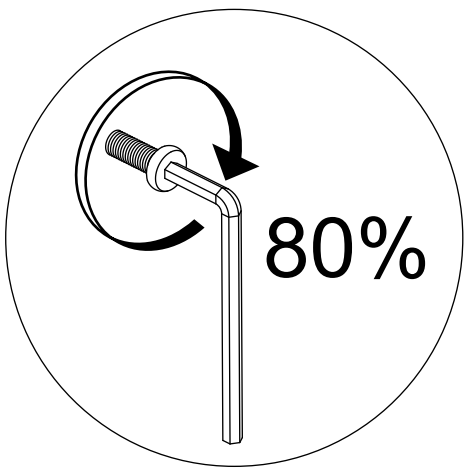
- Firstly, tighten the screw by 80%



- Then, align all the boards completely

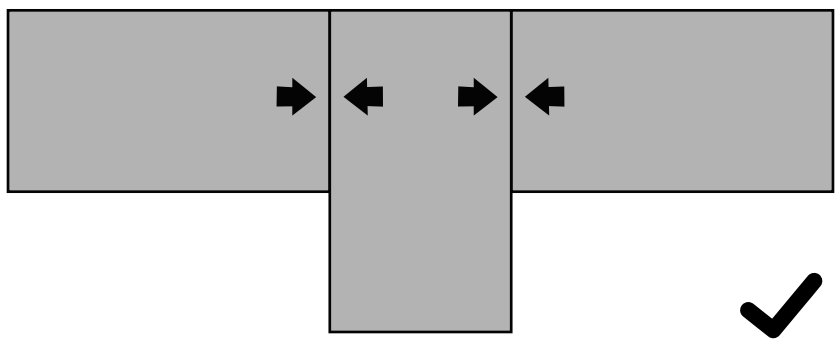


- Finally, tighten all screws to 100%

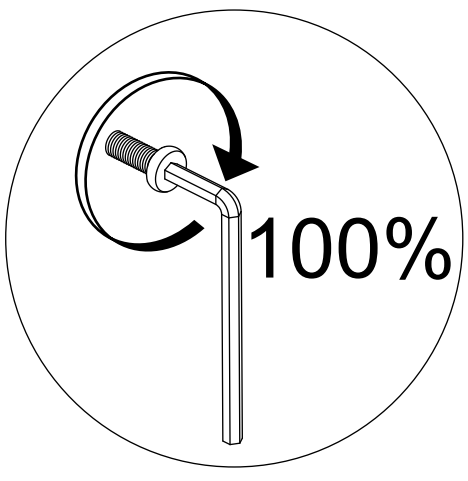




- If the above method doesn't work, please contact us with a photo of the holes, we will help you further.

ASSEMBLY INSTRUCTION

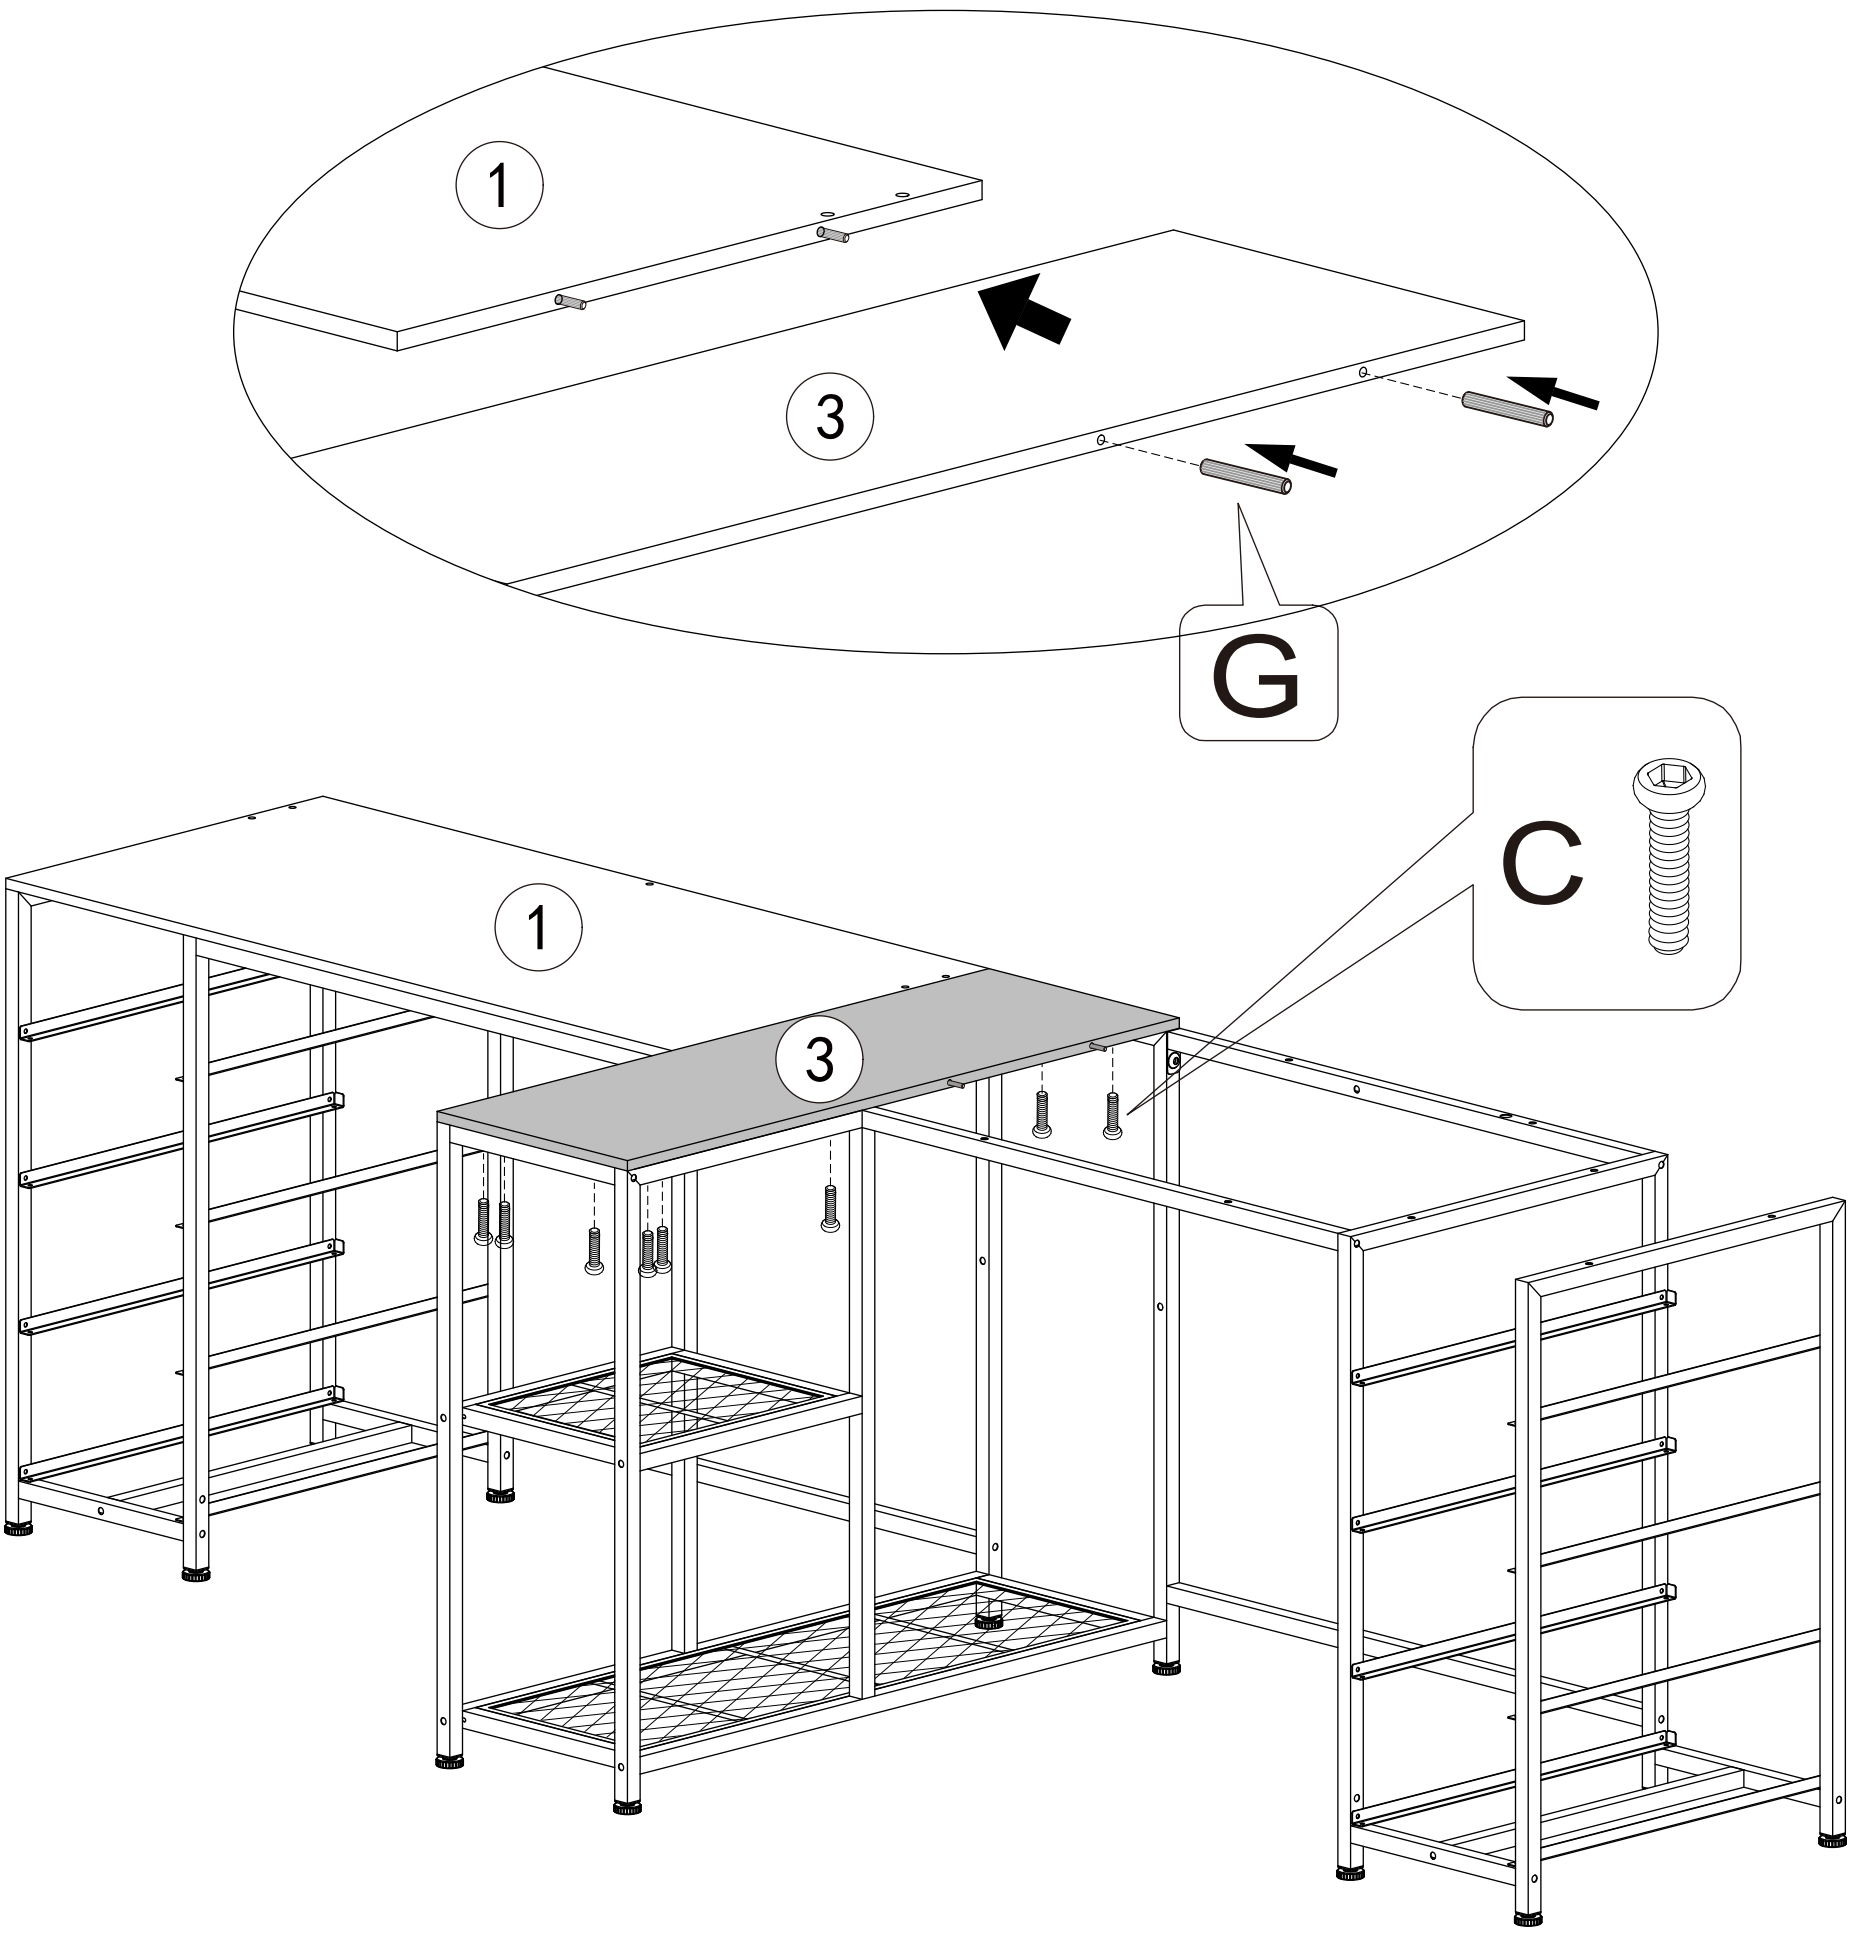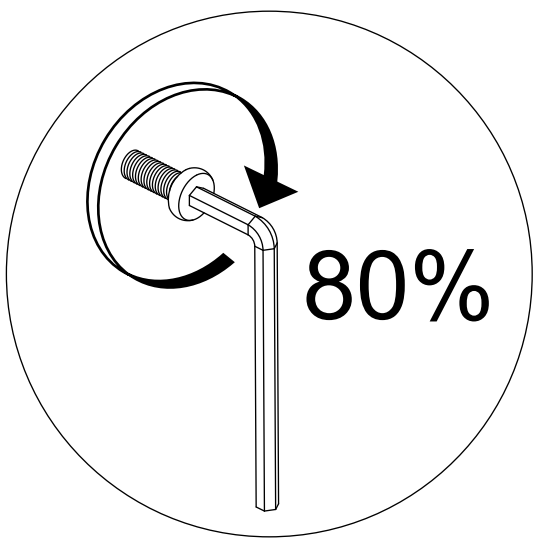Step 14








C	x8	G	x2
			
M6x28MM		Ø6x40MM	


ASSEMBLY INSTRUCTION

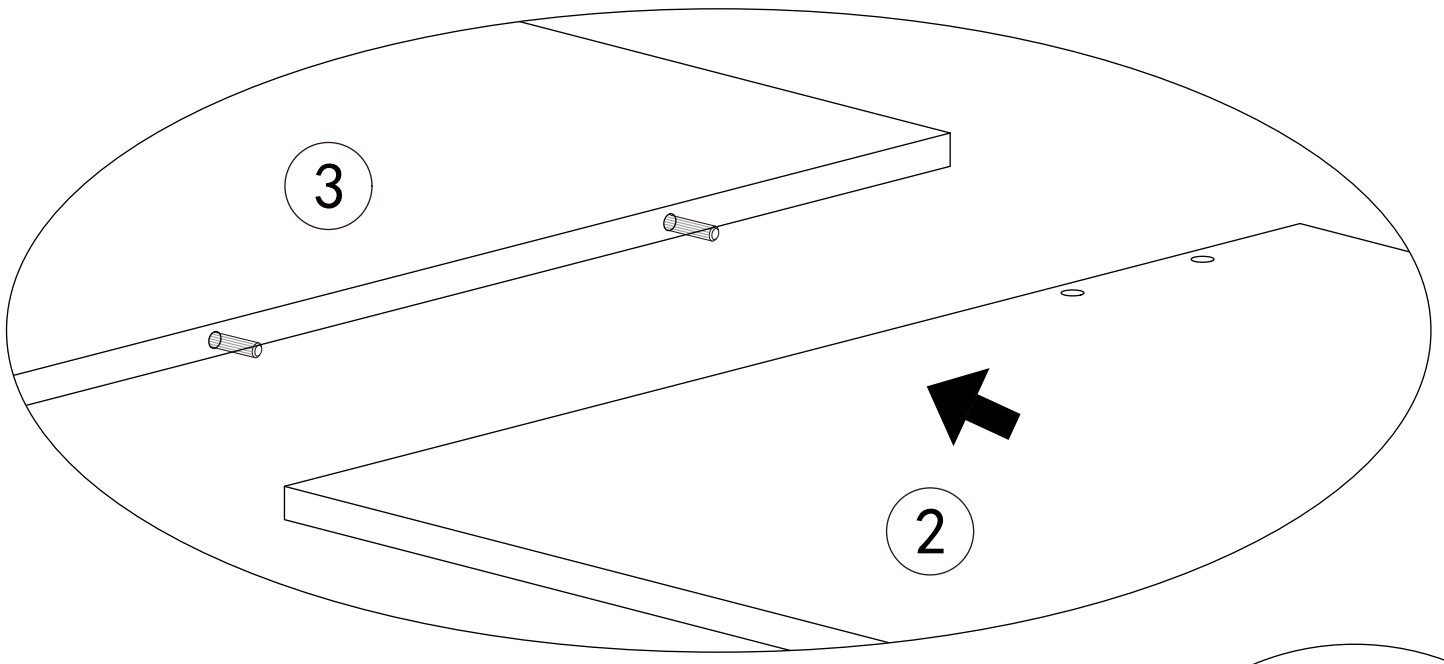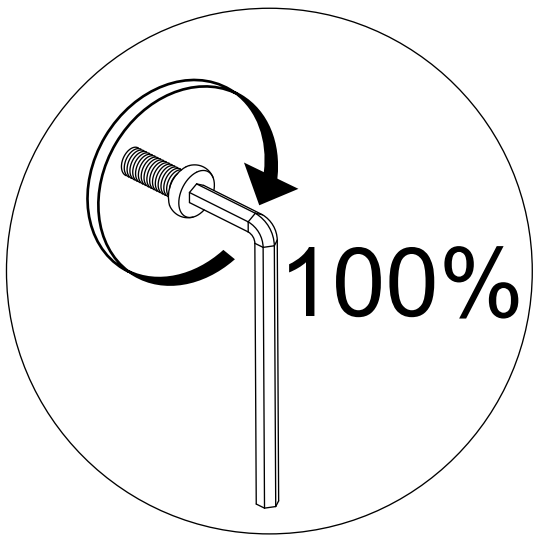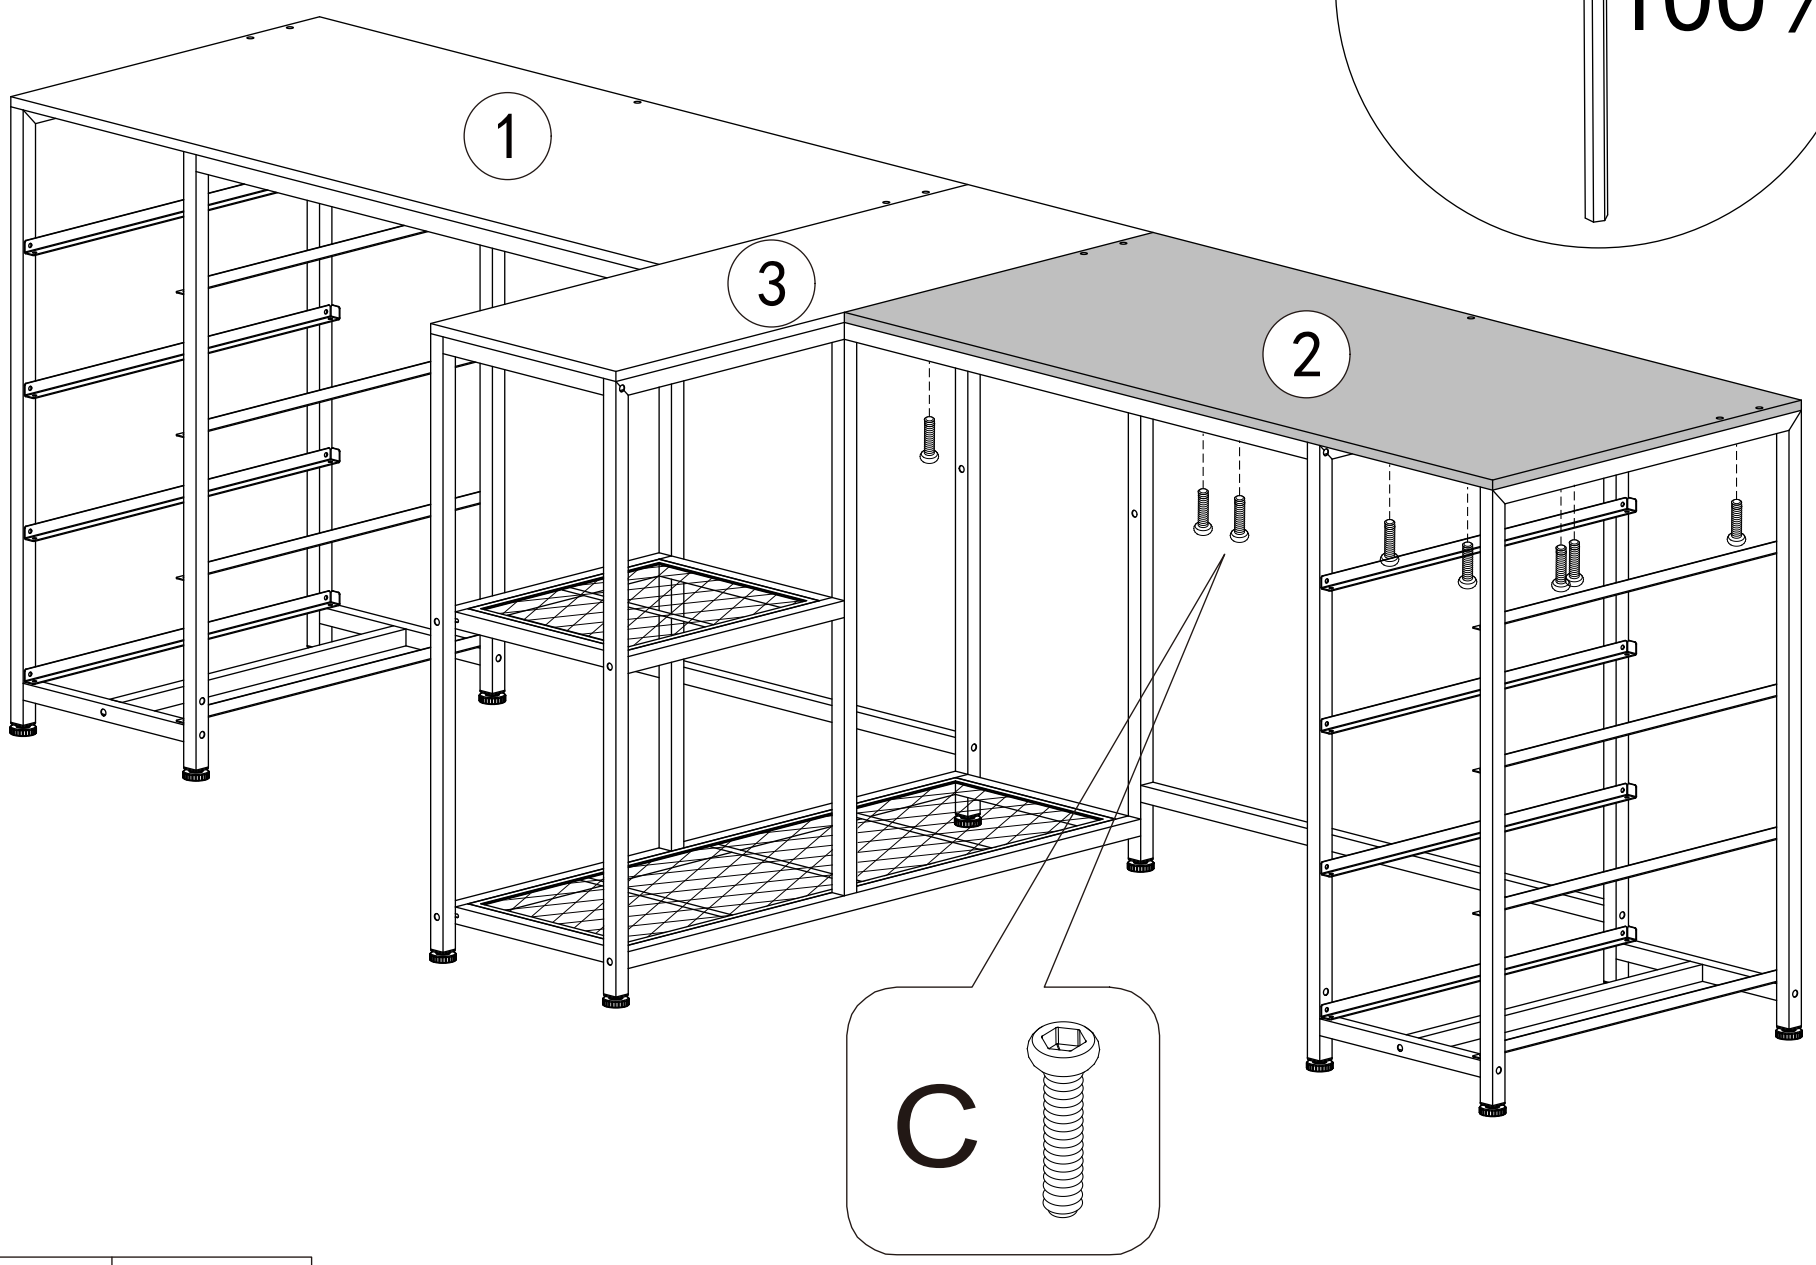Step 15









C	x8
	
M6x28MM	

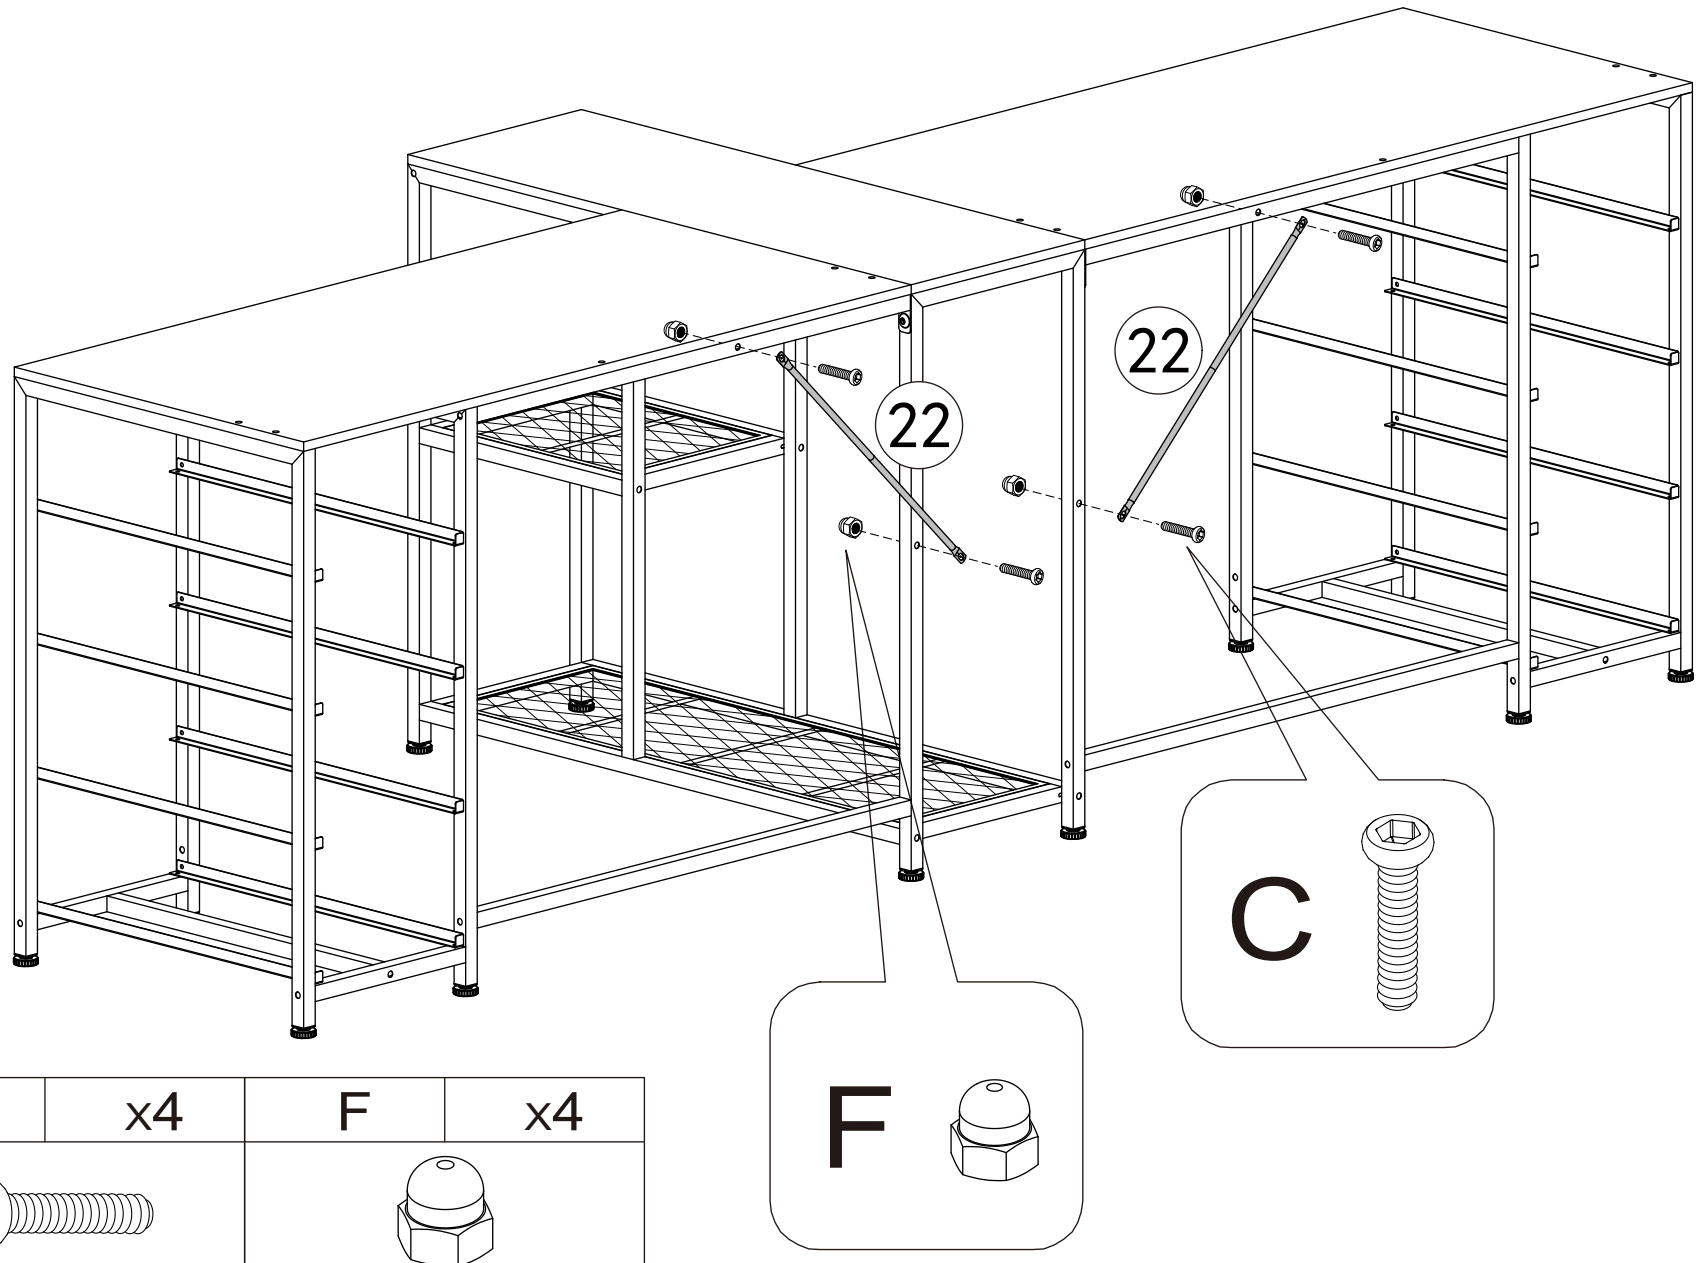Step 16



C	x4	F	x4
M6x28MM		M6	

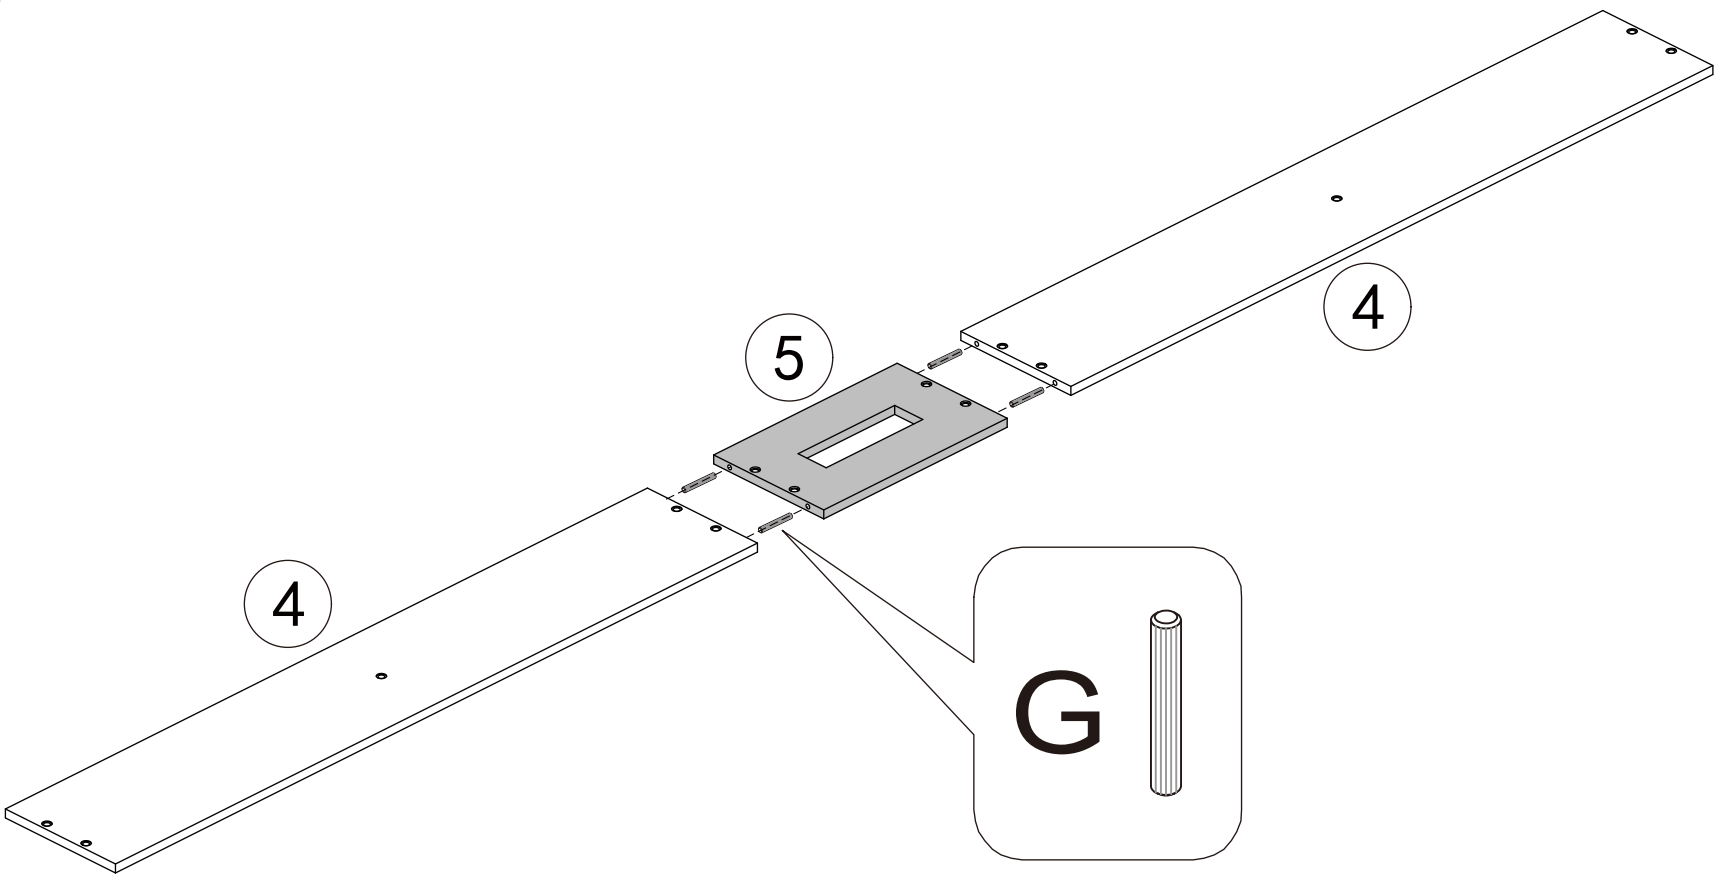
Step 17





G	x4
	
Ø6x40MM	


ASSEMBLY INSTRUCTION

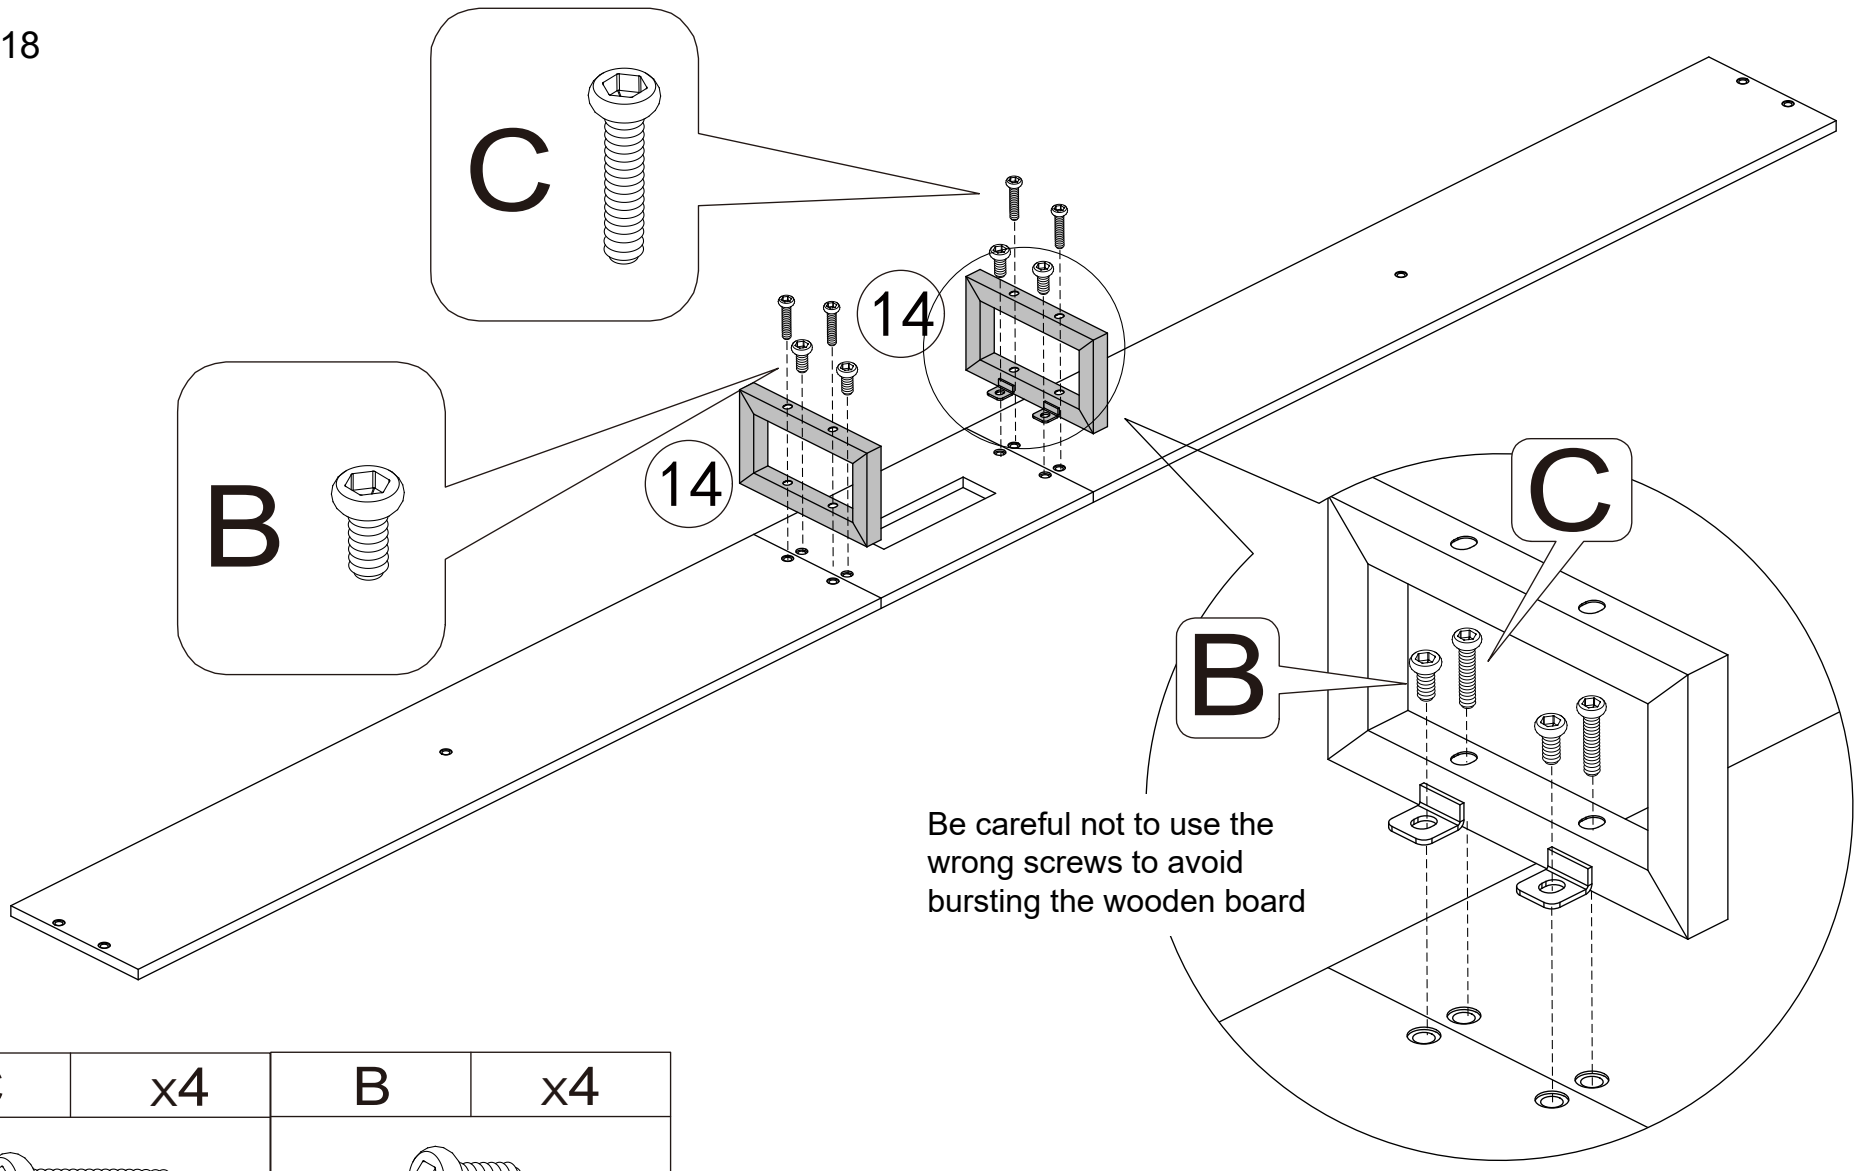
Step 18




C	x4	B	x4
			
M6x28MM		M6x10MM	

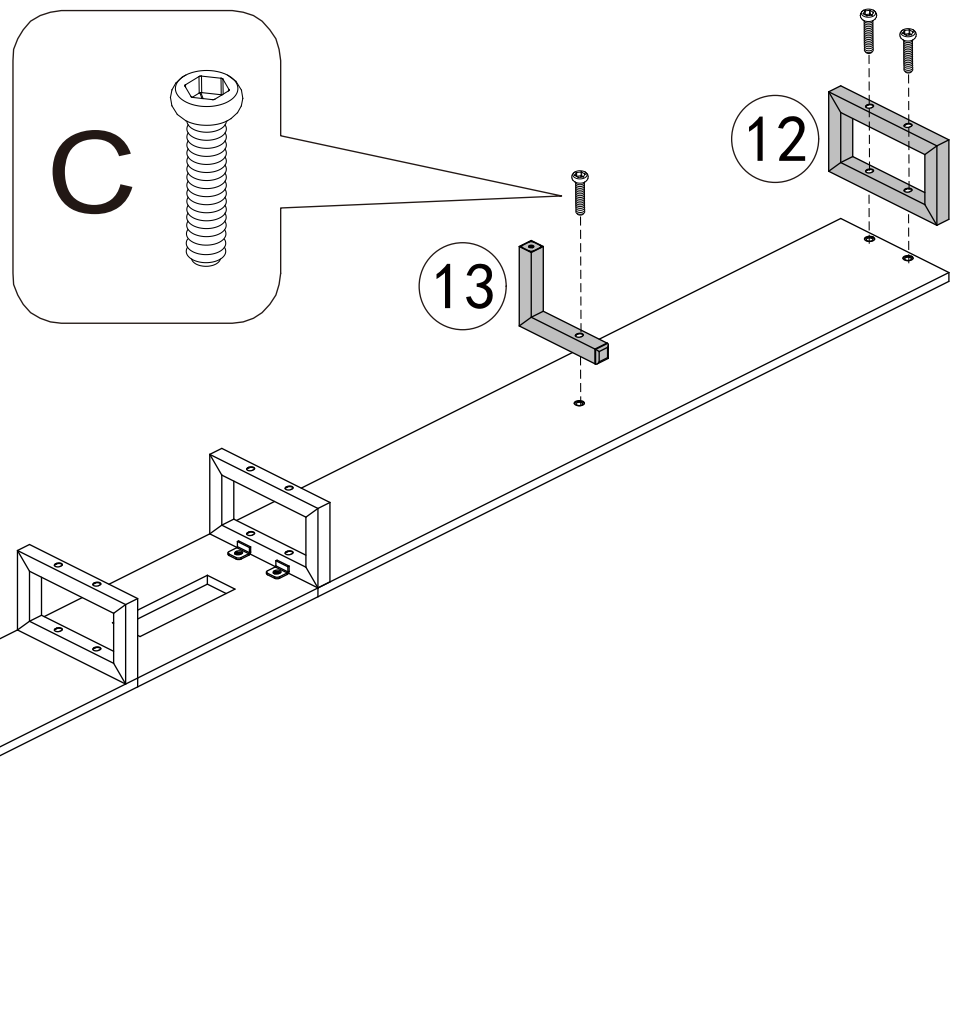Step 19




C	x6
	
M6x28MM	

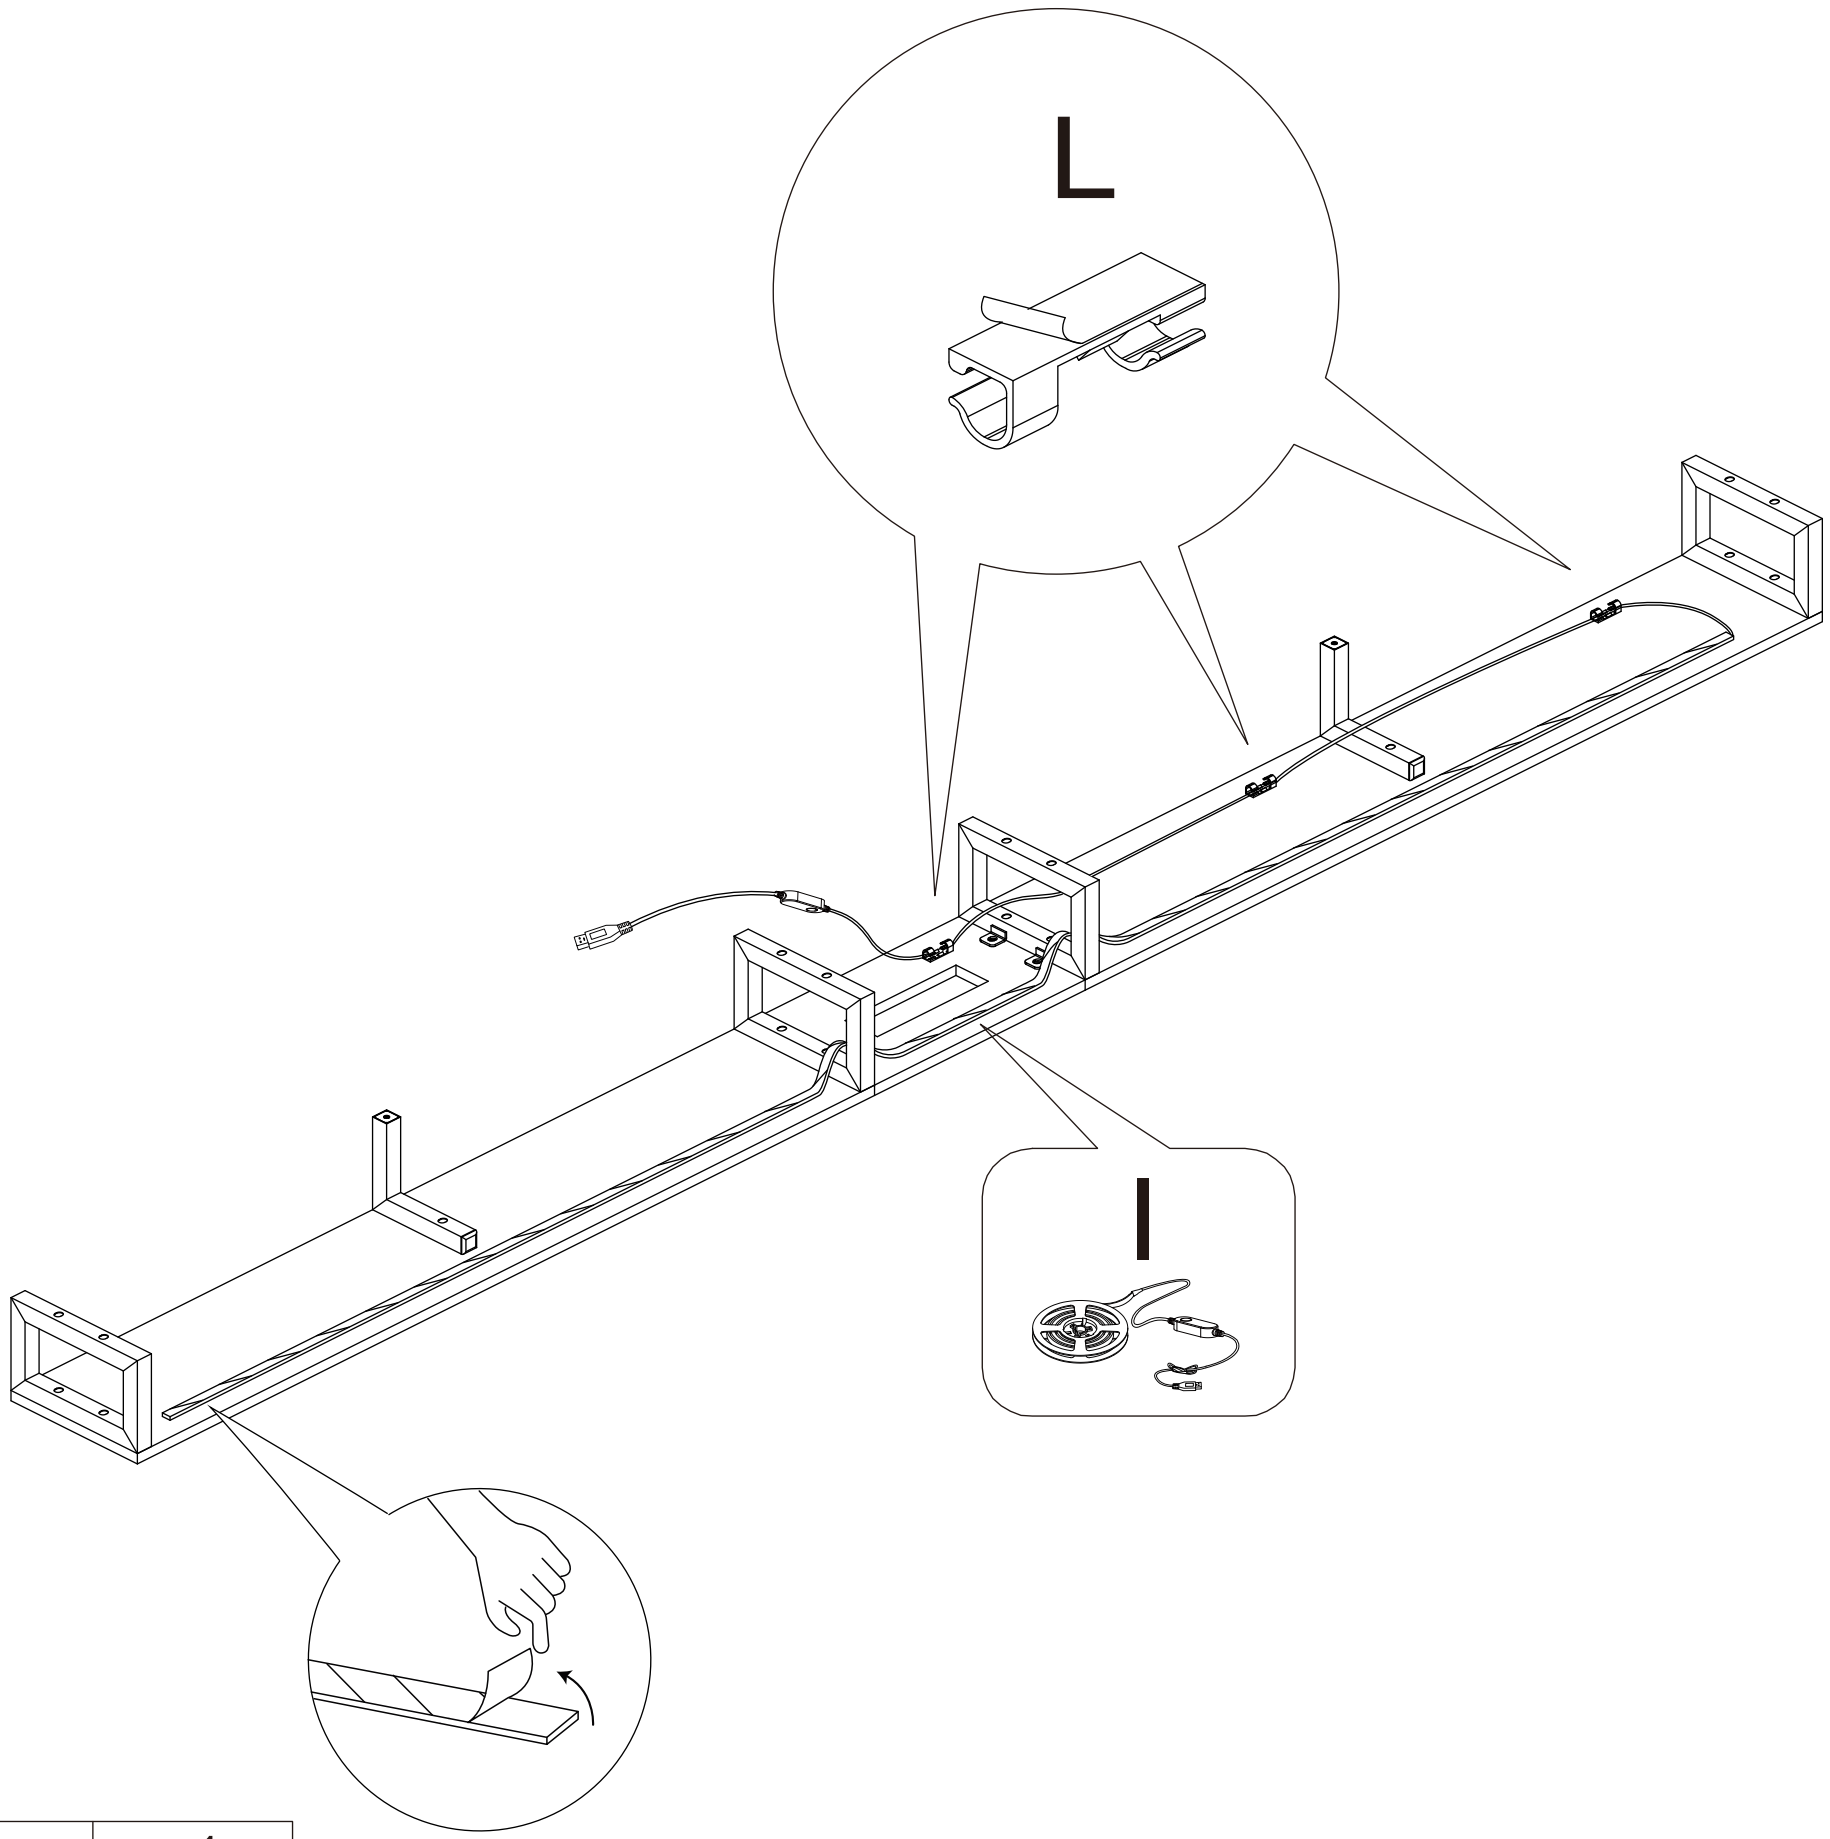
Step 20




I	x1
L	x3

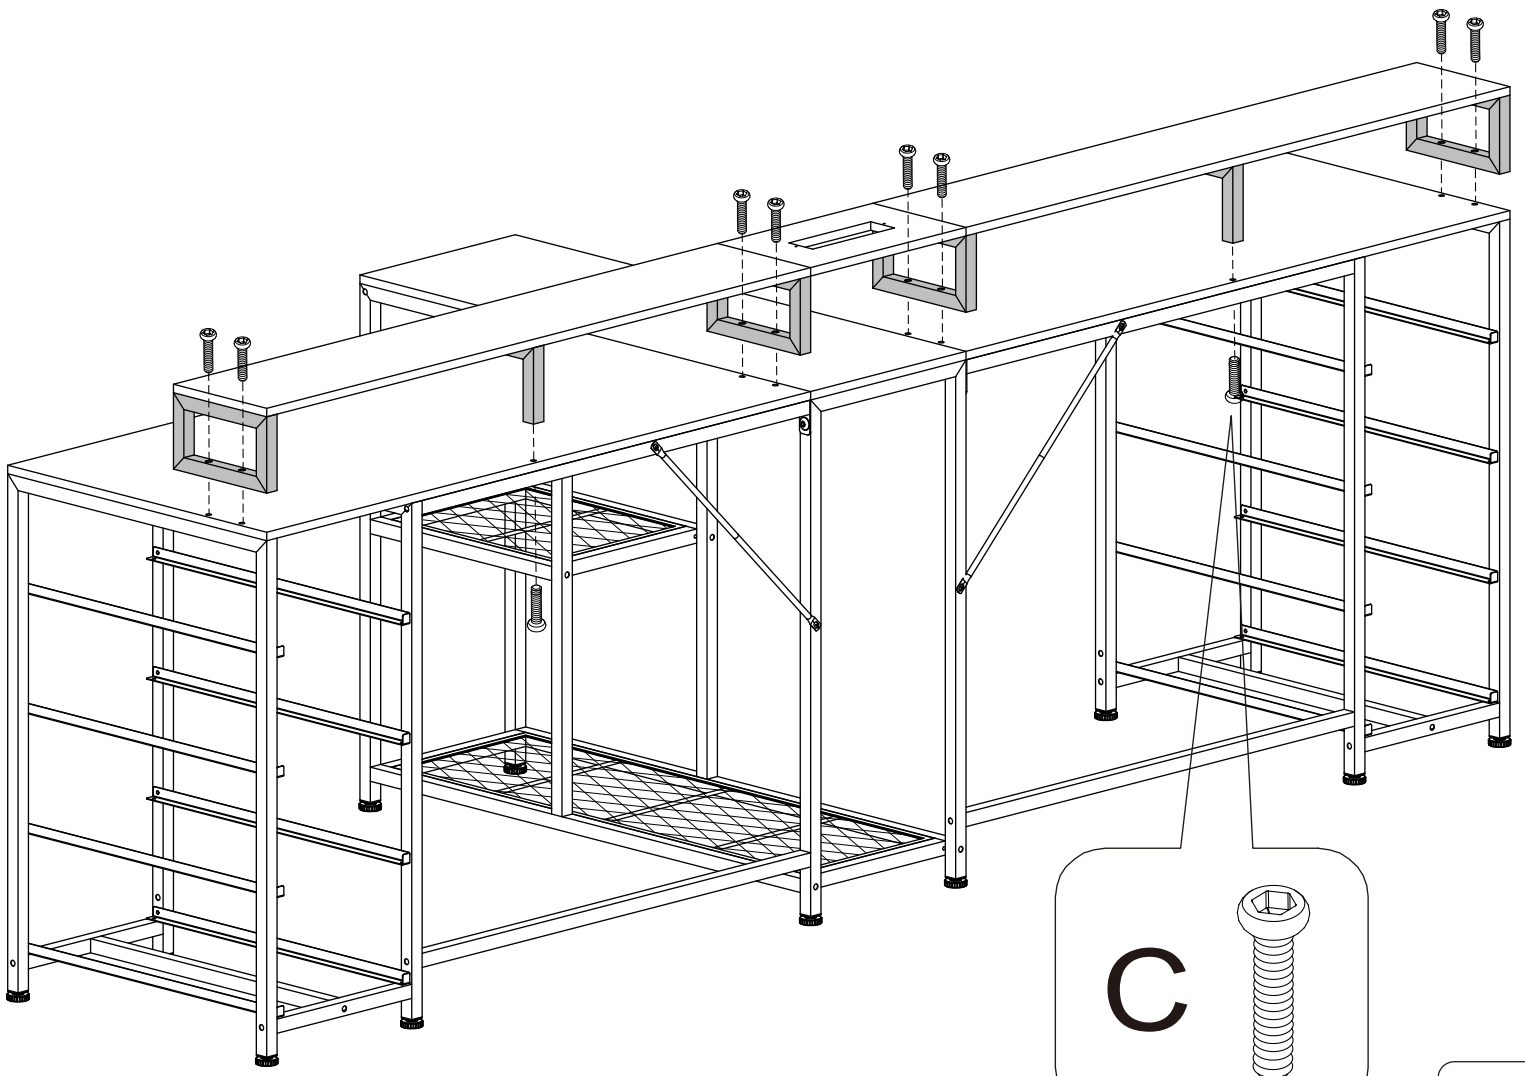
Step 20





C	x10
	
M6x28MM	

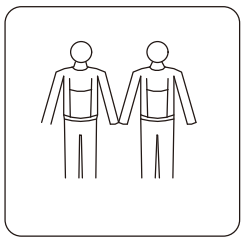


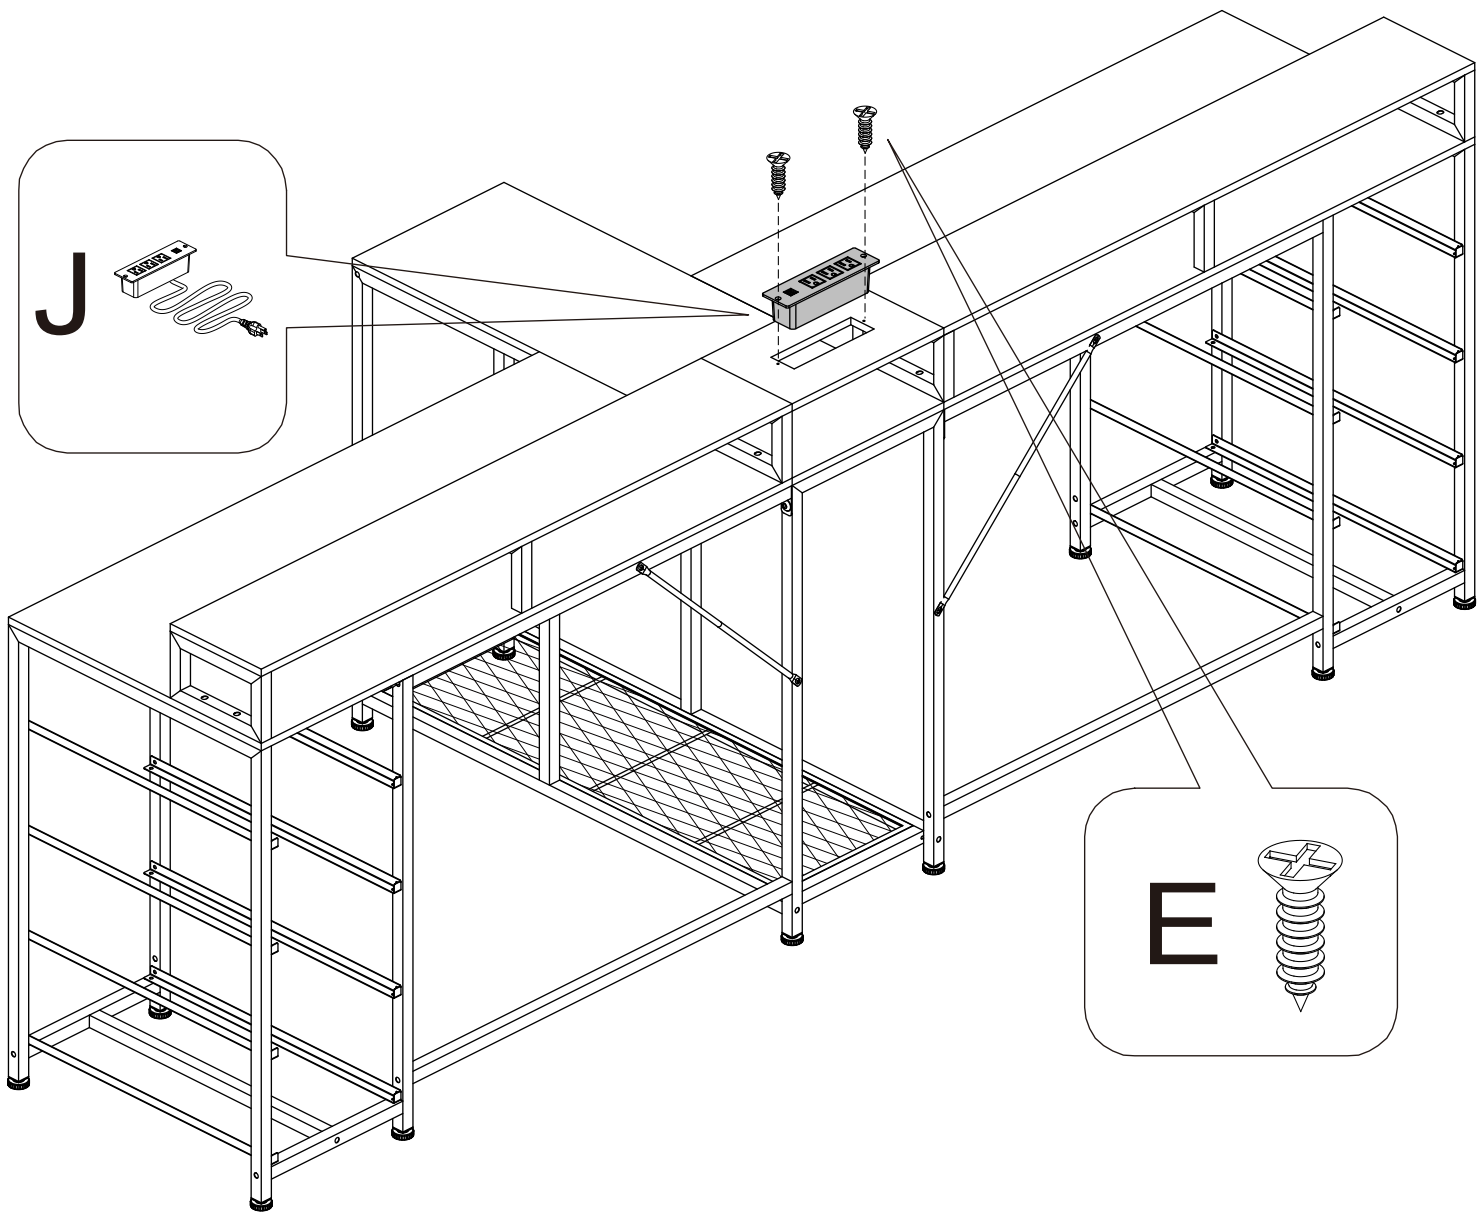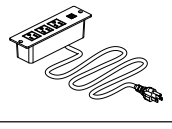
Step 21




E	x2
	
ST4x10MM	
J	x1
	

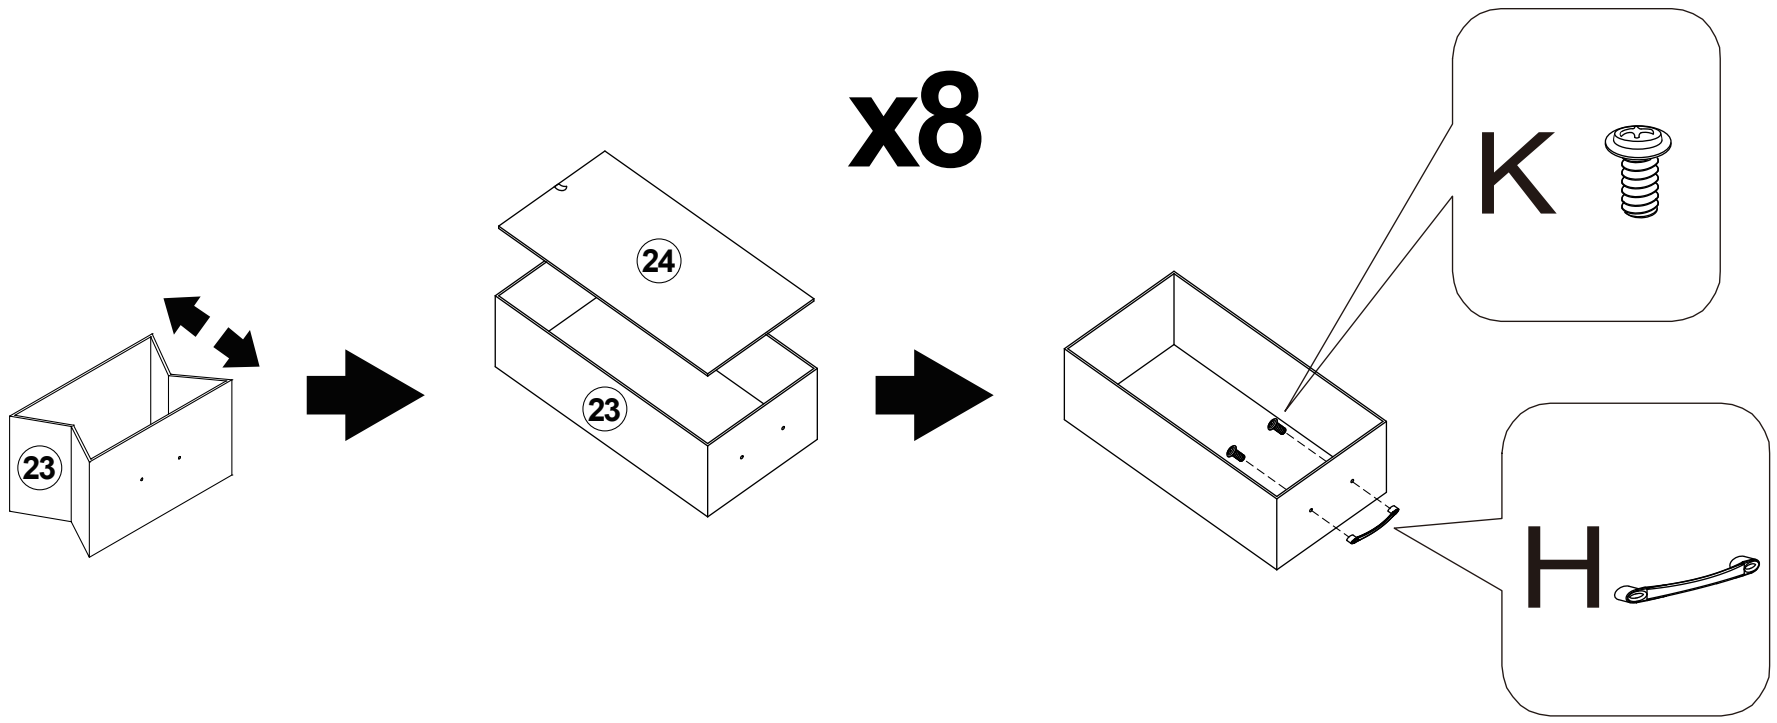Step 22



H	x8	K	x16
			
		M4x6MM	

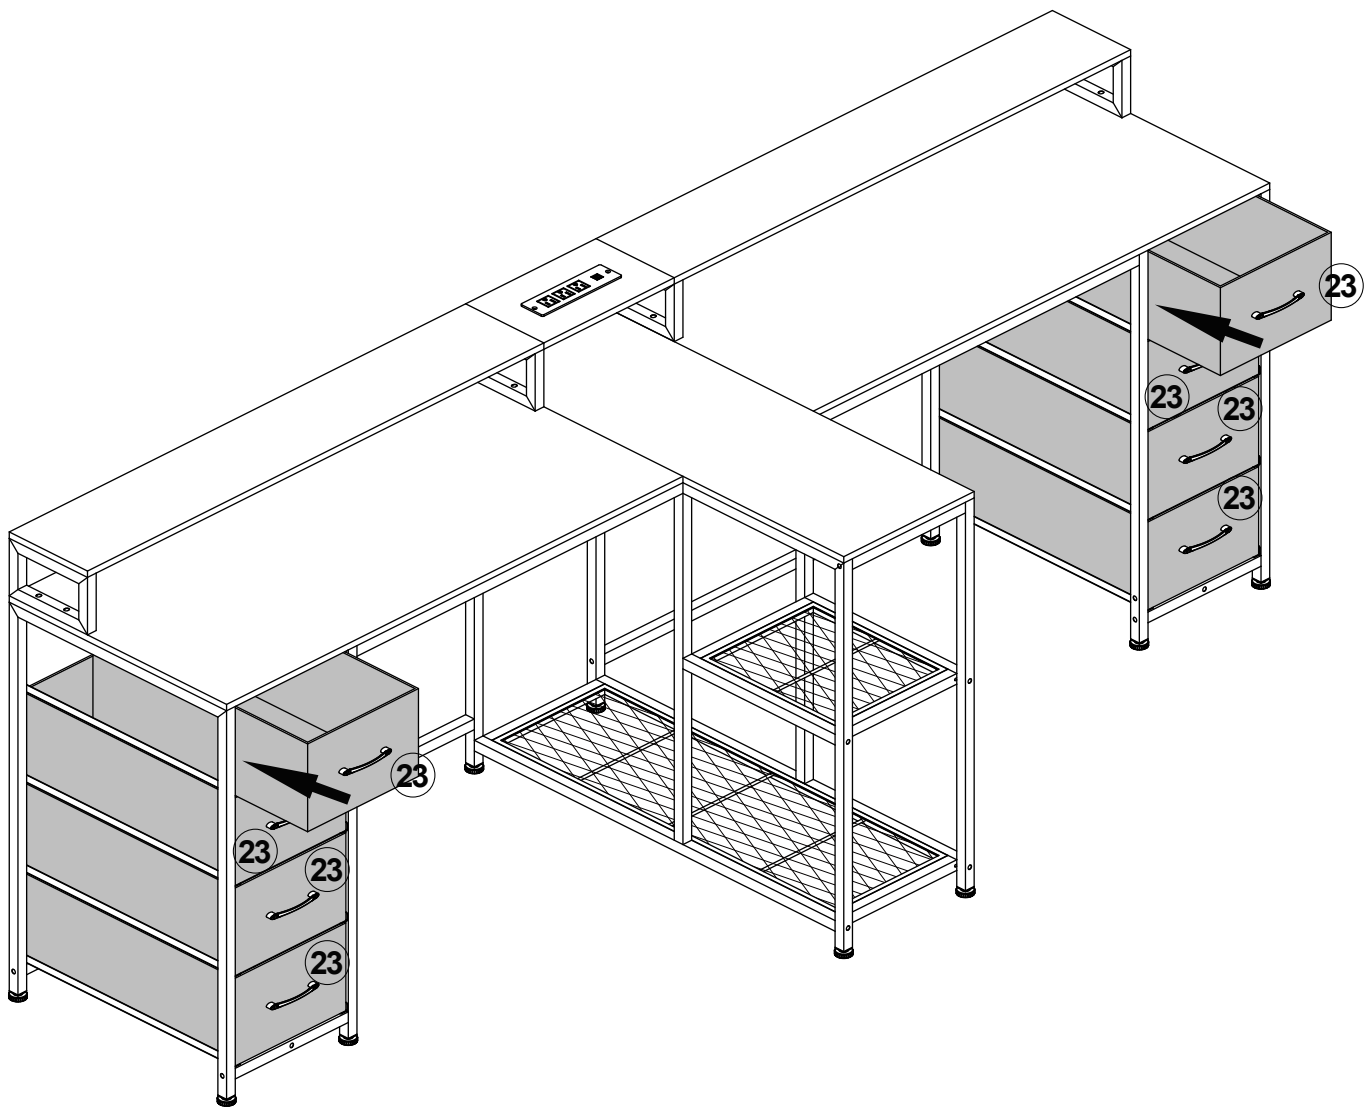Step 23




Customer Service



3-years Warranty

We guarantee your product is free from defects in product material and workmanship for three(3) years starting from the date of purchase during normal use of household conditions.If your appliance fails to operate properly within our warranty period,We will send the corresponding accessories,Replacement is free and all shipping costs are covered.

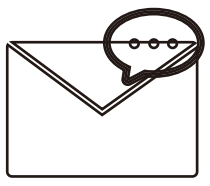Quick Response within 24 Hours



If you are still unable to resolve the issue you are experiencing, please contact us immediately via our support email. It doesn't matter if the product has been installed or not, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem to us is to attach a video, which illustrates your product issues.

Problems You May Encounter

PART	PROBLEM	SOLUTION
whole Product	Parts are missing, defective or having wrong parts in package.	You can contact us and we will get back to you within 24 hours
	Having issue(s) while reading the instruction or completing the assembly.	Feel free to contact us and we will get back to you within 24 hours.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it.We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Table Surface	Board Surface is broken, scratched or lack of somescrew holes.	Feel free to contact us and we will get back to you within 24 hours.
	The screw holes on the wooden board and other wooden boards are not aligned.	1.Please tighten the screws on the board by 70%, do not tighten completely. 2. Adjust the wooden board and board.Until the holes are arranged neatly, then tighten all screws
	Desktop misalignment and unevenness	1.Please tighten the screws connecting the table board to the elevator by 70%, do not tighten them completely. 2.Adjust to a flat and aligned desktop, then tighten the screws. 3.If your problem still can’t be solved, please feel free to contact us.
Metal acce--ssories	Metal accessories are damaged, rusted, bent, and broken.	Feel free to contact us and we will get back to you within 24 hours.
	The table is unstable after being assembled.	1.Check if the screws are tightened. 2.Read throughout the manual, check are there any parts installed incorrectly or missing assembled. 3.If your problem still can’t be solved, please feel free to contact us.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it.We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.