ASSEMBLY INSTRUCTIONS

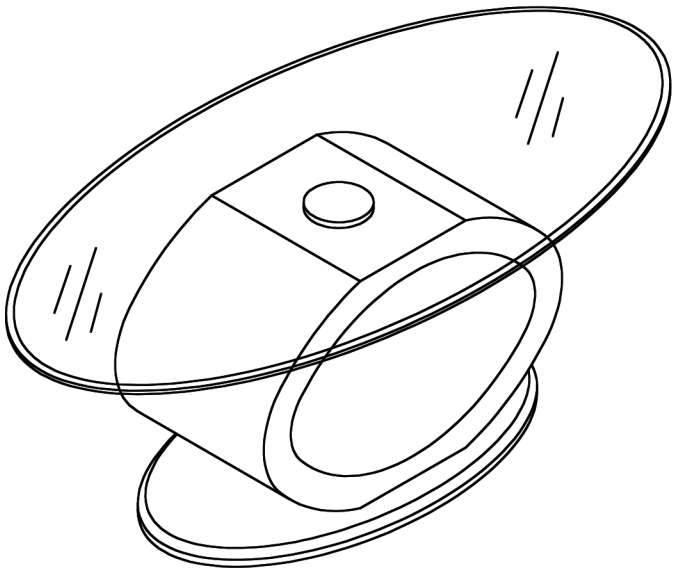

TOOLS REQUIRED

Allen Wrench

(Included)

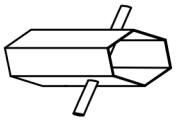

Socket Wrench

(Included)

2 - People Recommended

ASSEMBLY RATING



EASY ——→ DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

CHECK BEFORE STARTING

☐ **Are you missing anything?**

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.

☐ **Check out our Quick Tips!**

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐ **Prep Time!**

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

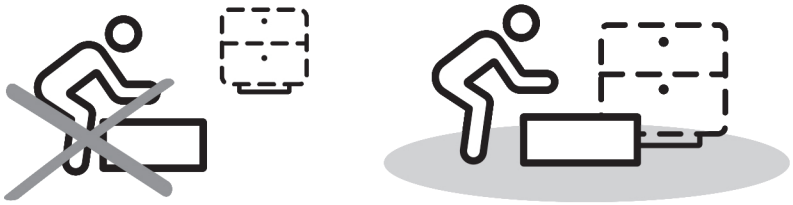

Suitable Location

Assembling near the area of the intended location is highly recommended.

Sufficient Space

Make sure you have enough space to move around during the assembly.

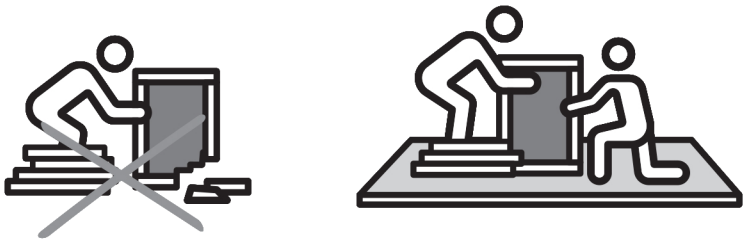

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

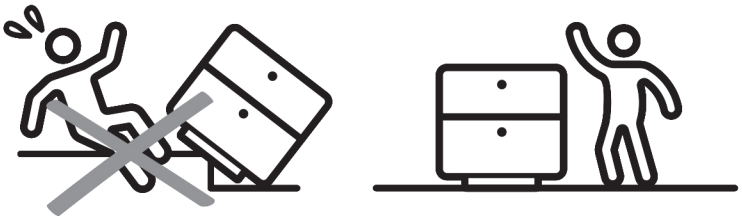

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE

FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

Position each part correctly and insert screws or bolts into their respective holes.

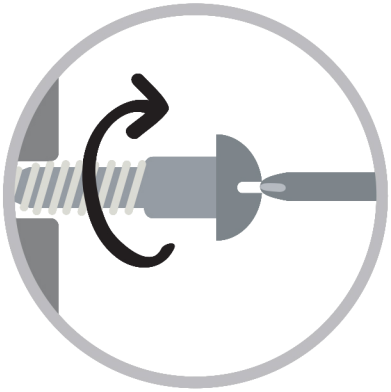

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.

Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

Save the instructions and store any supplied tools for later maintenance.

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

COFFEE TABEL

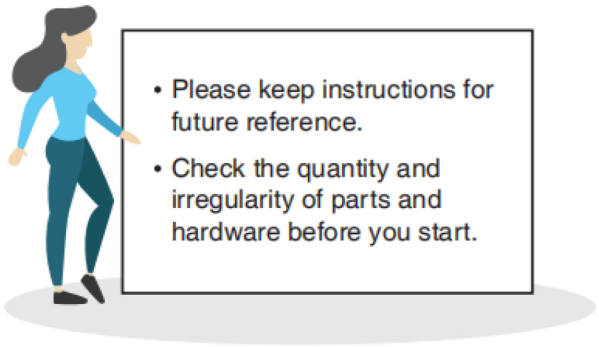

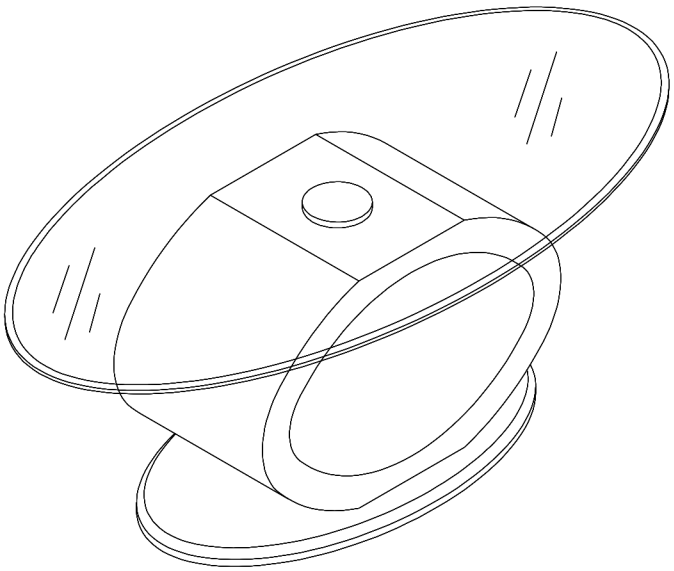

PARTS

#1 1pc

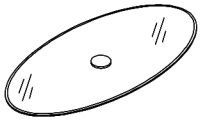

Glass Top

#2 1pc

Base

#3 1pc

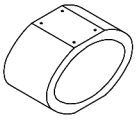

Pedestal

HARDWARE

#A 4pcs

Bolt 1/4" x 1-5/8"

#B 2pcs

Threaded Stud

#C 4pcs

Small Flat Washer

#D 1pc

Allen Wrench M4

#E 6pcs

Adjustable Foot M6x16

#F 1pc

Socket Wrench M8

#G 2pcs

Nut M8

#H 2pcs

Large Flat Washer

#I 2pcs

Cover

Carton	Designation	Part		Hardware
	Glass Top	#1	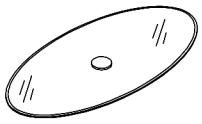	
	Base	#2		
	Pedestal	#3		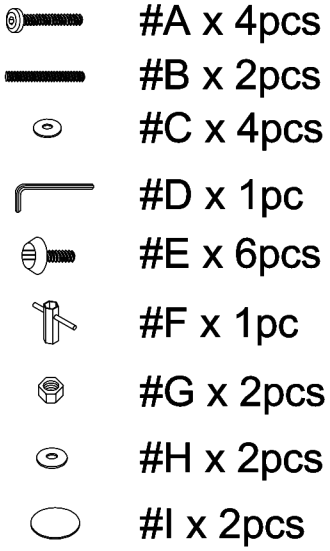

ASSEMBLY INSTRUCTIONS

1

Part (#1) x 1pc
Part (#3) x 1pc
Hardware (#B) x 2pcs
Hardware (#G) x 2pcs
Hardware (#H) x 2pcs

Attach studs (#B) to the top (#1), then align pedestal (#3) to the studs (#B) on the top (#1). Secure by using hex nuts (#G) with washers (#H).

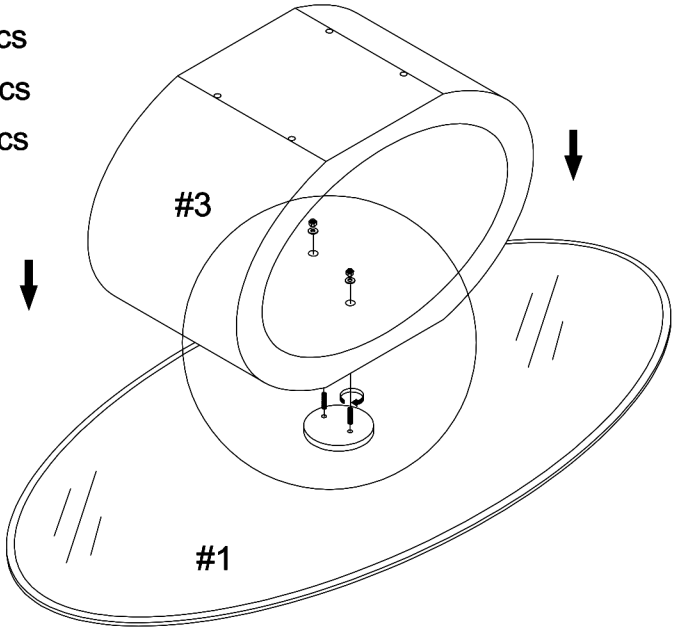

1-1

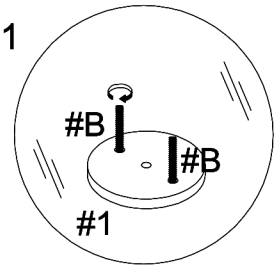

1-2

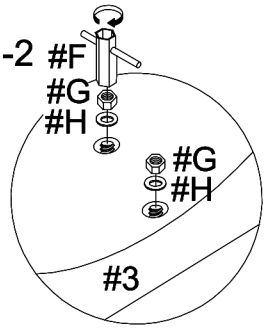

2

Part (#2) x 1pc
Hardware (#A) x 4pcs
Hardware (#C) x 4pcs
Hardware (#E) x 6pcs

Align base (#2) to the pedestal, then secure by using bolts (#A) with washers (#C). Attach adjustable feet (#E) to the base (#2).

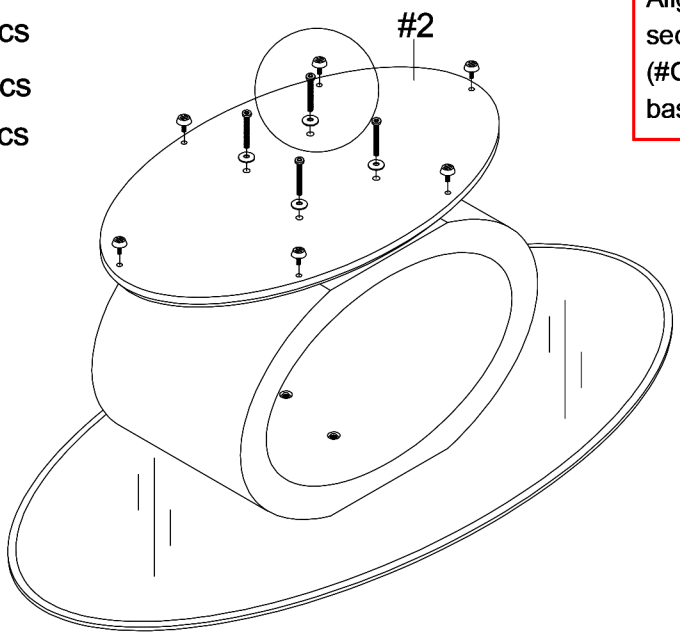

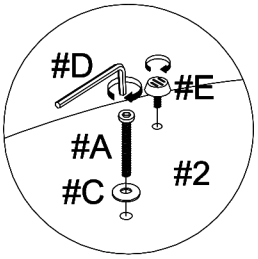

ASSEMBLY INSTRUCTIONS

3

Hardware ⓘ x 2pcs

Place covers (#I).

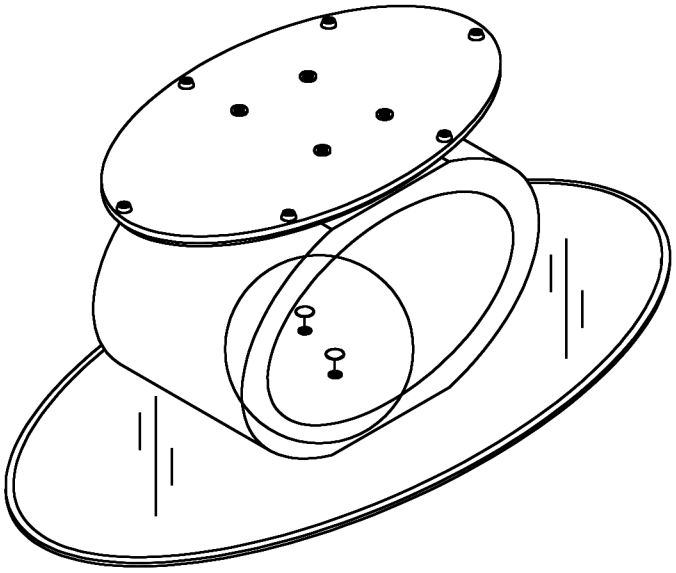

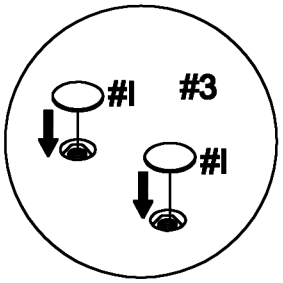

4

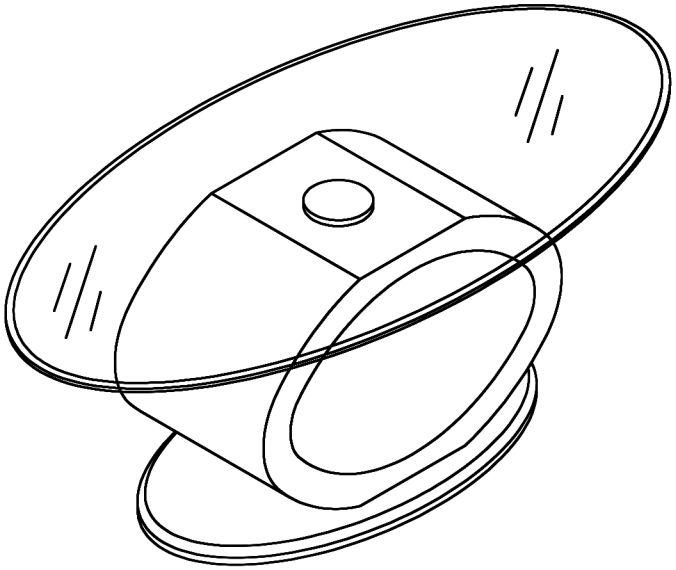

ASSEMBLY COMPLETED

Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.