

INSTALLATION
Product Manual

Version: 210266-01-24A-PM

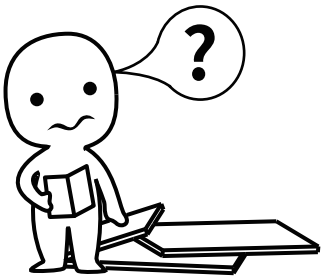


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

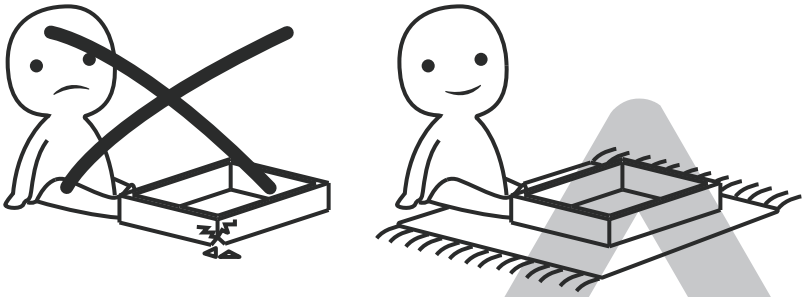


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

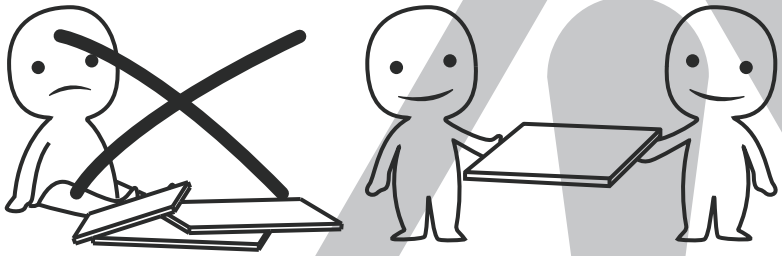

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

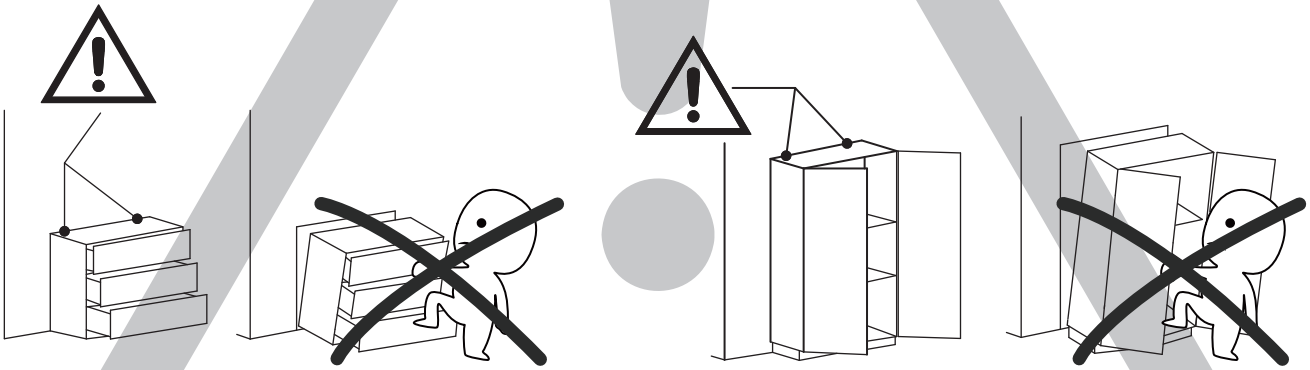

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

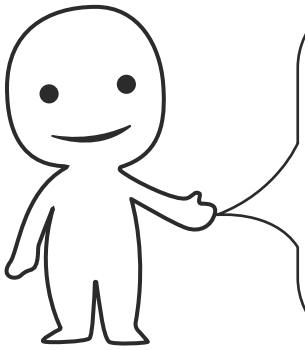




Please prepare the following tools








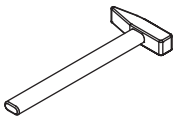







When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

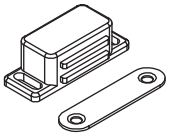
A x 82	B x 82	C x 41	D x 2
 CRB1295A	 CRA0640A	 CRC0540A	

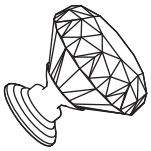
E x 7	F x 7	G x 60	H x 4
	 CRE0416A	 CRD0312A	 CRD0314A

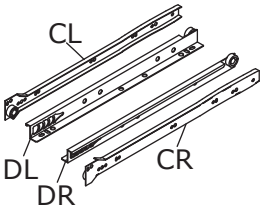
J x 4	K x 8	L x 7	M x 8
 ∅5 x 16 mm		 WX0814A	


N x 4	Power plug x 1
 M6 x 25 mm	

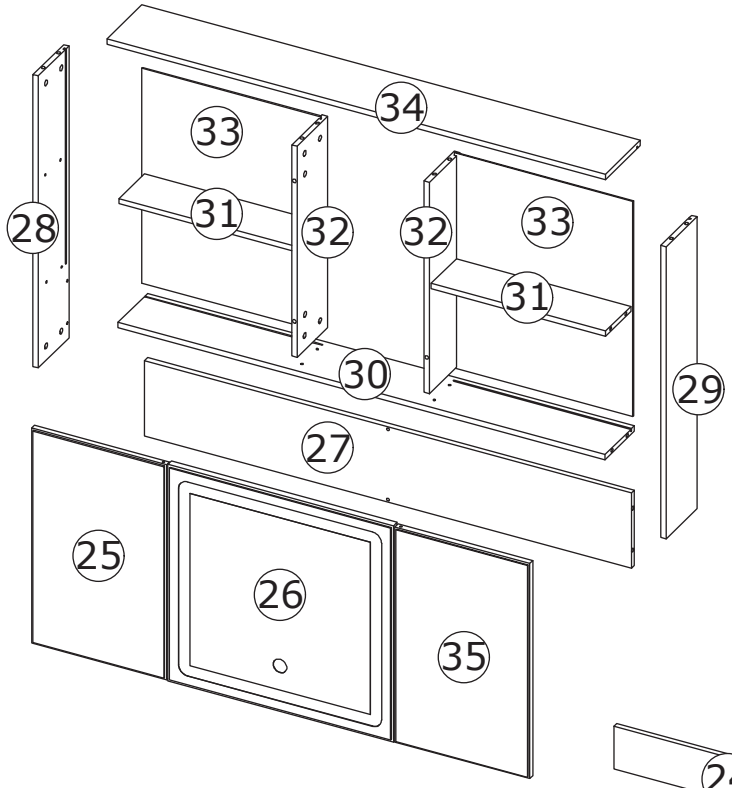


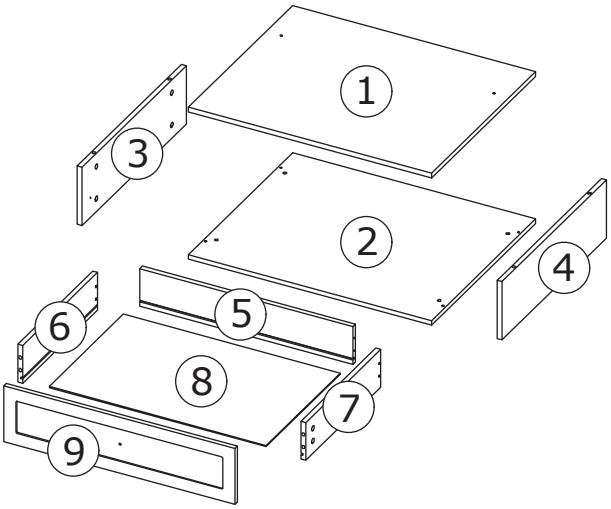

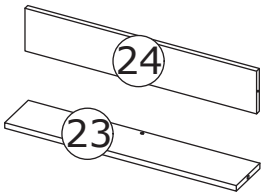

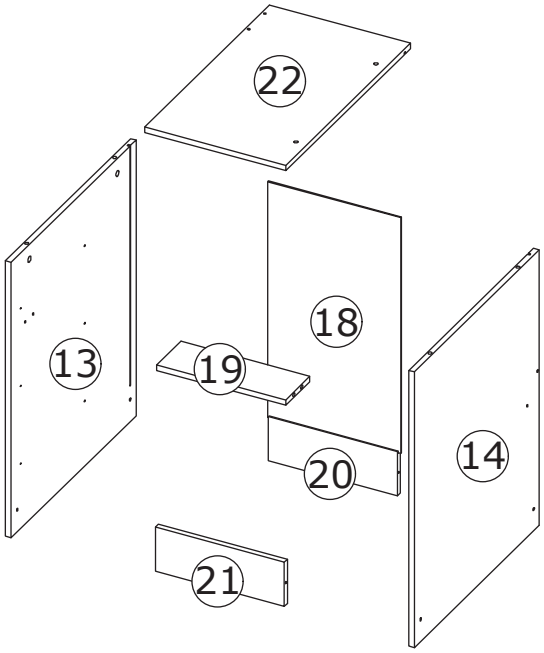

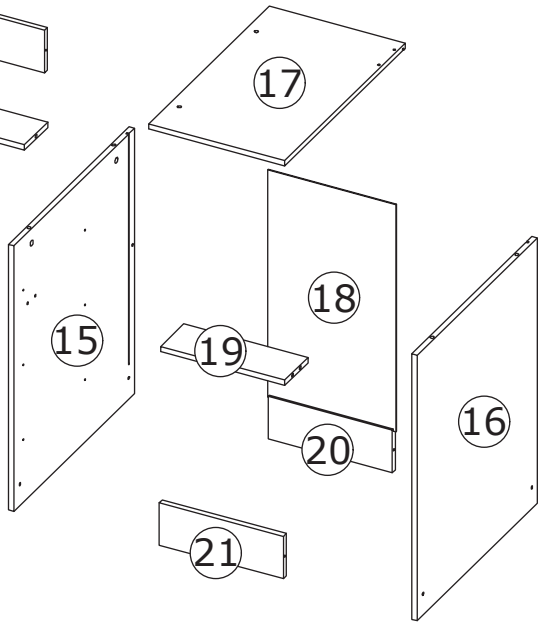

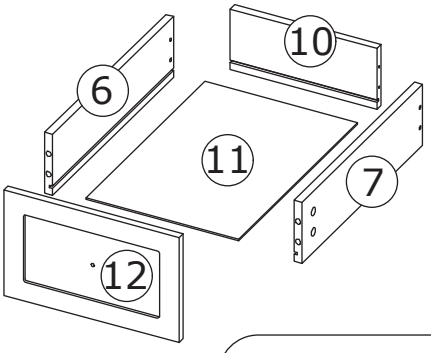

x6


⚠WARNING



Children have died from furniture tipover.To reduce the risk of furniture tipover:



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


This is a permanent label.
Do not remove!

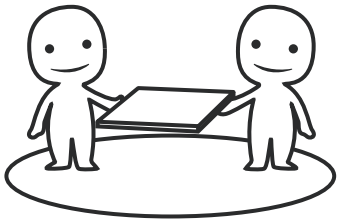


ASSEMBLED BY 2 ADULTS


1


B x 8	K x 8	
 CRA0640A		

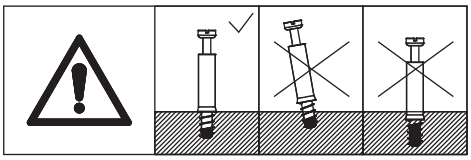



Screw eccentric rod(B) into panel 13, 14, 15 and 16 as shown.
Knock foot peg(K) into panel 13, 14, 15 and 16 as shown.

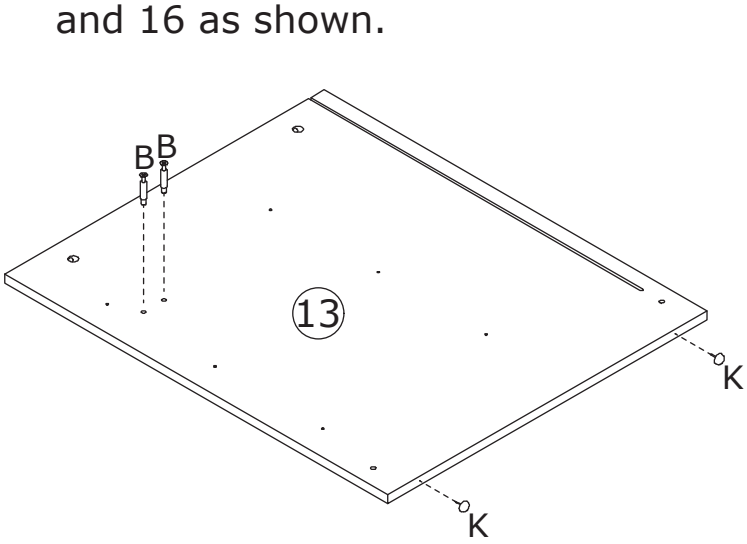


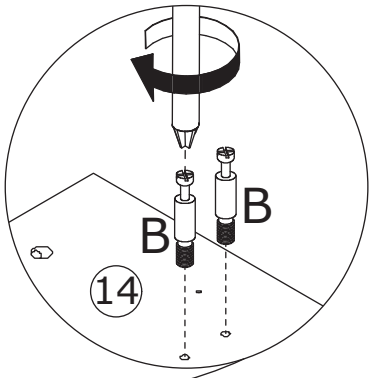



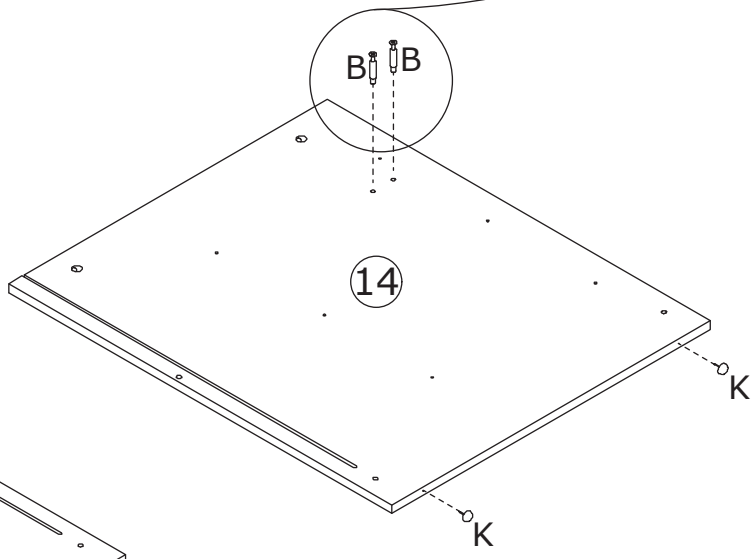


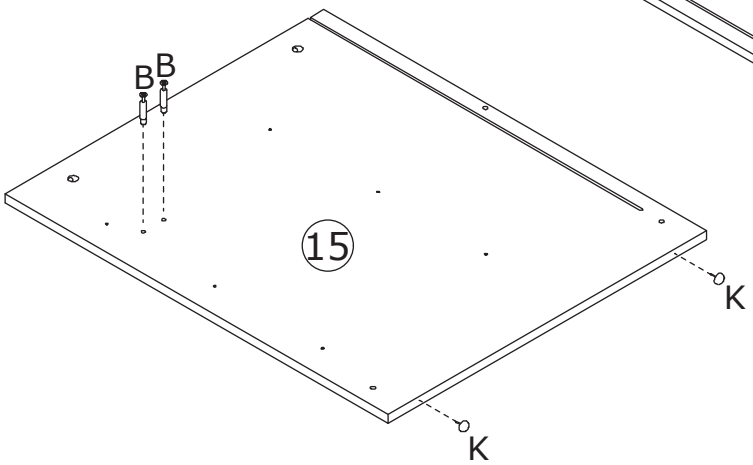

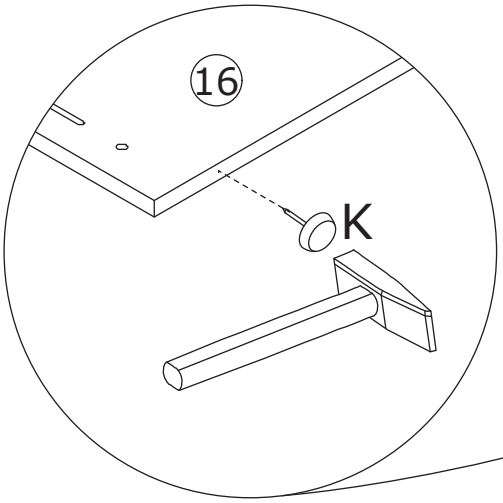

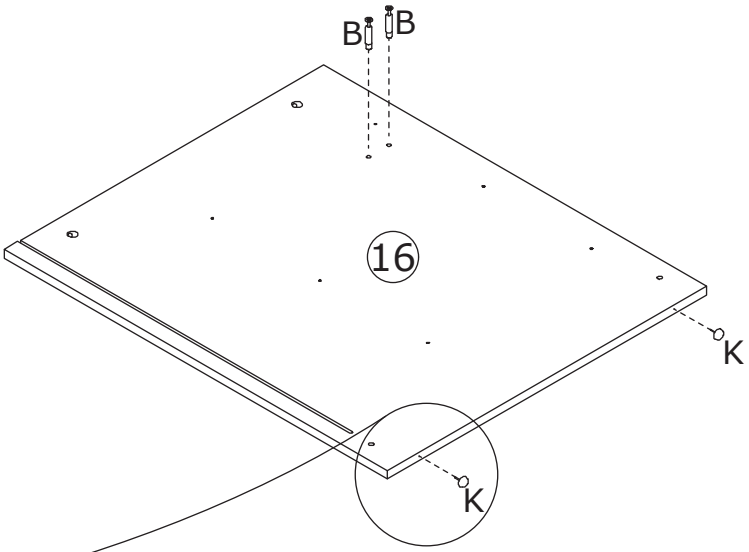


2

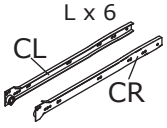G x 24	L x 6	
		
CRD0312A	WX0814A	








Fix rail(CL) and (CR) to panel 13, 15 and 14, 16 respectively with screw(G) as shown.

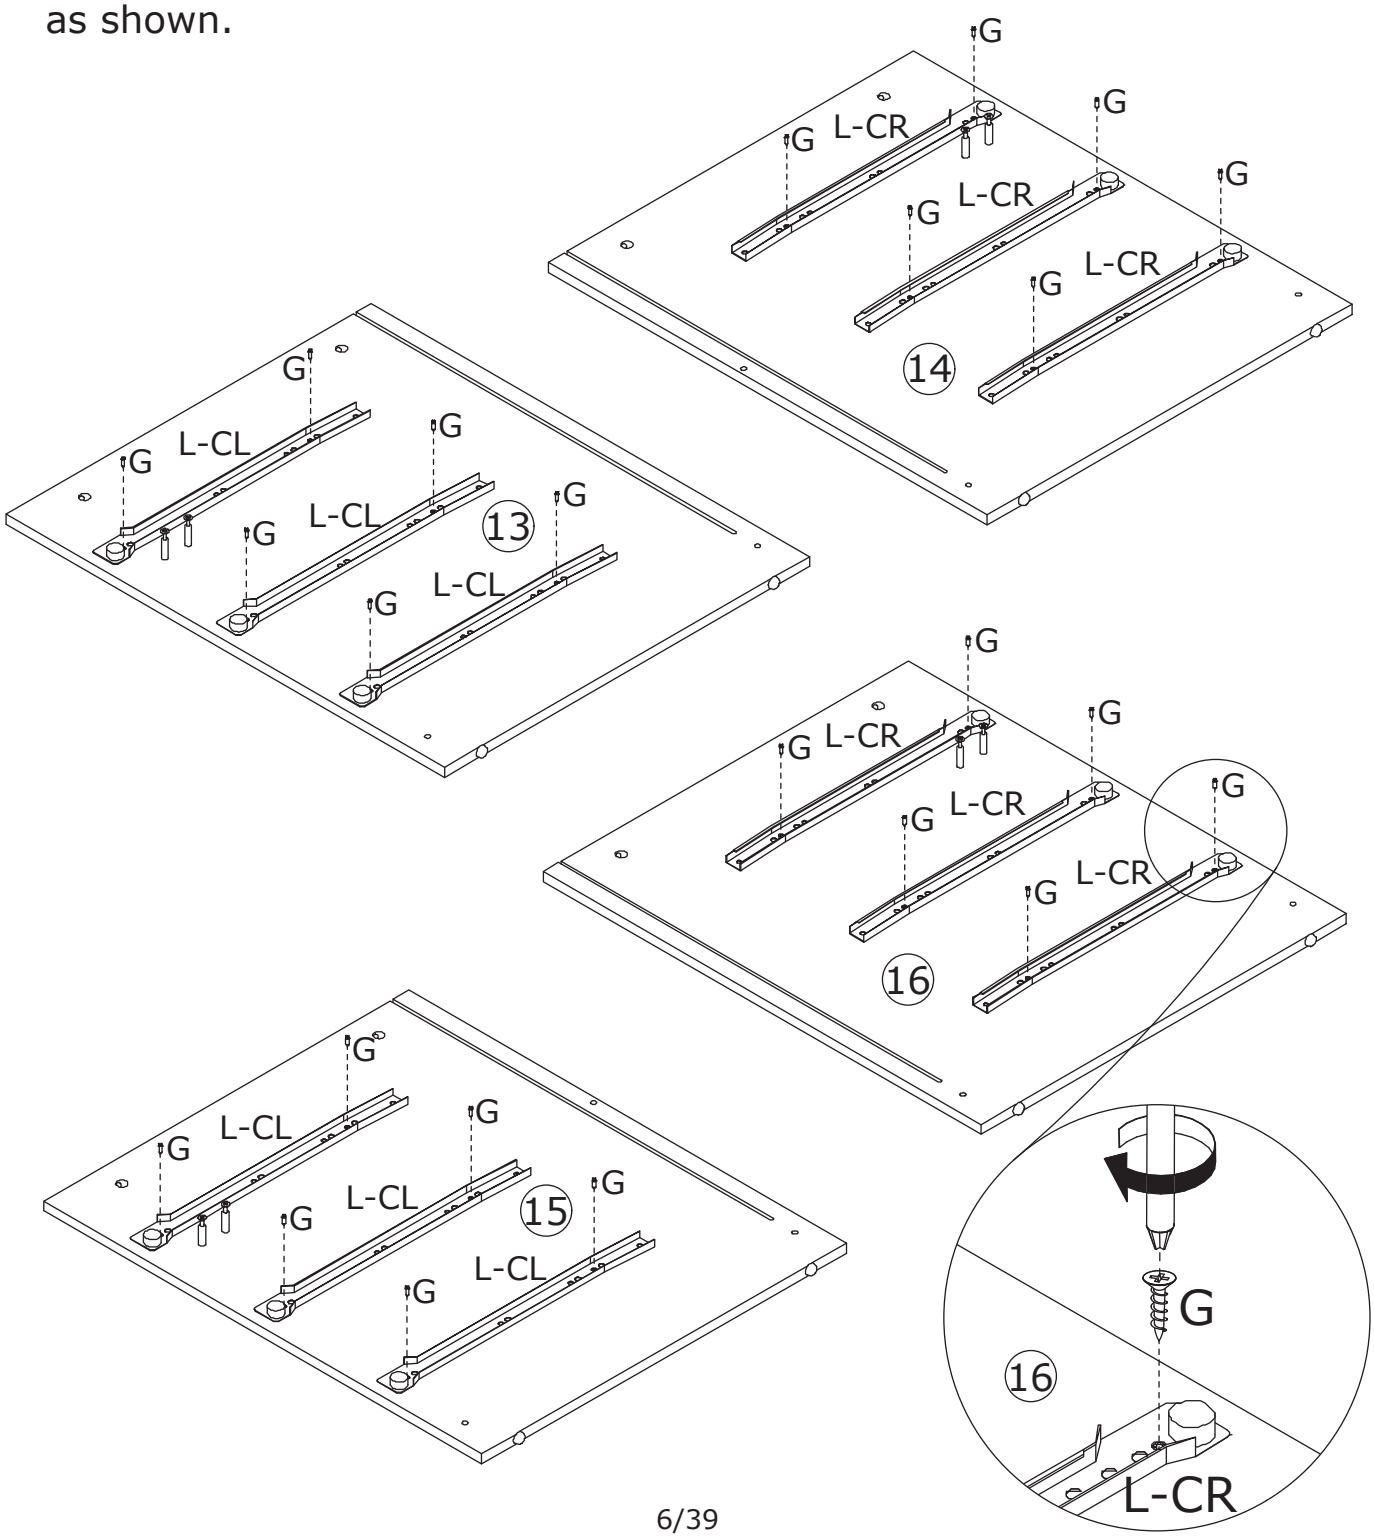


3



A x 4	C x 4	
		
CRB1295A	CRC0540A	

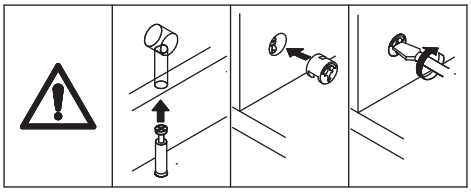


Connect panel 19 to panel 13 and 15, add cam lock(A) into panel 19 and turn clockwise to tighten as shown.
Fix panel 20 and 21 to panel 13 and 15 with screw(C) as shown.

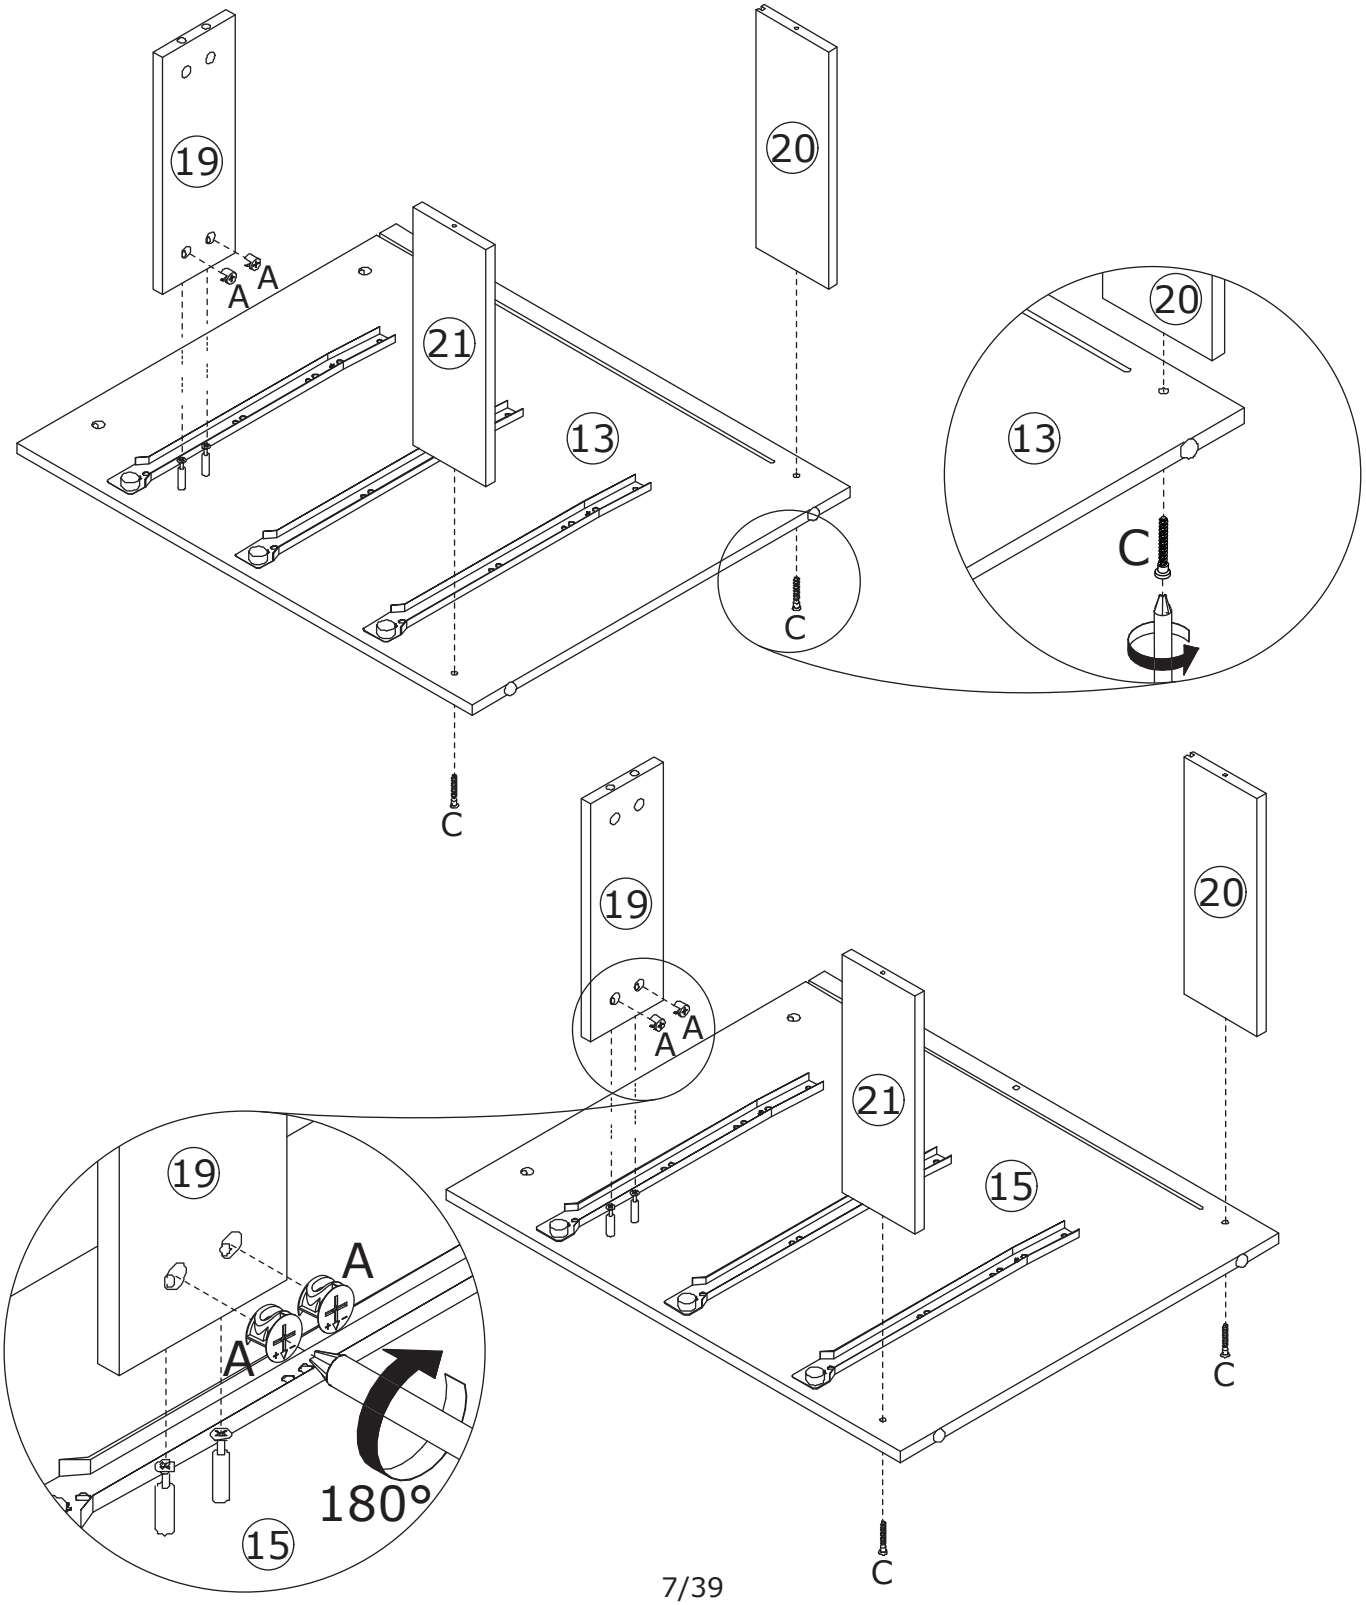



4

A x 4	C x 4	
		
CRB1295A	CRC0540A	

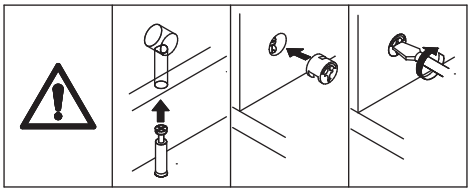


Connect panel 14 and 16 to panel 19, add cam lock(A) into panel 19 and turn clockwise to tighten as shown.
Fix panel 14 and 16 to panel 20 and 21 with screw(C) as shown.

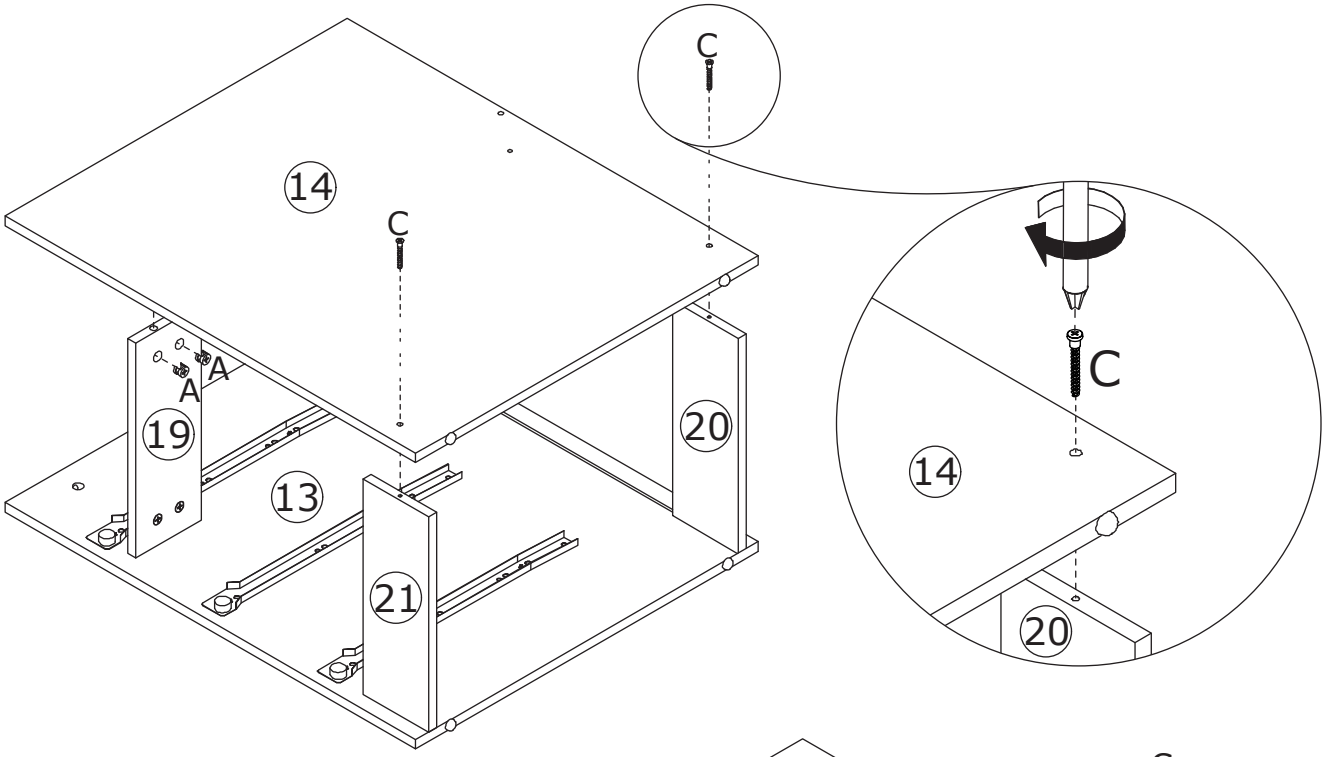


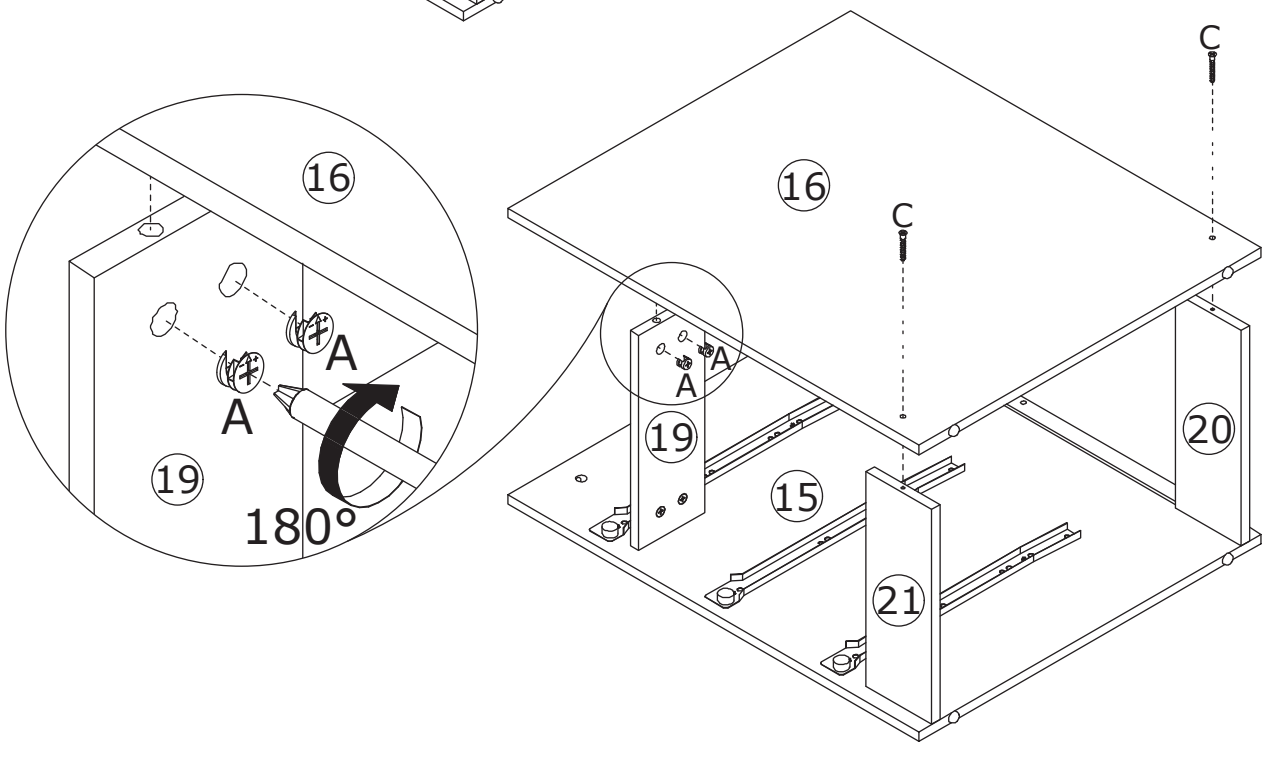

5


Insert back panel 18 along available grooves as shown.

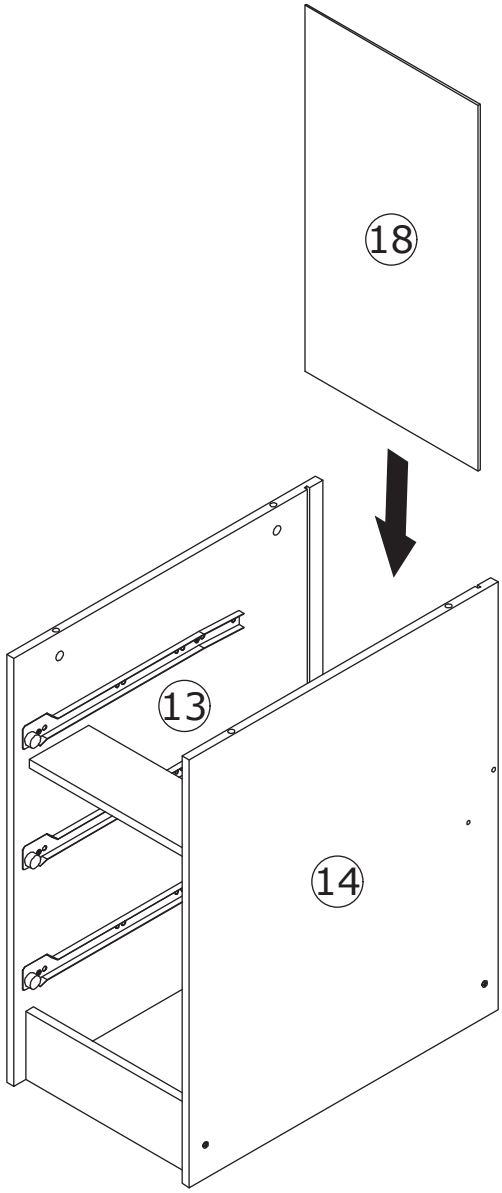

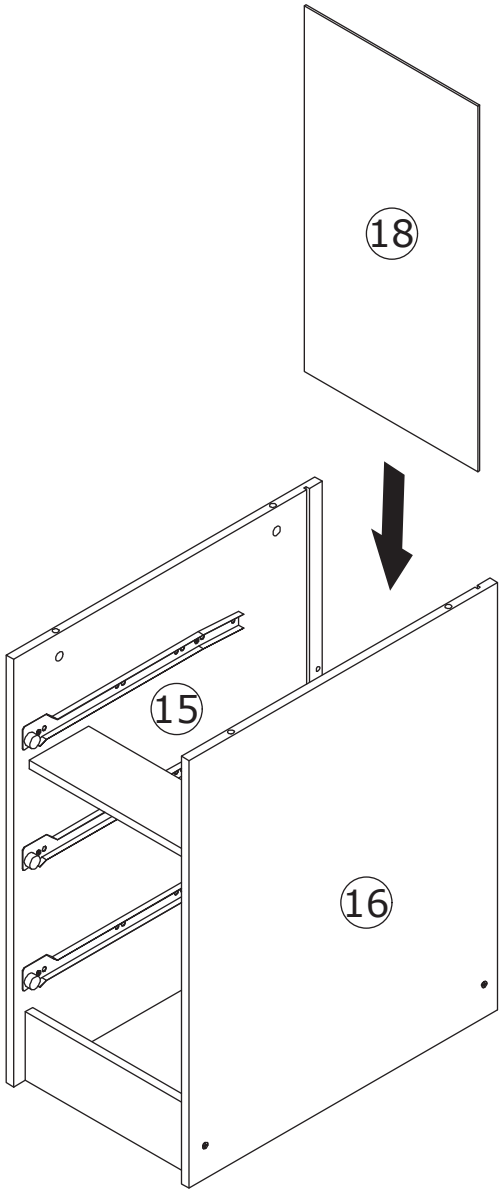



6

B x 8




CRA0640A



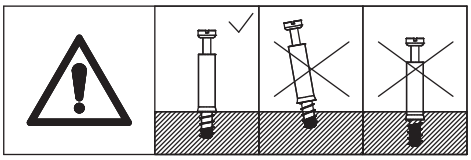

Screw eccentric rod(B) into panel 17 and 22 as shown.

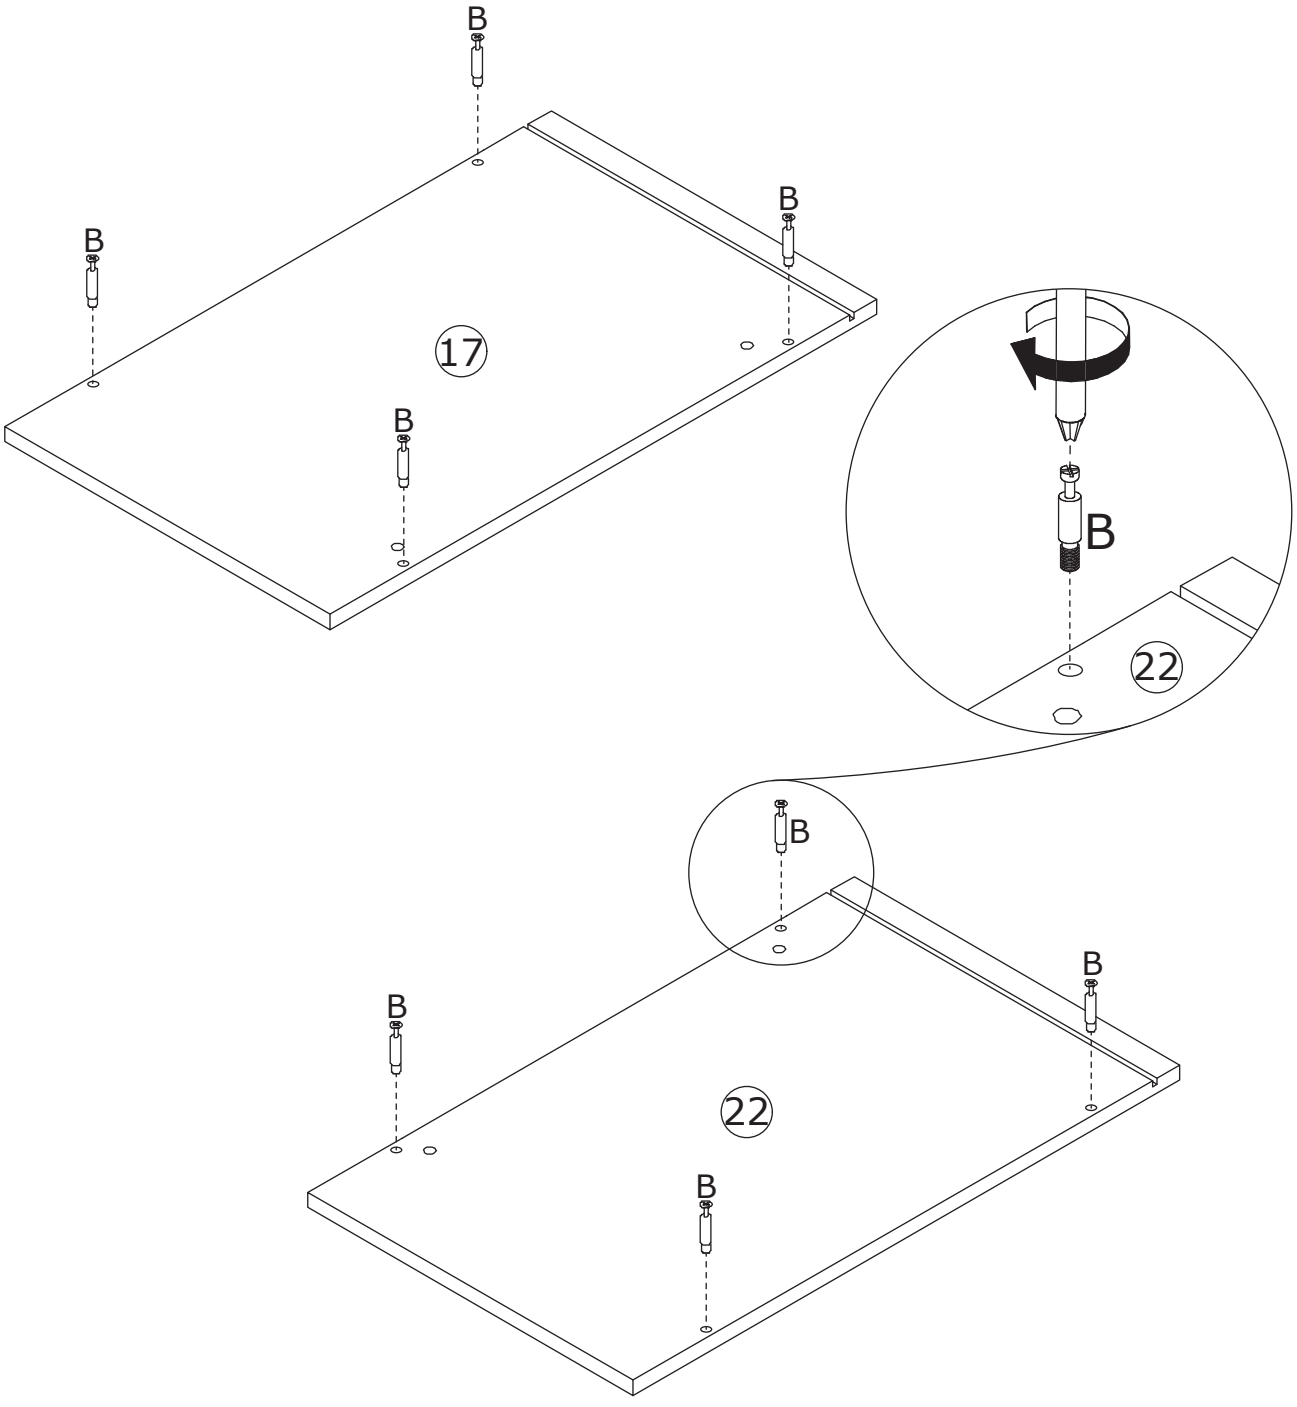



7


A x 8



CRB1295A




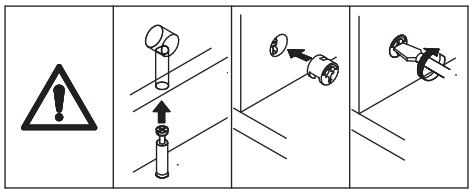

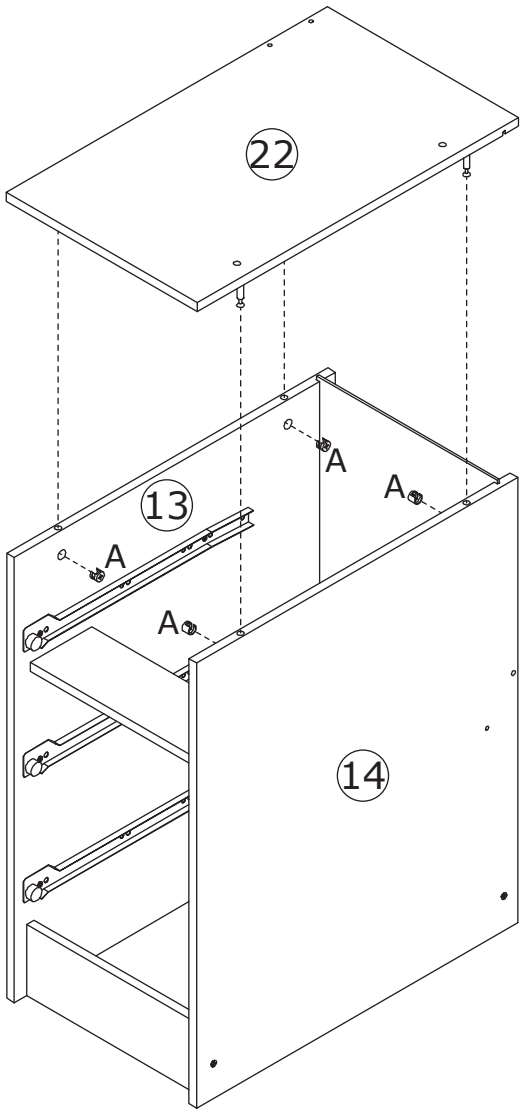


Attach panel 22 to panel 13 and 14,
add cam lock(A) into panel 13,14
and turn clockwise to tighten as shown.

Attach panel 17 to panel 15 and 16,
add cam lock(A) into panel 15,16
and turn clockwise to tighten as shown.

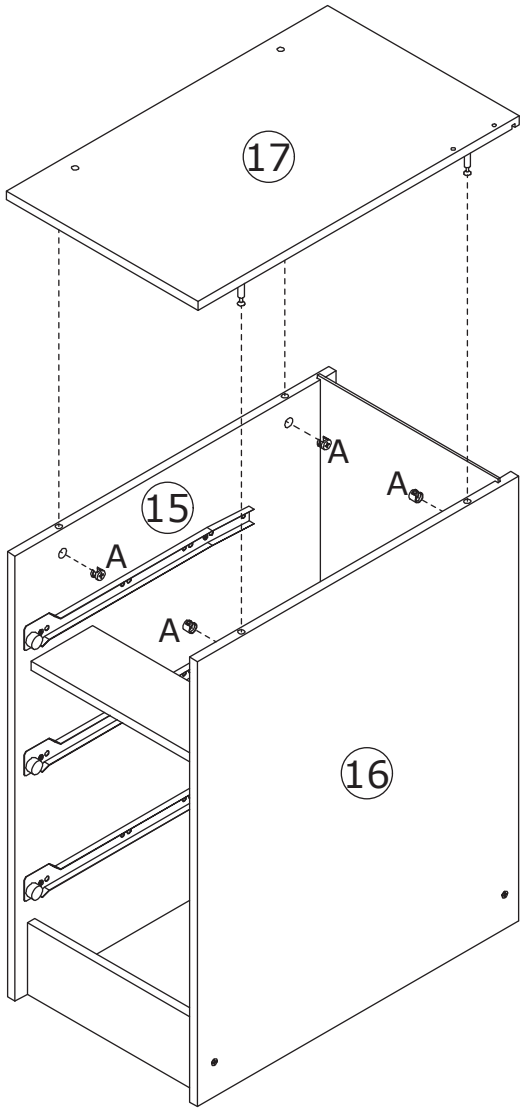



8


B x 6



CRA0640A



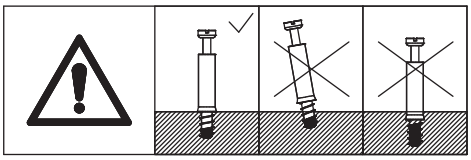


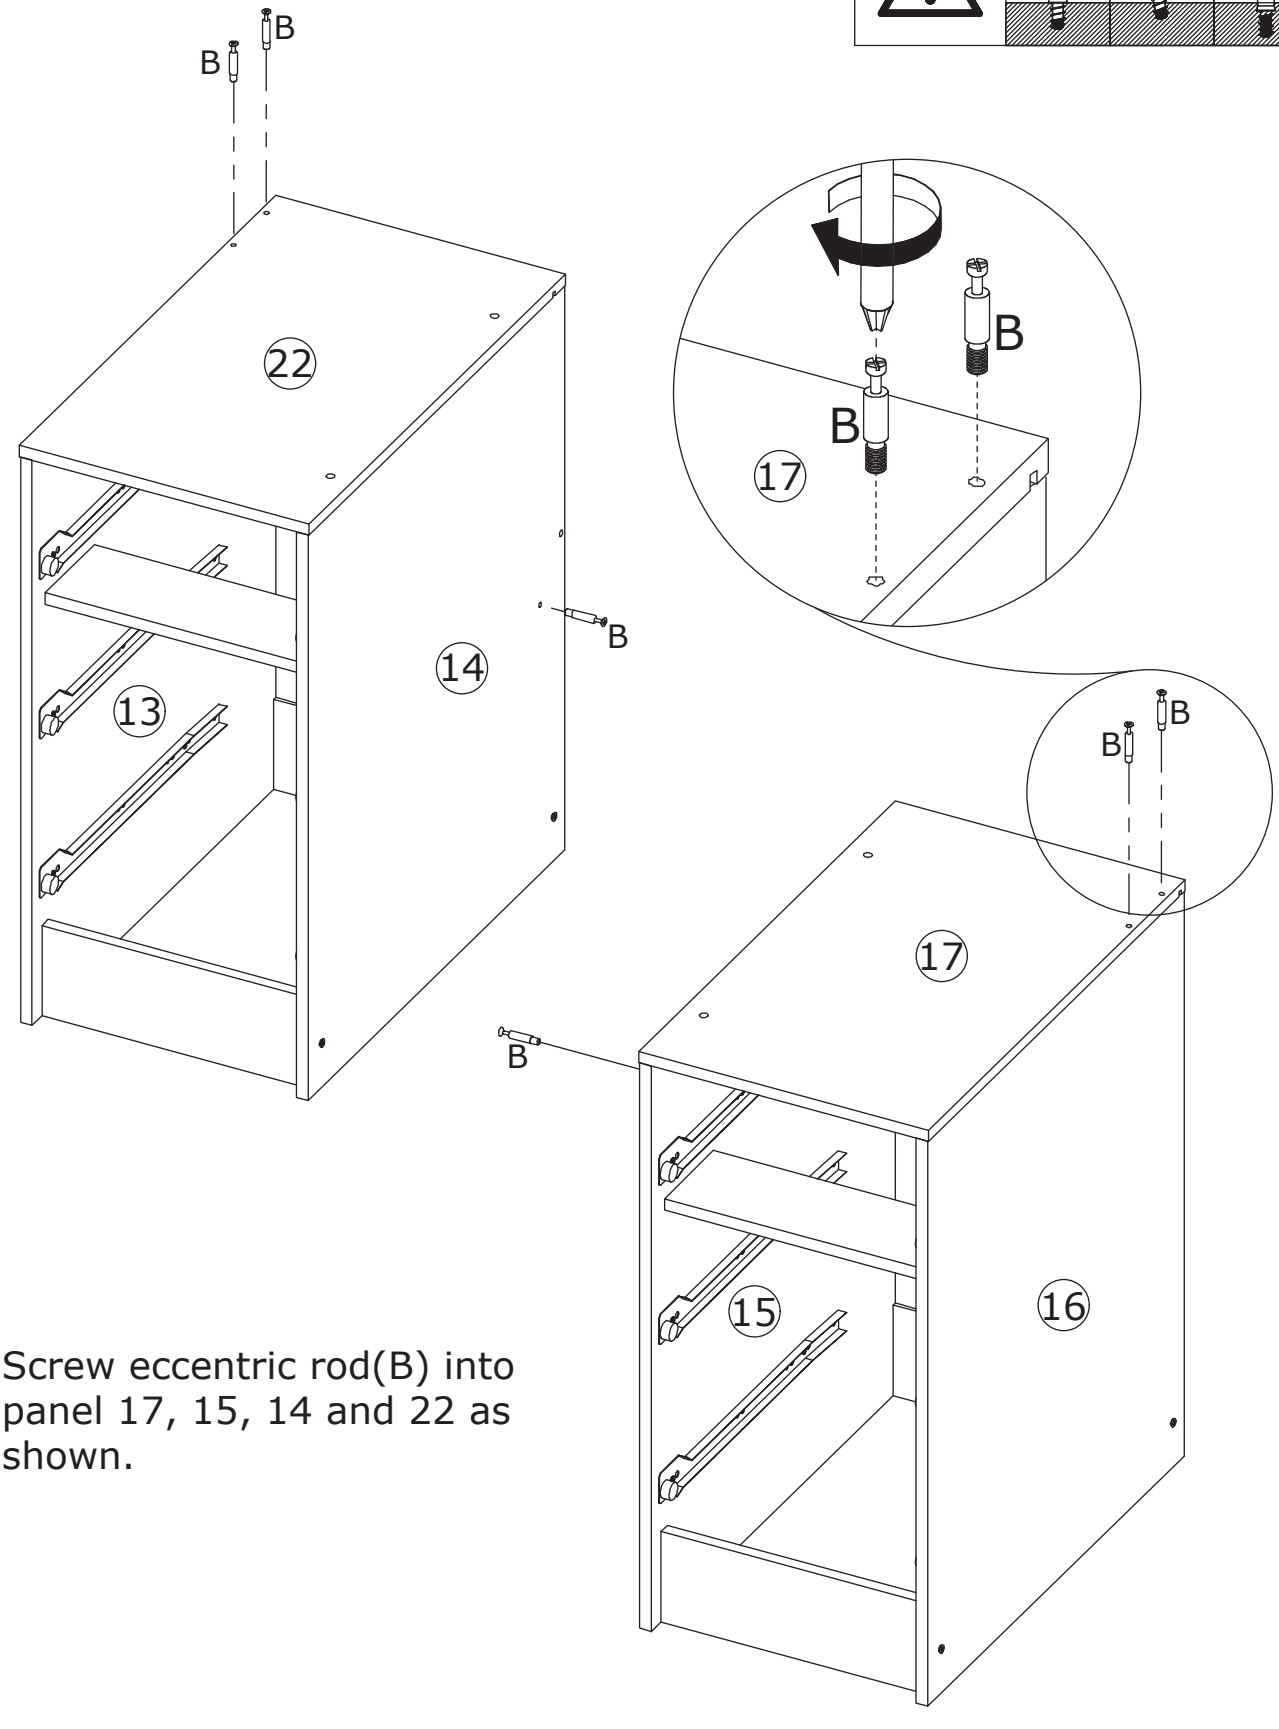


Screw eccentric rod(B) into panel 17, 15, 14 and 22 as shown.

9


C x 1





CRC0540A




Fix panel 24 to panel 23 with screw(C) as shown.

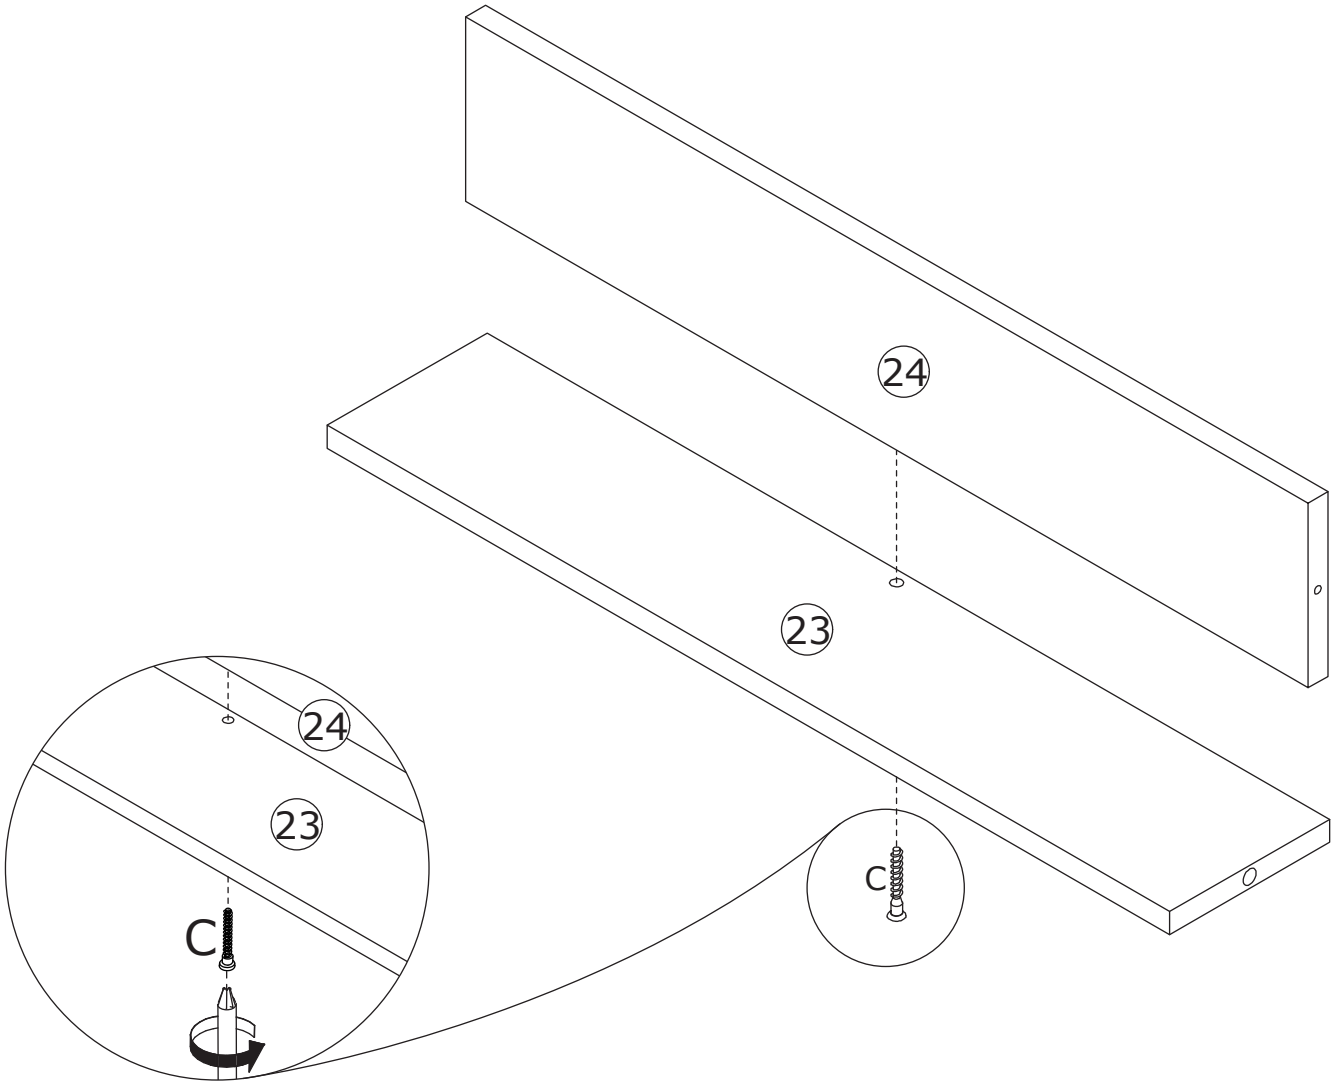


10

A x 2	C x 2	
		
CRB1295A	CRC0540A	

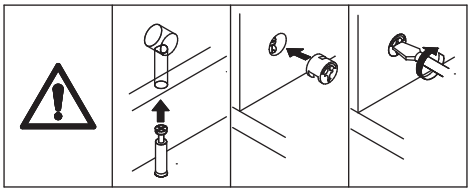


Attach panel 23 to panel 15 and 14, add cam lock(A) into panel 23 and turn clockwise to tighten as shown.
Fix panel 24 to panel 14 and 15 with screw(C) as shown.

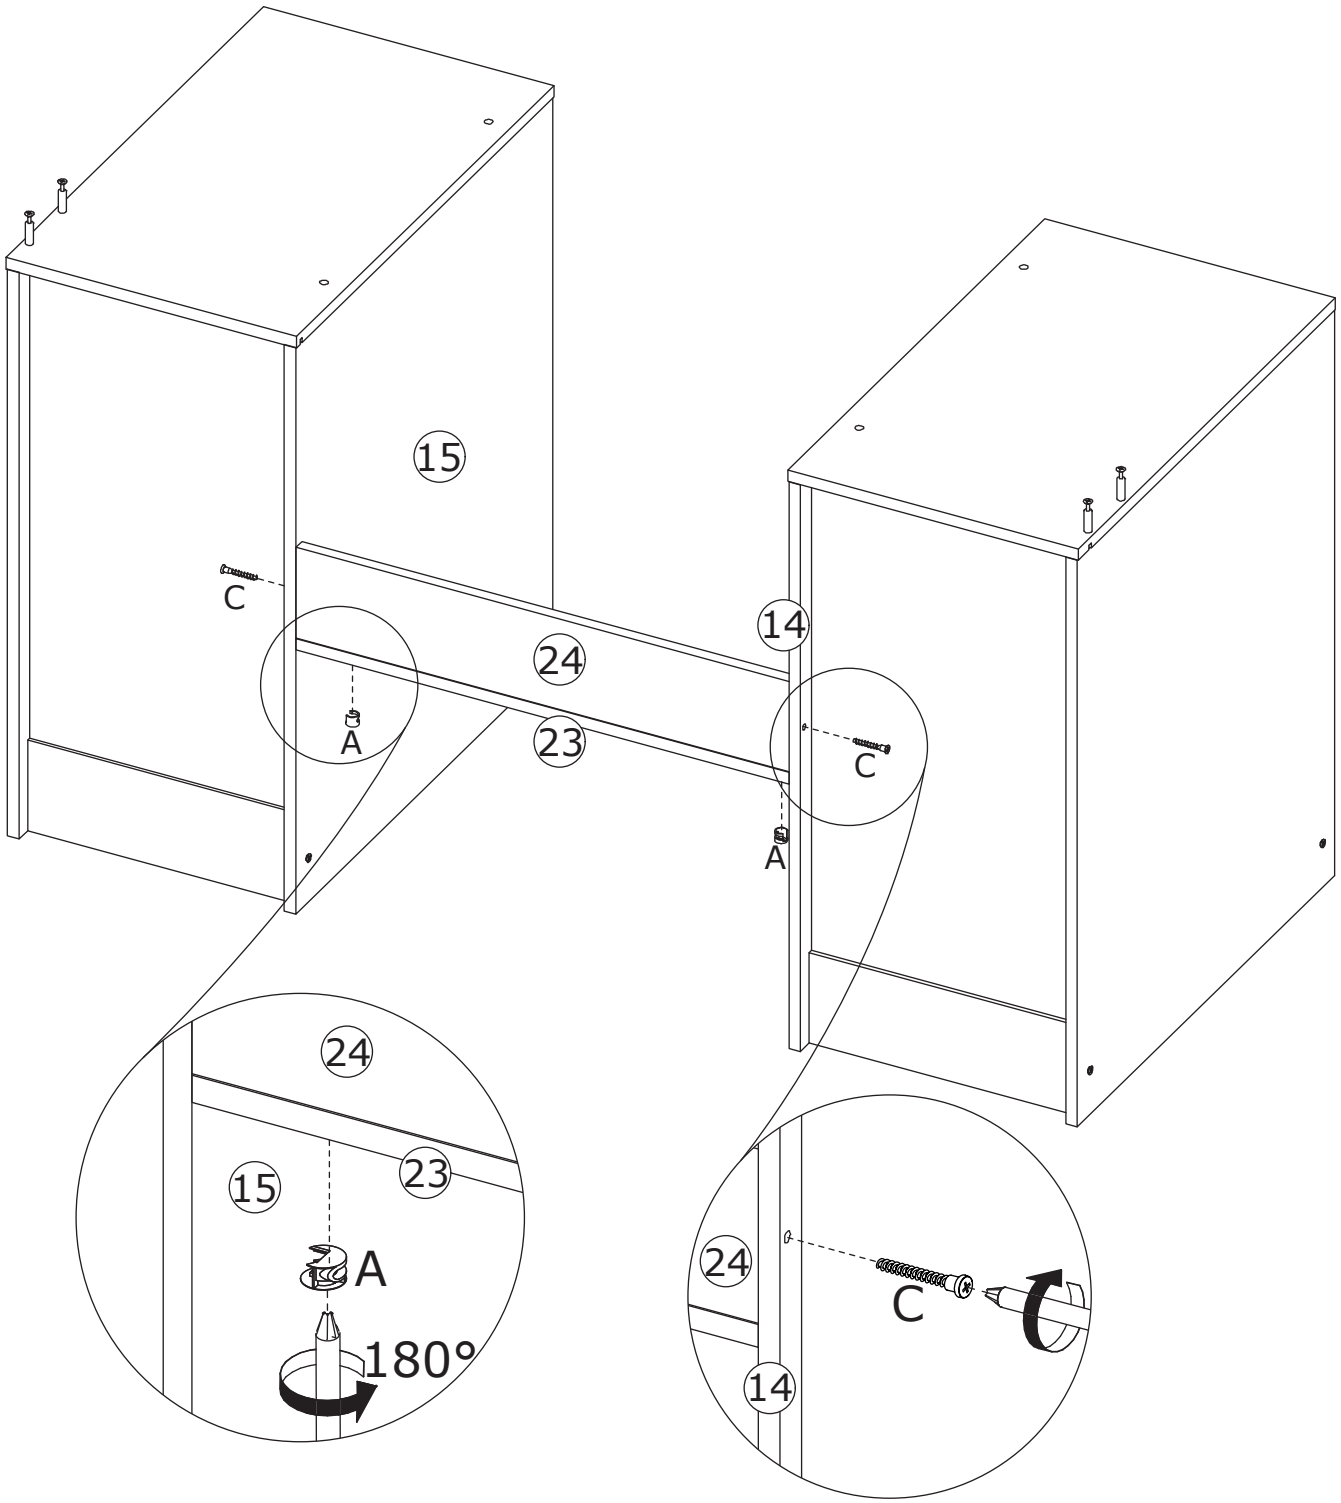



11


B x 4



CRA0640A



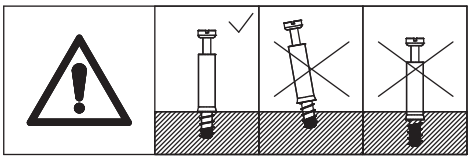


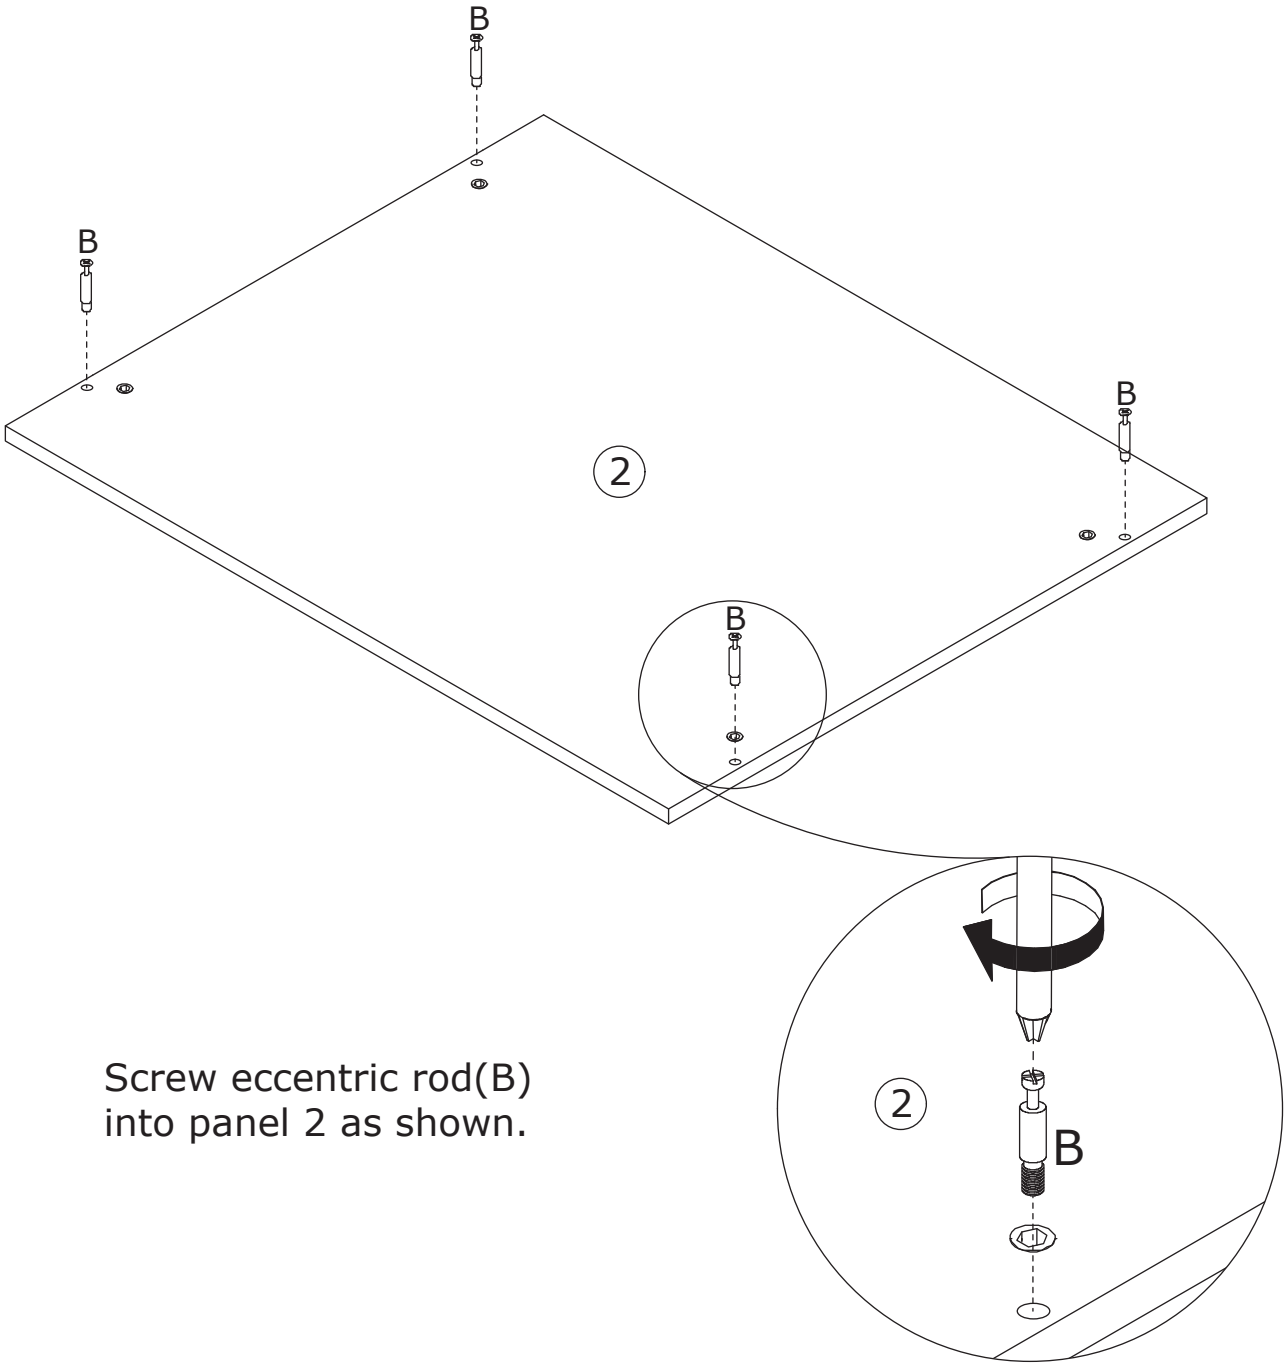


Screw eccentric rod(B)
into panel 2 as shown.

12


N x 4






M6 x 25 mm



Fix panel 2 to panel 17 and 22 with screw(N) as shown.

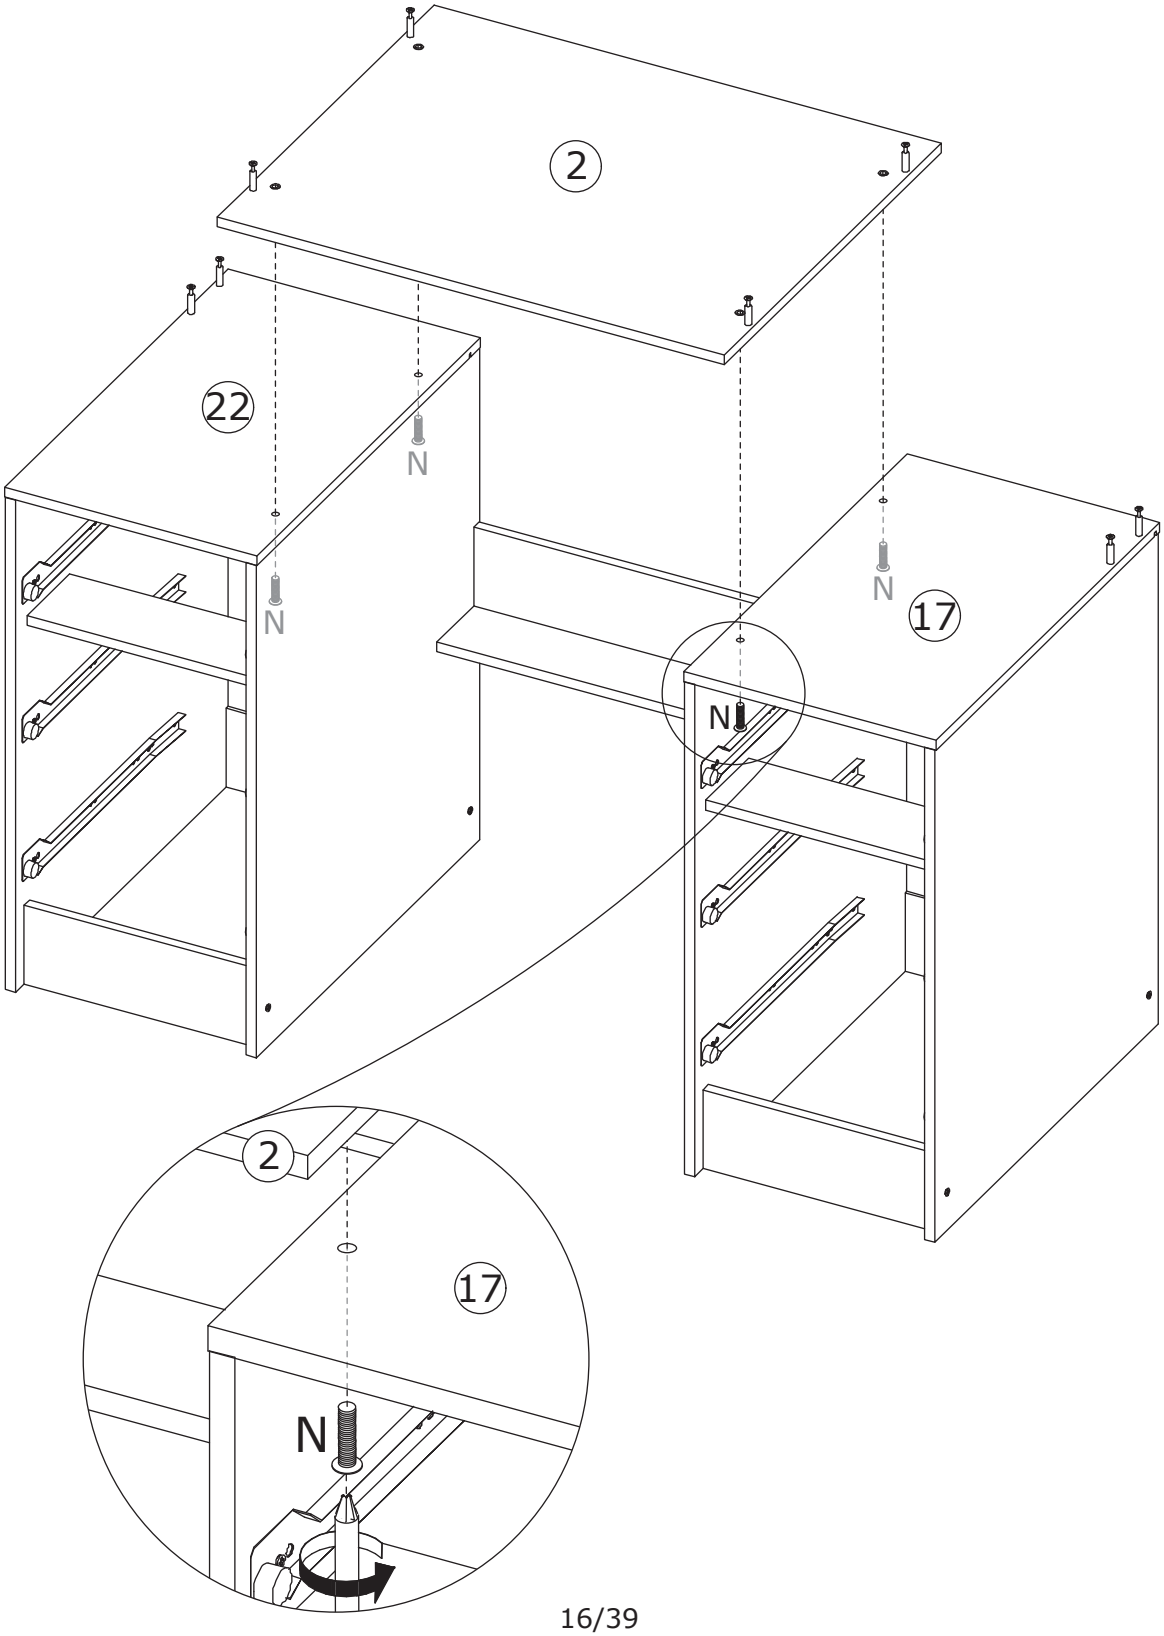



13

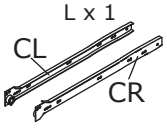G x 4	L x 1	
		
CRD0312A	WX0814A	






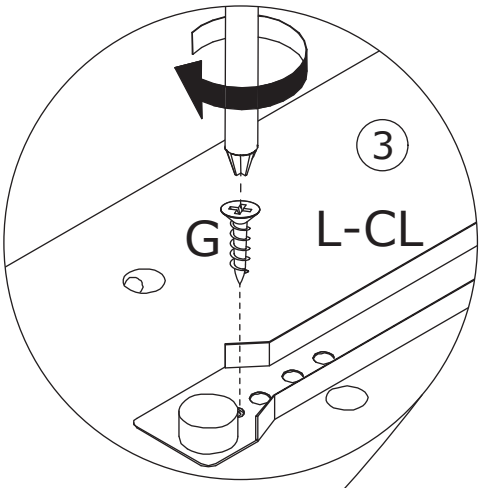

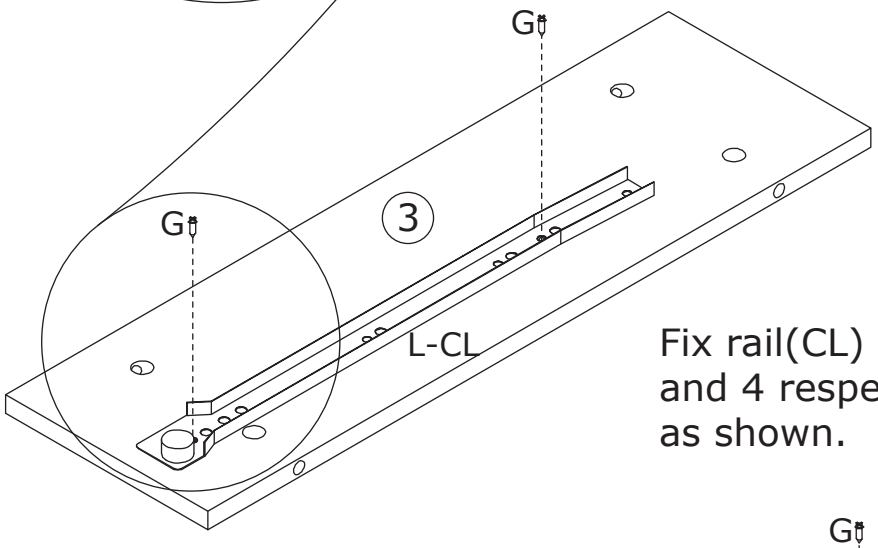

Fix rail(CL) and (CR) to panel 3 and 4 respectively with screw(G) as shown.

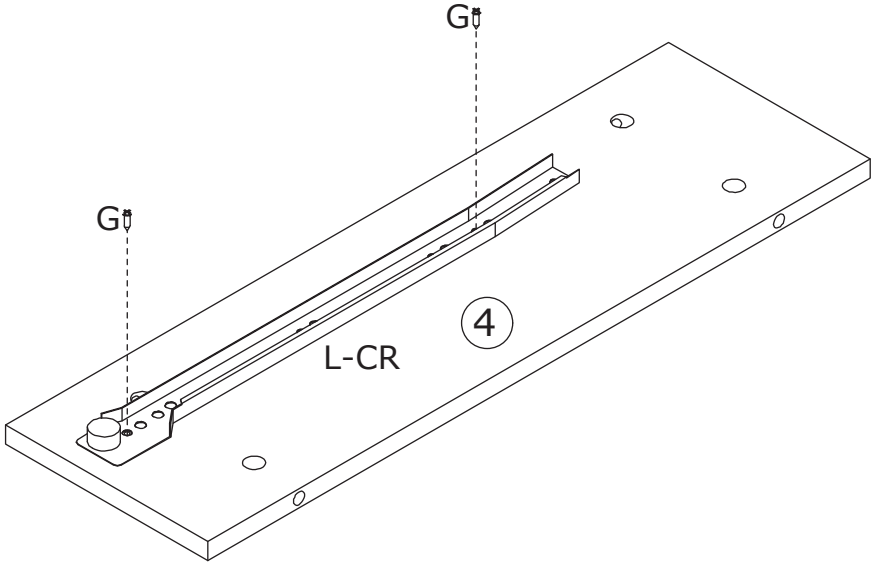



14

A x 4




CRB1295A



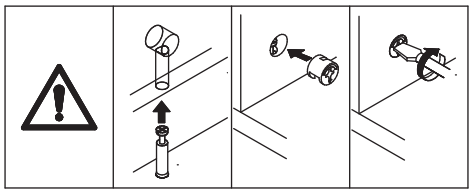


Attach panel 3 and 4 to panel 2, add cam lock(A) into panel 3,4 and turn clockwise to tighten as shown.

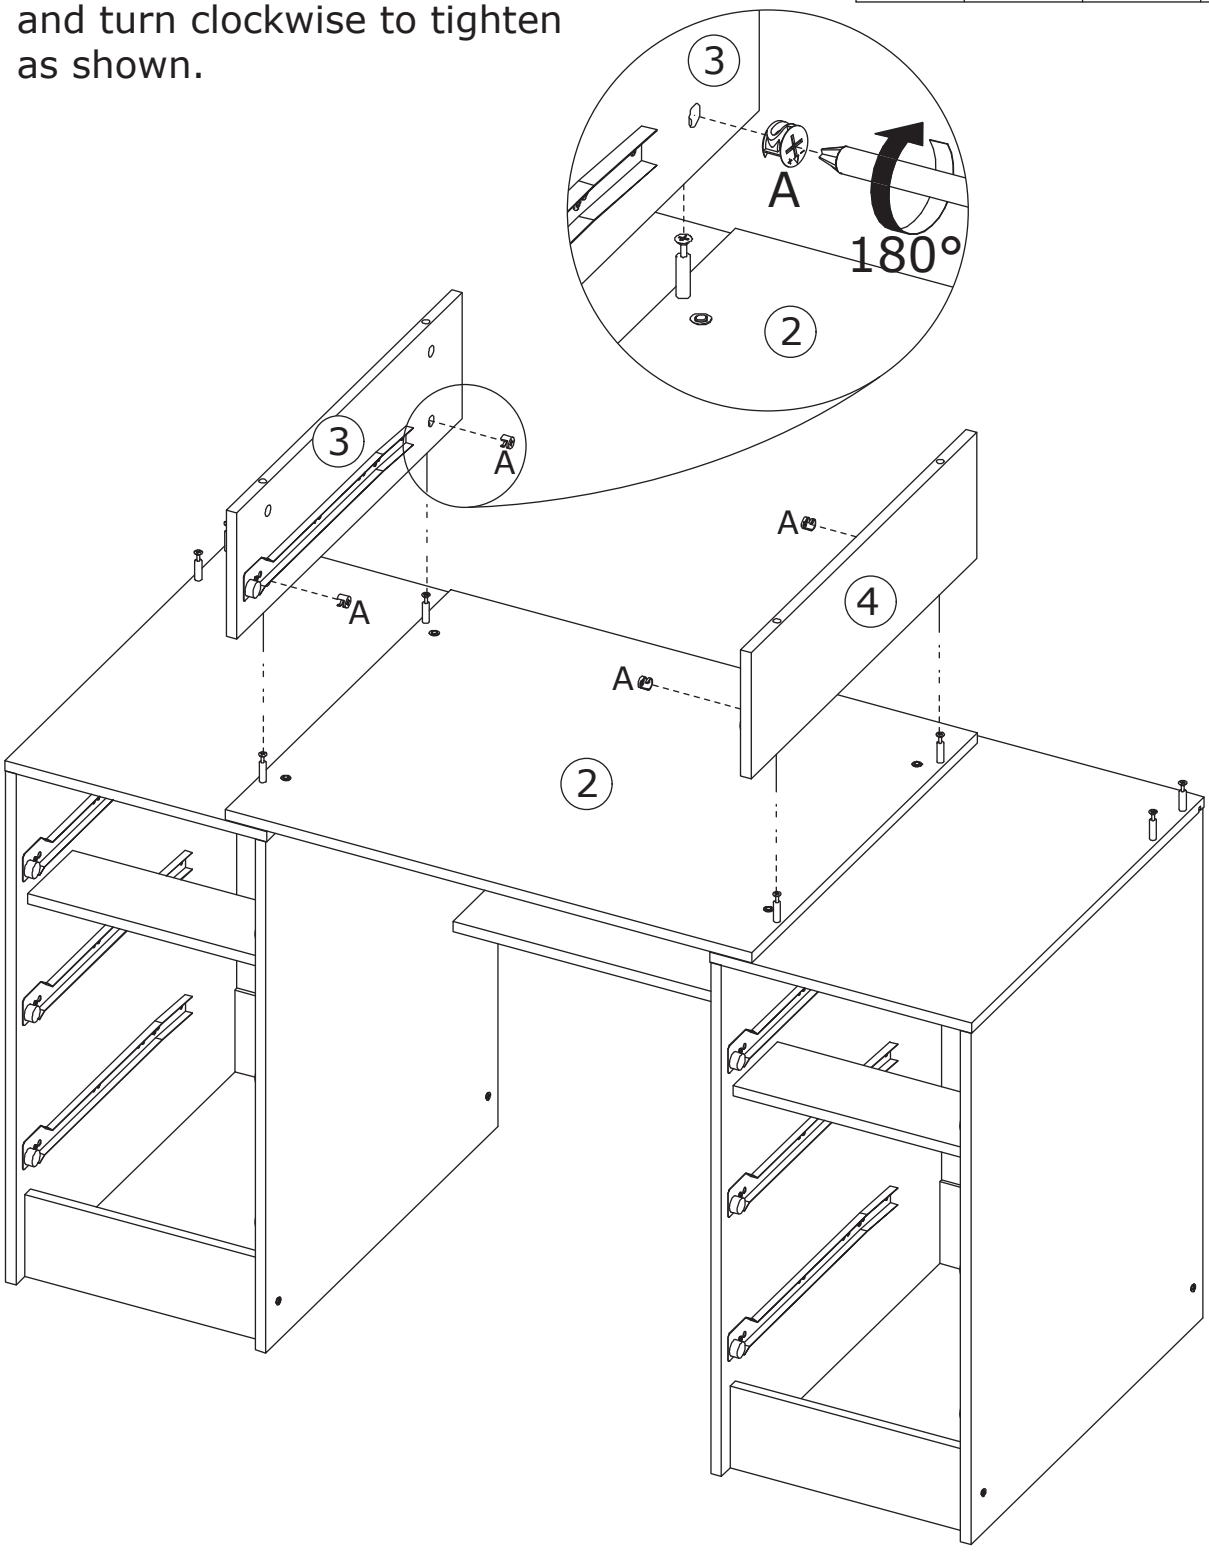



15

B x 4




CRA0640A



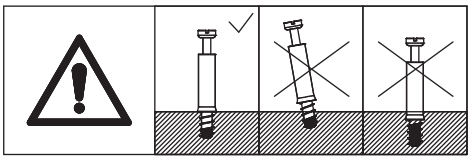

Screw eccentric rod(B) into panel 1 as shown.

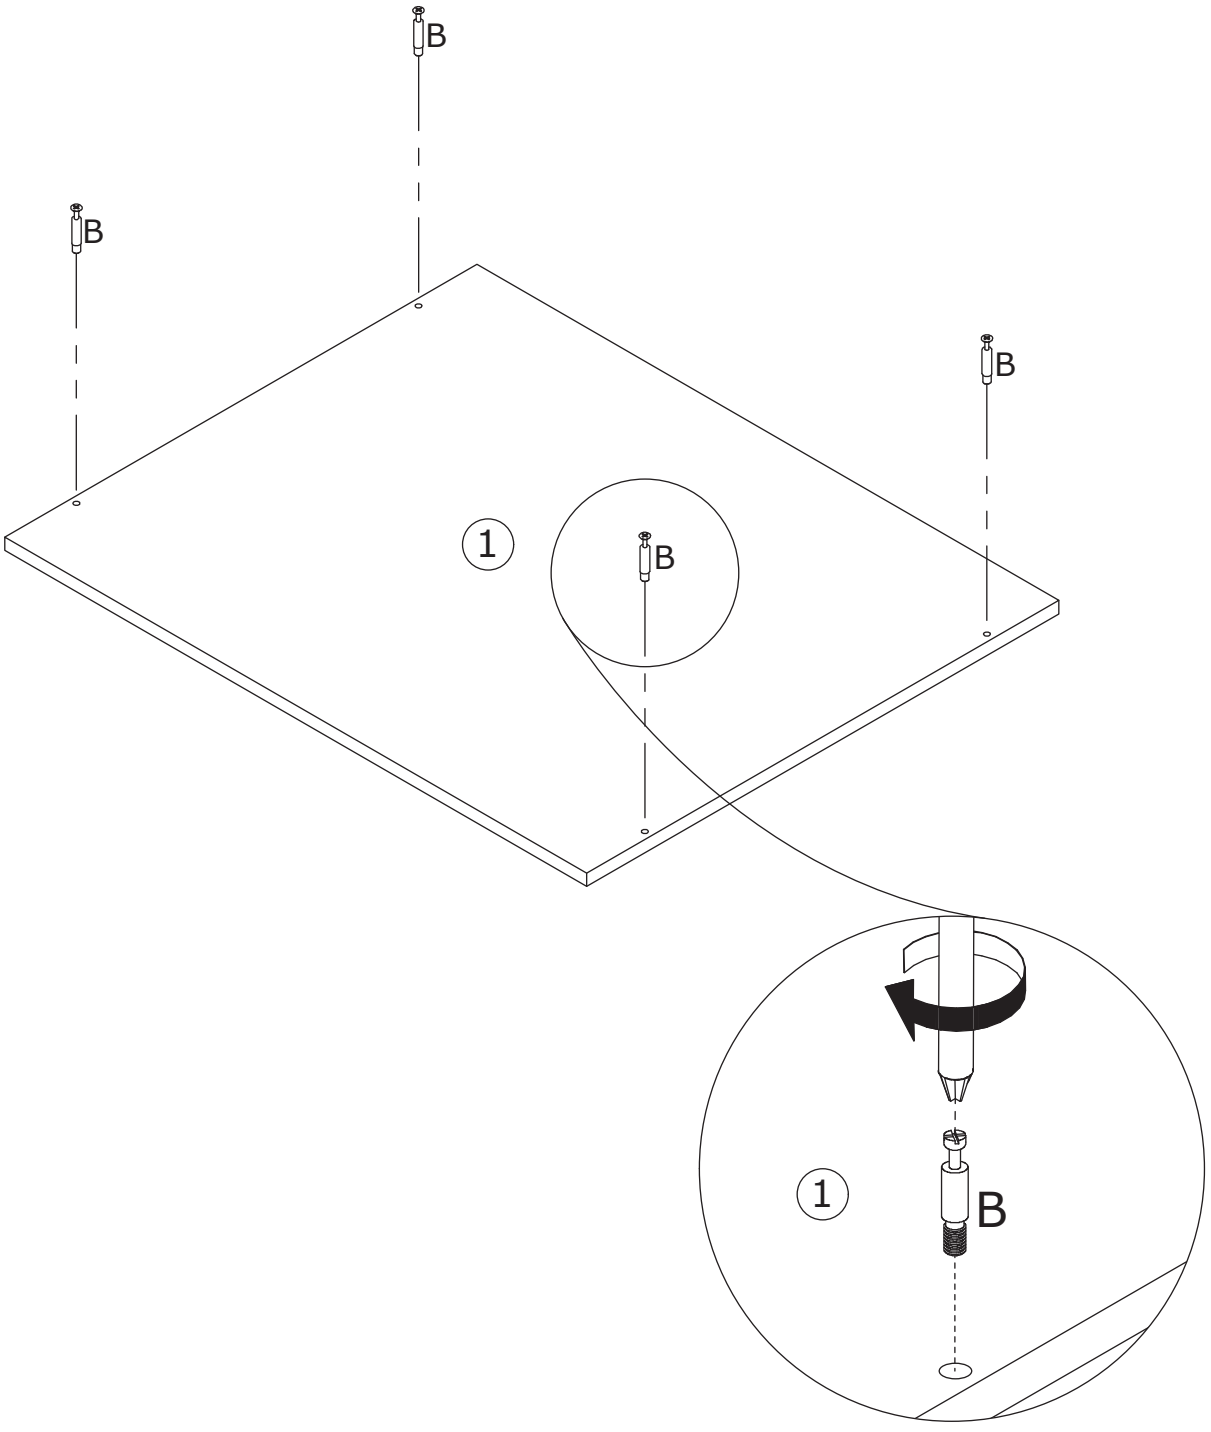



16

A x 4




CRB1295A





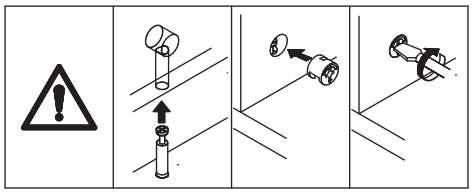



Attach panel 1 to panel 3 and 4, add cam lock(A) into panel 3,4 and turn clockwise to tighten as shown.

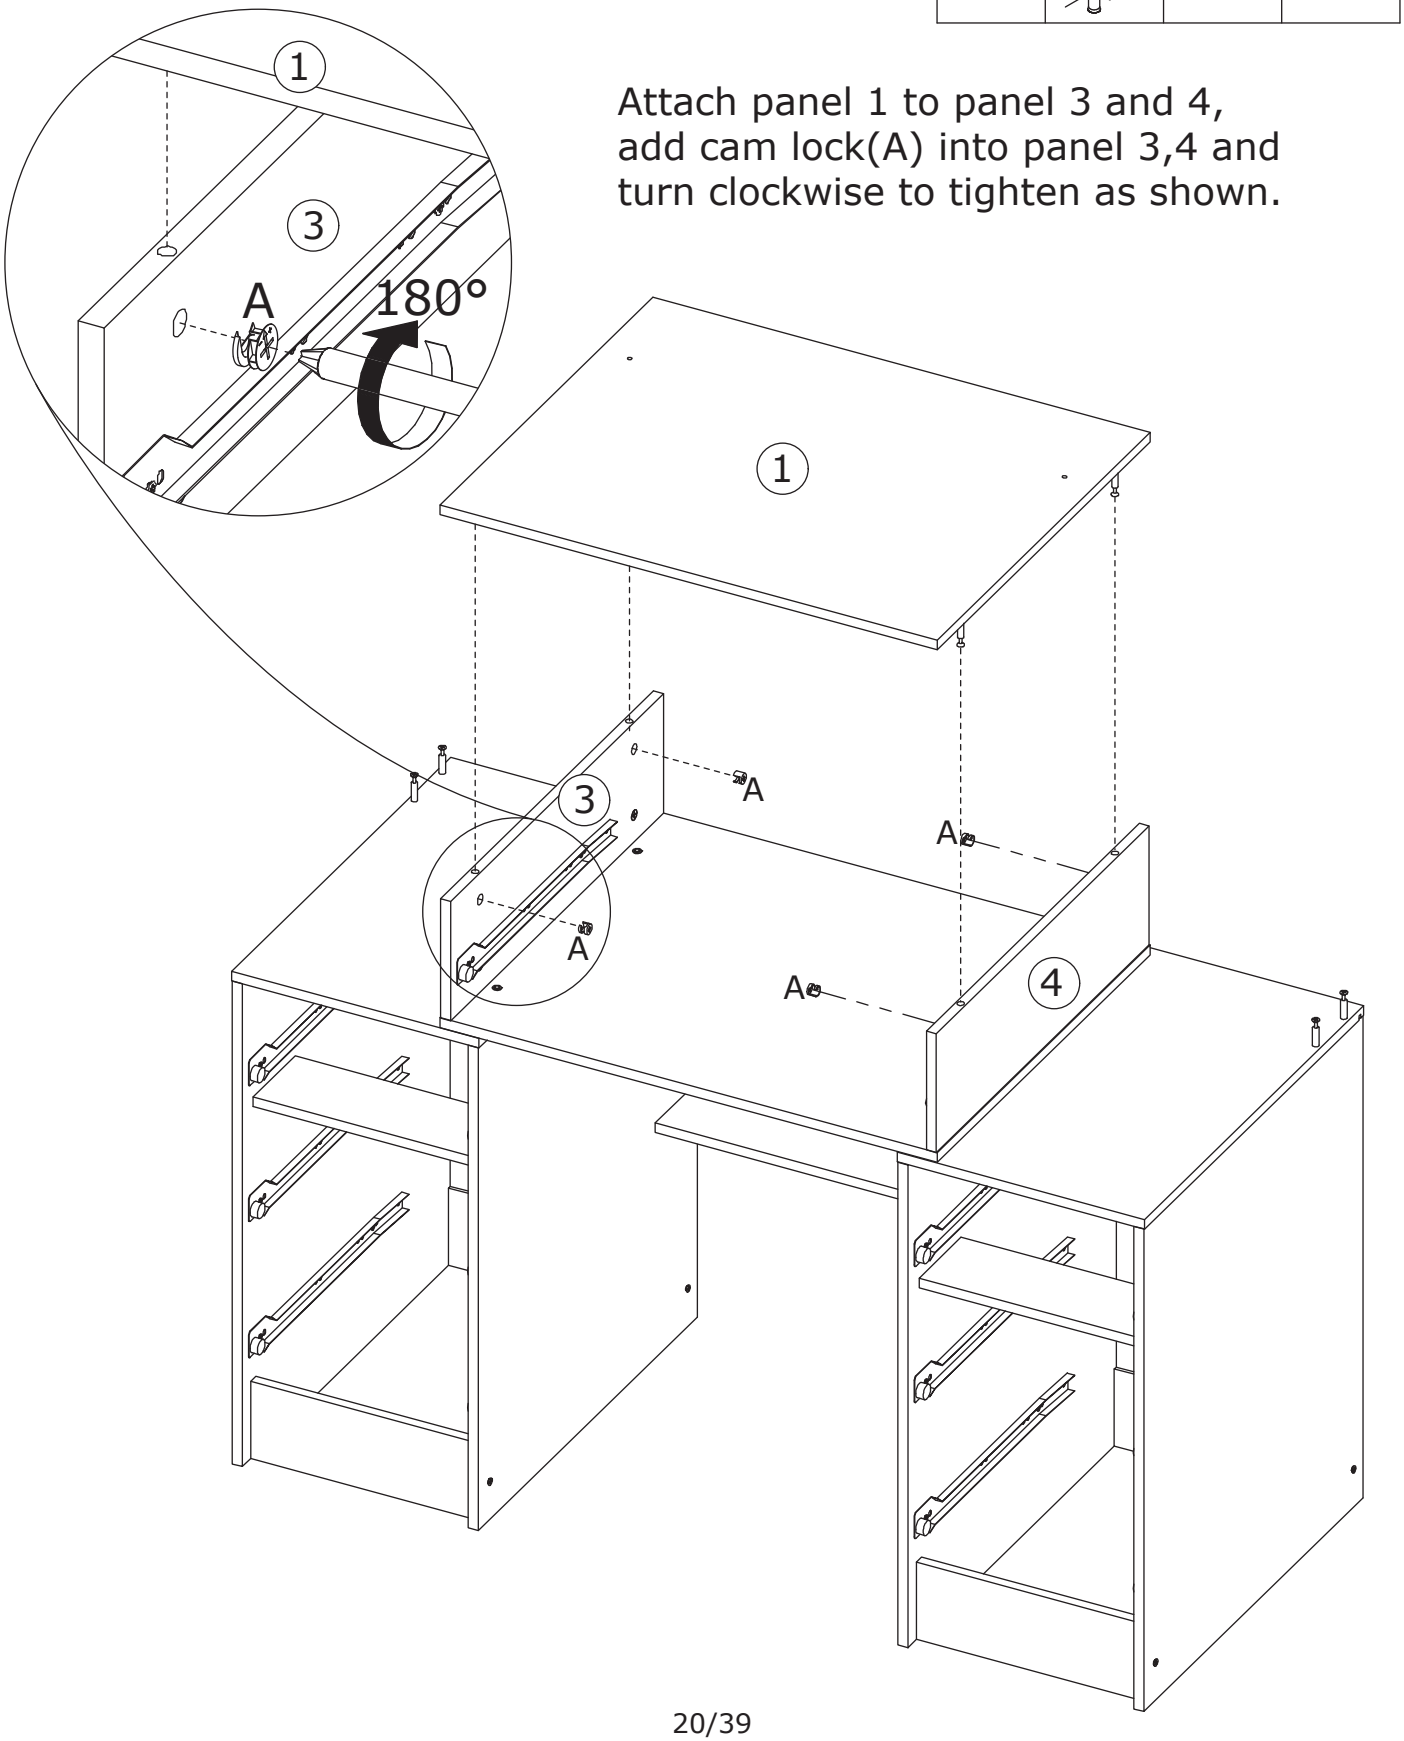

17


B x 4	M x 4	
 CRA0640A		

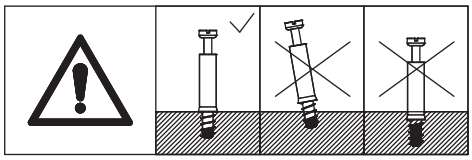

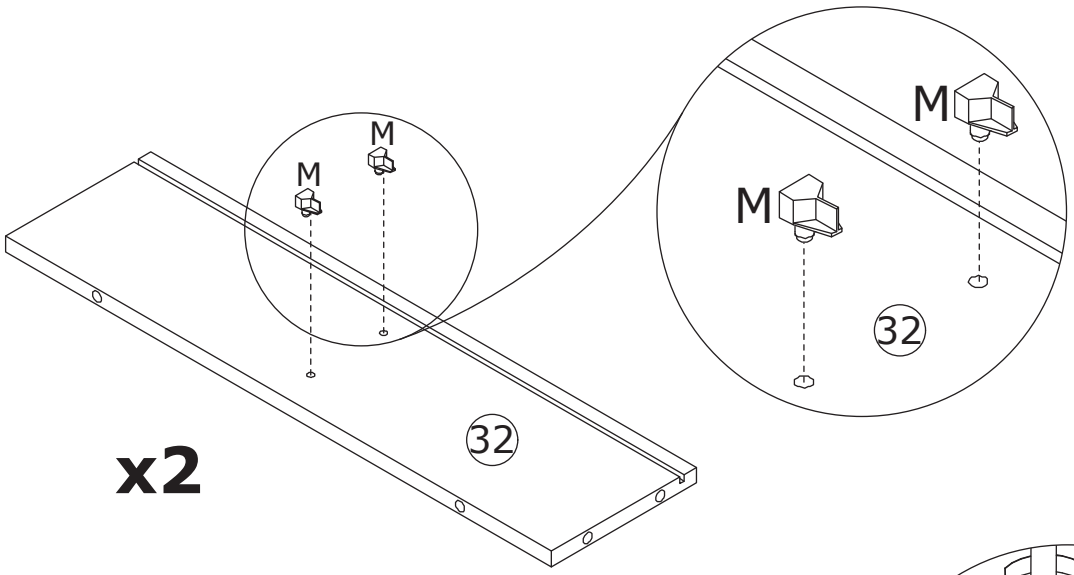

x2

Add part(M) into panel 32 as shown.
Screw eccentric rod(B) into panel 30 as shown.

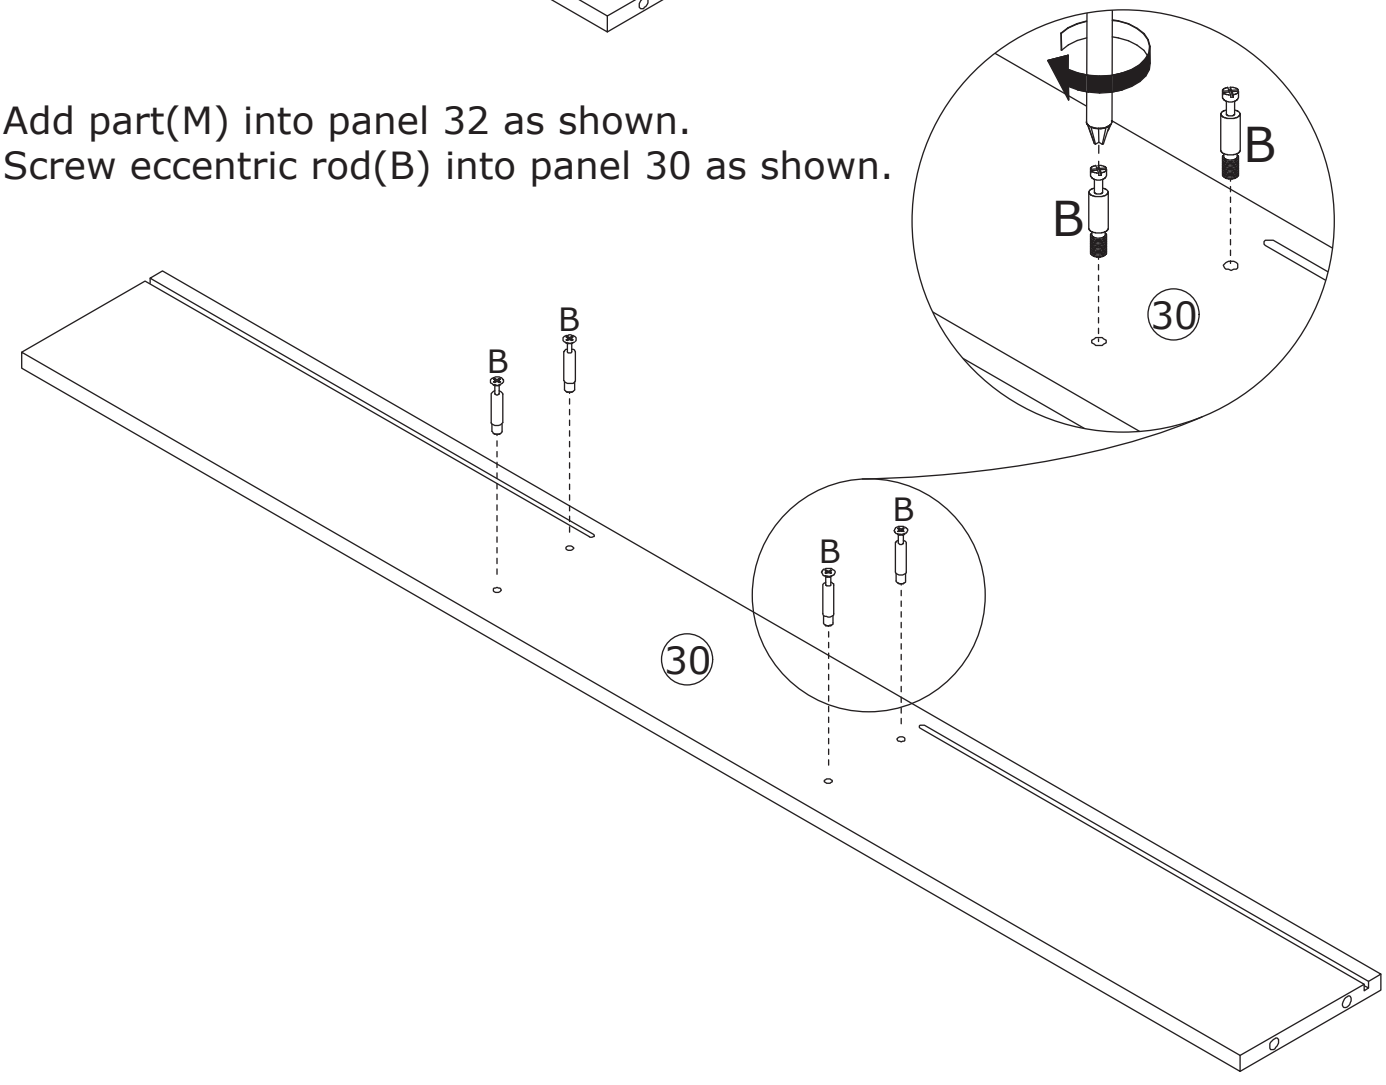



18

A x 4




CRB1295A





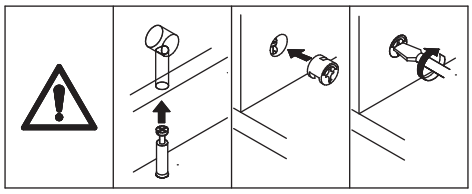


Attach panel 32 to panel 30, add cam lock(A) into panel 32 and turn clockwise to tighten as shown.

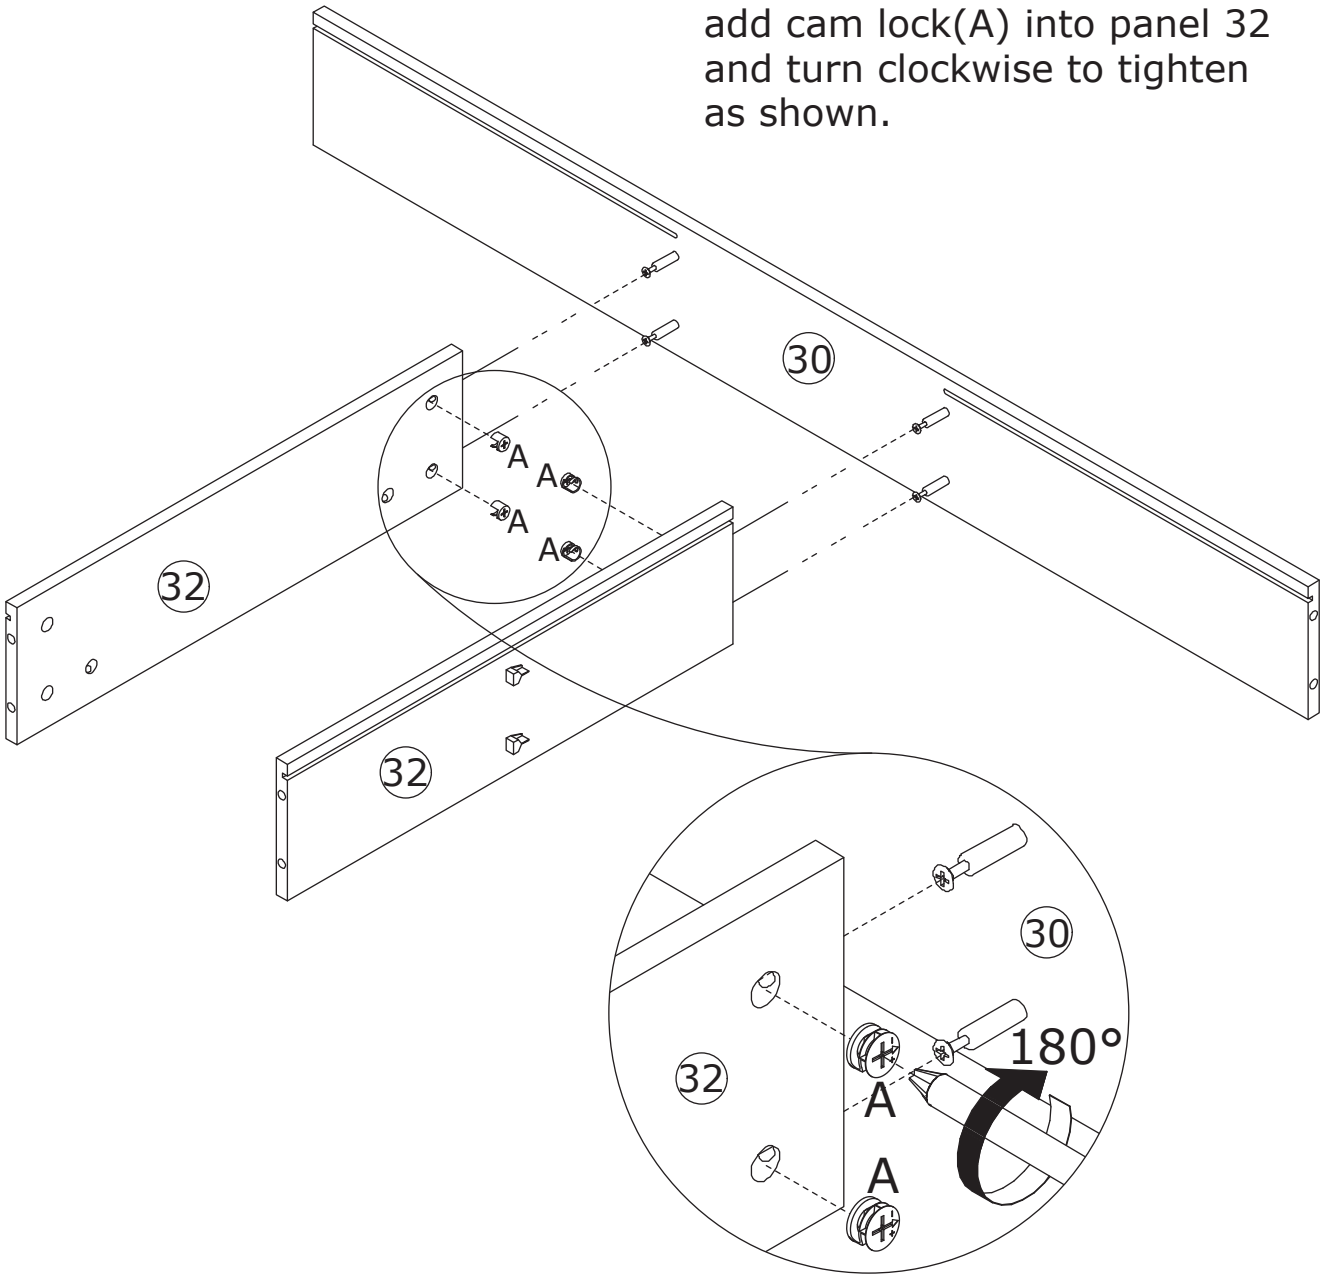


19

B x 8	M x 4	
 CRA0640A		

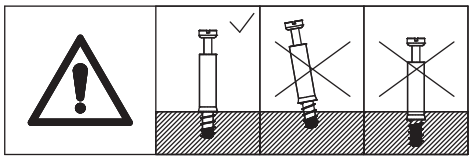

Add part(M) into panel 28 and 29 as shown.
Screw eccentric rod(B) into panel 28 and 29 as shown.

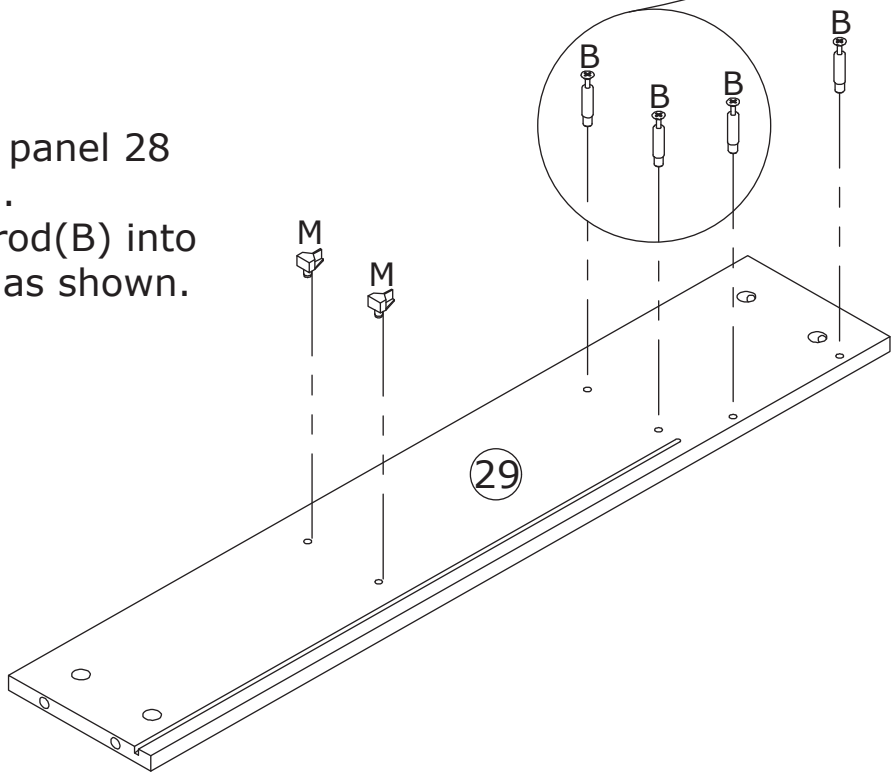



20

A x 2





CRB1295A



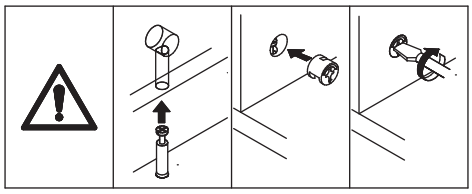

Attach panel 28 to panel 30, add cam lock(A) into panel 30 and turn clockwise to tighten as shown.

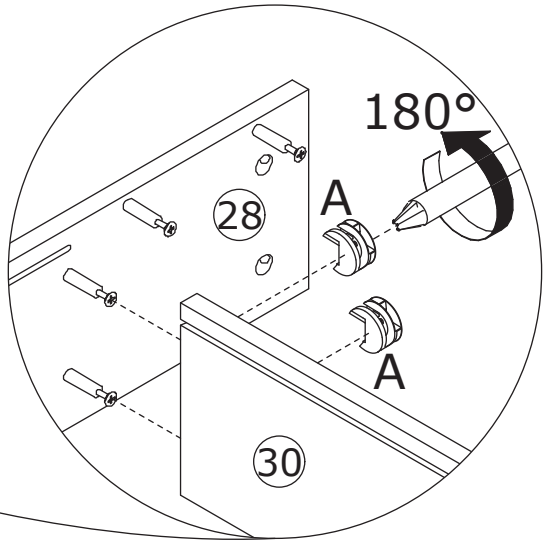

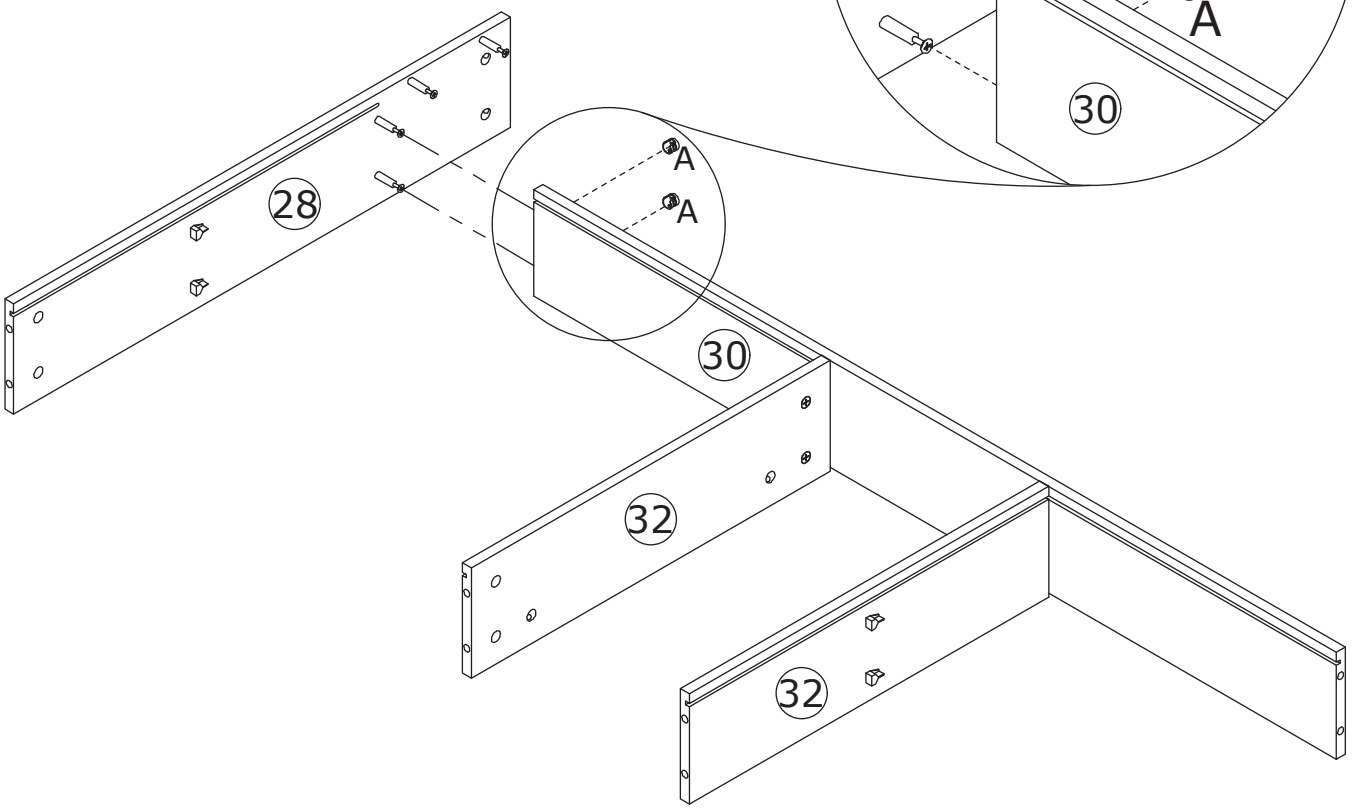



21

A x 2





CRB1295A



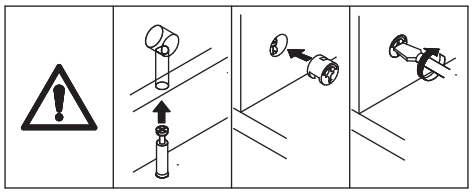

Attach panel 27 to panel 28, add cam lock(A) into panel 27 and turn clockwise to tighten as shown.

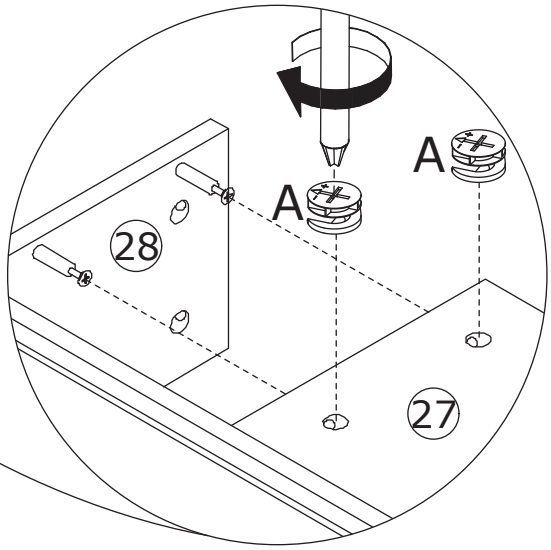

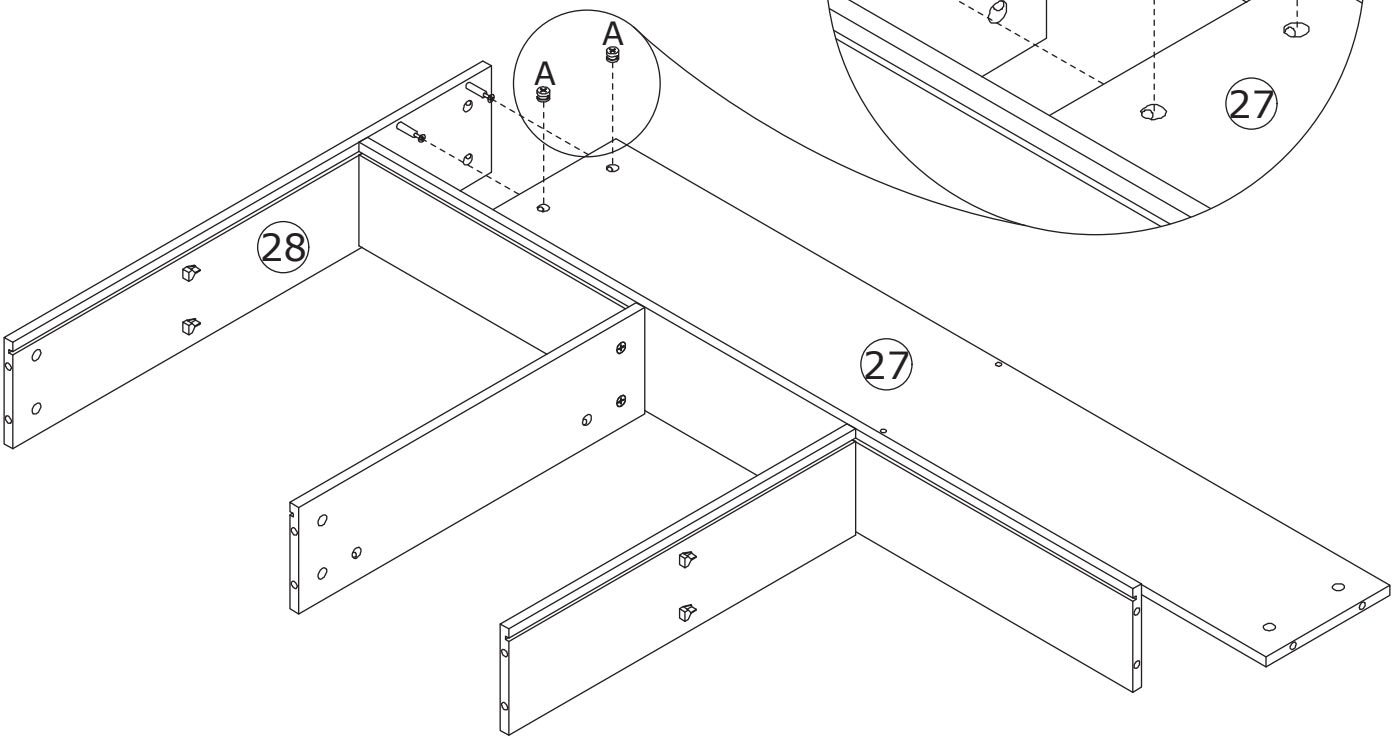



22

A x 4




CRB1295A



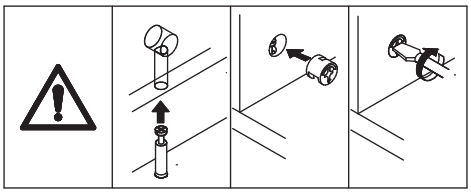

Attach panel 29 to panel 27 and 30,
add cam lock(A) into panel 27,30
and turn clockwise to tighten as shown.

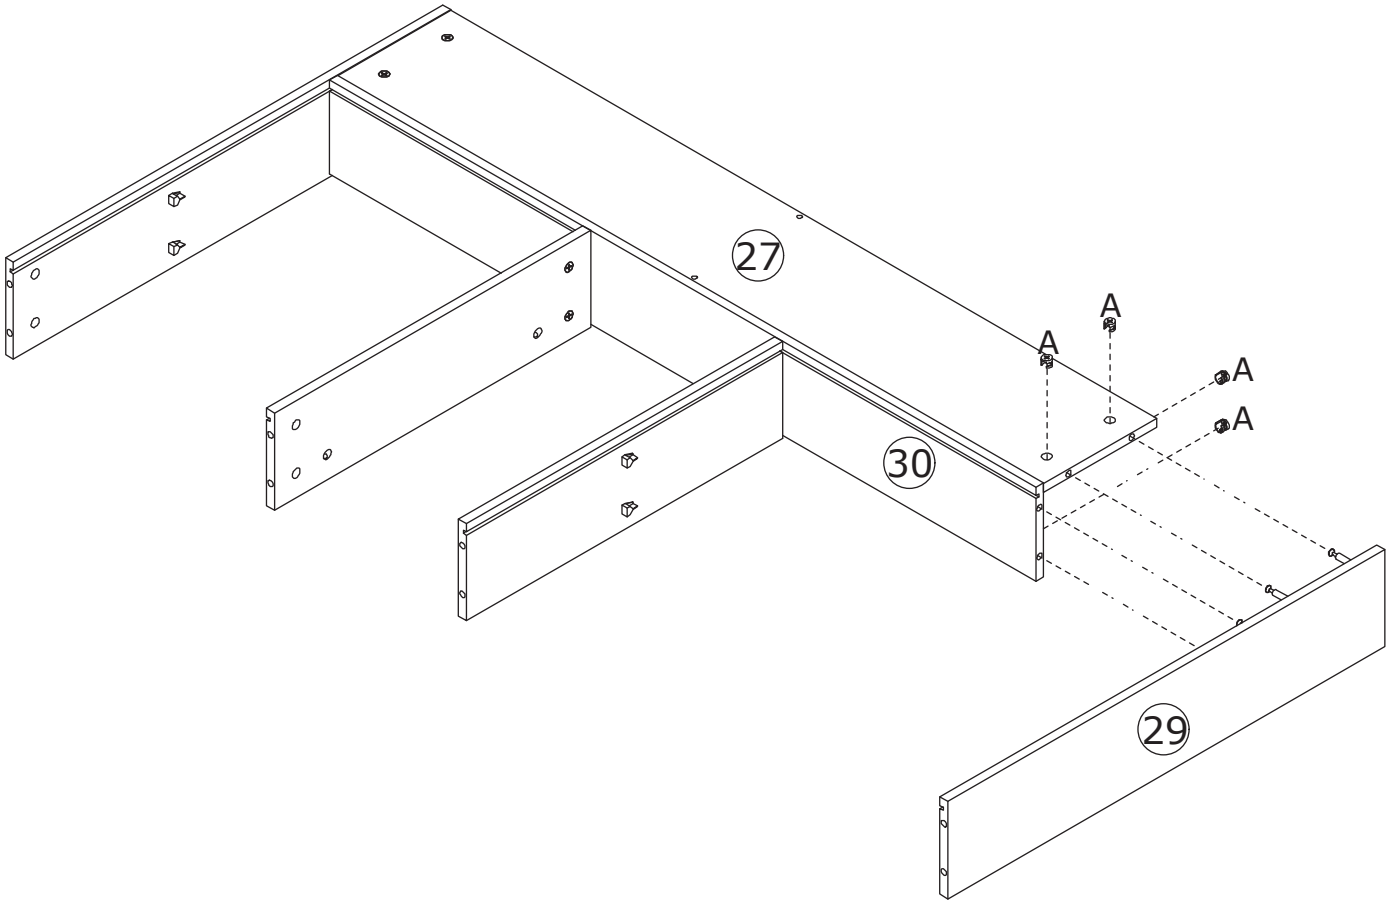



23

A x 4




CRB1295A



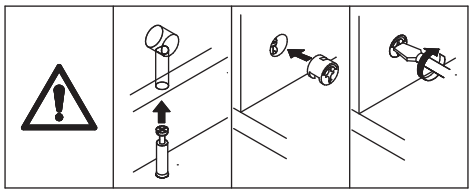


Attach the component to panel 17 and 22, add cam lock(A) into panel 28,29 and turn clockwise to tighten as shown.

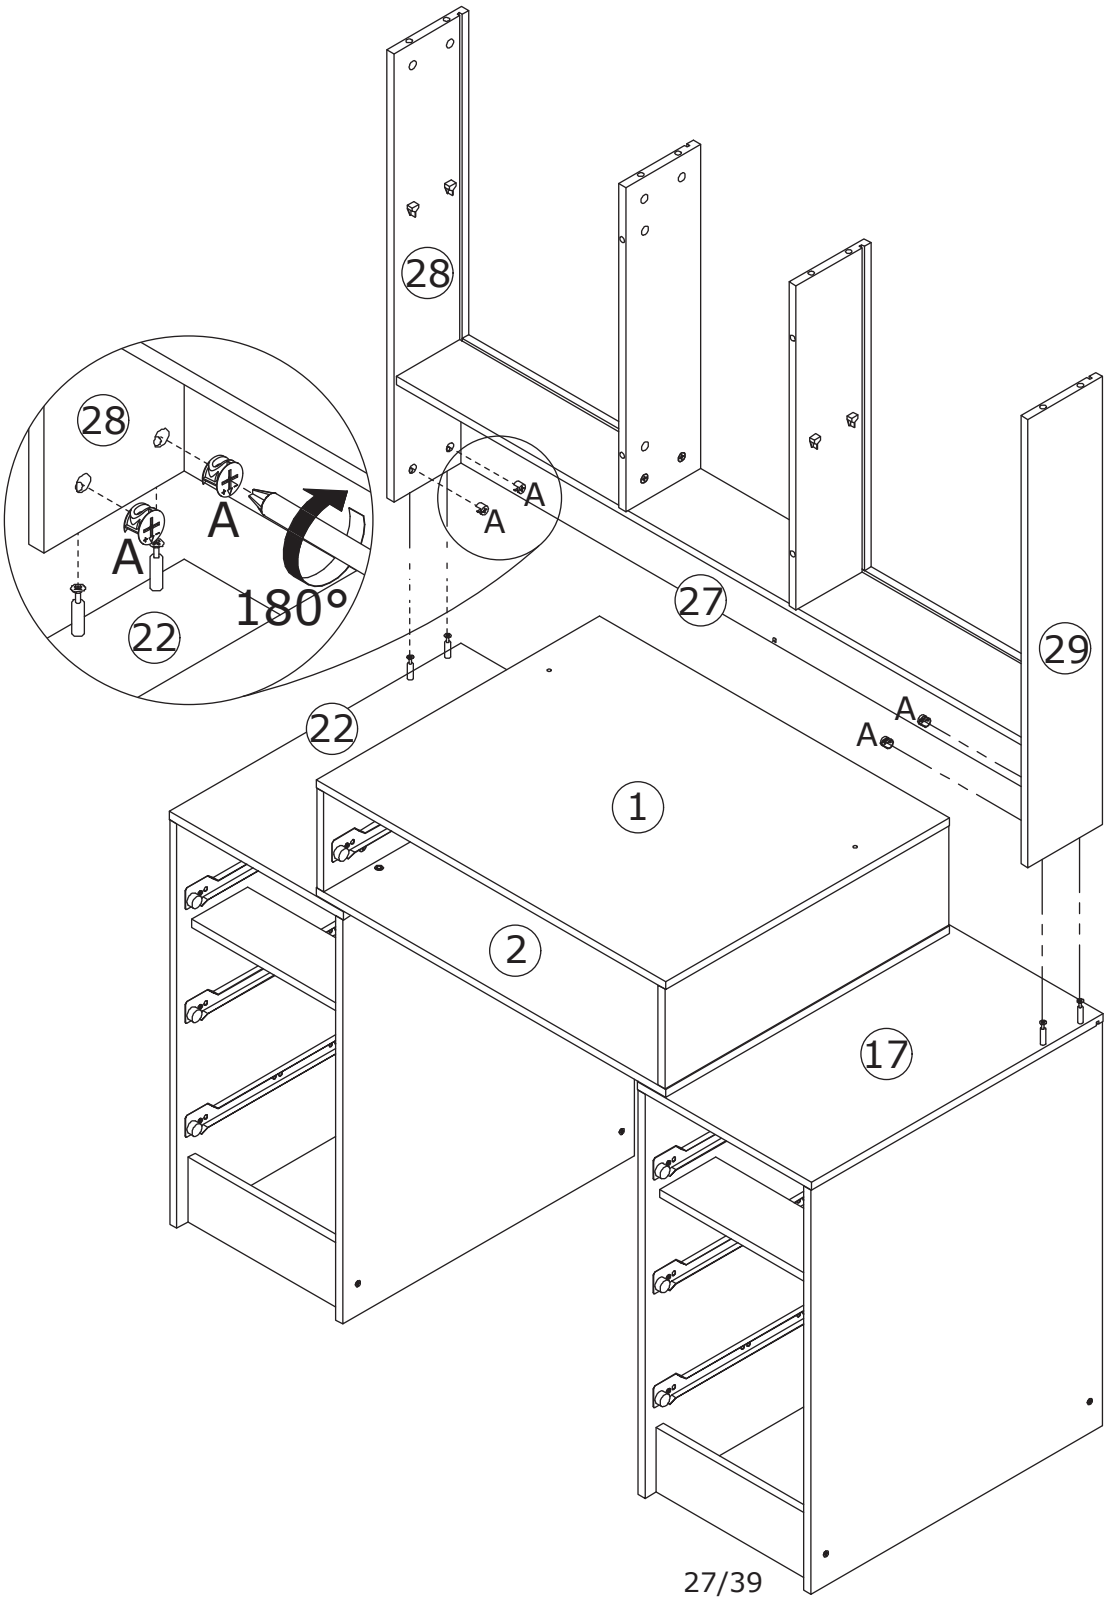


24


C x 2



CRC0540A




Insert back panel 33 along available grooves as shown.
Fix panel 27 to panel 1 and 2 with screw(C) as shown.

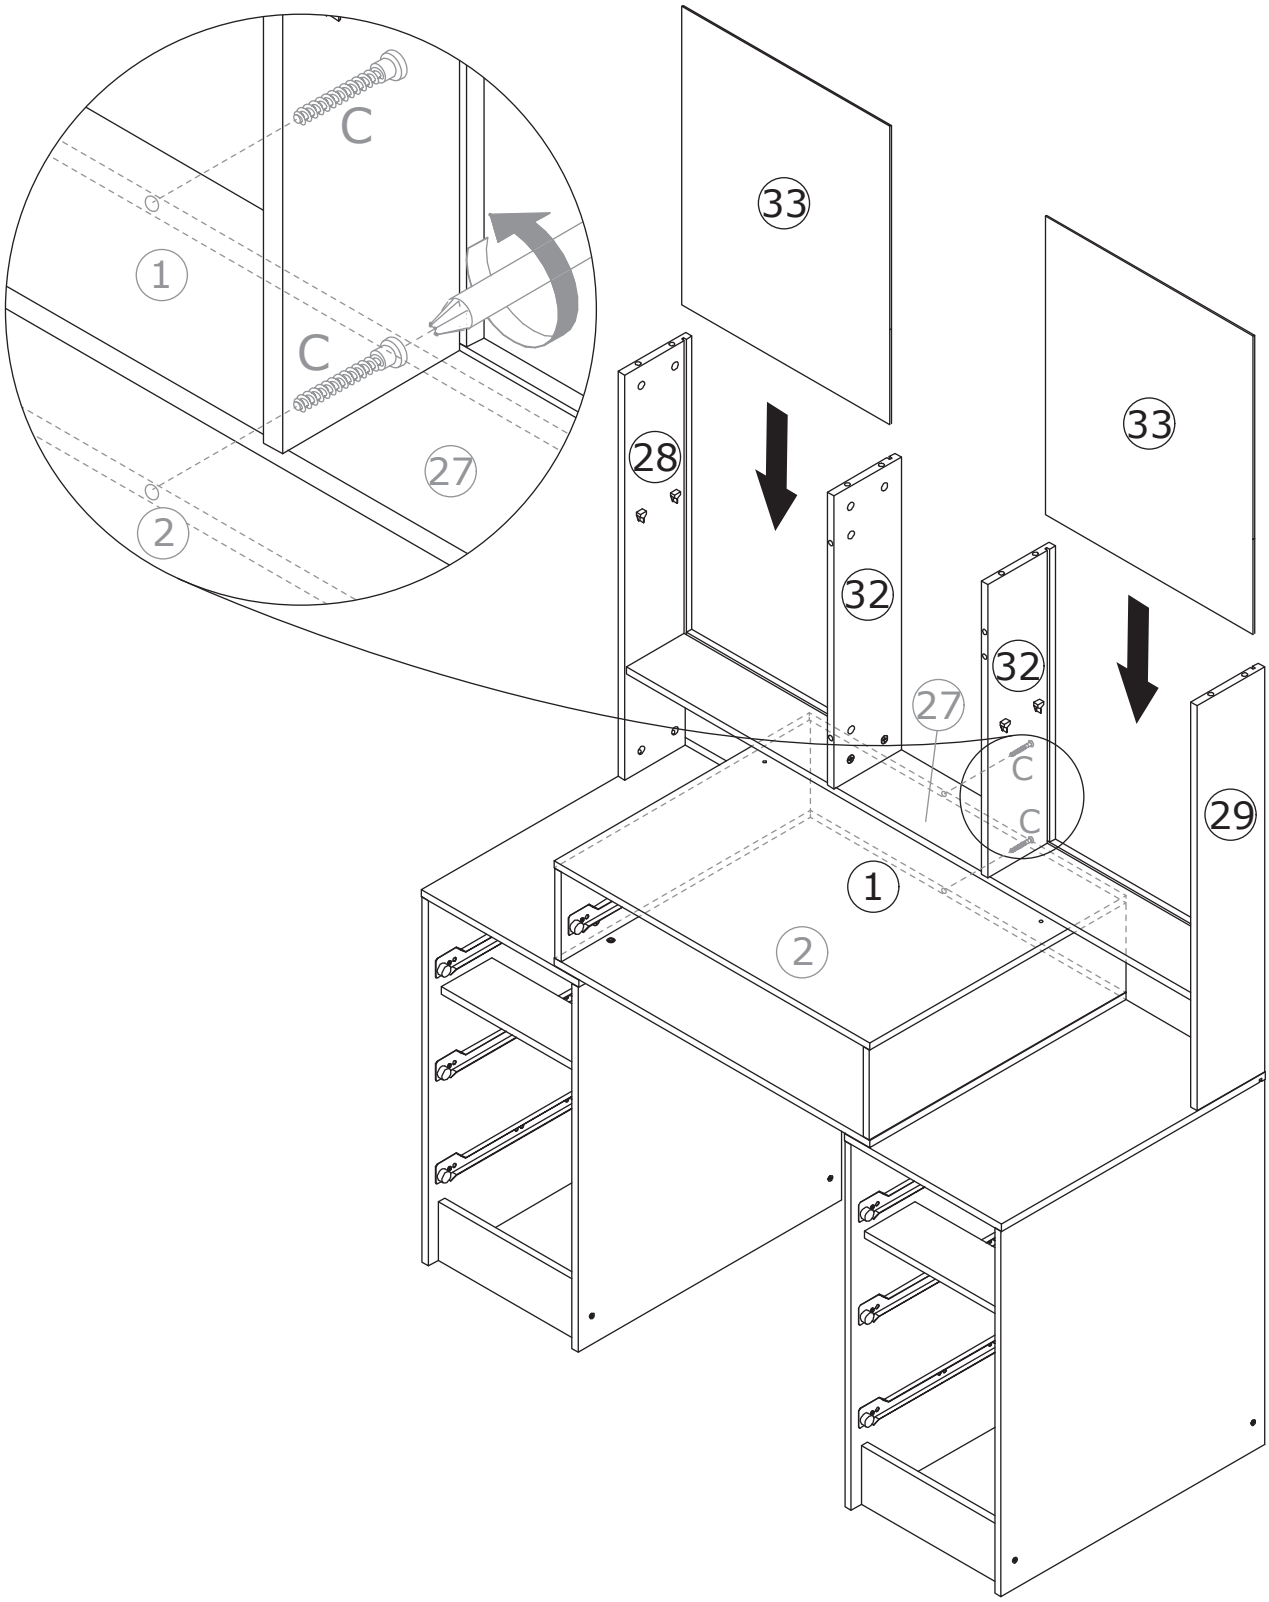



25


B x 4




CRA0640A



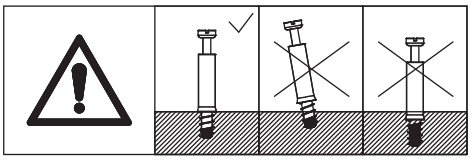

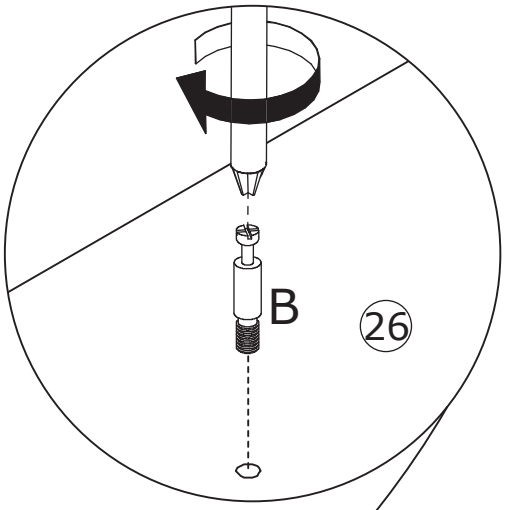

Screw eccentric rod(B)
into panel 26 as shown.

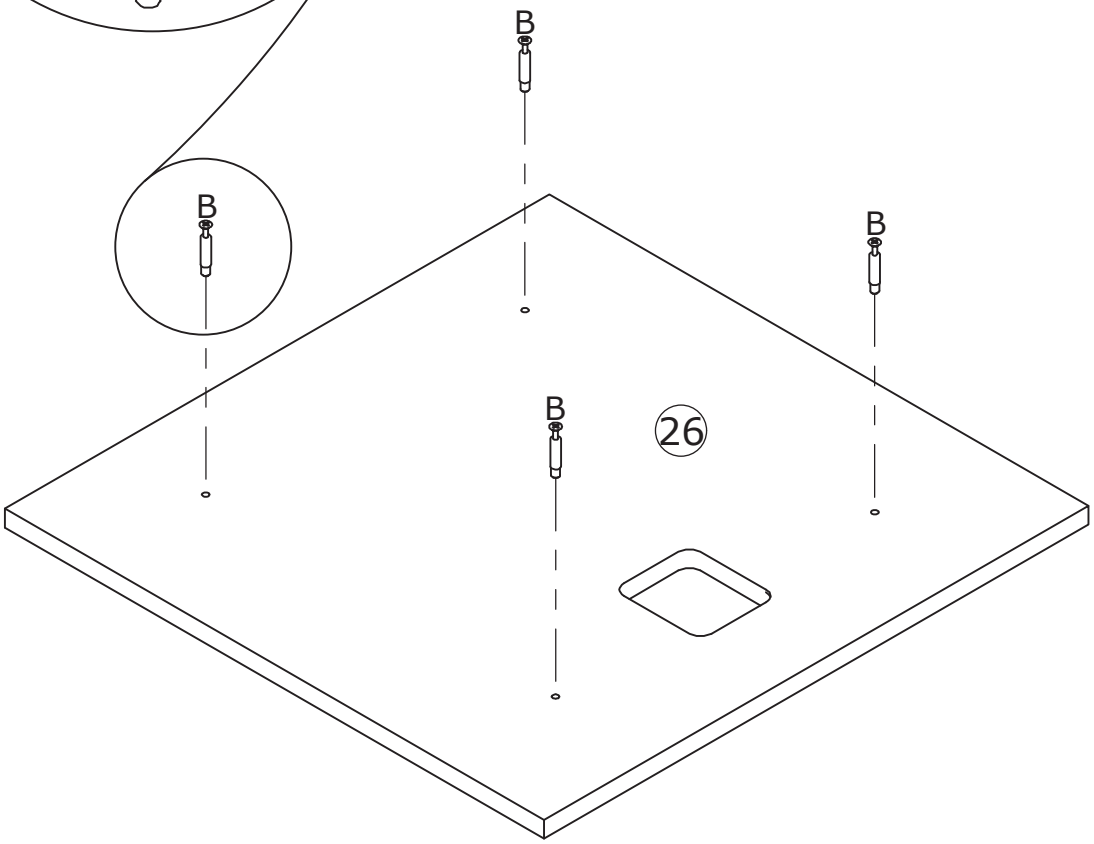



26

A x 4





CRB1295A





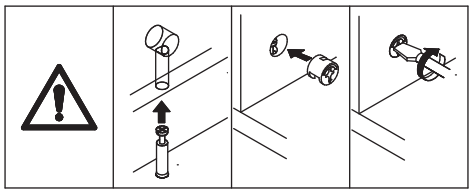



Attach panel 26 to panel 32, add cam lock(A) into panel 32 and turn clockwise to tighten as shown.

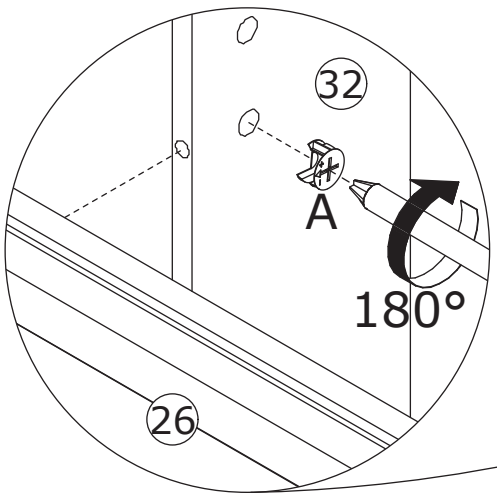

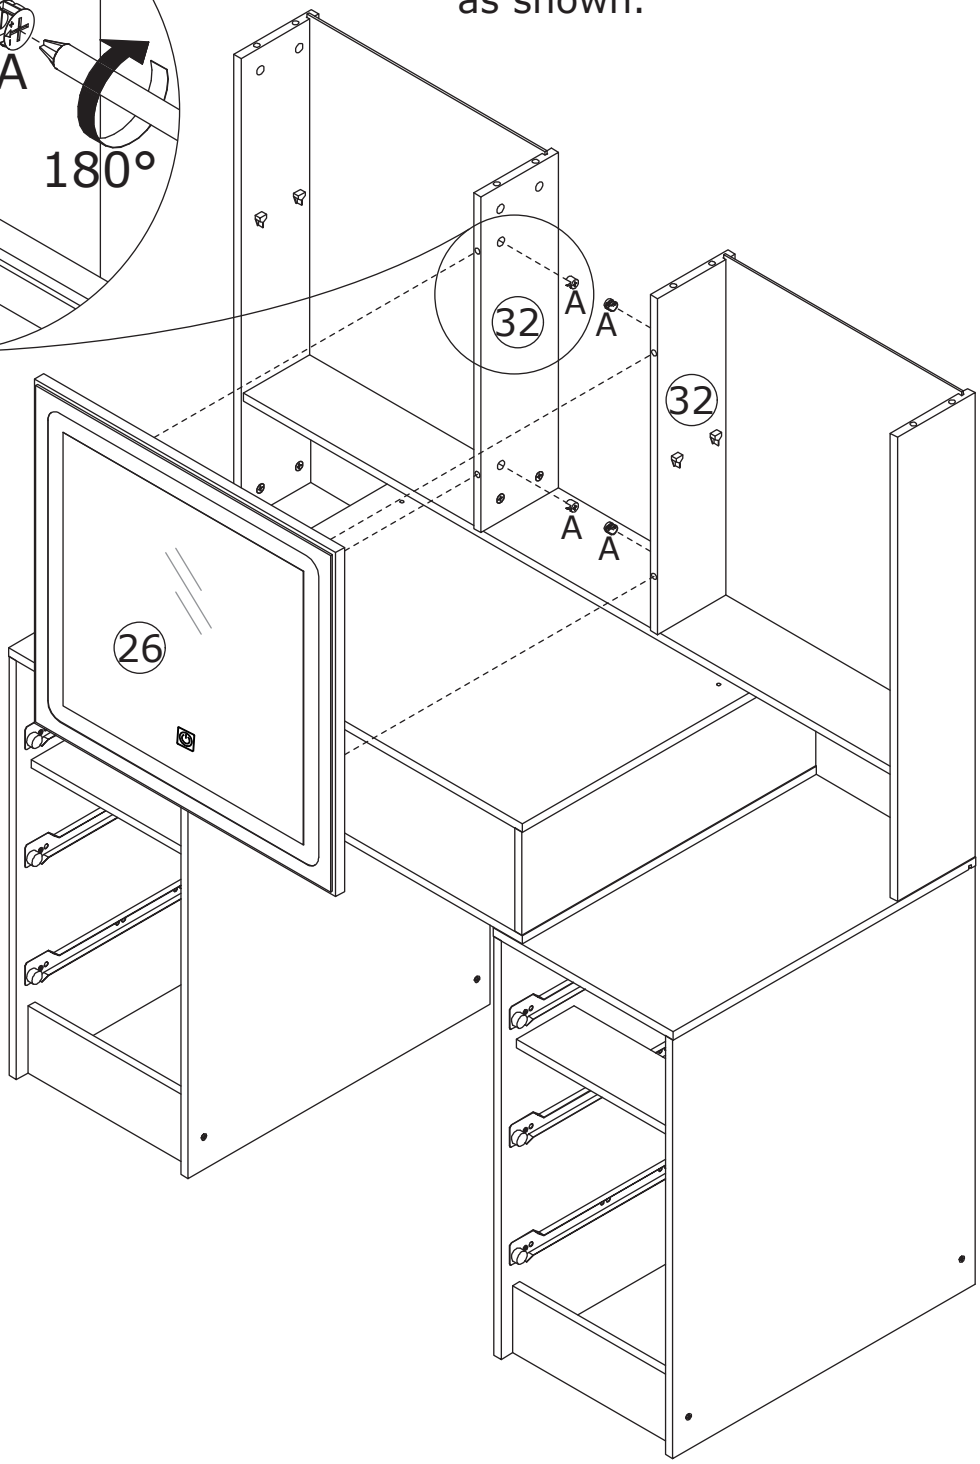





27


D x 2	G x 4	J x 4	
	 CRD0312A	 ∅5 x 16 mm	

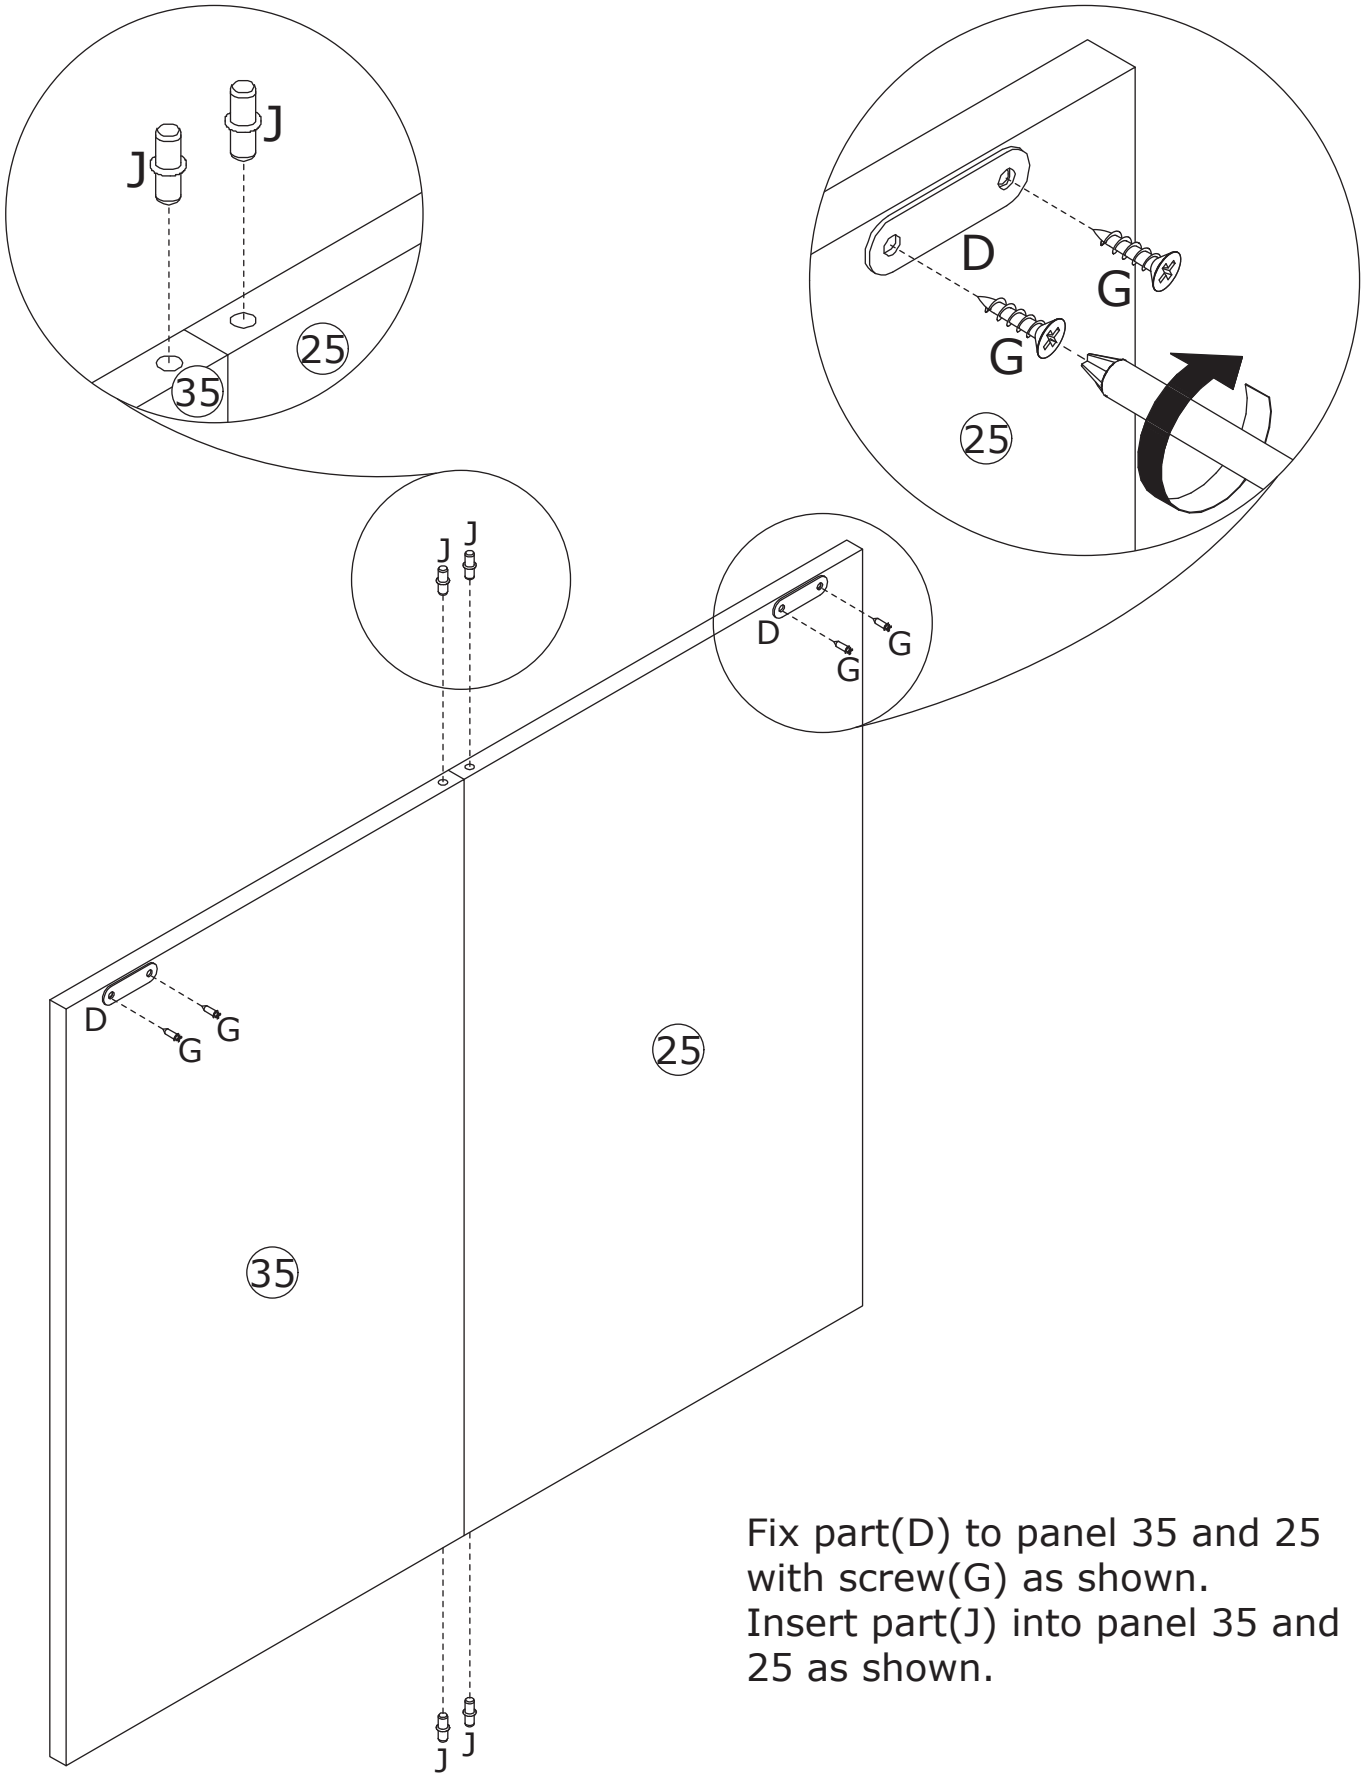


Fix part(D) to panel 35 and 25 with screw(G) as shown.
Insert part(J) into panel 35 and 25 as shown.

28

B x 8	D x 2	H x 4	
			
CRA0640A		CRD0314A	

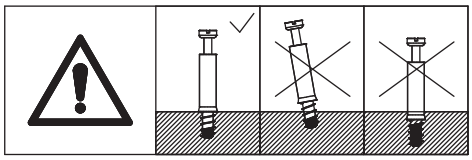


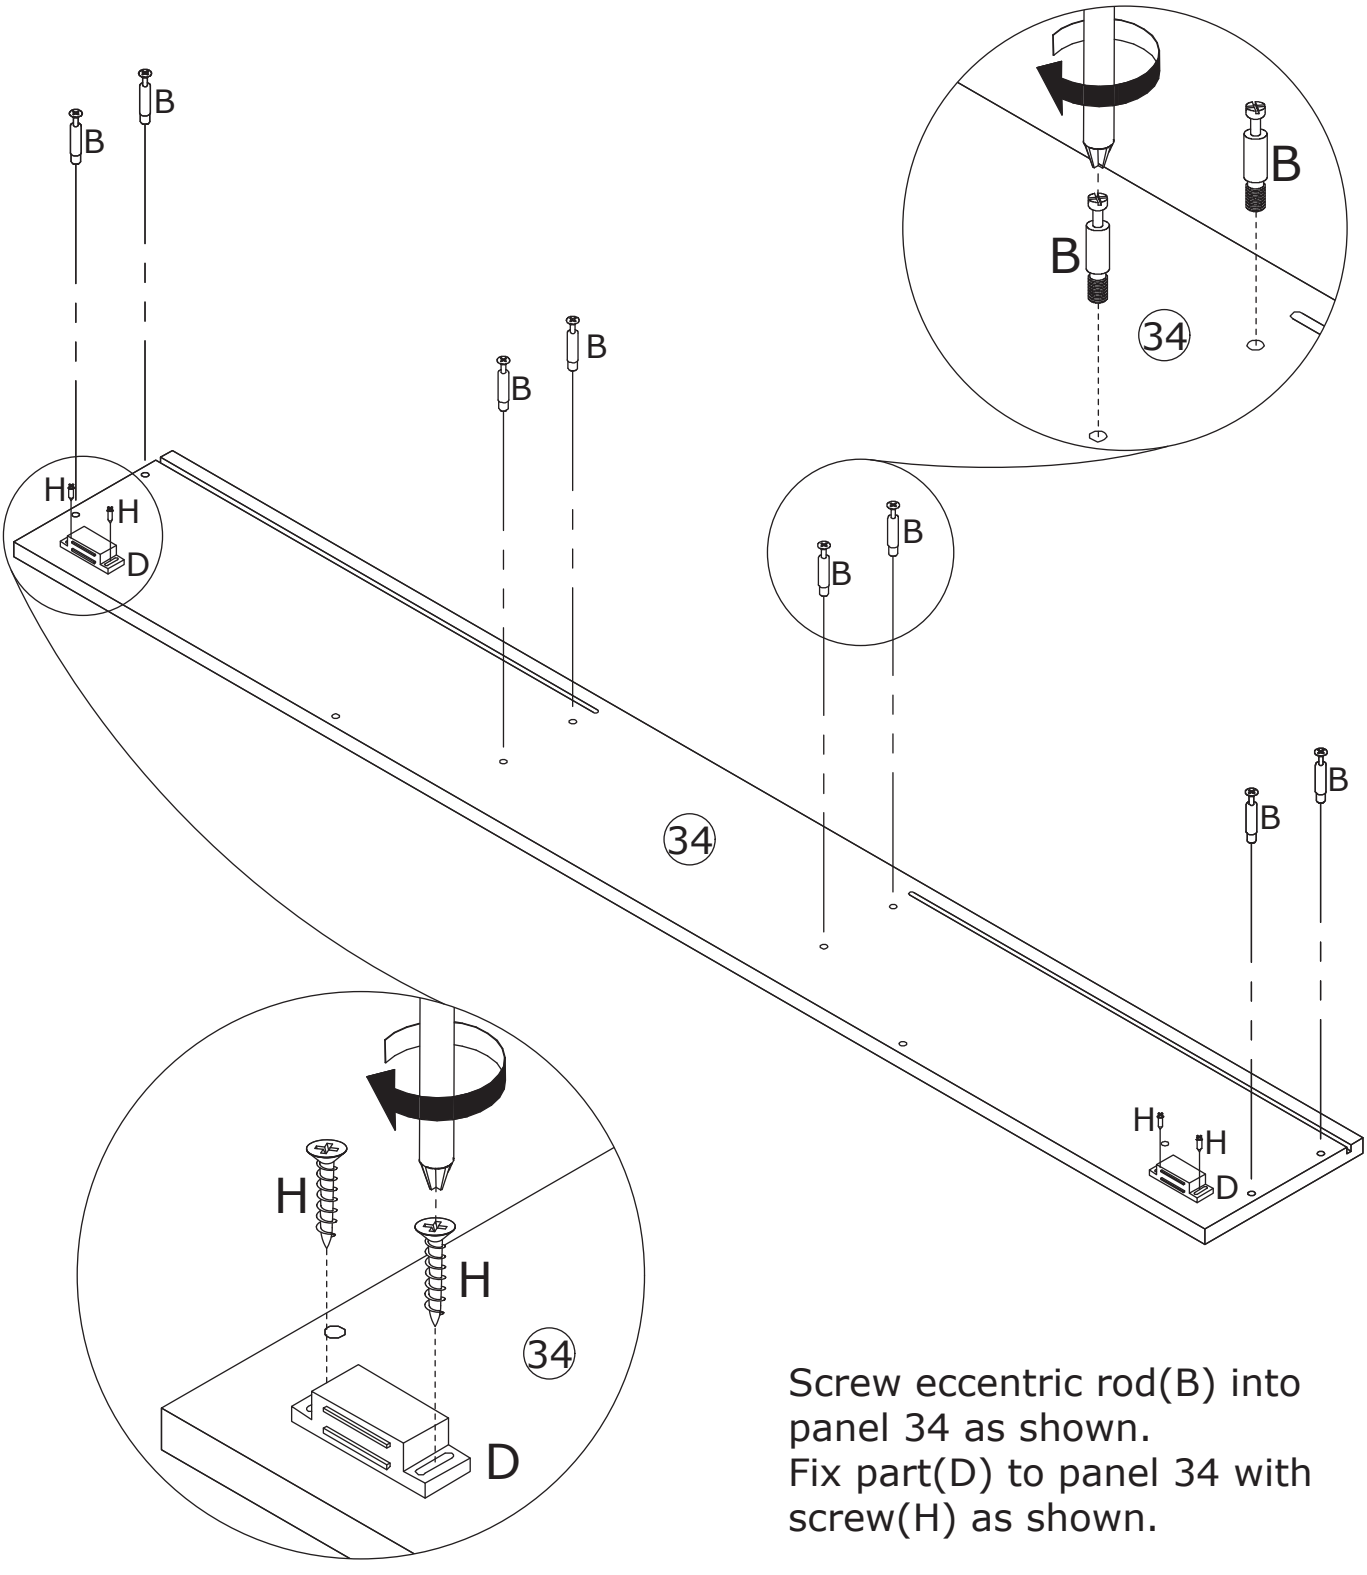

Screw eccentric rod(B) into panel 34 as shown.
Fix part(D) to panel 34 with screw(H) as shown.

29

Assemble door panel 25 and 35 to panel 1 as shown.

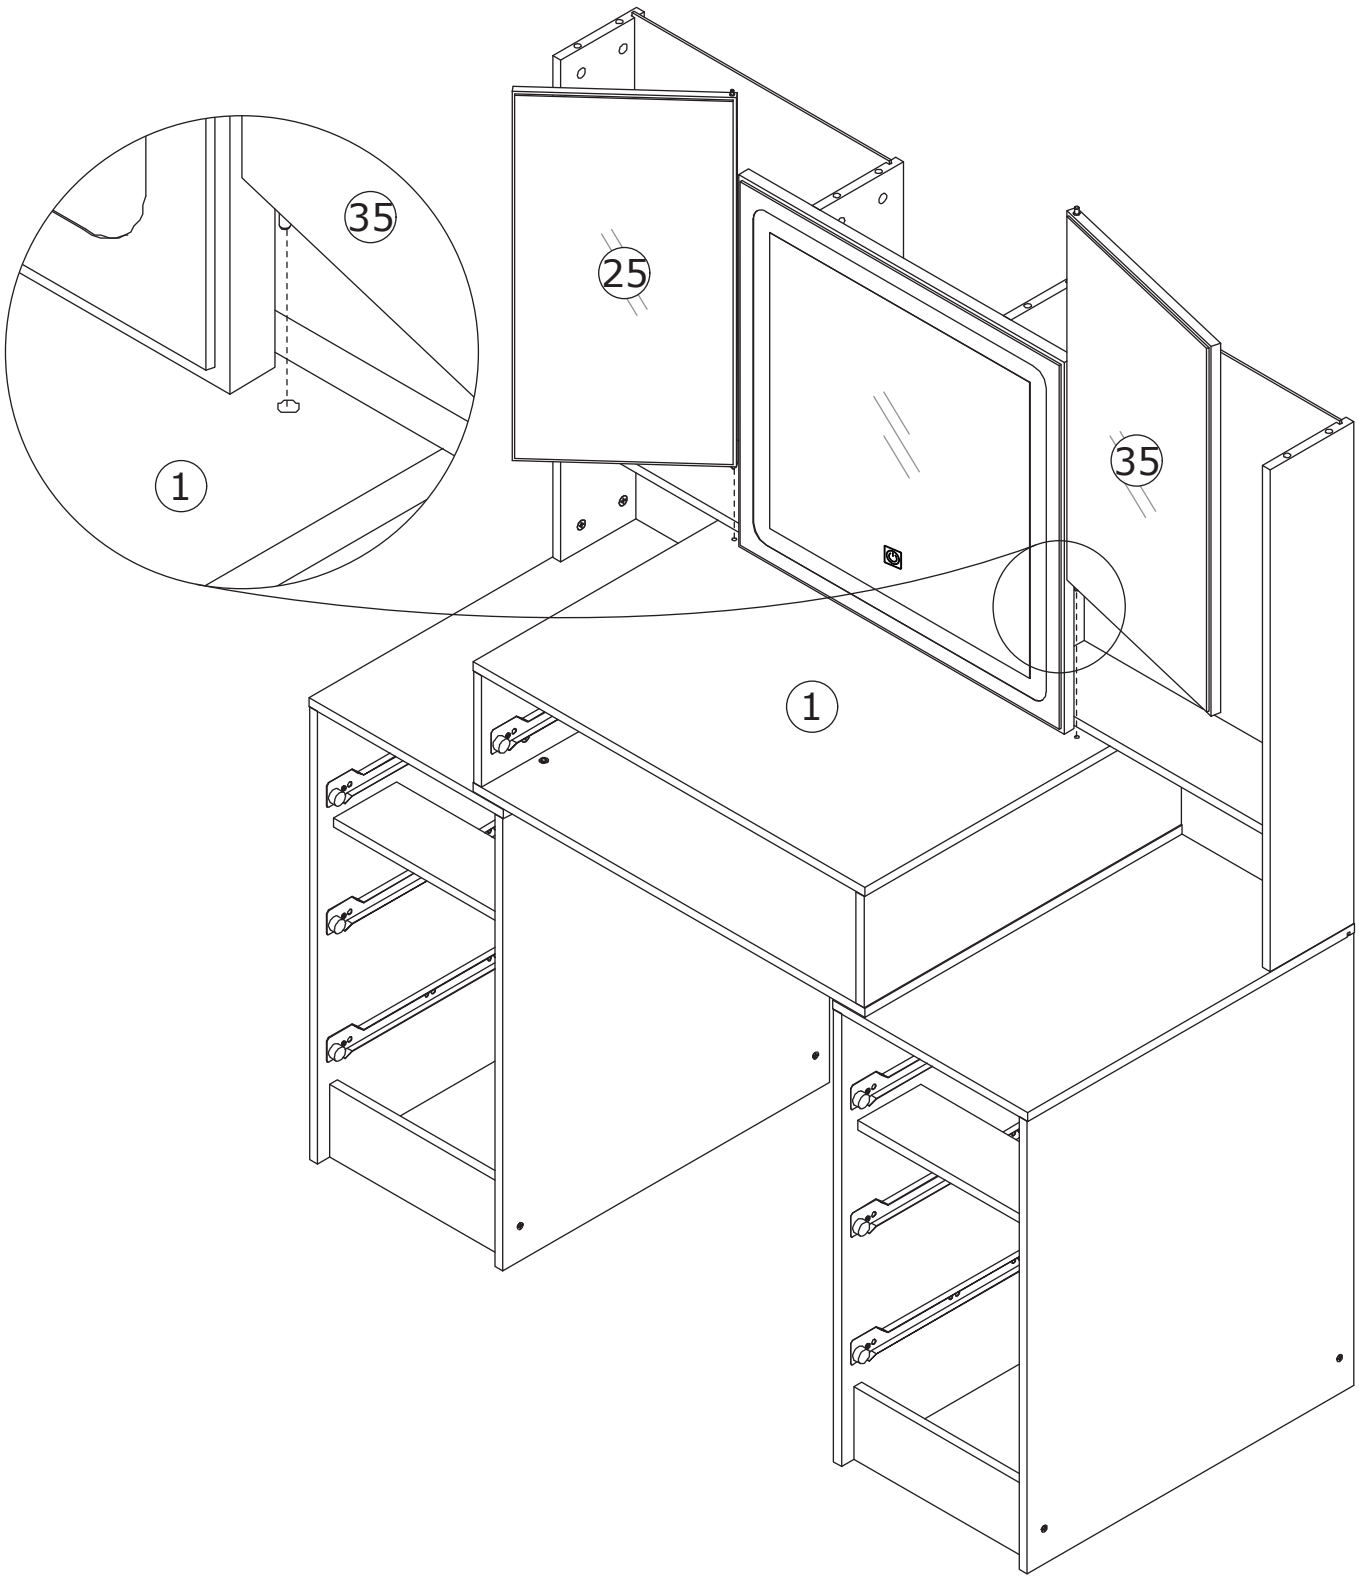



30

A x 8




CRB1295A





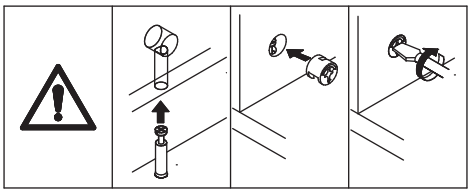



Attach panel 34 to panel 28, 29 and 32, add cam lock(A) into panel 28,29,32 and turn clockwise to tighten as shown.

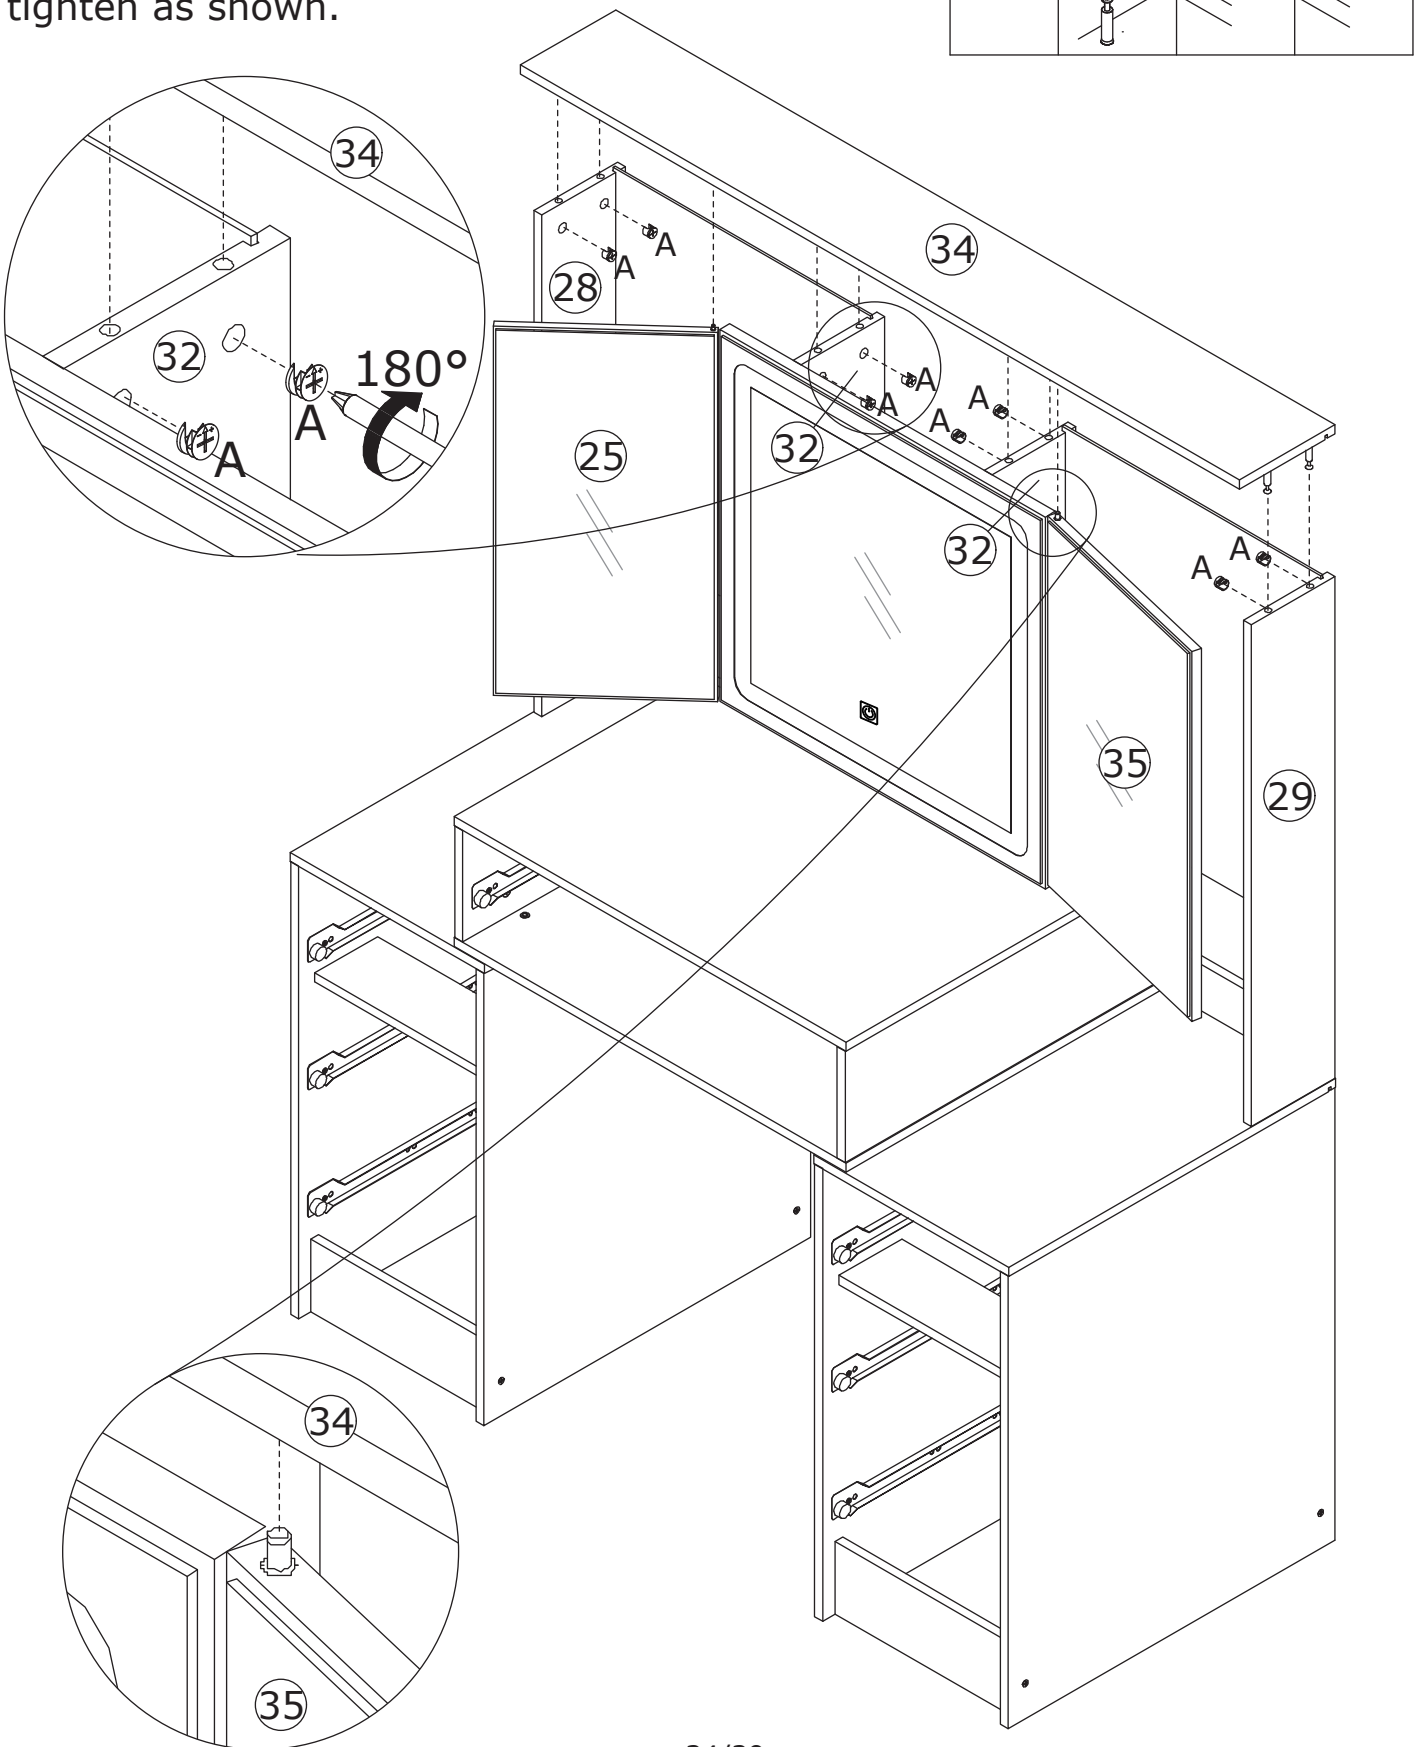

31


B x 28	E x 7	F x 7	
 CRA0640A		 CRE0416A	

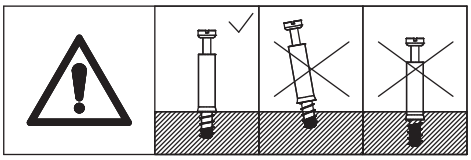


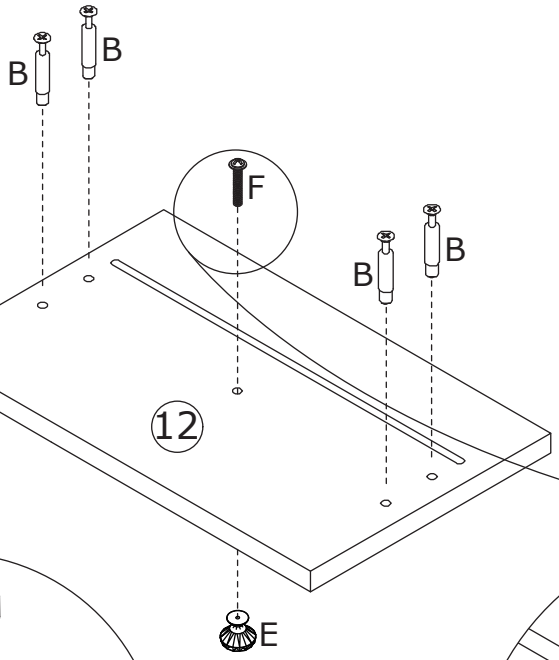



Screw eccentric rod(B) into panel 12 and 9 as shown. Fix knob(E) with screw(F) as shown.

x6

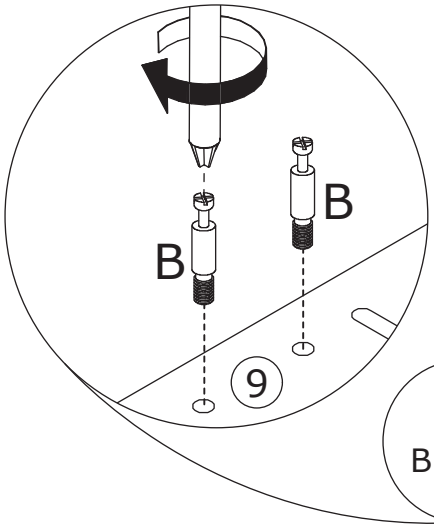

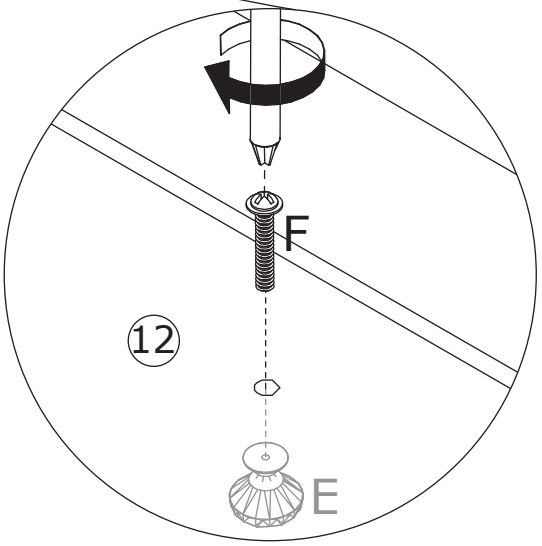


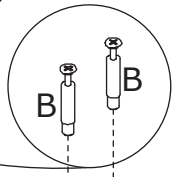

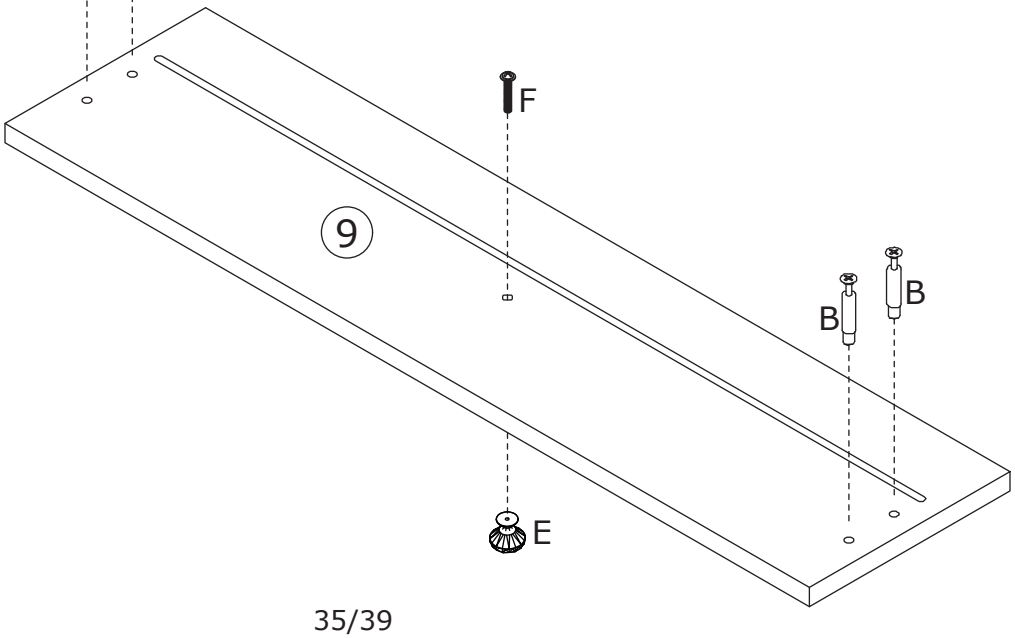


32


C x 4



CRC0540A



Fix panel 5 to panel 6 and 7 with screw(C) as shown.

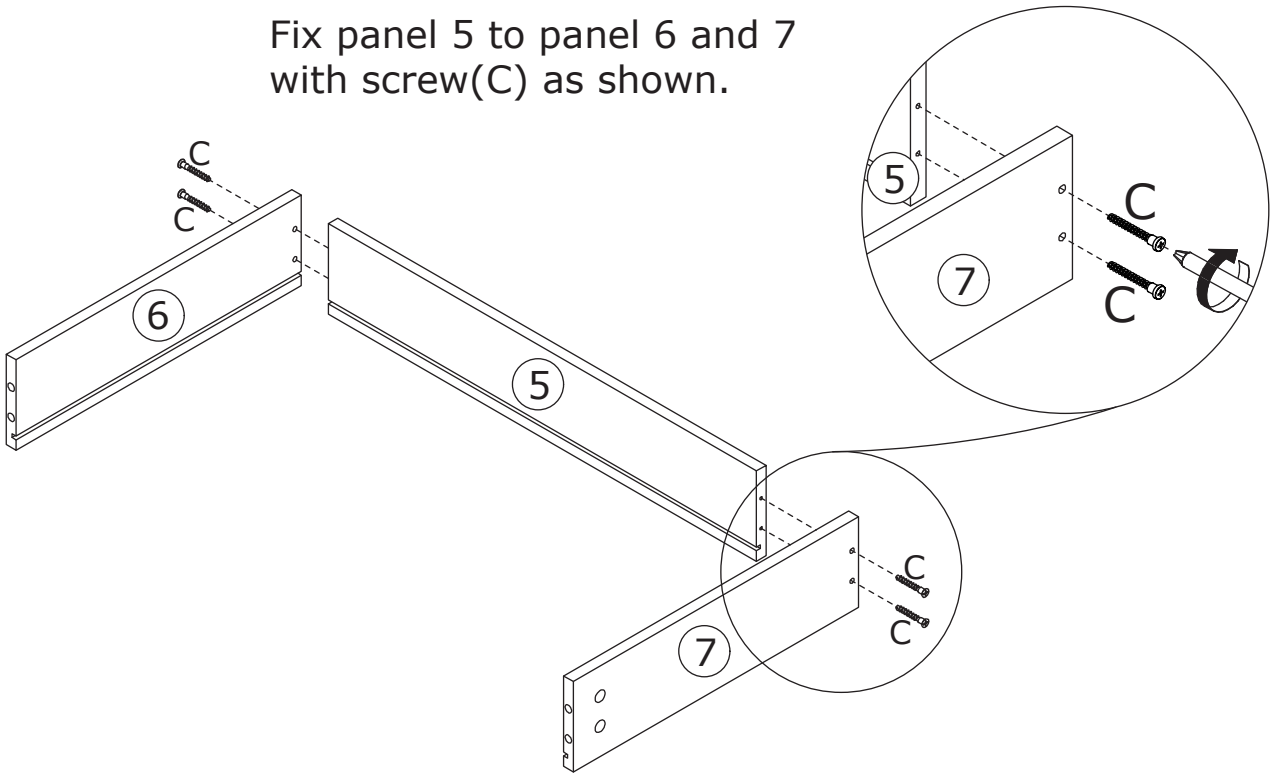


33


A x 4




CRB1295A




Insert bottom panel 8 along available grooves. Attach panel 9 to panel 7 and 6, add cam lock(A) into and turn clockwise to tighten as shown.

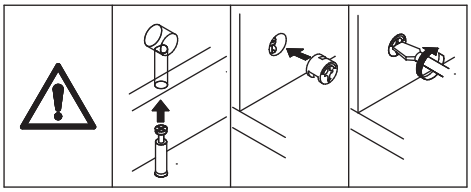

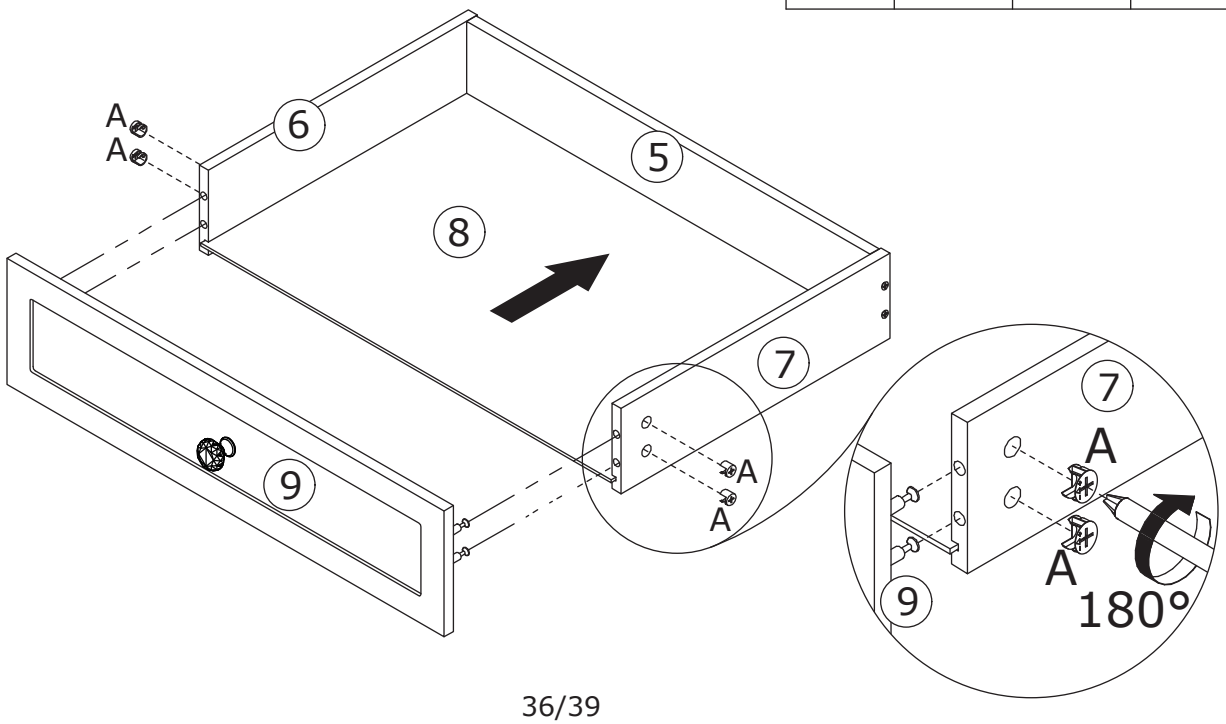


34

G x 4




CRD0312A


L x 1

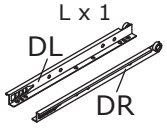


WX0814A





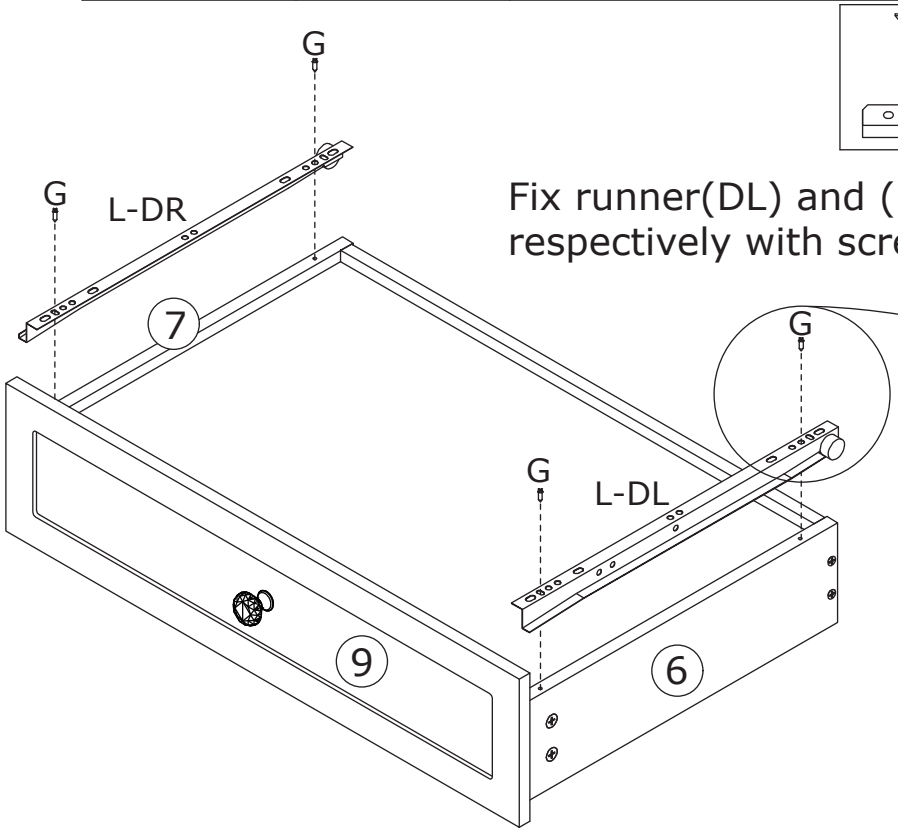


Fix runner(DL) and (DR) to panel 6 and 7 respectively with screw(G) as shown.

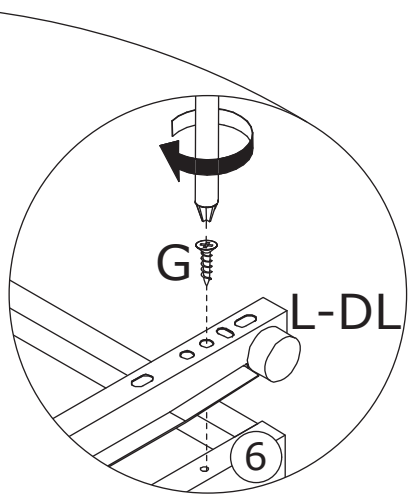


35


C x 24




CRC0540A



Fix panel 10 to panel 6 and 7 with screw(C) as shown.

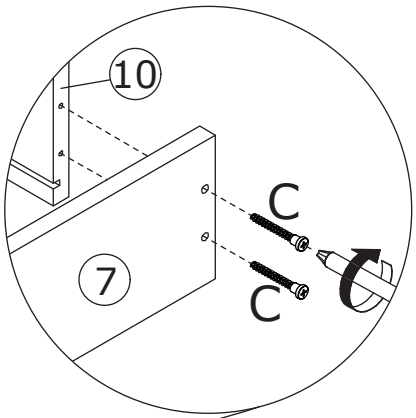

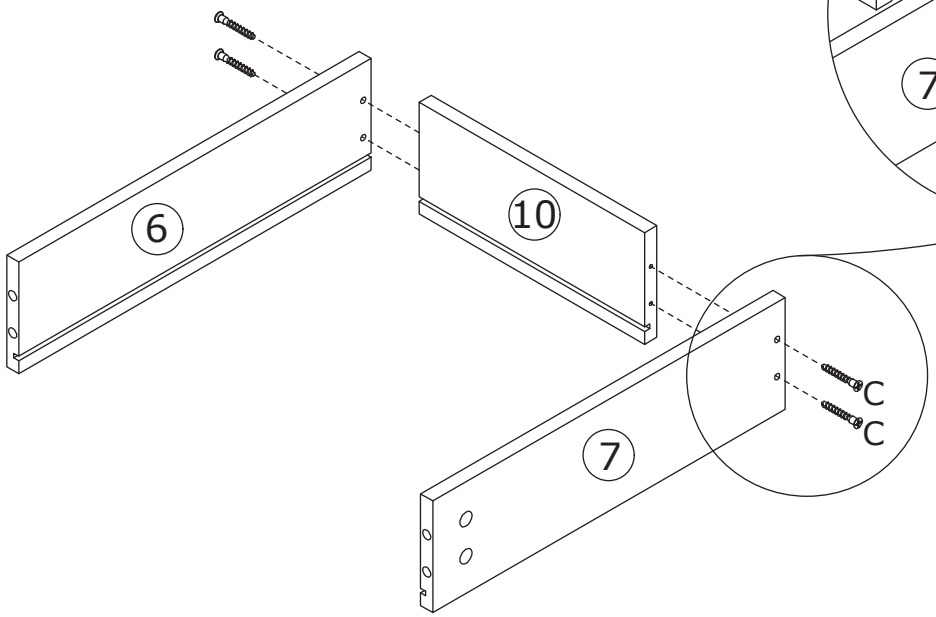


x6


36

A x 24




CRB1295A



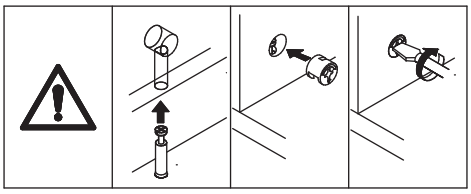

Insert bottom panel 11 along available grooves. Attach panel 12 to panel 7 and 6, add cam lock(A) into and turn clockwise to tighten as shown.

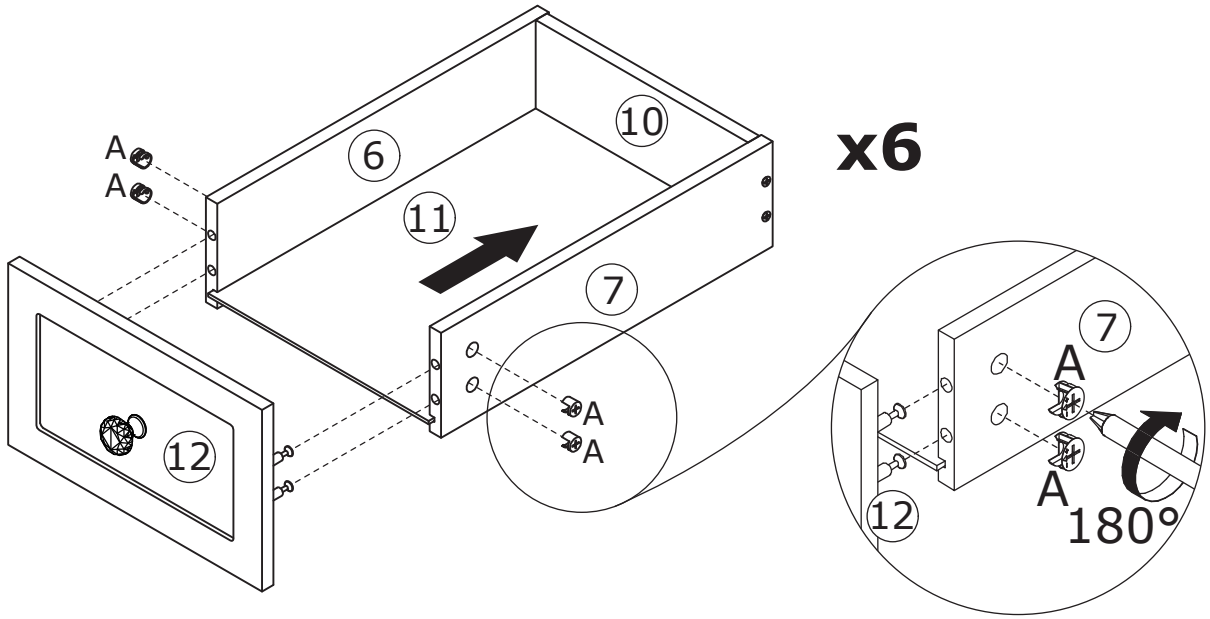


37

G x 24




CRD0312A

L x 6

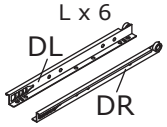

WX0814A







Fix runner(DL) and (DR) to panel 6 and 7 respectively with screw(G) as shown.

38

Power plug x 1



Touch sensing button to change color, press and hold to adjust the brightness.

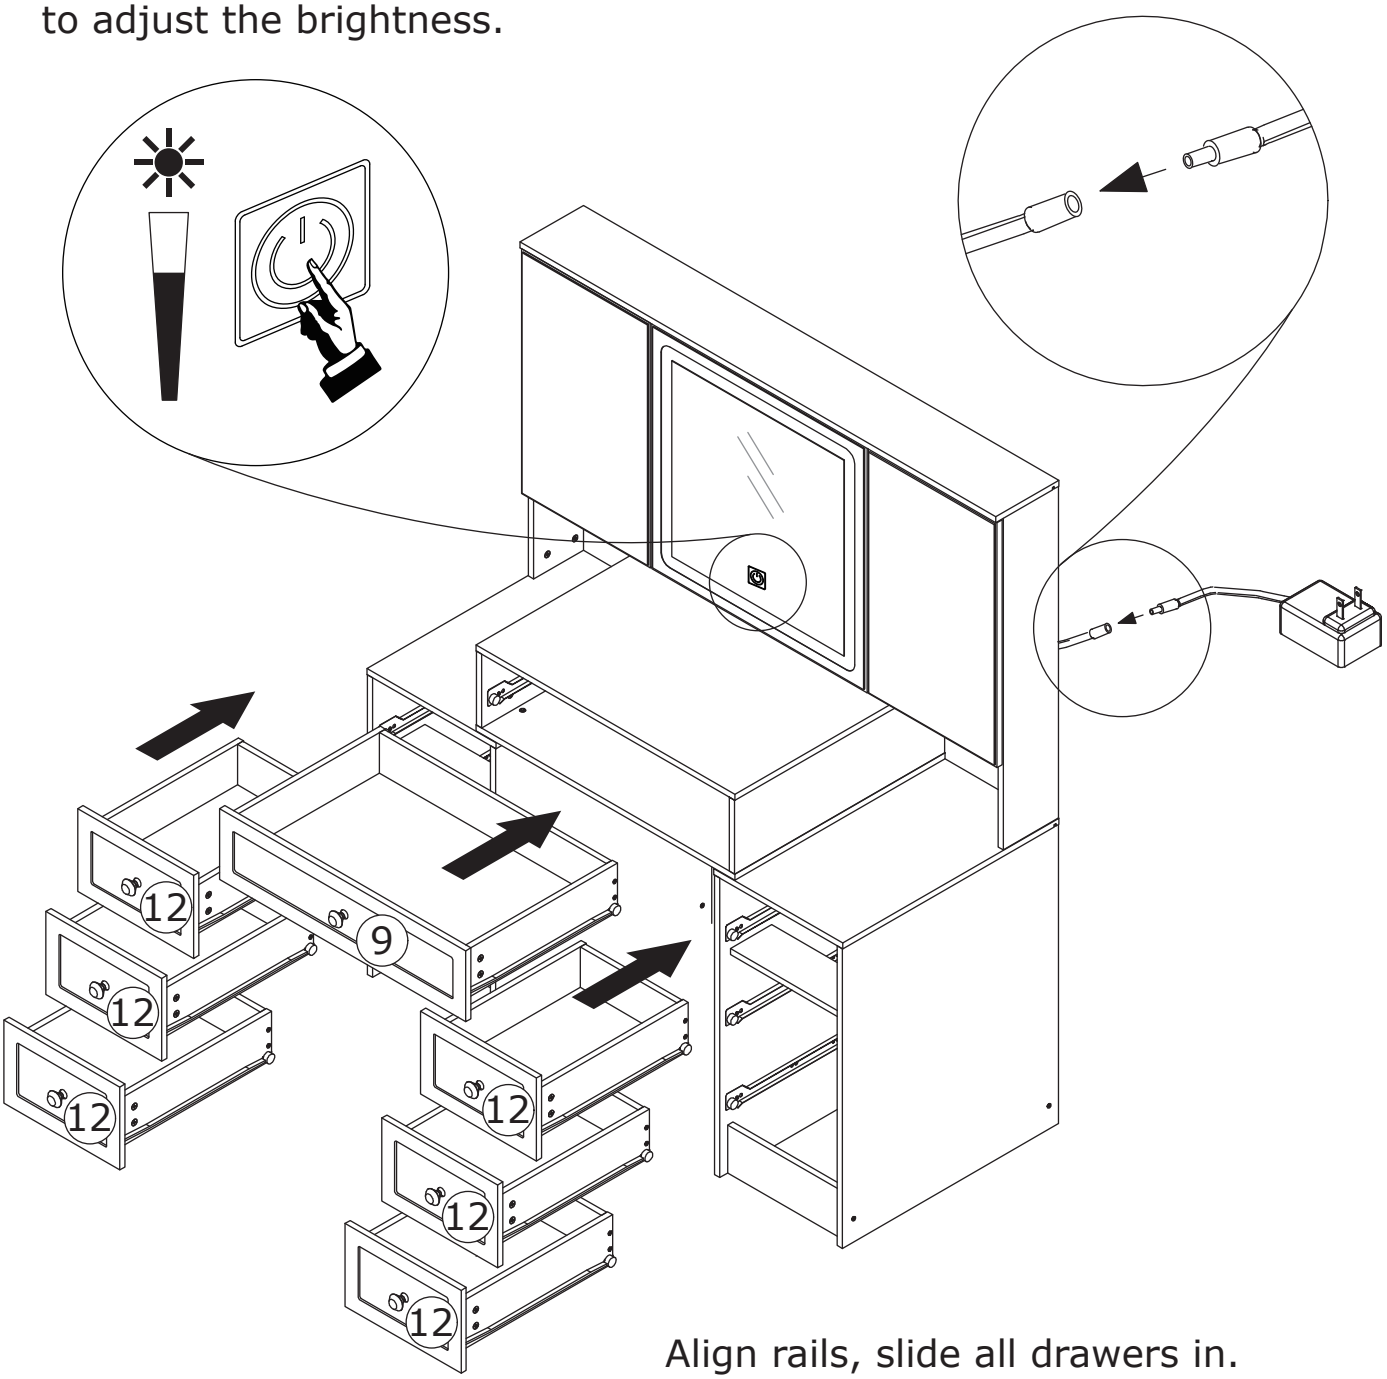

Align rails, slide all drawers in.

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT


feedbackstation@163.com


(303)800-6387