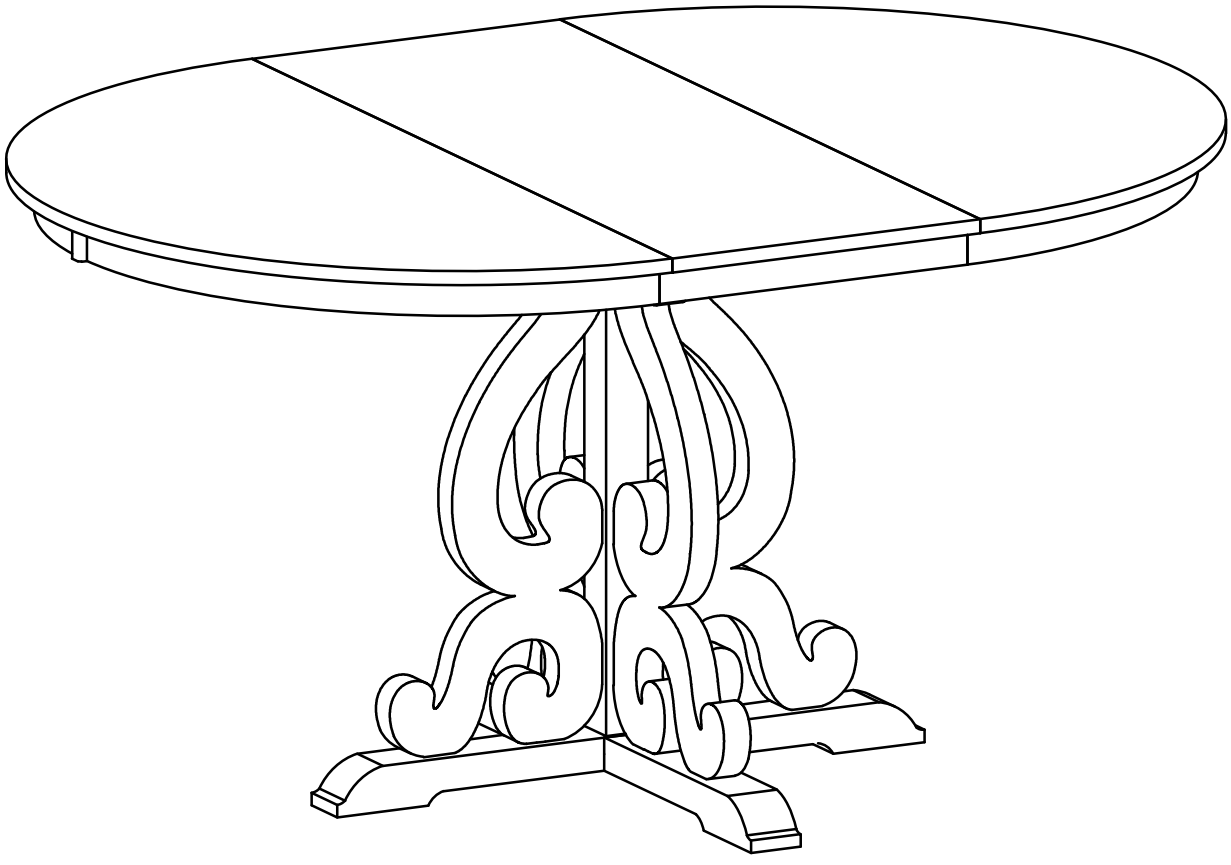
ASSEMBLY INSTRUCTIONS

Dining Table



ASSEMBLY INSTRUCTIONS

Please read these instructions fully before starting assembly：

1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.

2. Kindly follow the assembly instructions step by step.

3. Do not tighten all screws and bolts until the table is fully assembled.

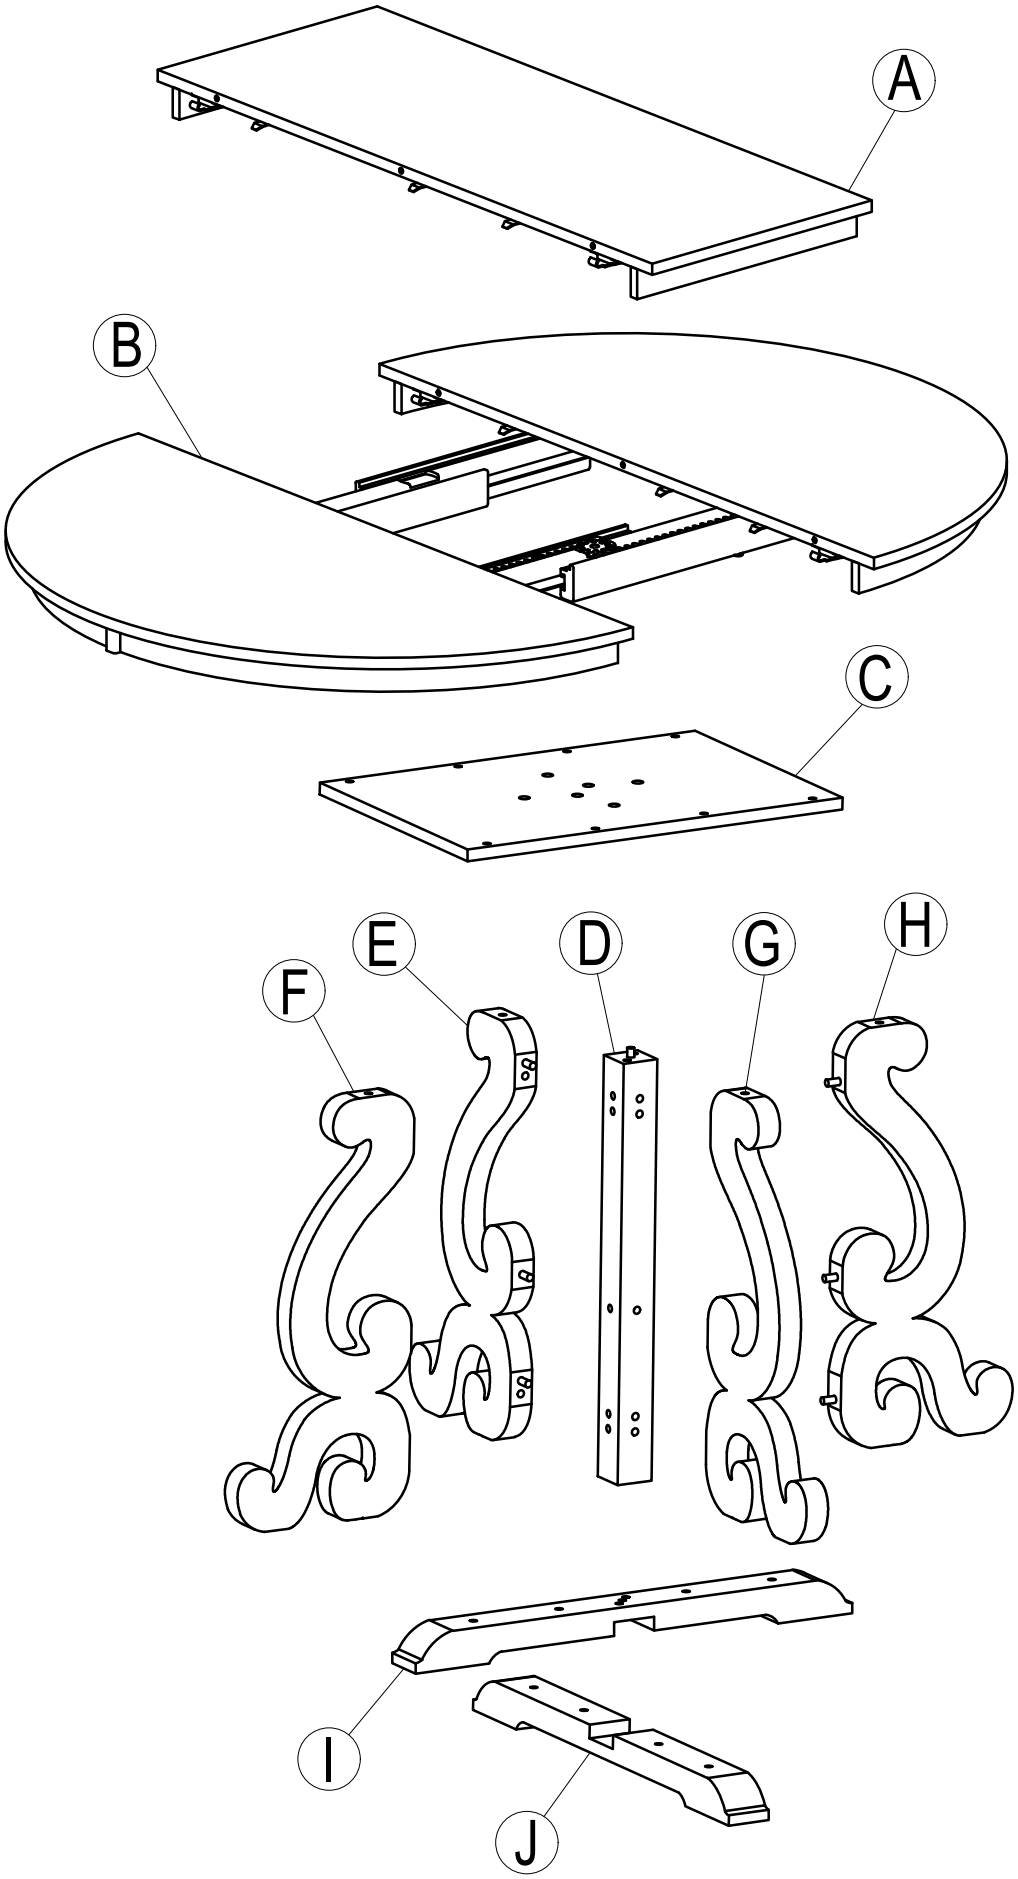
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.

5. Parts of the assembly will be easier with 2 people.

Care and maintenance：










Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTIONS





ASSEMBLY INSTRUCTIONS

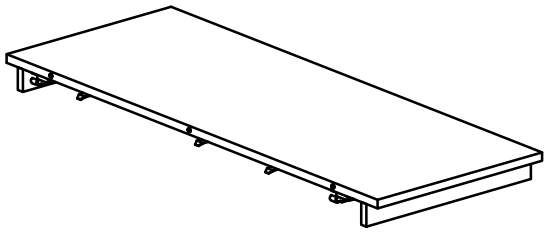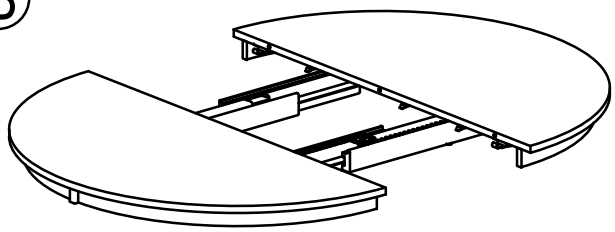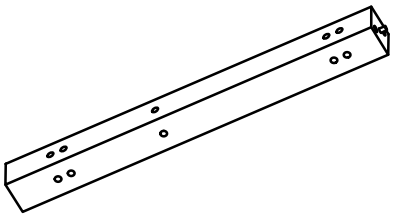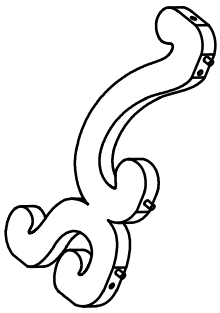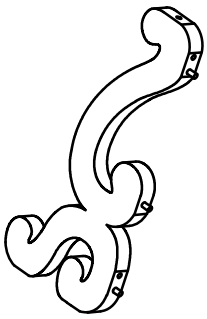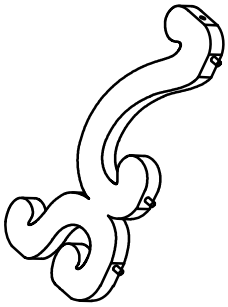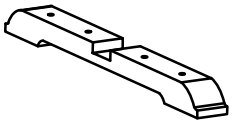Part List

A 	B 
TABLE TOP BETWEEN (1pc)	TABLE TOP SIDE (1pc)
C 	D 
PANEL TOP LEG (1pc)	BETWEEN LEG (1pc)
E 	F 
FRONT DECORATIVE COTTON (1 pc)	RIGHT DECORATIVE COTTON (1 pcs)
G 	H 
BACK DECORATIVE COTTON (1 pcs)	LEFT DECORATIVE COTTON (1 pcs)
I 	J 
TOP STRETCHER (1pc)	BOTTOM STRETCHER (1pc)


ASSEMBLY INSTRUCTIONS

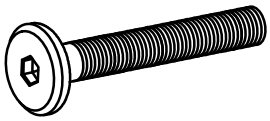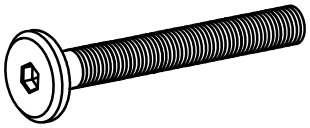Hardware List

①  Ø 5/16" x 40 mm	②  Ø 5/16" x 55 mm
BOLT (14 pcs)	BOLT (14 pcs)
③  Ø5/16" x 13 mm	④  4 mm
FLAT WASHER (28 pcs)	ALLEN KEY (1 pc)


ASSEMBLY INSTRUCTIONS

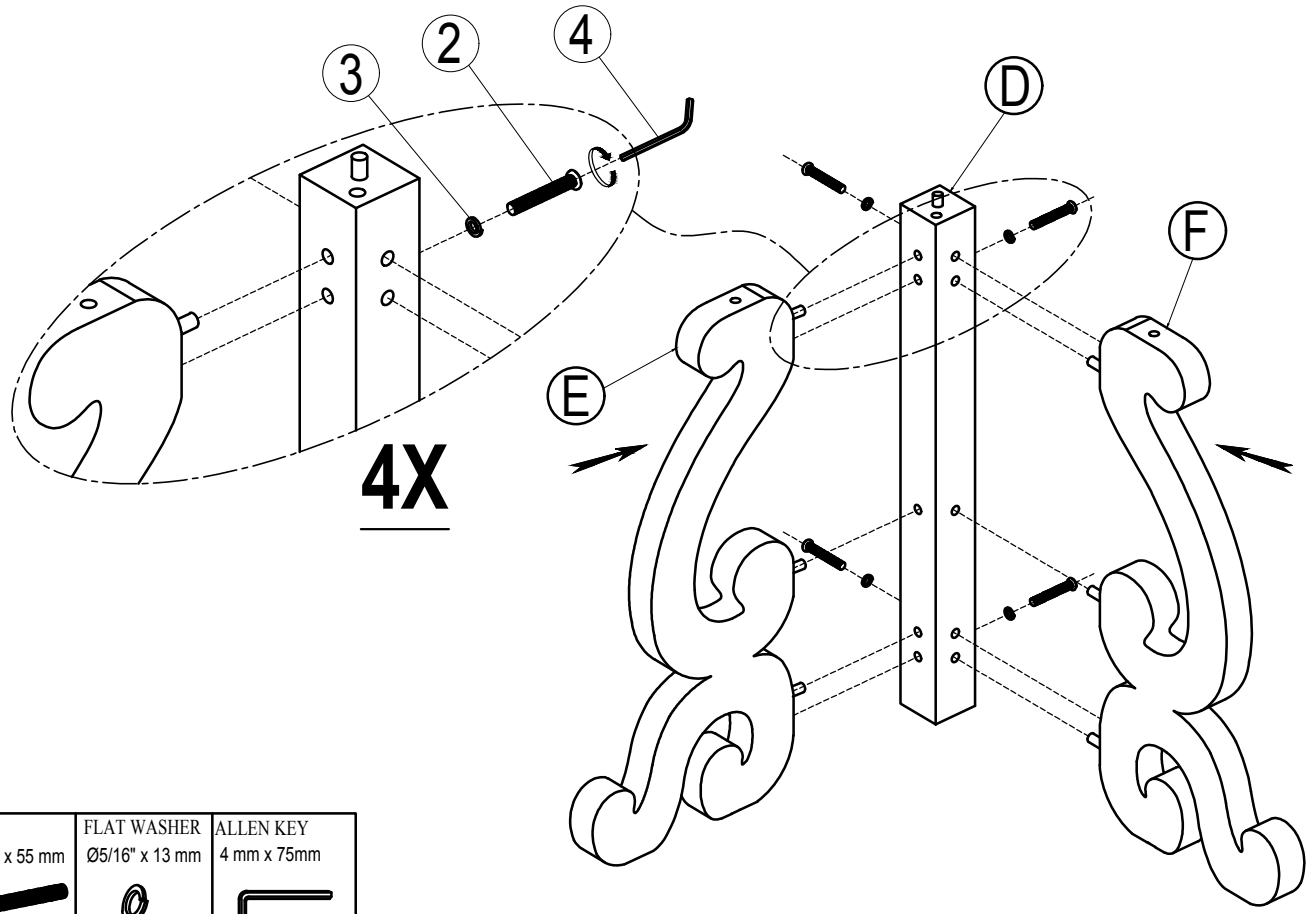STEP 1:




BOLT	FLAT WASHER	ALLEN KEY
Ø 5/16" x 55 mm	Ø5/16" x 13 mm	4 mm x 75mm
②x 4	③x 4	④x 1

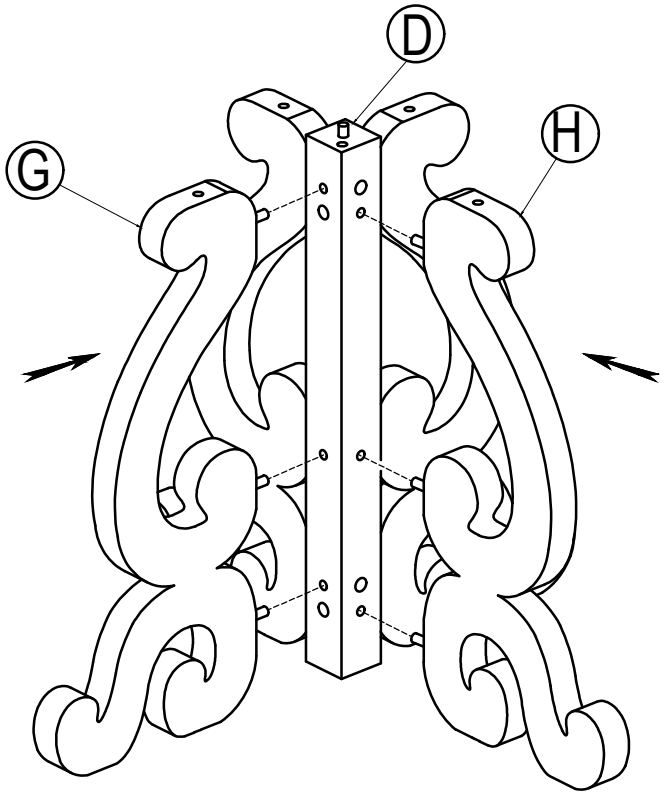STEP 2:




ASSEMBLY INSTRUCTIONS

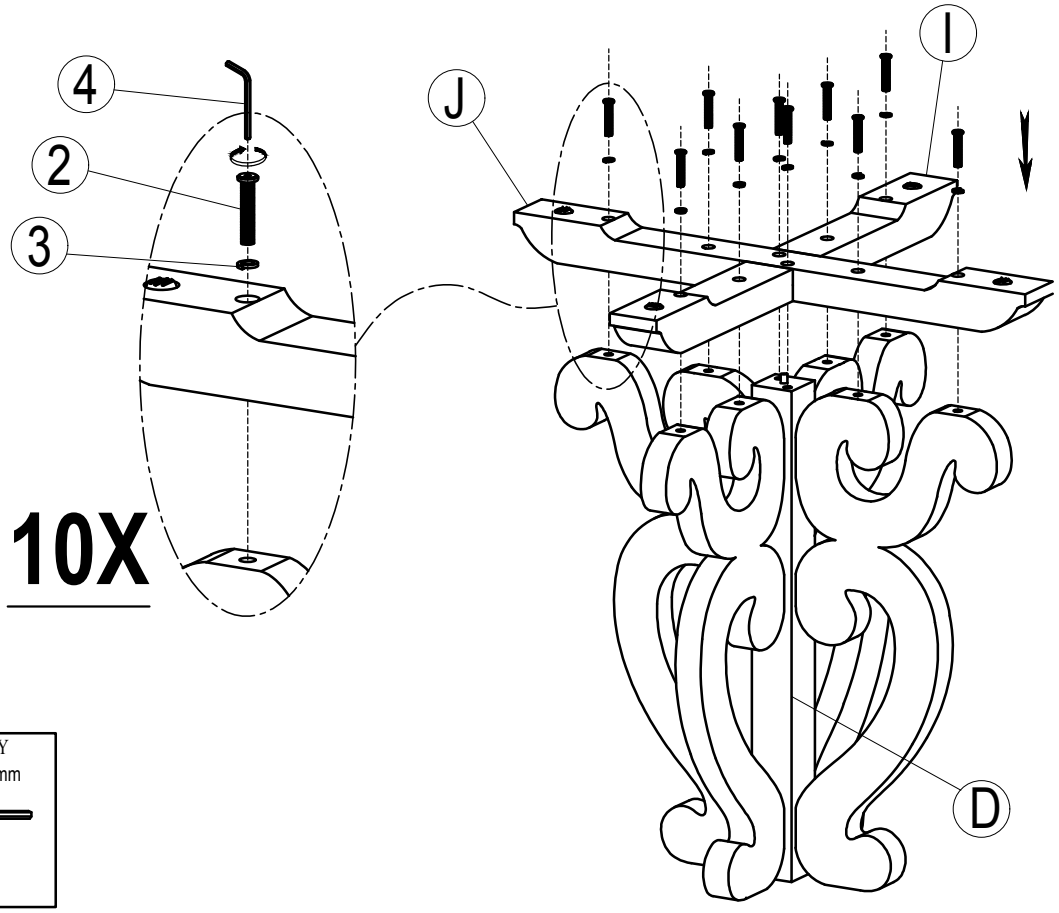STEP 3:



BOLT	FLAT WASHER	ALLEN KEY
Ø 5/16" x 55 mm	Ø5/16" x 13 mm	4 mm x 75mm
②x 10	③x 10	④x 1

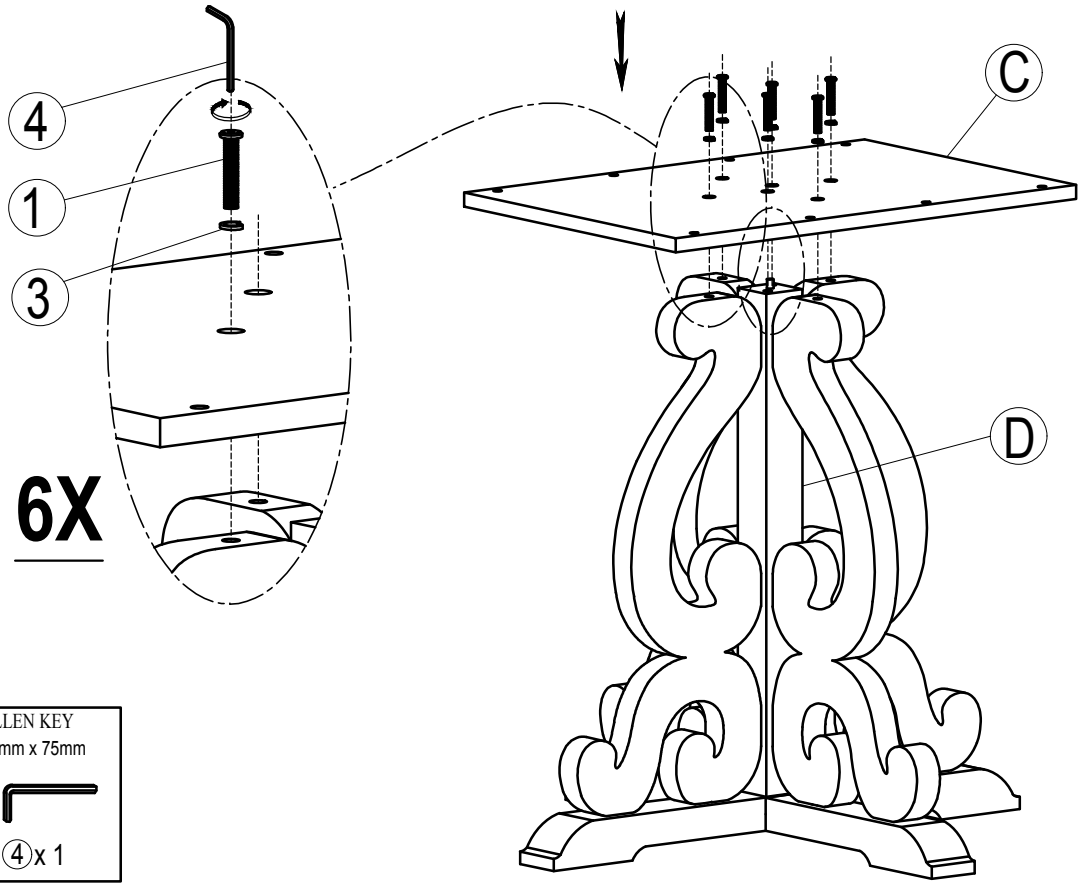
STEP 4:



BOLT	FLAT WASHER	ALLEN KEY
Ø 5/16" x 40 mm	Ø5/16" x 13 mm	4 mm x 75mm
①x 6	③x 6	④x 1

ASSEMBLY INSTRUCTIONS

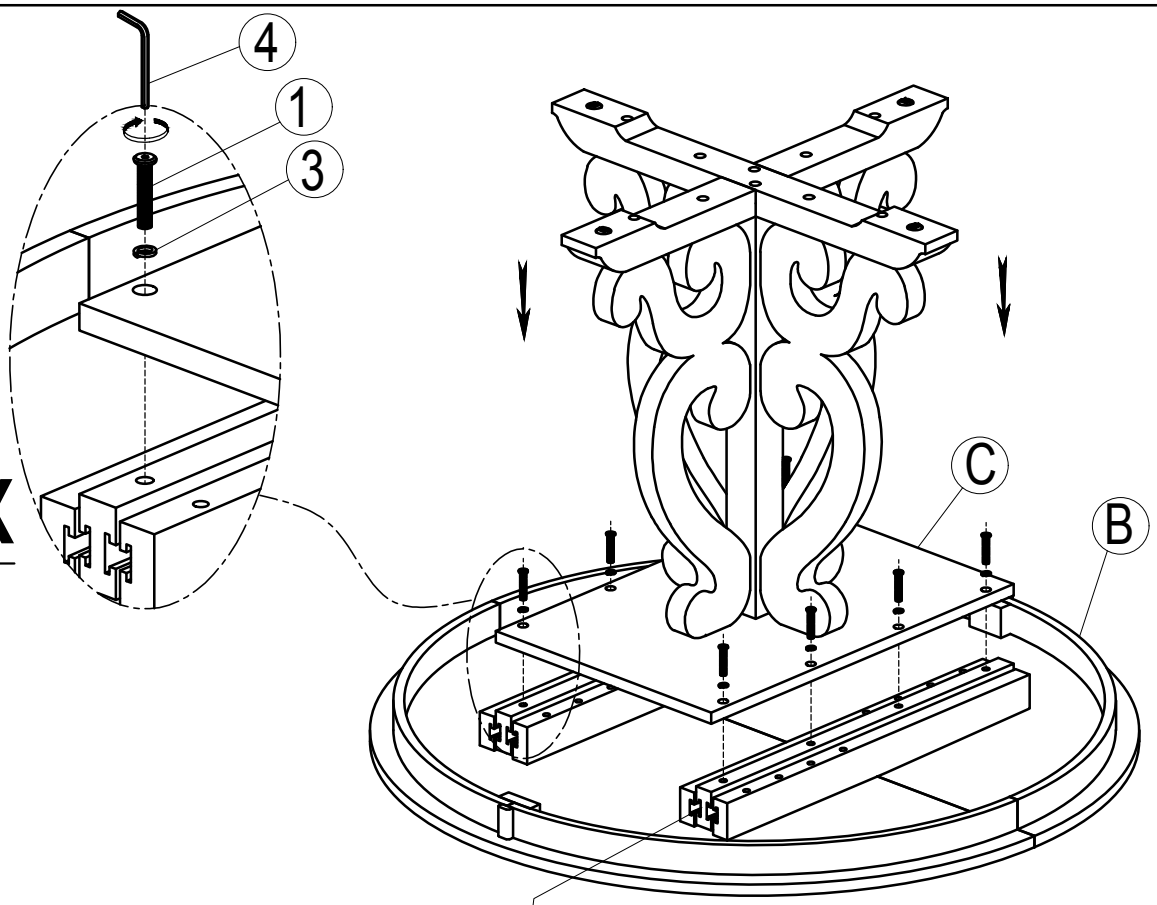
STEP 5:




BOLT	FLAT WASHER	ALLEN KEY
Ø 5/16" x 40 mm	Ø5/16" x 13 mm	4 mm x 75mm
①x 8	③x 8	④x 1

This part of the slide rail can be moved,if the holes are not aligned during the assembly process please try to move the slide rail to the position shown in the figure end then essemble!

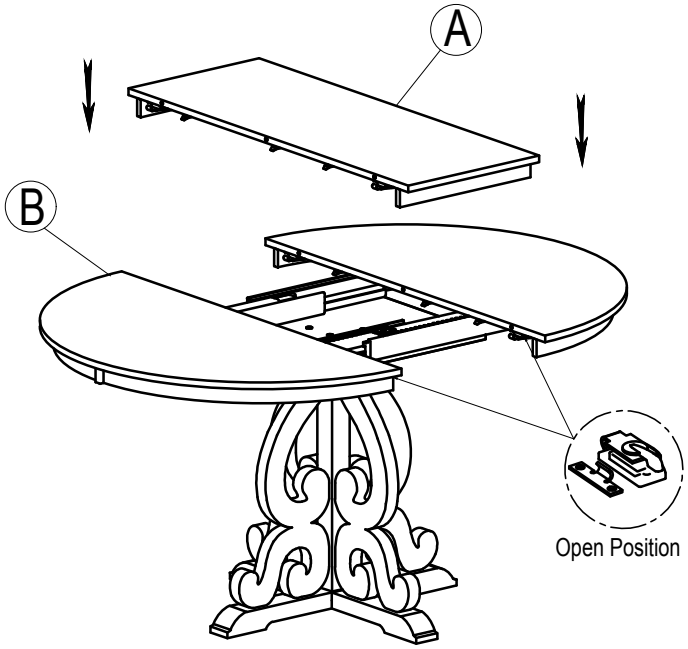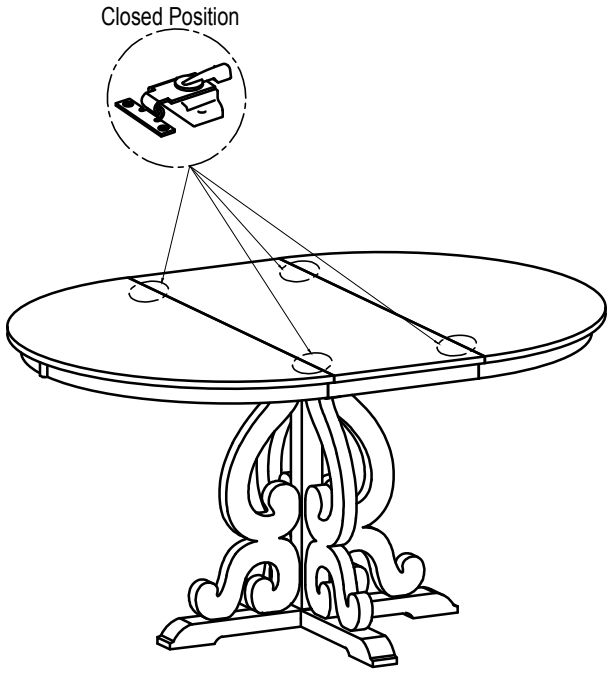STEP 6:





ASSEMBLY INSTRUCTIONS

COMPLETE

