
FLEXSTEEL®

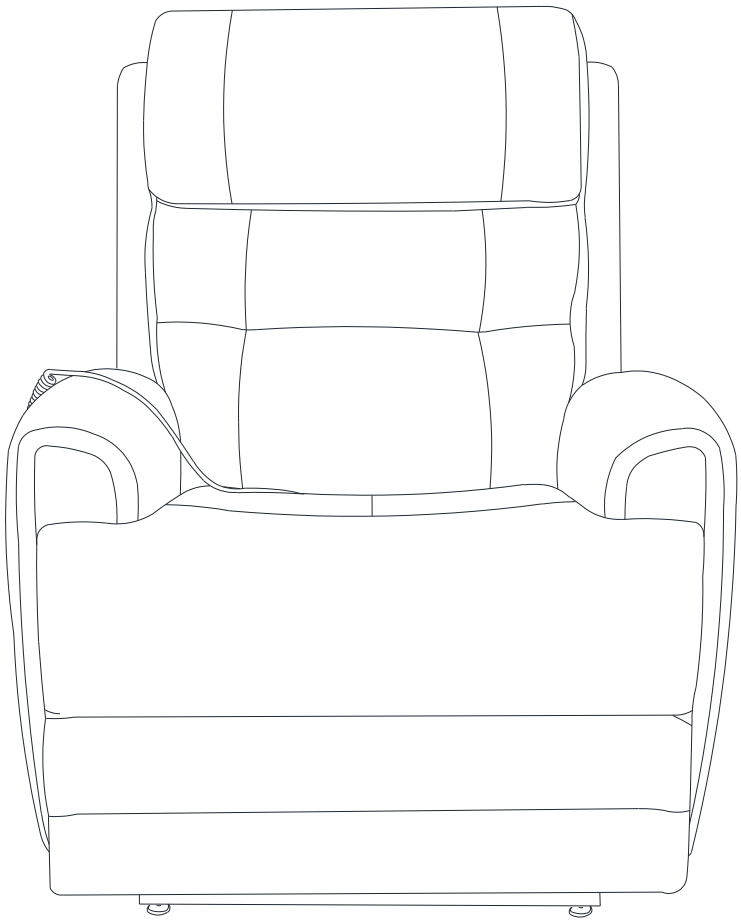

ASSEMBLY INSTRUCTIONS

1671 VESPER


Power Lift Recliner

with Power Headrest and Lumbar


FLEXSTEEL®

PARTS LIST


The following components should be included in your box.

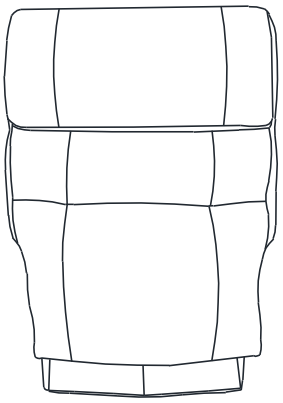

Back

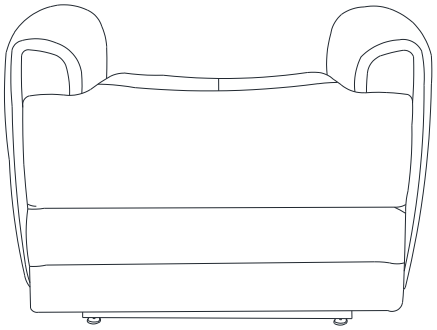

Seat



Left Wing



Right Wing



Hand Wand



Transformer


FLEXSTEEL®

ASSEMBLY INSTRUCTIONS

Step 1: Remove accessories


Detach the Transformer, Hand Wand, and Wings from the back of the Seat. (See Figure 1)
Note: The Hand Wand cord is already plugged into the control box.

(Figure 1.)

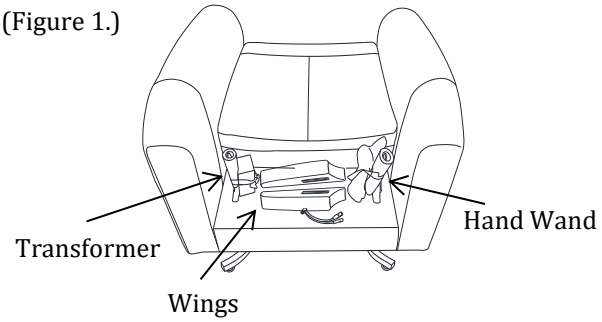

Step 2: Attach the Back and Wings


Attach the Back to the Seat, and the two Wings to the Back. Ensure the latches fit well.
(See Figure 2)

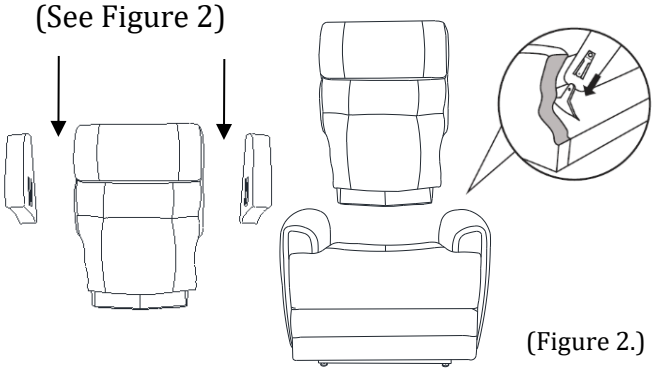

(Figure 2.)

Step 3: Connect the Hand Wand


Feed the Hand Wand through the hole in the fabric on the bottom of the Back. (See Figure 3)

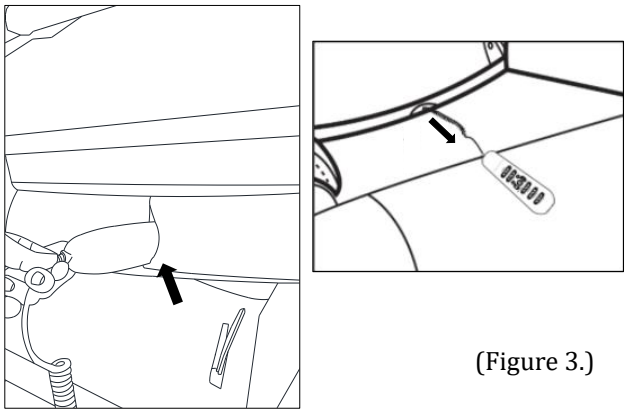

(Figure 3.)

Step 4: Connect the Back and Seat


Zip the fabric on the bottom of the Back with the back of the Seat. (See Figure 4)

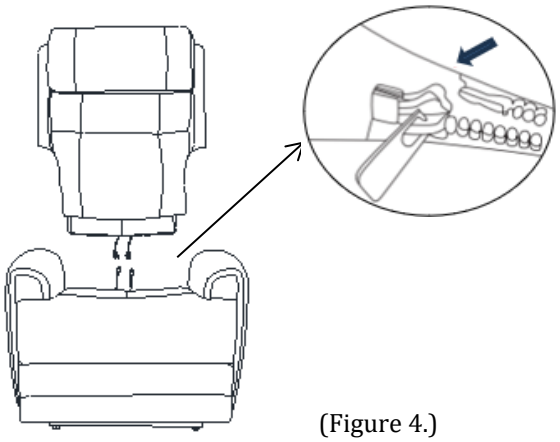

(Figure 4.)

Step 5: Connect the Cables


Flip up the back flap and connect the matching headrest and lumbar cables. The headrest cables are identified with yellow labels and the lumbar cables are identified with white labels.
(See Figure 5)

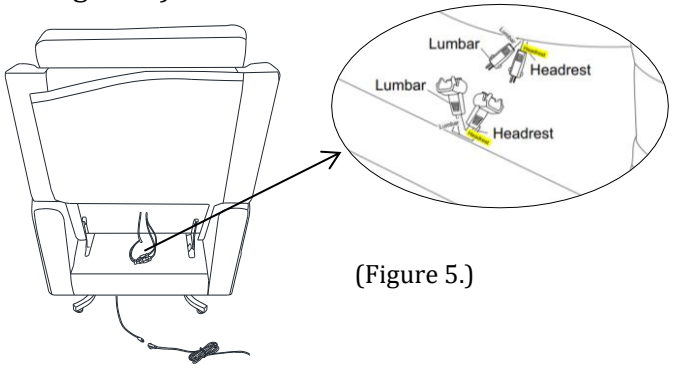

(Figure 5.)

Step 6: Connect Power

Connect the power supply cable from the bottom of the Seat to the Transformer, then plug it into a nearby outlet. (See Figure 6)

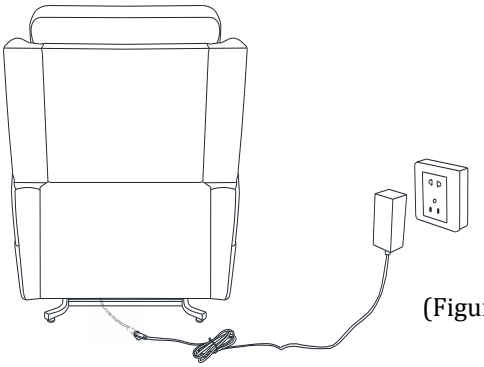

(Figure 6.)

SIT BACK, RELAX AND ENJOY!

FLEXSTEEL®

TROUBLESHOOTING

PROBLEM	POSSIBLE FACTORS	SOLUTIONS
Chair doesn't recline	Transformer may not be connected well	• Check that the power supply has been correctly connected to transformer and socket • Confirm the wire from chair to transformer is firmly connected
Power not working	Power outlet on wall not functioning	• Check power from your wall outlet • Plug in a different device to make sure outlet has power
Motor doesn't work	The motor wires may not be properly connected inside back flap of chair	• Check that the motor wires have been correctly connected

When checking connections, unplug the chair from the wall first.
Then check the connections, making sure they are connected to the correct connector and tightly secured.
Then, plug the chair back into the wall to test your connections.