OWNER'S MANUAL




Keep children or unauthorized persons away from your guns

Thank you very much for purchasing our gun safe. Please take some time to read the introduction of this gun cabinet and familiarize yourself with the correct operation and assembly steps.


❗ ***Please do not keep emergency keys in your safe!***

Components

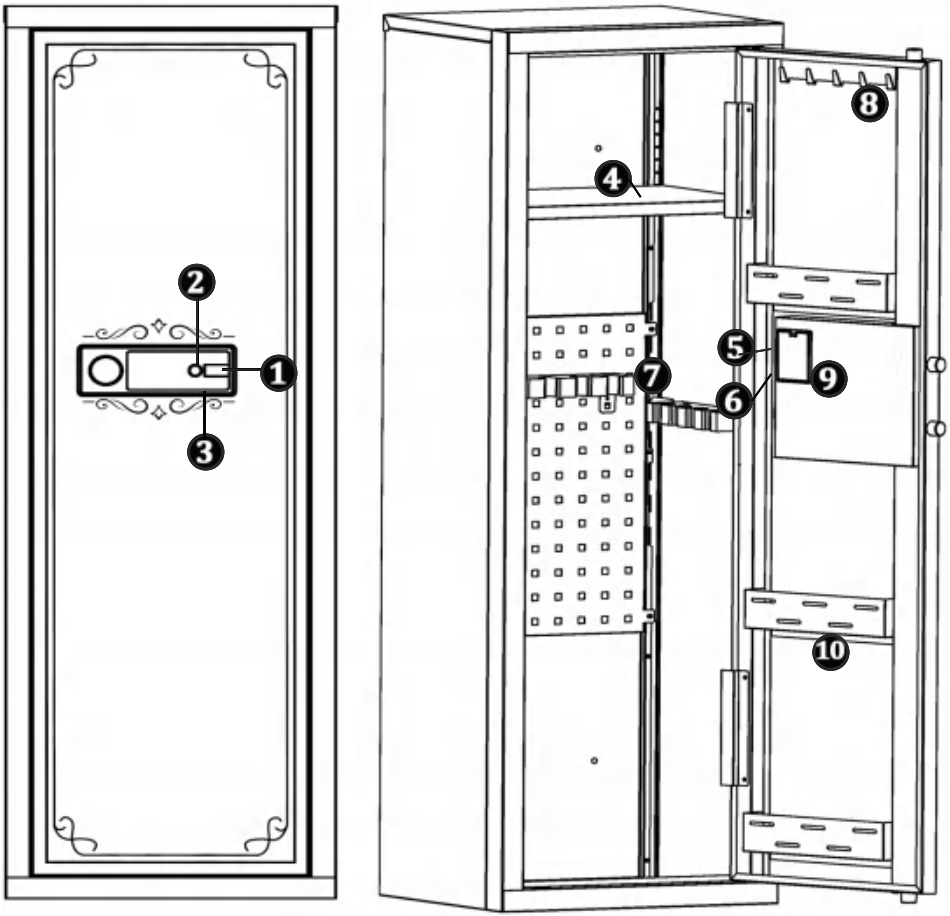

1	Emergency Keyhole	2	Fingerprint Scanner
3	External Battery Box Hole	4	Removable Shelf
5	Setting Button	6	Led Light
7	Removable Gun Rack	8	Hook
9	Battery Compartment	10	Magazine Storage Box

Component Introduction

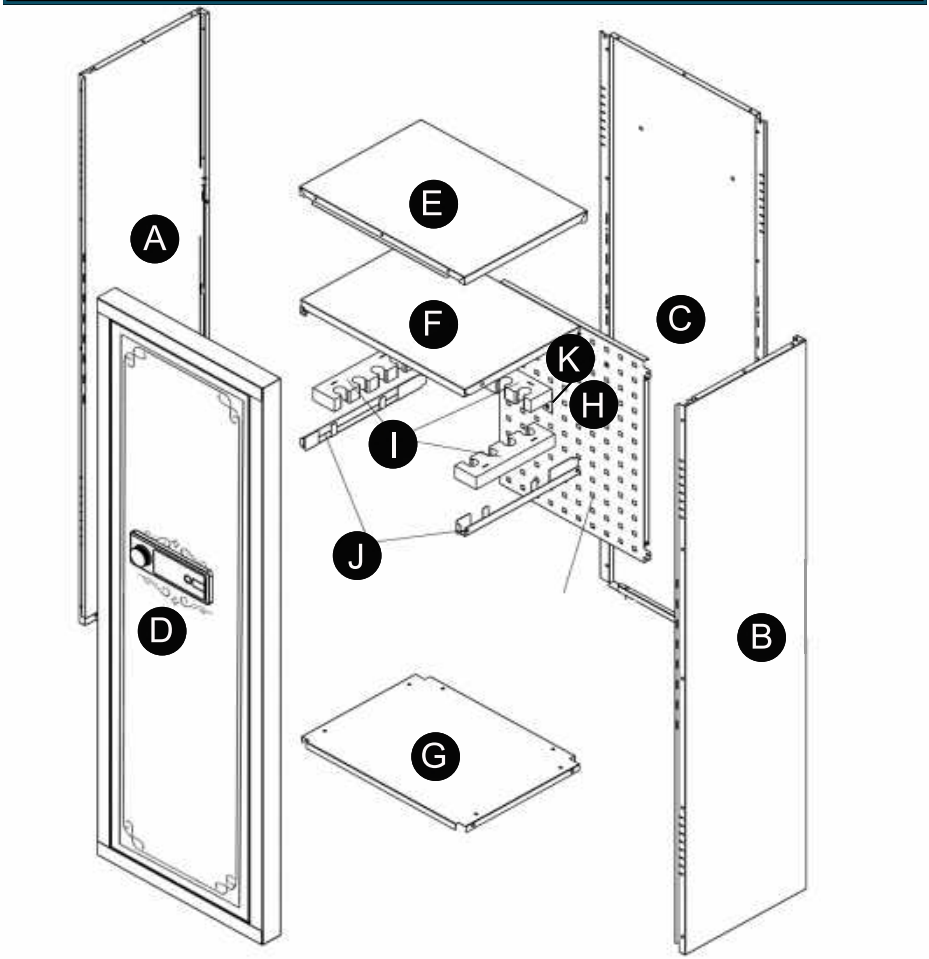

Check the materials to make sure they are working correetly and are not damaged.
Refer to the illustrations to identify the parts and accessories of the gun cabinet.
lf any parts are missing or damaged, please contact us, and we will provide you with a solution.



Tip Over Hazard

· Please secure the gun safe to a wall or floor before use to prevent children or adults from tipping the safe over and causing death or serious injury.

· Children should not play around the safe at any time.

PARTS - Gun Safe

A Side Panel-L



B Side Panel-R



C Back Panel



D Door Frame







E Top Shelf




G Bottom Shelf

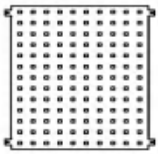

H Back mesh panel

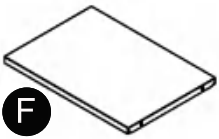

F Removable Shelf

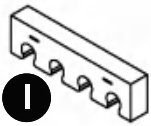

I Gun Rack x4



J Gun Bracket x2 (are symmetrical)



K Back Mesh Gun Bracket x2




L Self-tapping Screws x42



M Rivet x4



N Shelf Buckle x4

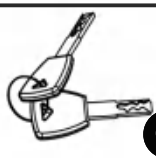

O Keys x2



P Screwdriver



Q Gloves



R Expansion Bolts x4



S External Battery Box

Assembly Steps





A: 1PC
D: 1PC
L: 5PC

Step 1
Connect A and D with the self-tapping screws.

Assembly Steps





B: 1PC
D: 1PC
L: 5PC

Step 2
Connect B and D with self-tapping screws.

Assembly Steps





A: 1PC
B: 1PC
D: 1PC
C: 1PC
L: 10PCS

Step 3
Connect A, B, D and C with self-tapping screws.

Assembly Steps







G: 1PC
L: 6PCS

Step 4
Install G with self-tapping screws.

Assembly Steps

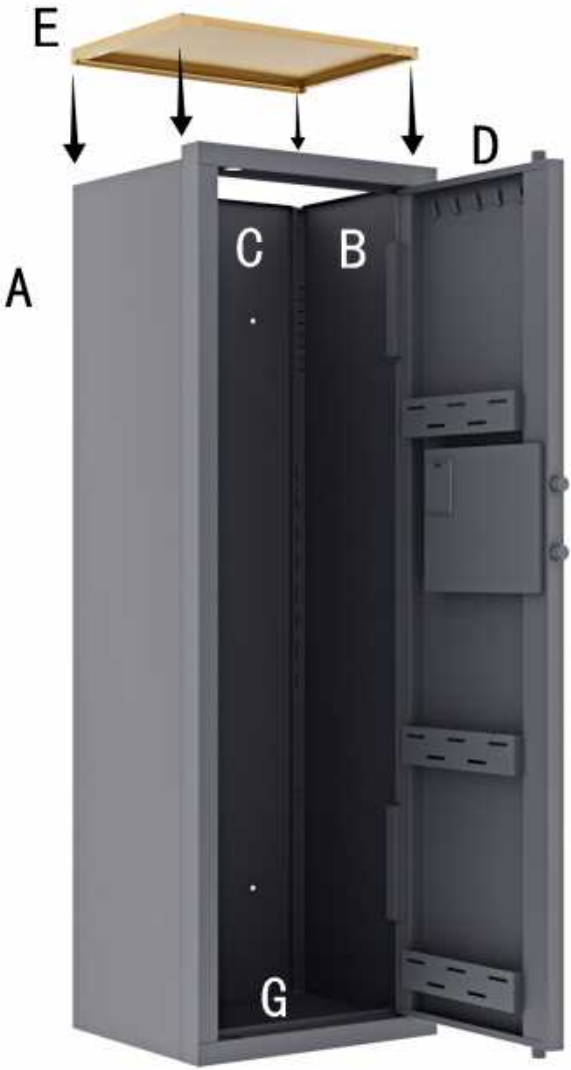


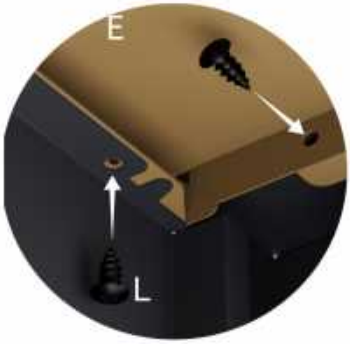


A: 1PC
B: 1PC
D: 1PC
C: 1PC
G: 1PC
E: 1PC
L: 12PCS

Step 5
Install E with self-tapping screws.

Assembly Steps

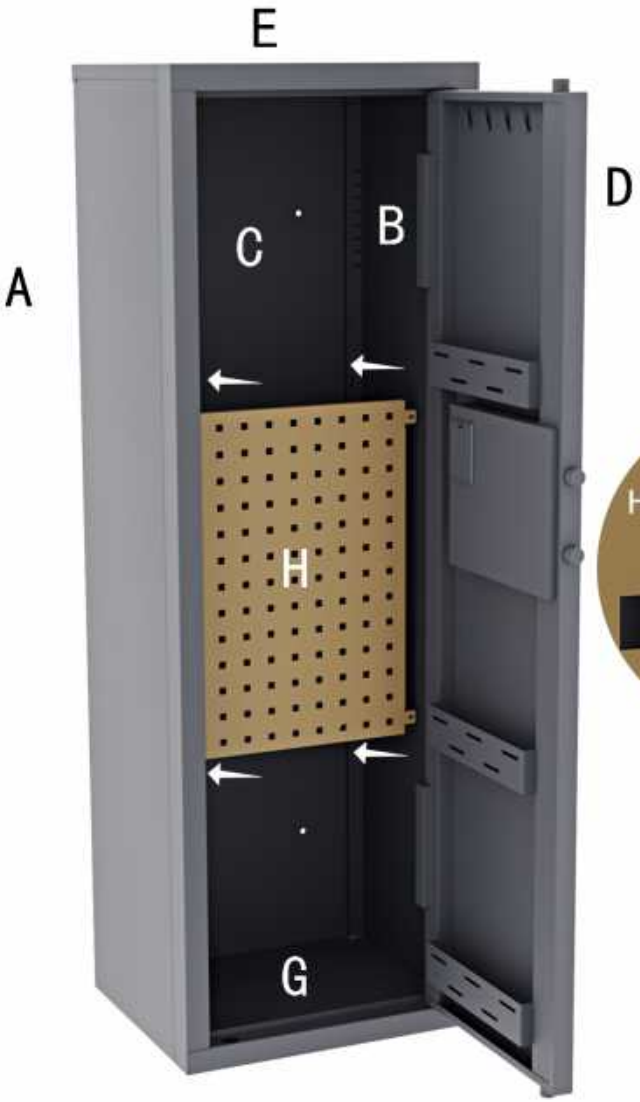

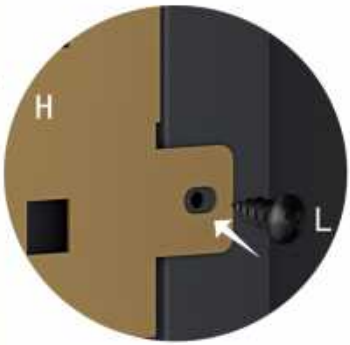

A: 1PC
B: 1PC
D: 1PC
C: 1PC
G: 1PC
E: 1PC
H: 1PC
L: 4PCS

Step 6
Install H with self-tapping screws.

Assembly Steps









F: 1PC
N: 4PCS

Step 7
Install F with shelf buckle.

Assembly Steps

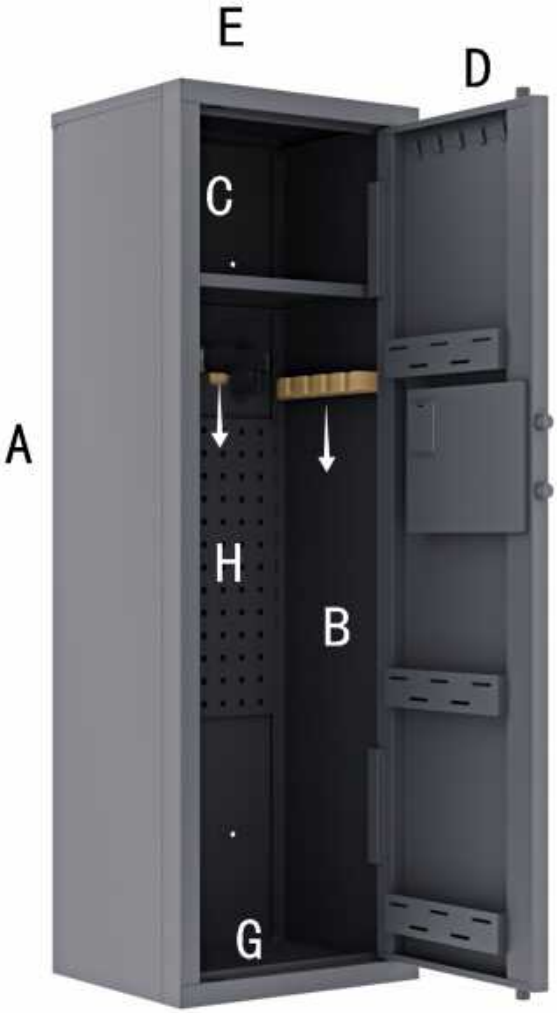

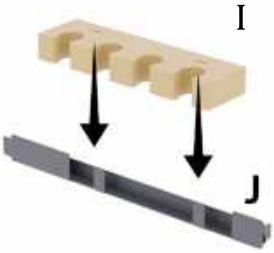







I: 2PCS
J: 2PCS （are symmetrical）

Step 8
Connect I and J then install it to A and B .

Assembly Steps

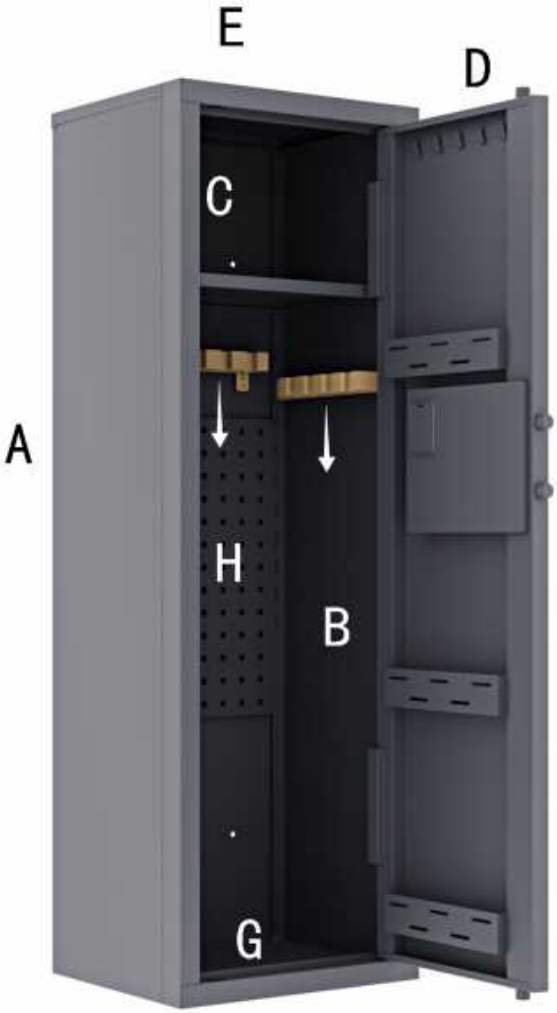


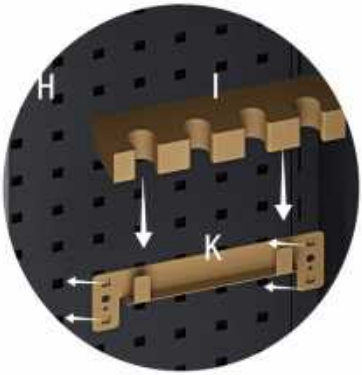

I: 2PCS
K: 2PCS

Step 9
Connect I and K then install it to H .

Operating Instructions

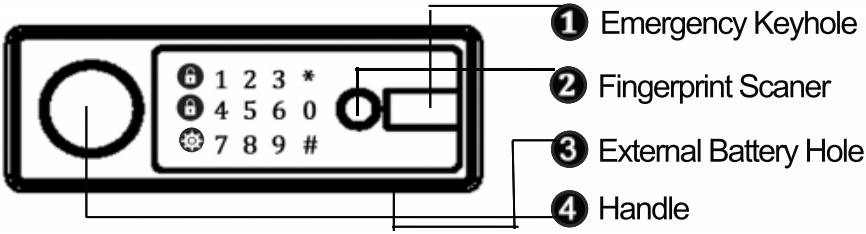

NOTE: In the initial state, any fingerprint cannot open the safe. The initial administrator password is 123456, and the user password is empty.

Batteries are not included in the accessories, 4AA batteries are required.

Use the key to open the gun safe

1. Insert the key into the emergency keyhole.
2. Turn the key counterclockwise.
3. Turn the handle clockwise.

Set the password (two sets of passwords can be set)

Set the administrator password

1. After the gun cabinet door is opened, touch the panel with your hand to wake up the lock.
2. Press the number 00, then press the setting button (the setting button is under the led light), enter new password of 3-12 digits and end with the # key.

Hear a long "beep", indicating that the password is set successfully (such as "beep", "beep", "beep" three short beeps, the setting fails.)

Set the user password

1. After the gun cabinet door is opened, touch the panel with your hand to wake up the lock.
2. Press the number 11, then press the setting button (the setting button is under the led light), enter a new password of 3-12 digits and end with the # key.

Hear a long "beep", indicating that the password is set successfully (such as "beep", "beep", "beep" three short beeps, the setting fails.)

Use password to open the gun cabinet

1.Touch the panel with your hand to wake up the lock and enter the correct 3-12 digit password then press #.

2.If the password is successful, you will hear a long "beep", and the panel will display the lock open status.

If the password is unsuccessful, you will hear a few unmatched ding-ling-ling sounds, and the panel will display that the lock is not open.

3.Turn the handle clockwise to open the gun safe.

Set fingerprints(30 fingerprints can be registered)

1. After the gun cabinet door is opened, touch the panel with your hand to wake up the lock.

2. Press the setting key (the setting key is under the led light), and after hearing two short "beep", the indicator light is on, and enter the same fingerprint 4 times. Hear a "beep", followed by a long "beep", indicating that the fingerprint registration is successful,
(such as "beep", "beep", "beep" three short beeps, the registration fails.)
Other fingerprints can be registered in this way.

Use fingerprint to open the gun cabinet

1.Touch the panel with your hand to wake up the lock and enter the registered fingerprint for verification.

2. If the recognition is successful, you will hear a long "beep", and the panel will display the lock open status.

If the recognition is unsuccessful, you will hear a few unmatched ding-ling-ling sounds, and the panel will display that the lock is not open.

3.Turn the handle clockwise to open the gun safe.

Alarm function

If the password is entered incorrectly 3 times or the fingerprint is scanned incorrectly 5 times, an alarm will sound for 30 seconds, and the system will lock for 3 minutes.

During the lockout period, no operations will be valid.

After the lockout period ends, the gun safe can be opened with the correct password or fingerprint.

During the lockout period, the gun safe can be opened by emergency key, but the lock will remain in the locked state until the 3-minute period is over.

Delete fingerprints and passwords

In standby mode, press and hold the setting button （under the led light） about 5 seconds until you hear a long beep, indicating that all fingerprints and passwords have been deleted successfully and restored to factory settings. No fingerprint can be opened.

Mute and Unmute Settings

Enter "11#" to turn mute on or off.


Low Voltage Reminder

The system uses four 1.5V alkaline batteries. If the voltage is insufficient, the buzzer will sound "beep, beep, beep" and "beep, beep, beep" twice after opening the door, reminding the user to replace the battery in time when the battery voltage is low.
If the battery voltage is insufficient, you can use the emergency power supply or mechanical emergency key to open the door.

System Initialization

Press and hold the setting button for 5 seconds, the system will restore the initialization settings and clear all fingerprints and passwords.

Use the mounting bolts to fit it to the wall

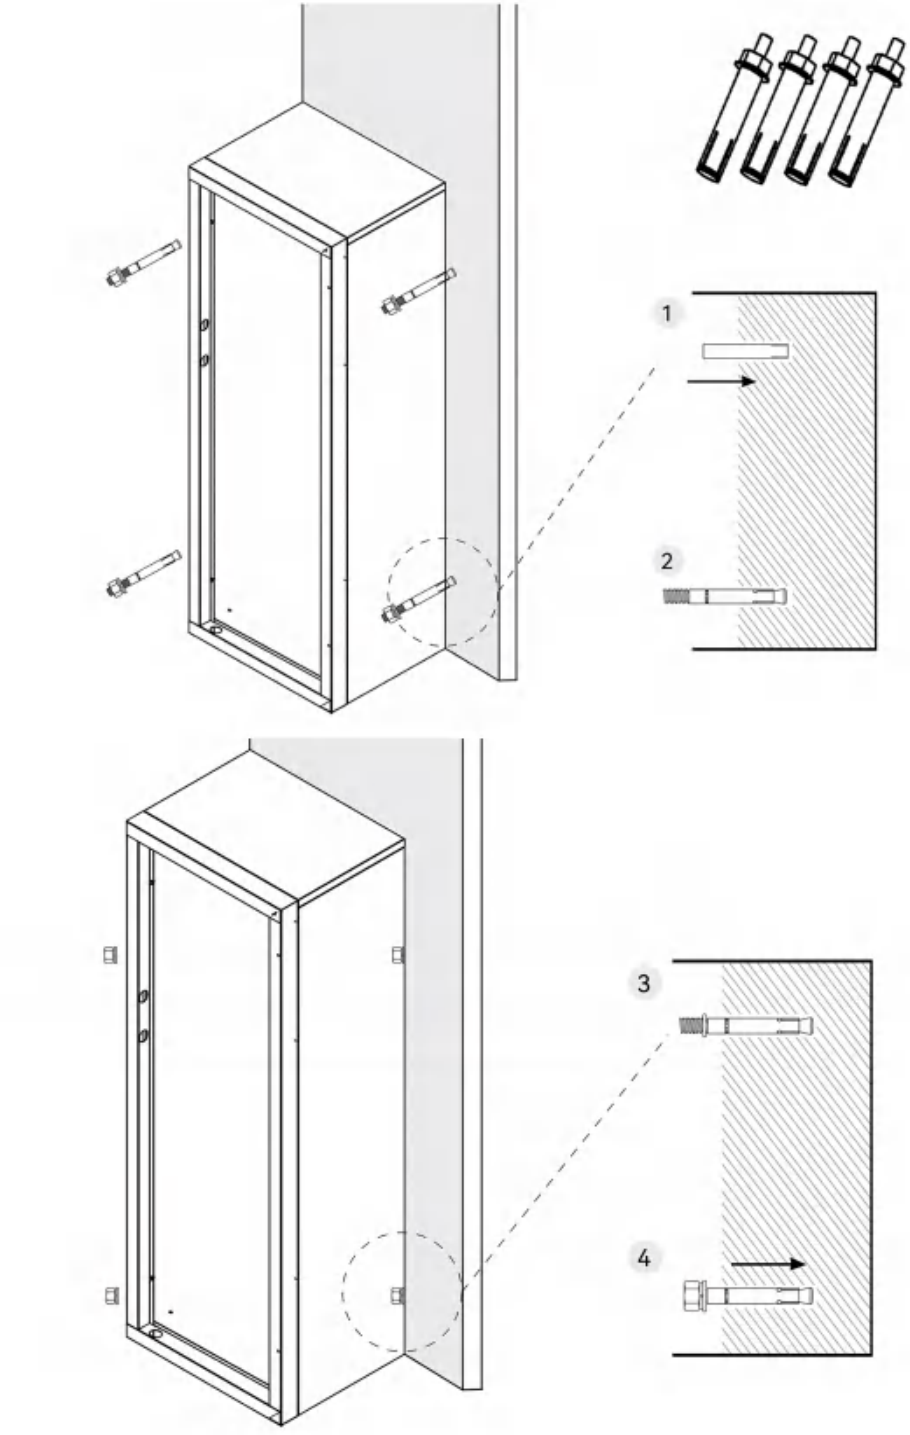

Question & Answers

Q What if the gun cabinet key is lost?

A Hello, please tell us your key code (the key code is next to the keyhole), and also tell us your delivery address and phone number, and we will reissue it to you.

Q What if the lock does not work?

A Please send us the problem you encountered in the form of a video by email, and we will provide you with a solution after confirming the problem.

Q What if the product is damaged after receiving the package?

A After you receive the package, if there is any quality problem with the product, please contact us immediately and send us a picture of the damaged product to our email, and we will provide you with a solution.

Q What if the accessories are missing ?

A Please tell us the missing accessories through pictures, and we will reissue them to you.

Q What if you encounter difficulties during assembly?

A First, please refer to our assembly video and instructions. After watching, if you still don't know how to assemble it correctly, please contact us by email immediately and we will help you solve the problem.

If you encounter any problems,
please contact us by email as soon as possible.

