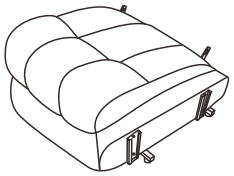
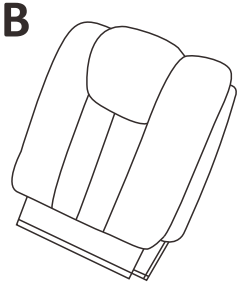
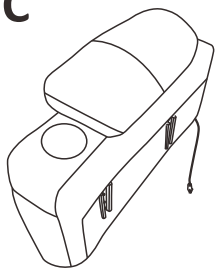
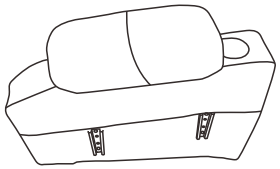
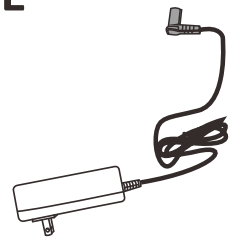

8025

INSTRUCTION MANUAL

POWER


RECLINERSOFA

PARTS LIST


A	B	C	D	E	F	G	H
							
Base x1	Backrest x1	Right Arm x1	Left Arm x1	Power Adapter x1	remote control x1	Massage Adapter x1	Massage Hand Controller x1

Make sure that the armrest /the back support connector is fully aligned with the chair base connector when inserting it, and then press down firmly until you hear a "click" sound to complete

STEP 1 Armrest Assembly

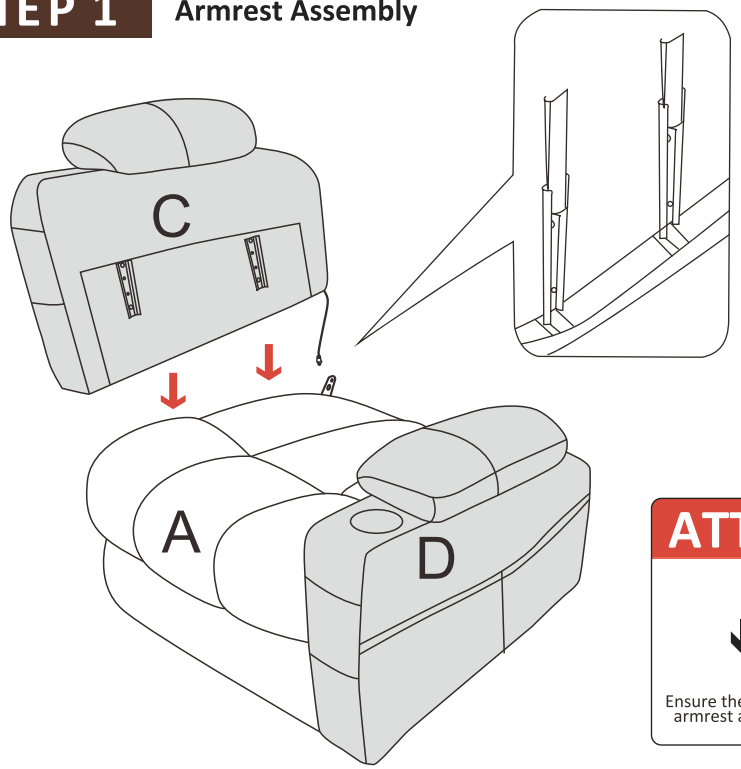


ATTENTION

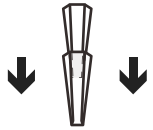

Ensure the two connecons on each armrest are both inserted onto the base ghtly.


STEP 2 Backrest Assembly

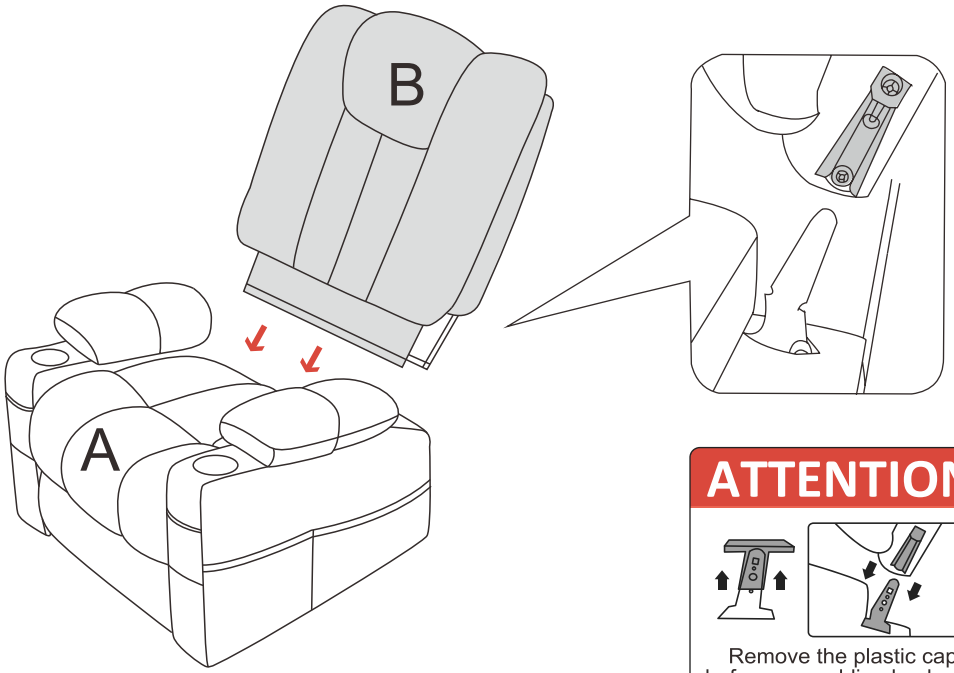


ATTENTION

Remove the plastic cap before assembling backrest.


STEP 3 Wire Connections

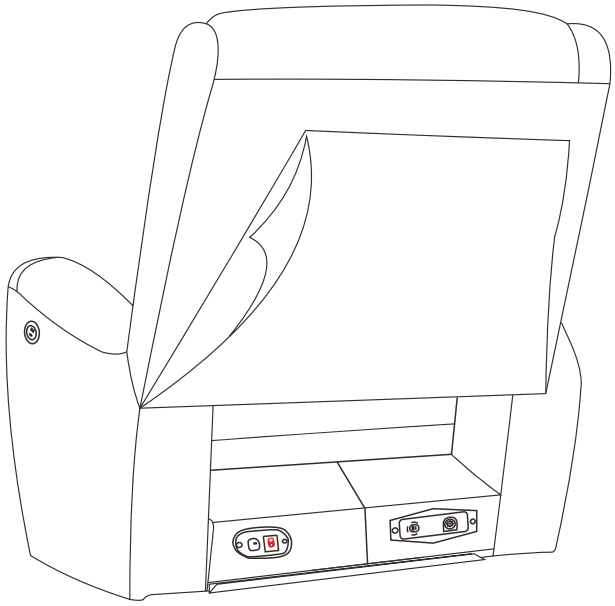

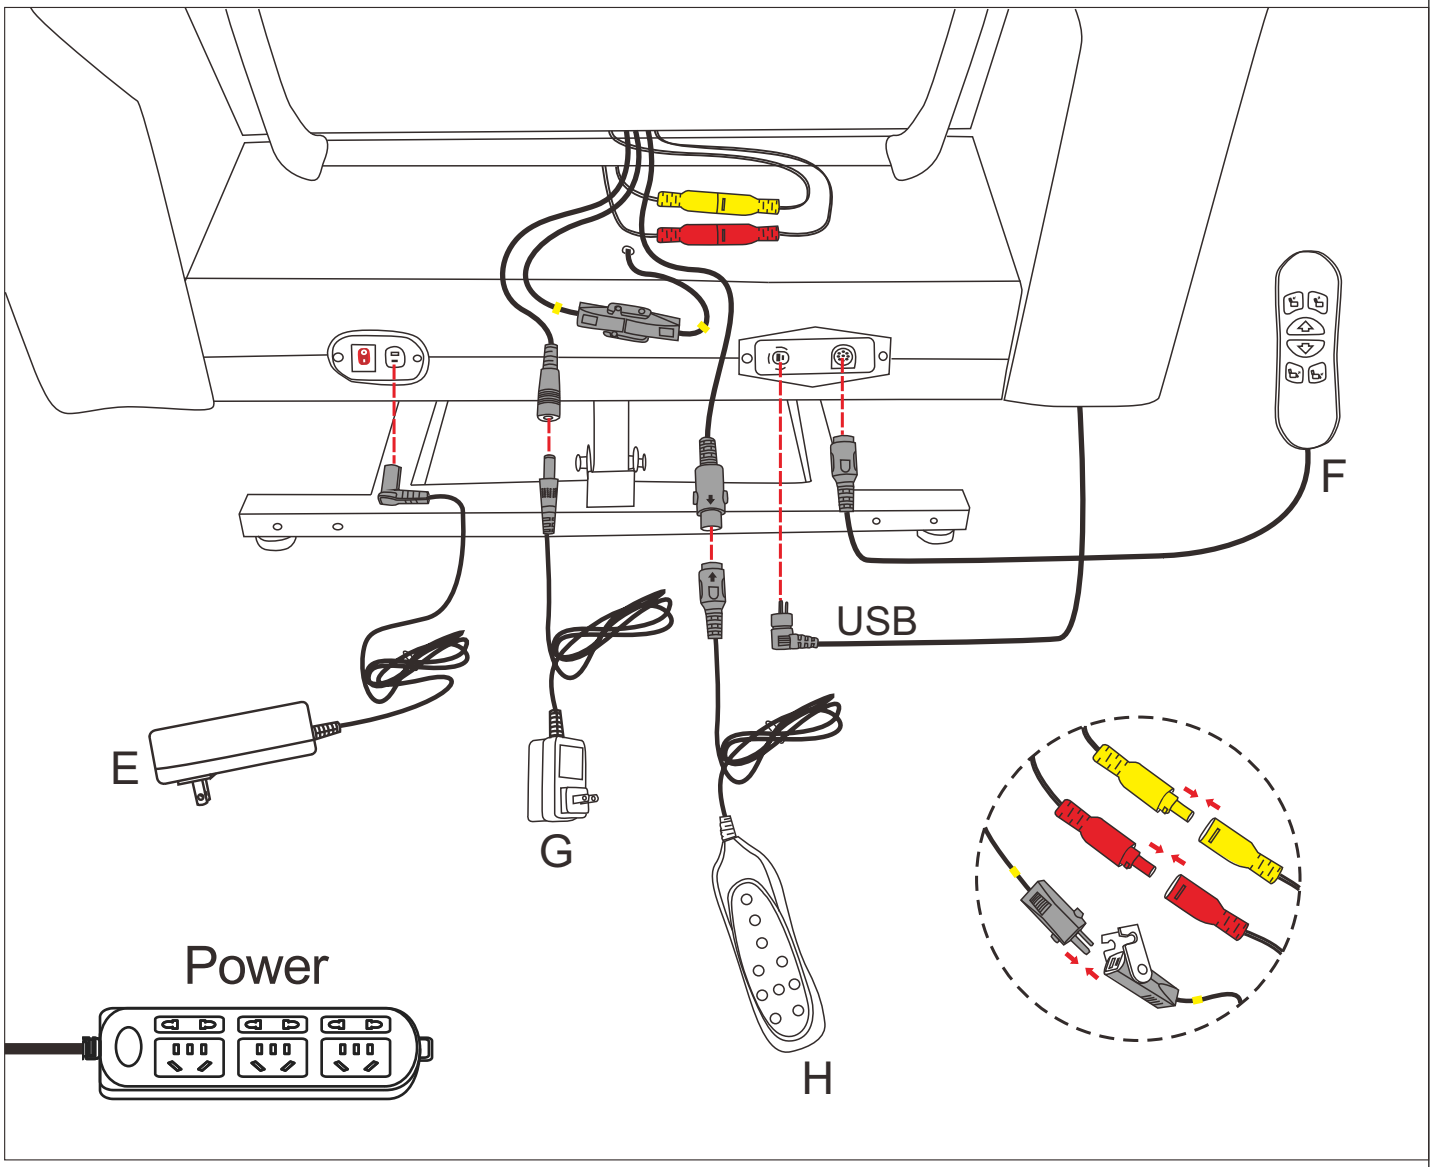


REMOTE OPERATION INSTRUCTION



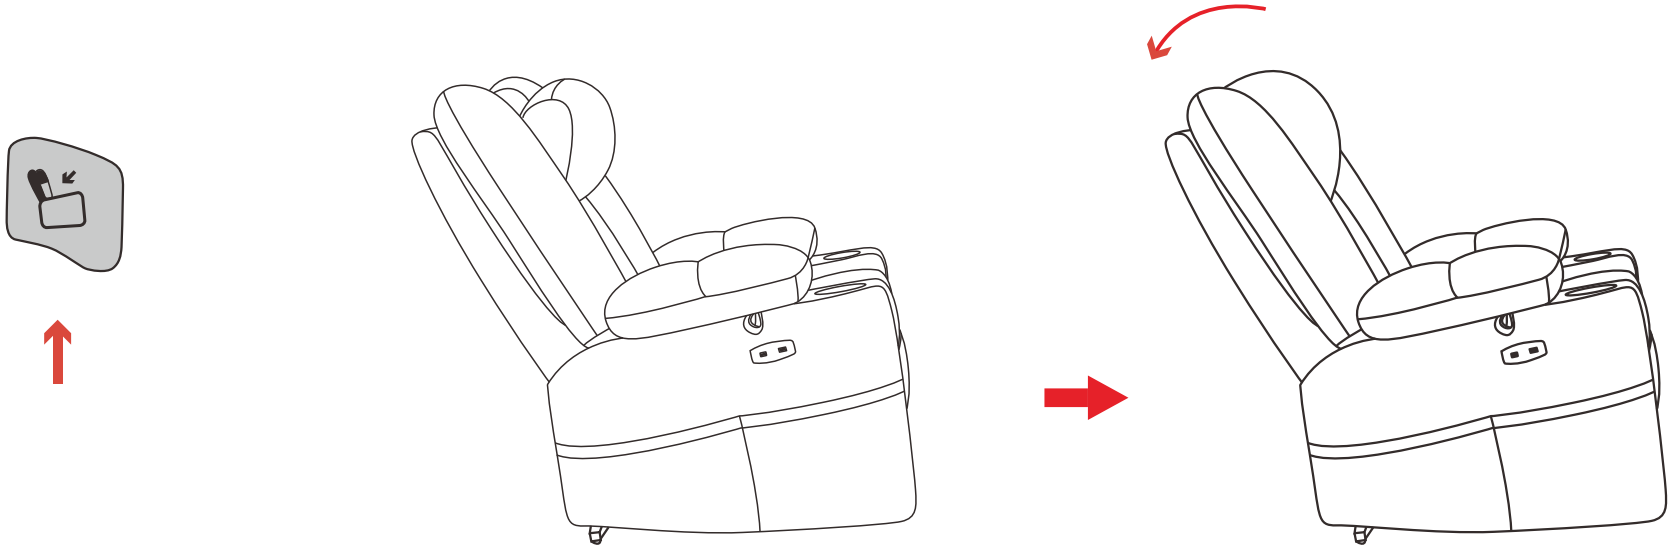


REMOTE OPERATION INSTRUCTION

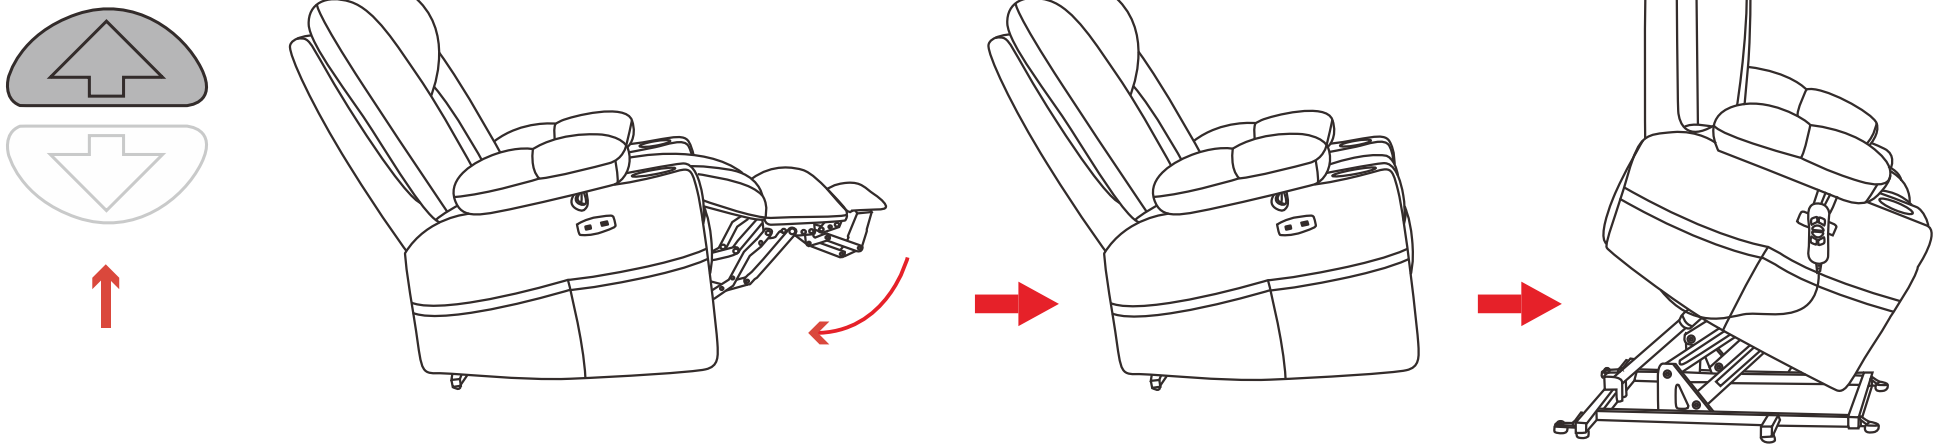



REMOTE OPERATION INSTRUCTION



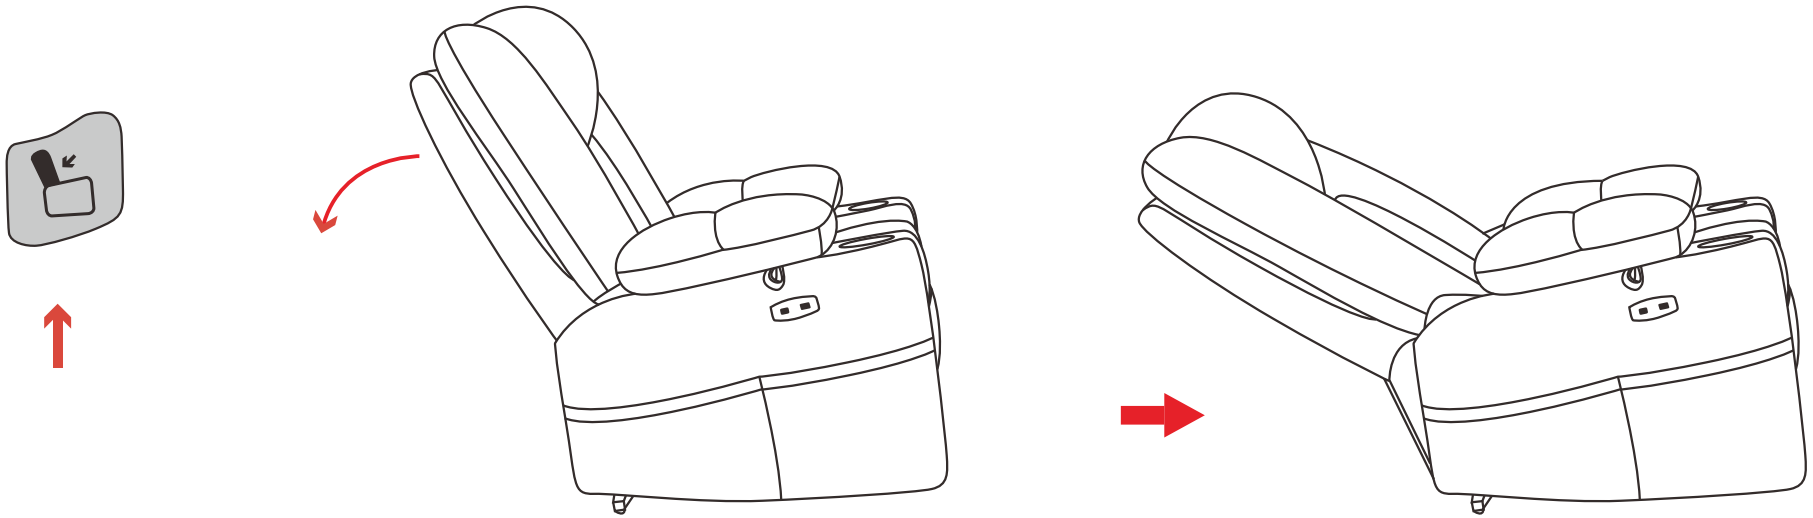


How to use the remote control

1. Operation Precautions

- Do not use an extension cord.
- Do not exceed recommended weight limit.
- Do not use attachments not recommended by the manufacturer.
- Do not use outdoors. INDOOR USE ONLY.
- Stay away the backrest from wall at least 23.5 inches before using.
- Use this lift only for its intended use as described in the operating.
- Keep dry. Do not operate in a wet or moist environment.
- Keep all cords away from heated surfaces and pinch points.
- Ensure the hand control is out of the way before sitting in the chair.
- Always leave the lift chair in an upright and closed position when not in use.
- Periodically check the hand control and all power cords for visible damage.
- Do not use the footrest as a seat, or for purposes outside its intended use.
- Do not lean or apply downward force to the chair-back while in recline position.


2. Lift Operation Instruction

	Press this button to open the chair headrest.
	Press this button to retract the chair headrest.
	Press this button to retract the footrest, and keep holding it to lift the chair forward into a standing position.
	Press and hold this button to return the chair from standing position to sitting position. Keep holding it to open the footrest.
	Press and hold this button to raise the chair backrest.
	Press and hold this button to recline the chair backrest.

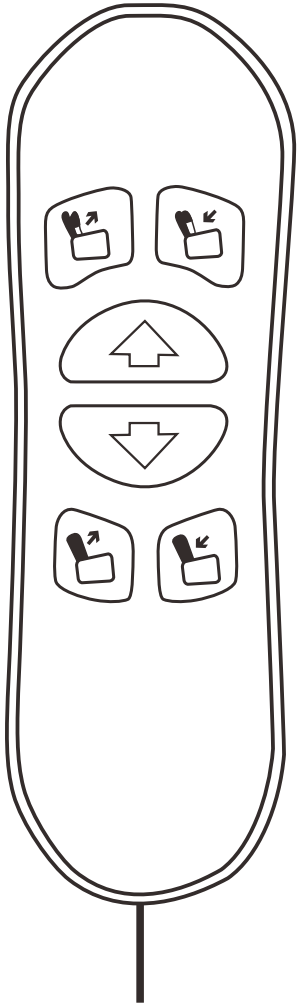

Massage Operation Instructions

How to Use the Massage Hand Controller

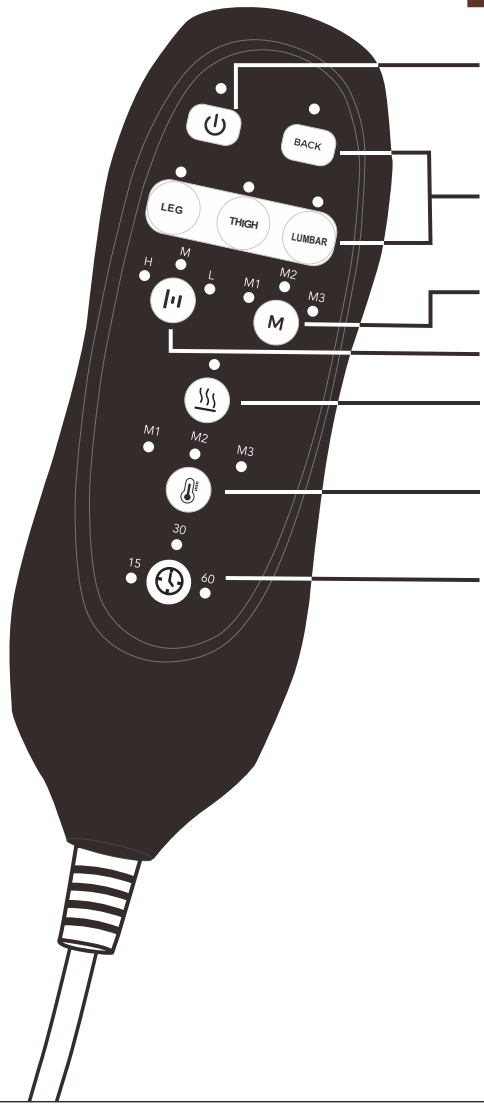

Turn on/off the massage function.

You can select different massage parts to enjoy.

You can select different massage mode to enjoy.


Control the massage intensity from low to high.

Turn on/off the heating function.

Select the heating temperature from M1 to M3.


Set a timer for massage from 15mins to 60mins.

Anti-Tip Device

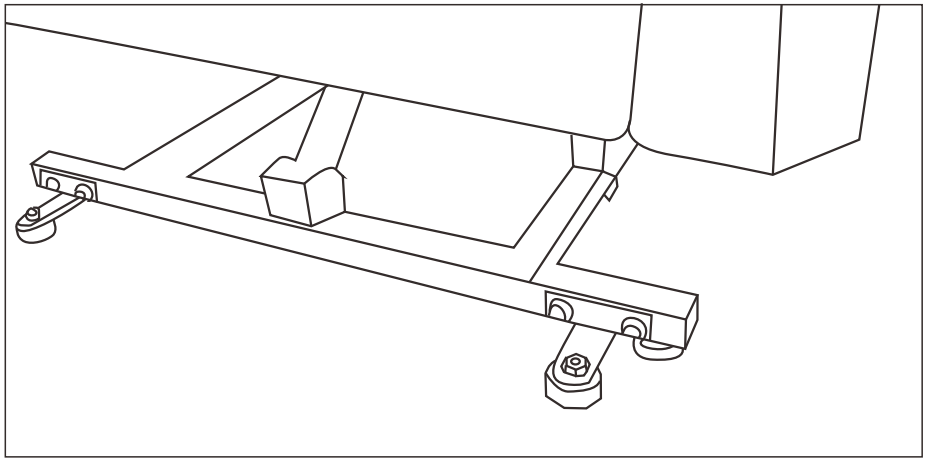


This is an anti-tip device. For safety, always install the anti-tip device that comes with your recliner sofa.


STEP 1 Place the screw and the anti-tip device as shown in the picture.

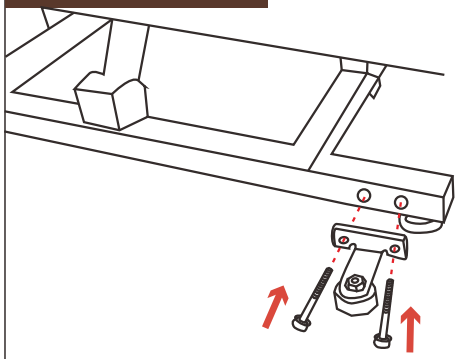

STEP 2 Tighten the nut and the screw as shown in the picture.

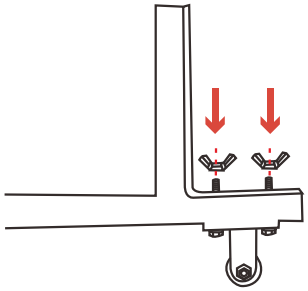

STEP 3 Install the other side after finishing the two steps.

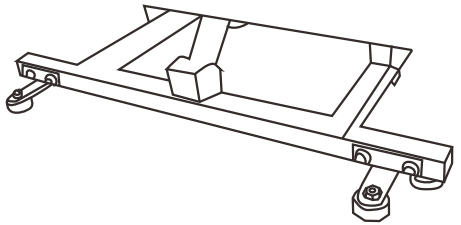

TROUBLESHOOTING

The following troubleshooting FAQs should summarize what you need to know about your recliner chair. If at any time you do not feel comfortable performing the troubleshooting steps listed in this manual, please contact Syrhrei Customer Support for service.

Questions	Answers
What if my power recliner does not operate at all?	• Make sure all the connections are secured; refer to the Assembly Instructions. • Check all the electrical cords are not crimped or pinched. • Check if the light of the RED button at the back of the base is on. • Make sure the light of the control bottons goes on.
What if the reclining function doesn't work?	• Make sure all the wires are intact and connected properly. • Check if the RED light on the switch is on. • Make sure the lights of the recliner buttons are on.
What if the USB charge ports do not work?	• Make sure the lift and reclining functions are both effective. • Make sure the USB cable coming out of the right armrest is properly connected.
What if the armrest falls apart from base?	• Ensure the two connections on each armrest are all inserted onto the base tightly. • Check the brackets of armrest and base to ensure there is no defects.
What if my recliner makes a clicking noise?	• Check to make sure the chair frame, motor and wiring are intact. • Make sure the weight capacity of 350 lbs has not been exceeded.
What if my recliner tilted to one side?	• Make sure the rack of recliner is in a good condition without any distortion.

IMPORTANT: If the recliner still does not operate properly, please contact the Syrhrei Customer Support for help and never attempt to make any repairs or adjustments yourself.

PRODUCT CARE

Dust regularly with a soft, dry cloth to prevent soil build-up. Keep away from heat to avoid glazing, melting or scorching. Use a professional cleaning service to clean the fabric.

WARRANTY

Electronic Parts	1 Year
Reclining Mechanism	1 Year
Metal/ Wood Chair Frame	1 Year

Note: Please disassemble the product before you return it otherwise there will be a huge cost as oversized.

WARNING

- Proper assembly of this item requires 2 people.
- This product is not intended for institutional or commercial use.
- Read all instructions before assembling this product.
- FALL HAZARD – To prevent death or serious injury, always keep child within arm's reach.
- Avoid placing this item in direct sunlight to prevent fading.
- Check this product for damaged hardware, loose joints, missing parts or sharp edges before and after assembly and frequently during use.
- To avoid tipping over, do not put your weight against the back or get up before returning the product to the seated position.