
Assembly Instruction

Before installation, please read the assembly instructions carefully.

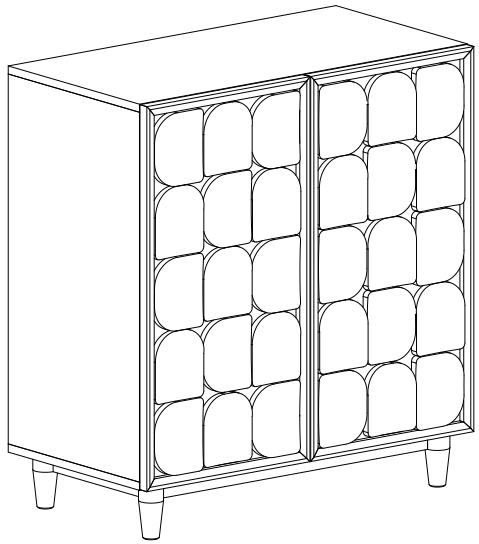

WARNING!

EN: For your safety and to ensure proper use, please follow the provided instructions carefully. Incorrect assembly or handling may cause damage to the product or result in injury.
ES: Para su seguridad y para garantizar el uso correcto, siga las instrucciones proporcionadas cuidadosamente. El montaje o manejo incorrectos pueden causar daños al producto o resultar en lesiones.

ASSEMBLY INSTRUCTIONS

BEFORE YOU START

- En: Read the instructions thoroughly
  ES: Lea las instrucciones a fondo
- EN: Confirm parts and hardware.
  ES: Confirme las piezas y el hardware.
- EN: A mild odor may occur due to packaging -it will fade after a few days.
  ES: Un olor suave puede ocurrir debido al envasado - se desvanecerá después de unos días.

SAFETY TIPS



EN: Avoid over-tightening the screws.
ES: Evite apretar demasiado los tornillos.

EN:Avoid using power tools.
ES: Evite el uso de herramientas eléctricas.


EN: Estimated Time **60 minutes**
ES: Tiempo estimado **60minutos**

EN: Installers Required 2 people
ES: Instaladores Requeridos 2 personas






EN:Difficulty
ES: Dificultad
★★☆☆☆

Parts Identification

Not actual size

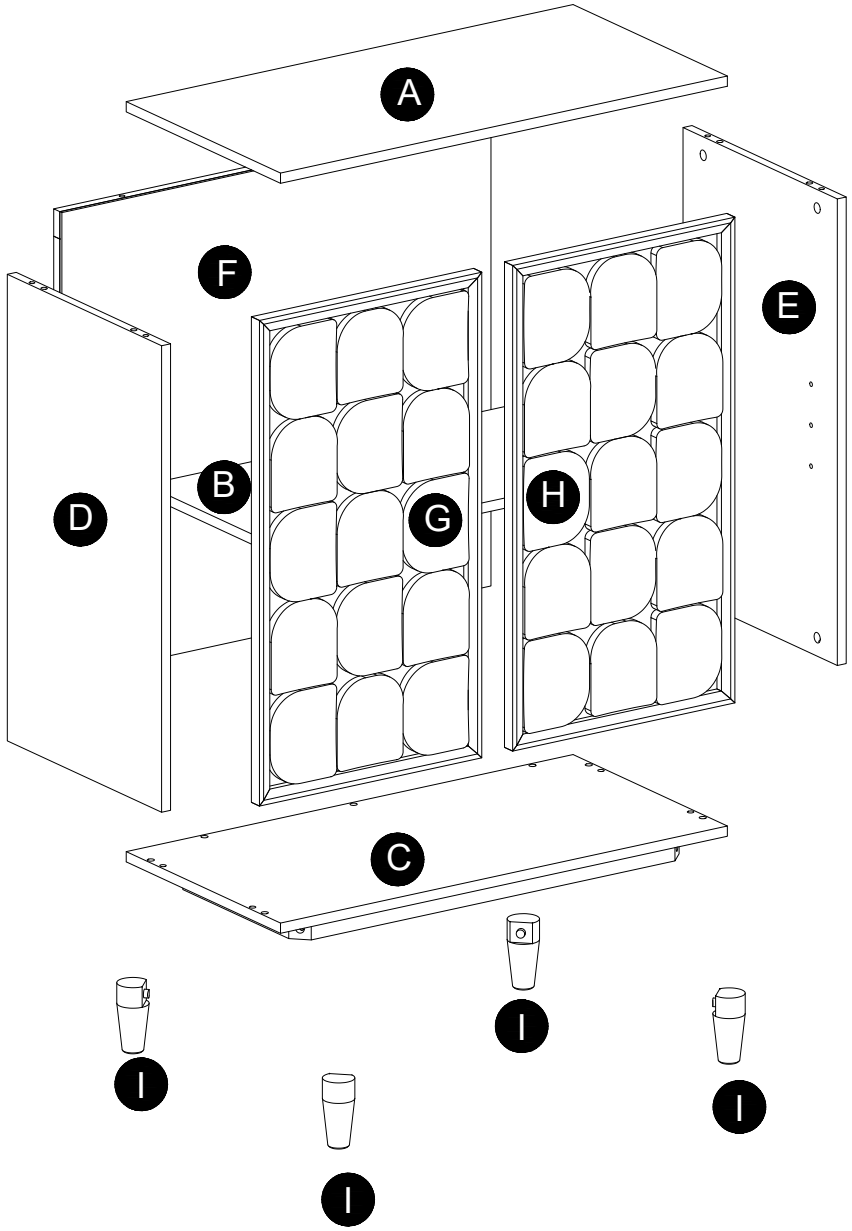



PART LIST

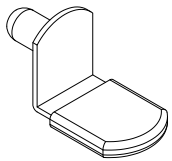
LABEL	PICTURE	SPEC	QTY
1		15x12 mm Cam Lock	18 + 1 extra
2		6x34 mm Cam Bolts	18 + 1 extra
3		Ø8x30 mm Wood Dowel	8 + 1 extra
4		M3.5 x15 mm Pan Head Screw	28 +1 extra
5		Hinge C	4
6		Shelf Support	4
7		Push catch	2

LABEL	PICTURE	SPEC	QTY
8		JCB M6x70	4
9		Flat washer (6/19x1.5mm)	4
10		(6/11x1.5mm)	4
11		Allen wrench M4x60	1


INSTALLATION STEPS


2  X18


4  X4


8  X2


Step 1

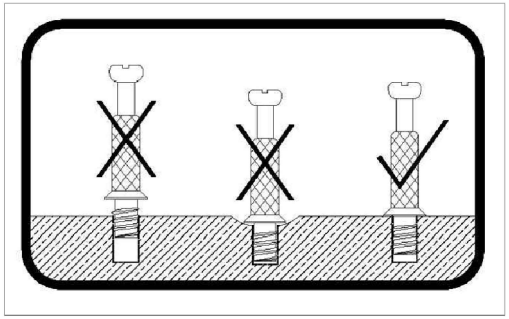


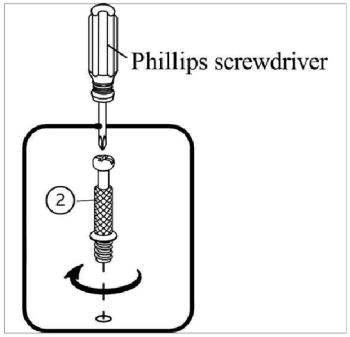

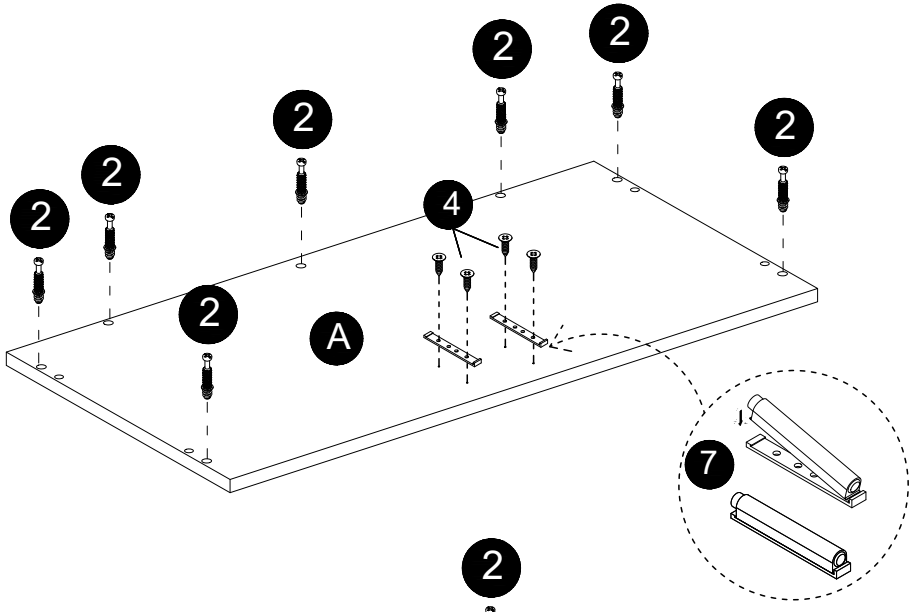


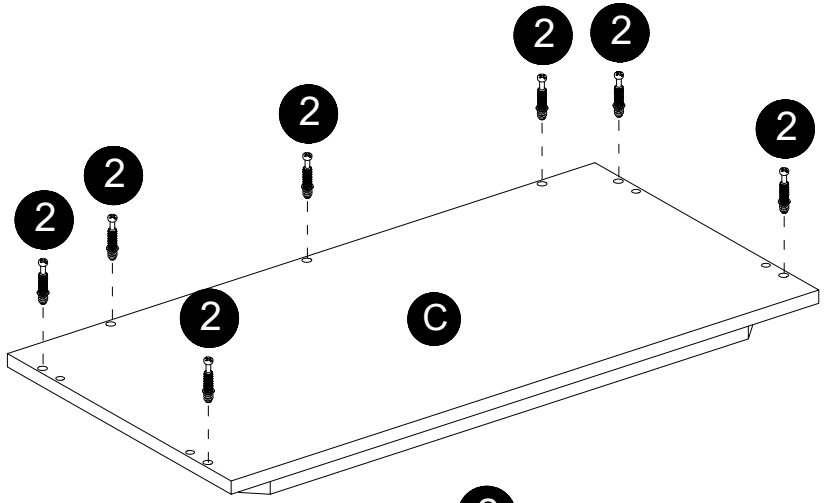

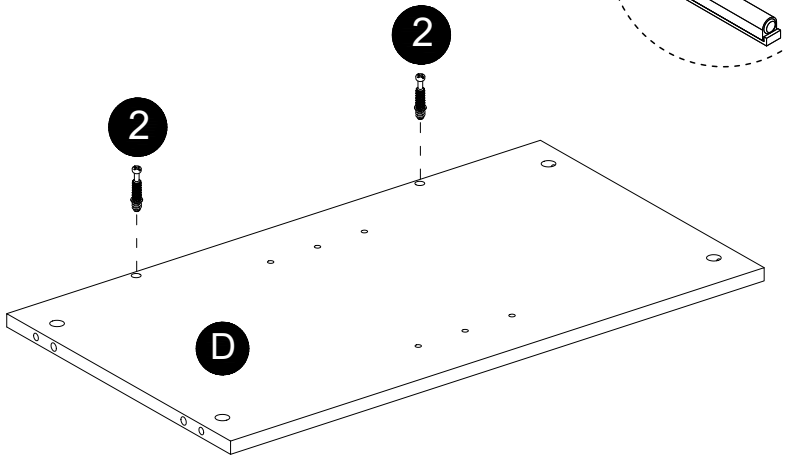


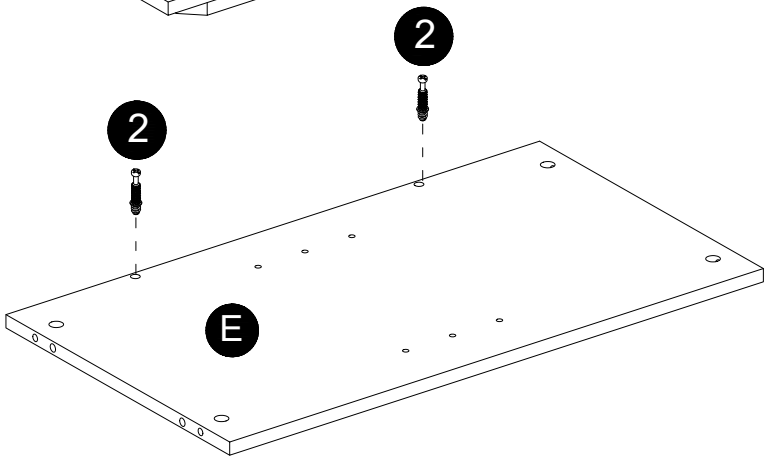


Step 2

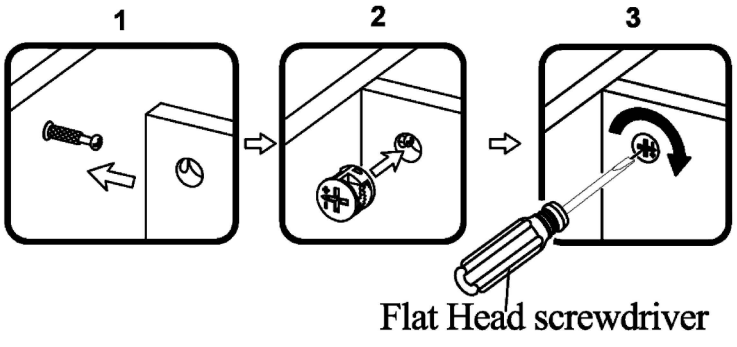


1  X4

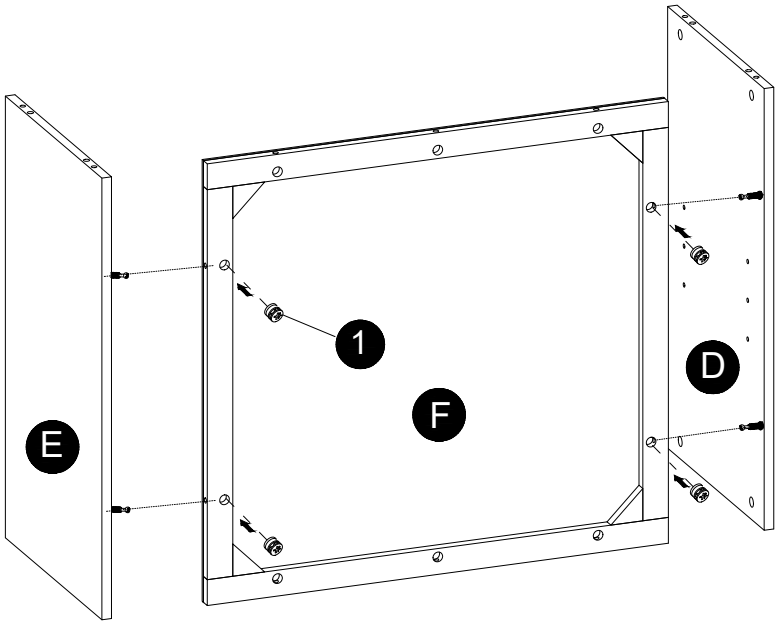

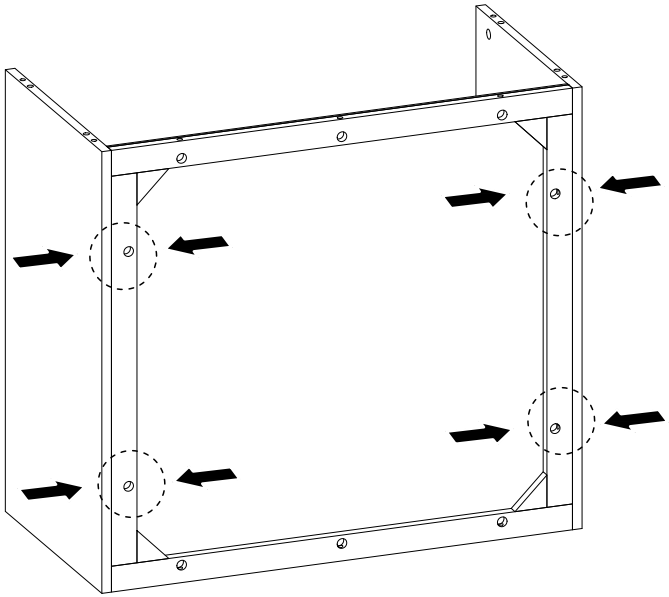


Step 3

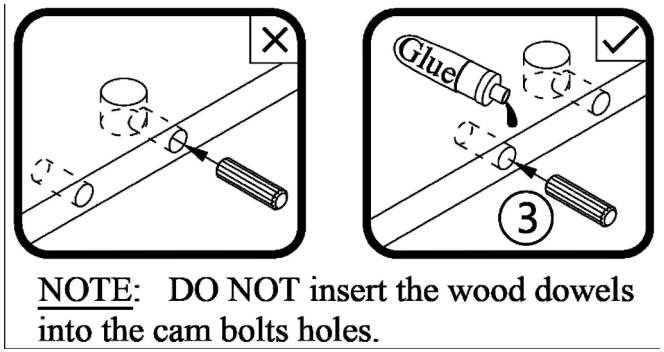



NOTE: DO NOT insert the wood dowels into the cam bolts holes.

3  X4

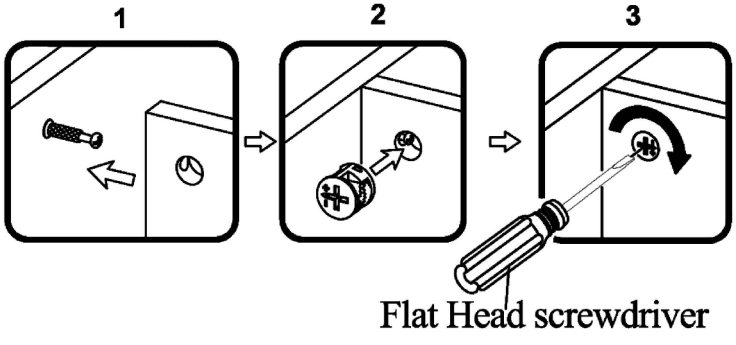


1  X 7

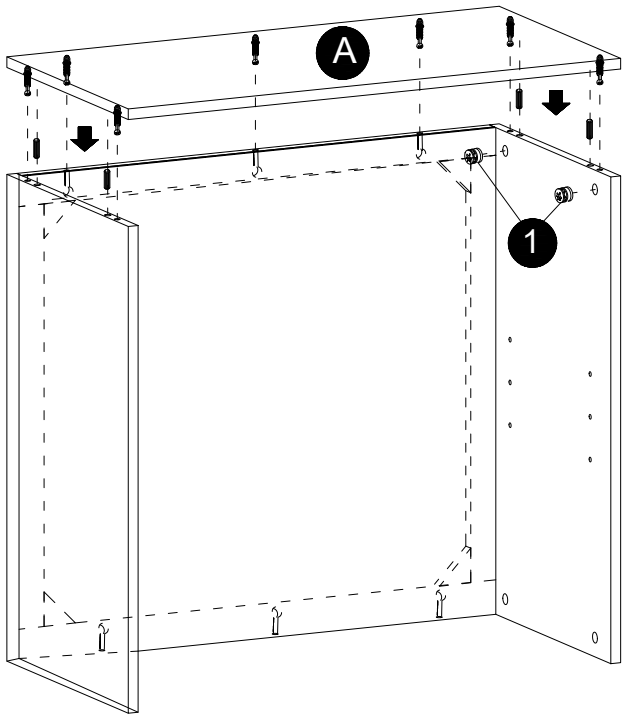

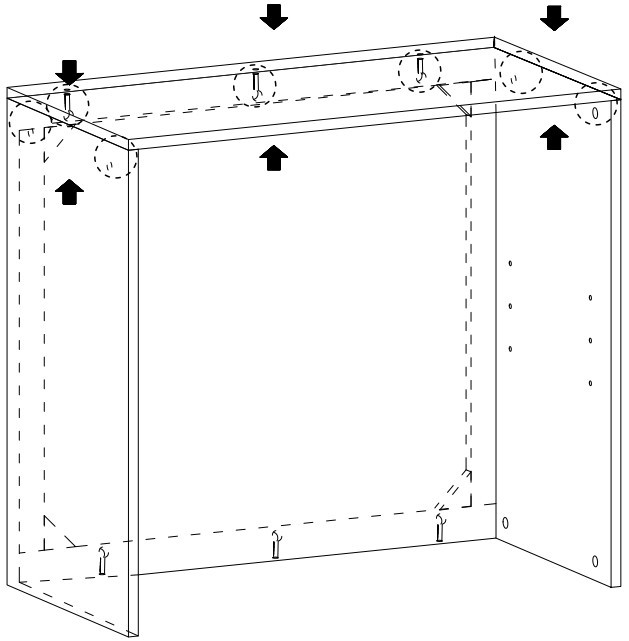


Step 4

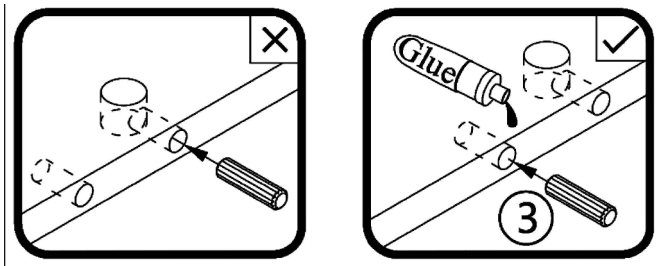


NOTE: DO NOT insert the wood dowels into the cam bolts holes.

3  X4

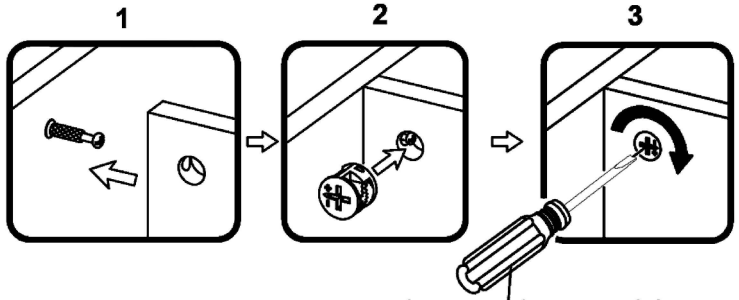

1  X 7

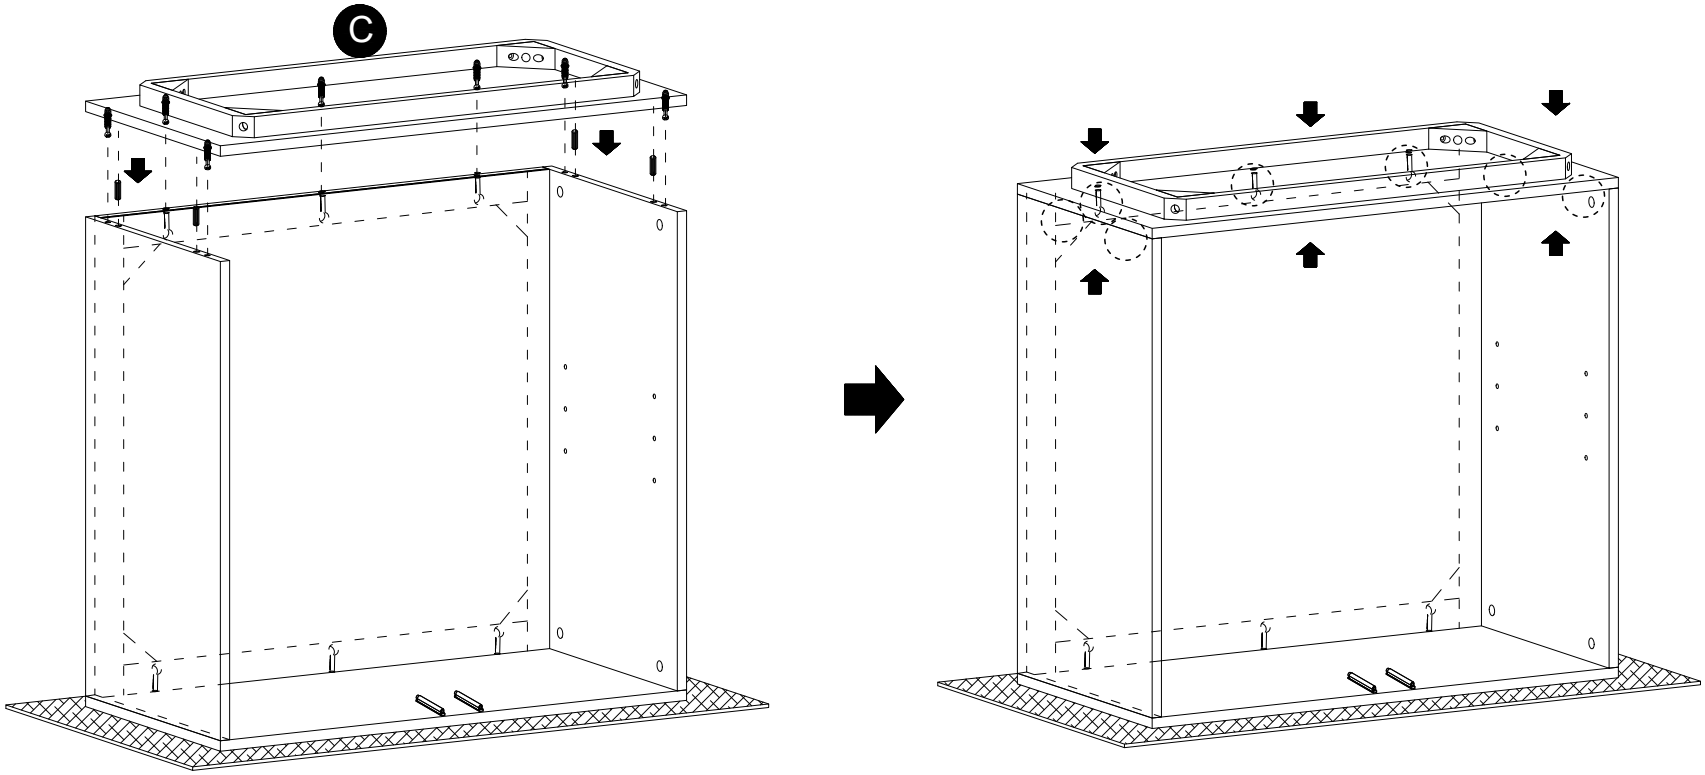



Step 5


8 X 4

9 X 4

10 X 4

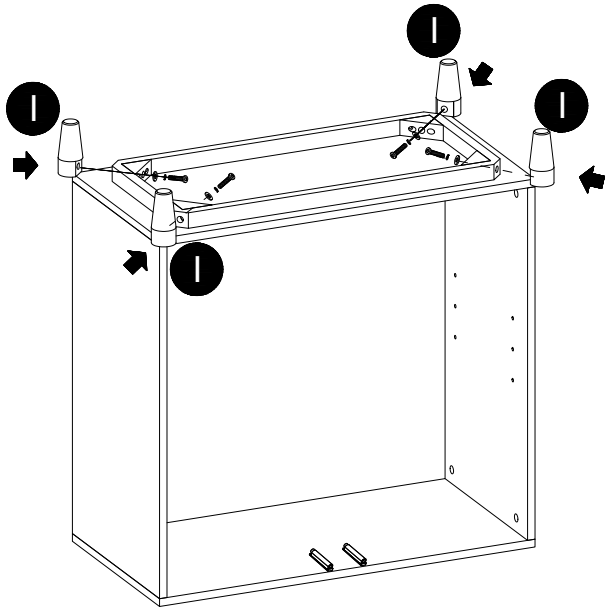


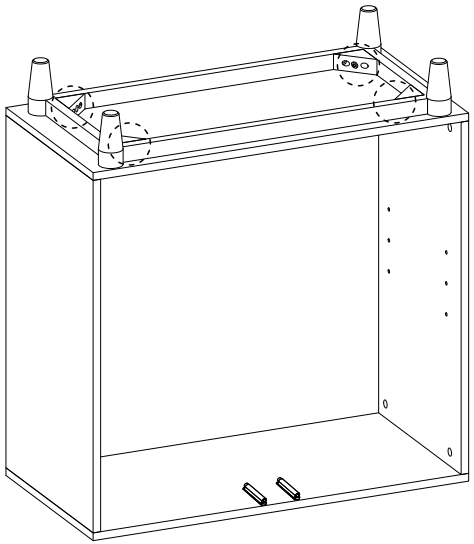


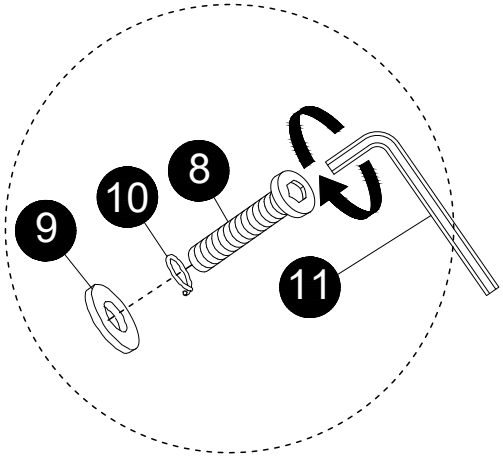



Step 6

6 X4

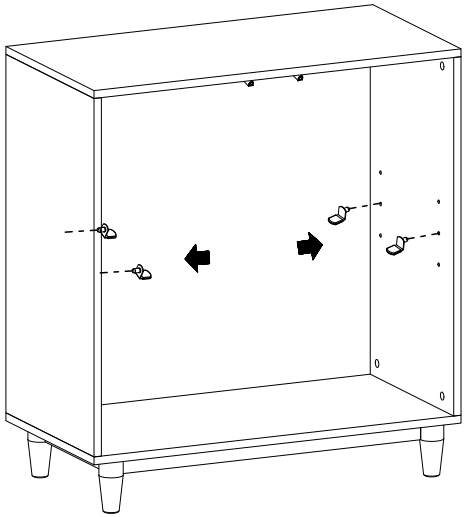


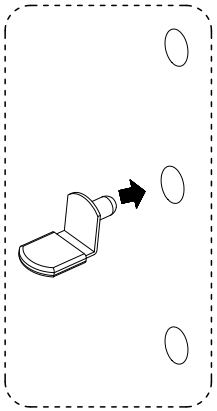


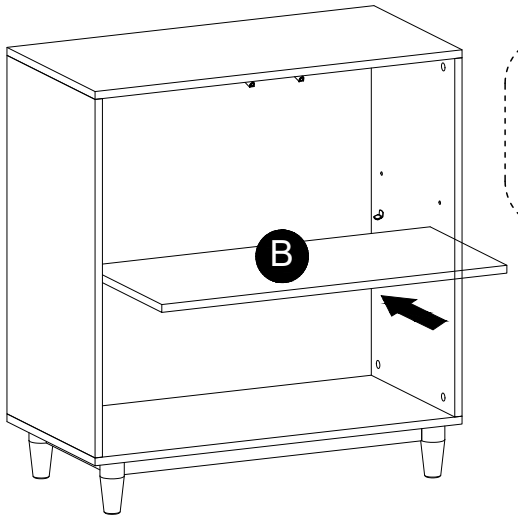


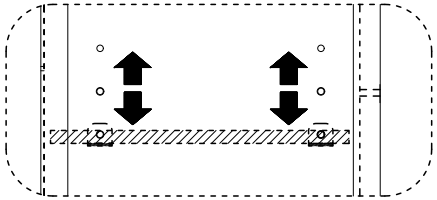


Step 7


4  X 8


5  X4

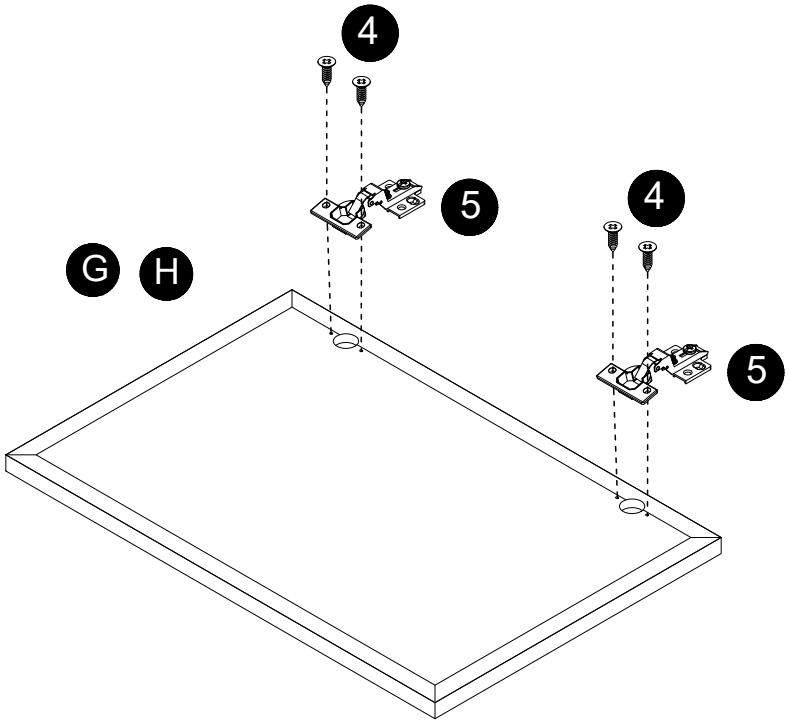

Step 8

4  X 16

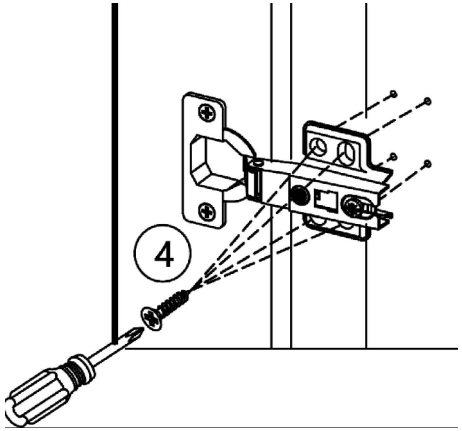

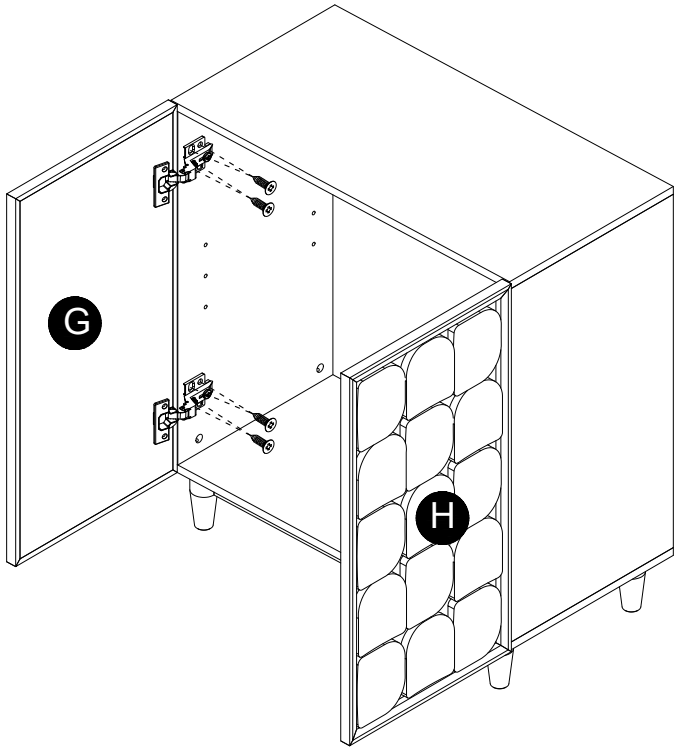

How to adjust the Euro-style adjustable hinges on doors

Shipping may cause doors to become out of alignment. If you find that the doors need to be adjusted slightly,turn the appropriate screw as illustrated below.

1. TO ADJUST THE DOOR FORWARD OR BACKWARD.

2. TO ADJUST THE DOOR TO RIGHT OR TO LEFT.

3. TO ADJUST THE DOOR UP OR DOWN.

