
Ceiling Fan
User's Manual

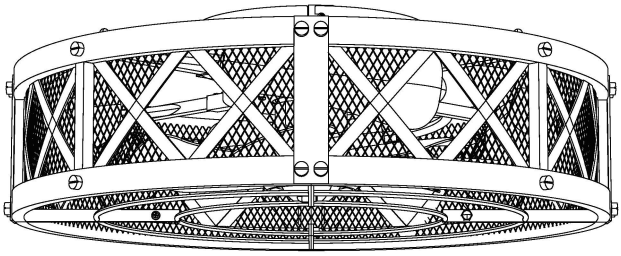

WARNING!!!

- **To avoid fire, shock and serious personal injury, follow these instructions.**

1. Read your user's manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
2. Before servicing or cleaning the unit, switch off the power at the service panel and lock the service panel to prevent power from being switched on accidentally. If the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
3. Be cautious around the fan and blades when cleaning, repairing, or working near the fan. Always turn off the power to the ceiling fan before performing any servicing.
4. Do not insert anything into the fan blades while the fan is operating.
5. This appliance is not intended for use by young children or individuals with disabilities without supervision. Young children should be supervised to ensure they do not play with the appliance.
6. Before installing your ceiling fan, refer to the section on the proper method of wiring your fan. If you feel that you do not have enough wiring knowledge or experience, it is recommended to have your fan installed by a licensed electrician.

Before Installation


- **This manual is designed to make it as easy as possible for you to assemble, install, operate, and maintan your ceiling fan.**

NOTE: Place all loose parts in a small container to prevent losing them. lf any parts are missing, contact us.


TOOLS REQUIRED



Step ladder



Phillips-head screwdriver



Wire strippers



MATERIALS

Wiring outlet box and box connectors must be of type required by the local code. The minimum wire should be a 3-conductor (2-wire with ground) of the following size:

Installed wire length	Wire AWG
Up to 50 ft	14
50-100 ft	12


Accessories


● Check that you have received the following parts:

3 (A)  Wire Nut	2 (B)  J-box Screw	4 (C)  Self-tapping Screw	4 (D)  Plastic Expansion Tube
2 (E)  Expansion Screw	4 (F)  Washer	8+2 Spare (G)  Support Arm Screw	8+2 Spare (H)  Decorative Part Screw
4+1 Spare (I)  Bottom Screws	4+1 Spare (J)  Frame Screw	8+2 Spare (K)  Nut	1 Spare (L)  Mounting Plate Screw

Package Contents

● Check to see that you have received the following parts

1 (aa)  Fan Motor Housing	1 (bb)  Remote Control	1 (cc)  Remote Control Bracket

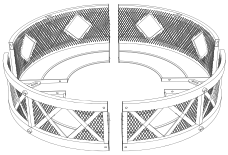4 (dd)  Frame Assembly	1 (ee)  Fan Blade	1 (ff)  Blade Cap

Energy Saving Usage

- Ceiling fan performance and energy savings rely heavily on proper installation and use. Here are a few tips to ensure efficient operation.

Choosing the Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7 feet above the floor and 18 inches away from the walls. If the ceiling height allows, it is recommended to install the fan 7-9 feet above the floor to achieve optimal airflow.

Turn Off When Not in the Room

If the room is unoccupied, turn off the ceiling fan to save energy.

Using the Ceiling Fan Year Round

Summer Season: Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.

Winter Season: Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.

FCC Compliance Statement

The remote control (FCC ID: 2BDSJJST-RF18A-1) complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Electrical and Structural Requirements

- **Your new ceiling fan will require a grounded electrical supply line of AC 110-130V/60Hz and a 15 Amp circuit. According to electrical codes, it is necessary to use a fan-rated outlet box to support the additional weight and motion associated with a ceiling fan. A fan-rated box will be clearly labeled as such and is typically designed to support ceiling fans weighing up to 70 pounds.**
  Fan-rated outlet boxes are available in various ratings and designs. It is essential to ensure that the rating of your ceiling fan outlet box meets the requirements for the specific ceiling fan you are installing. Please refer to the figures below for different structural configurations that can be used for mounting the outlet box.

- Low-profile use (Figure 1):
  A 1/2-inch-deep pancake box is meant to be screwed to a joist or block. It is used if only one cable is coming into the box. It is also available in a saddle-mount configuration.

- Deep-profile use (Figure 2)
  A 2-1/4" deep box can be attached to blocking between joists and is roomy enough to handle more than one cable.

- Brace use (Fiqure 3)
  Paired with a deep box, this hanger is meant to span between two joists and takes the place of wooden blocking.

- **If your fan is to replace an existing light fixture, turn power off at the main fuse box and remove the existing light fixture.**

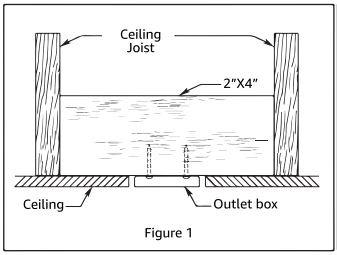


Figure 1

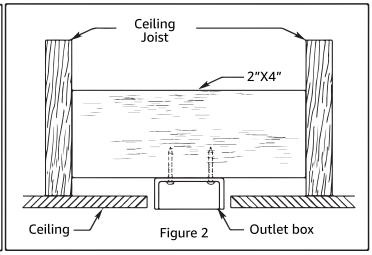


Figure 2

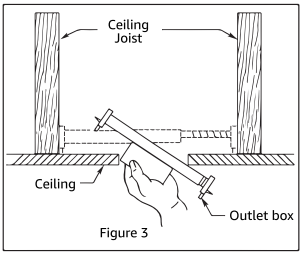


Figure 3

⚠ WARNING

To ensure safety and prevent potential electrical shock, it is not sufficient to simply turn off the wall switch. Prior to wiring, make sure to turn off the electricity at the main fuse box. All wiring should be done in accordance with national and local electrical codes. Additionally, it is important to properly ground the ceiling fan as a precautionary measure against possible electrical shock. Following these guidelines will help ensure the safe installation and operation of your ceiling fan.

⚠ WARNING

Do not use a variable (rheostat) wall controller or dimmer switch to operate this fan. Doing so can cause damage to the ceiling fan's remote control unit. It is recommended to only use the provided remote control.

Installation

Fig.1


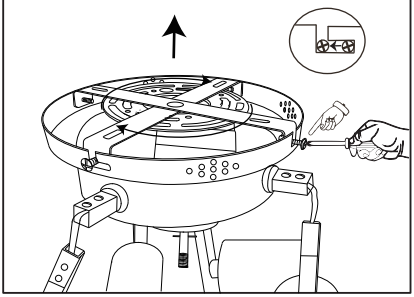


Fig.2

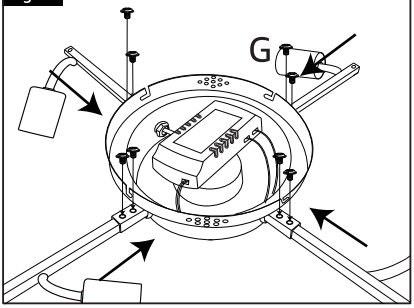

- Loosen the four canopy screws (do not remove them) and then twist clockwise to remove the mounting plate.
- Insert the bracket arm into the bracket arm slot on the fan motor housing, and then secure it with 2 screws.

Fig.3


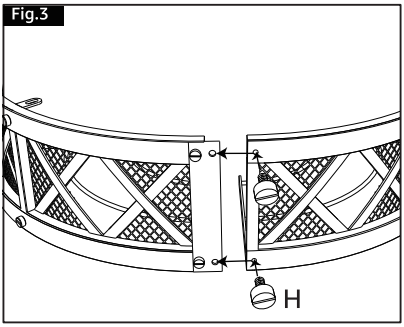


Fig.4

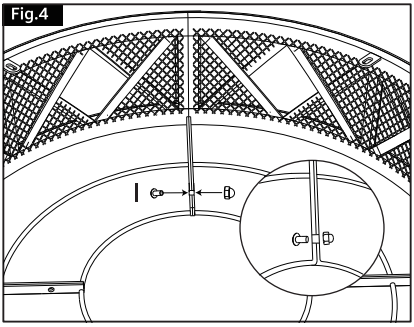

- Align the holes on the frame, secure the frame with two decorative part screws, and tighten with a screwdriver. (Repeat this step to install the remaining frames.)
- Secure the frame firmly with the bottom screws.
  (Repeat this step to install the remaining bottom screws.)

Fig.5


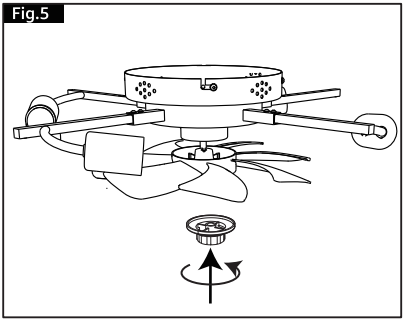


Fig.6

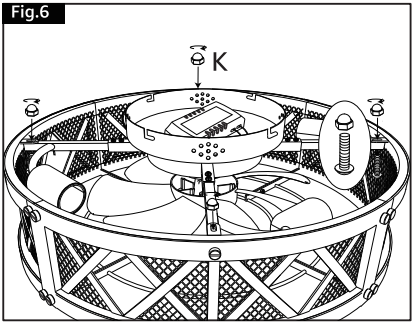

- Align the fan blades with the motor core, and then screw in the fan blade cap counterclockwise to secure it.
- Fasten the fan motor housing and the frame using 4 screws and nuts.

Installation

Fig.7


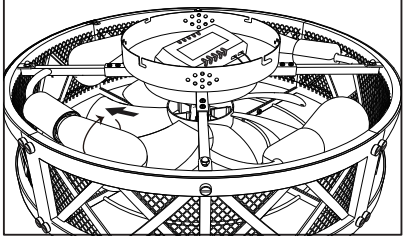


Fig.8

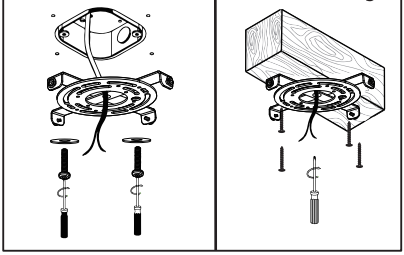

- Screw bulbs to the sockets from the back. (Bulbs not included)
  Recommeded bulbs: E26, 10W max.
- According to the user's ceiling situation, choose the corresponding installation method.
  Junction box: Use J-box screws and washers to secure the bracket to the ceiling.
  Wooden ceiling: Drive self-tapping screws directly into the wooden ceiling.

Fig.9


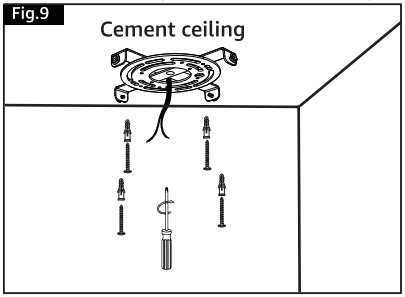


Fig.10

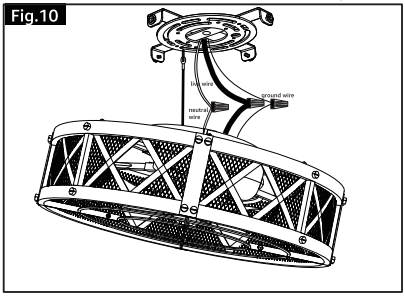

- Cement ceiling: Drill holes into the cement ceiling, then use expansion tubes and self-tapping screws for fixation.
- Tip: To facilitate wiring, you can use a safety rope to hang the fan body.
  Connect the "Neutral wire" (white wire) from the ceiling to the white wire of the ceiling fan.
  Connect the "Hot wire" (black wire) from the ceiling to the black wire of the ceiling fan.
  Connect the "Ground wire" (green or yellow/green or bare) from the ceiling to the wire from the ceiling fan.

Fig.11


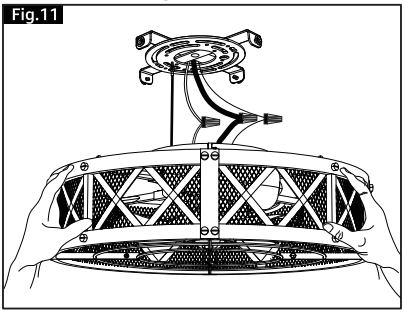


Fig.12

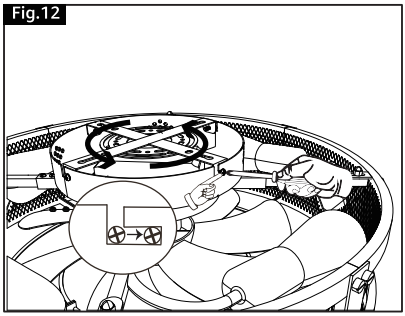

- Align the grooves on the canopy with the screws on the bracket, and then push the fixture upwards.
- Rotate the ceiling fan to align with the grooves, then tighten all 4 screws.


Operate Your Ceiling Fan

- IMPORTANT: Using a full range dimmer switch to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full range dimmer switch to control the fan speed. (Figure 1)
  Only control light on/off via wall fan switch.

- Restore electrical power to the outlet box by turning the electricity on at the main fuse box. (Figure 2)




(Figure 1)

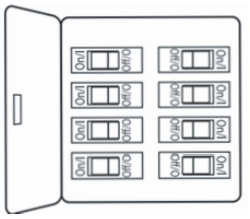

(Figure 2)


Installation Recommended

Room Size:

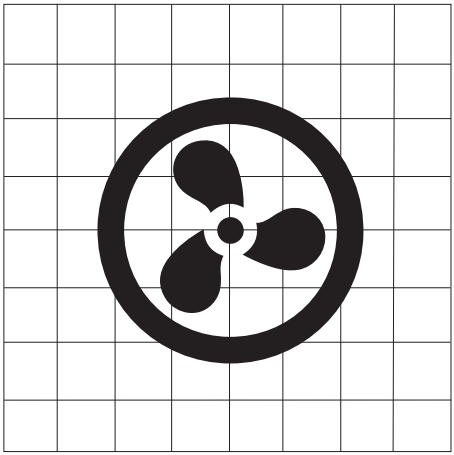


UP TO 7.5 ft x 7.5 ft

Room Height:

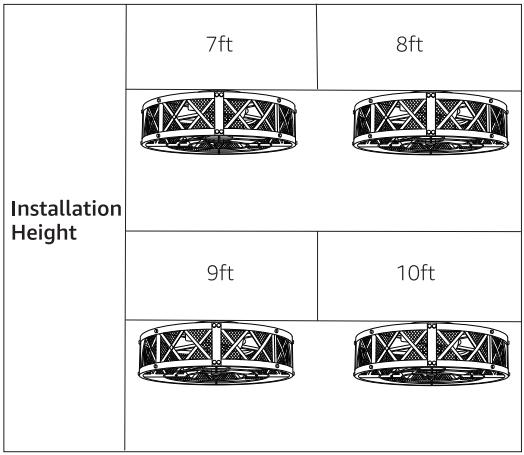


Remote Control

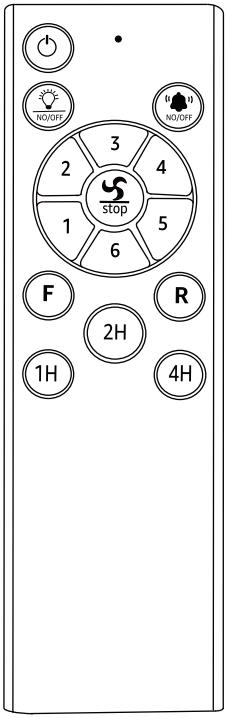

⏻	Light & fan all off
1-6	Fan speed
STOP	Fan off
F	Forward
R	Reverse
NO/OFF	Sound on/off
NO/OFF	Light on/off
1H	Fan stop & light off after 1 hour.
2H	Fan stop & light off after 2 hours.
4H	Fan stop & light off after 4 hours.

Attach wall plate using the two screws provided.

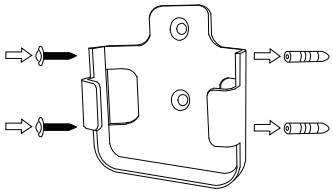

To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.


Pairing method: (single/multiple fans)


The remote control transmitter can be used to control multiple receivers.

1. For the ceiling fan you want to pair, turn the main power switch off for at least 60 seconds.
2. Turn on the main power switch of the ceiling fan, then press and hold the 2H button within 5 seconds.
3. When you hear a beep, and the pairing is complete. If the pairing process is unsuccessful, please repeat the above steps.

APP Control


- NOTE: Search and install app from Google Play, Apple App Store, and other app stores. Make sure your phone is connected to the internet andthat Bluetooth is enabled.

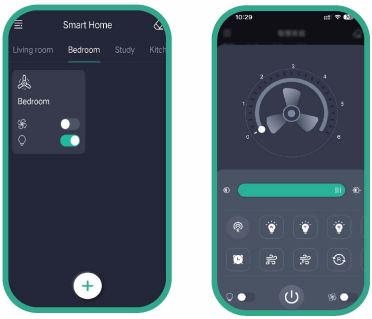

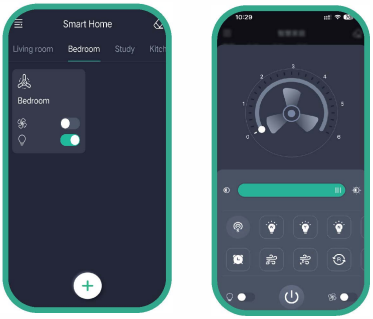

	Pair button. Click it within 5 seconds after turning on the fan at the power switch. Once the light flashes or beeps, it has been successfully paired with the phone and can be controlled through the phone.
	Slide to change the fan speed
	Timer the fan
	Fan moves in reverse
	Fan moves forward
	Sleeping wind
	Natural Breeze: fan speed changes automatically in this mode
	N/A for this model

Make sure Bluetooth is enabled on your phone and the app has Bluetooth permissions.

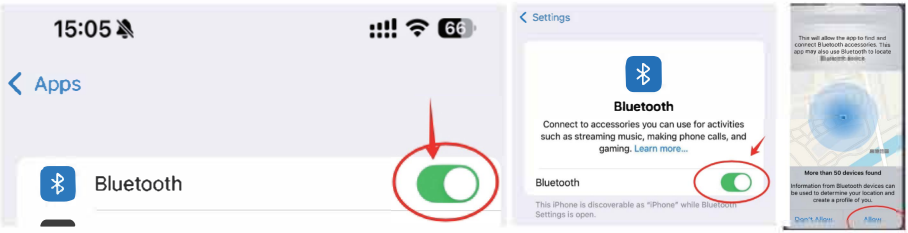

Troubleshooting

PROBLEM	SUGGESTED REMEDY
If Fan Does Not Start	1. Check the main and branch circuit fuses or circuit breakers. 2. Ensure that the wall control is turned "ON", do not a use dimmer switch. 3. Check the line wire connections to the fan and switch wire connections in the switch housing. CAUTION: Make sure to turn off the main power before making any electrical connections.
If The Fan Sounds Noisy	1. Make sure all screws in the motor housing are snug (not over tightened). 2. Check that wire connectors in the switch housing are not rattling against each other or the interior wall of the switch housing. CAUTION: Turn off the main power before entering the switch housing. 3. Ensure that the securing screws are tight. Make sure the light bulb is tight in the socket and not touching the lamp frame or blades. 4. Note that some fan motors are sensitive to signals from solid-state variable speed controls. DO NOT USE a solid-state variable speed control. 5. Allow a "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period. 6. Check if the fan blades are in contact with the light bulb. If so, adjust the angle of the light arm and tighten it again.
If Fan Wobbles	1. Make sure that the canopy and mounting plate are tightened securely to the ceiling junction box, and the junction box is mounted firmly to the ceiling joist. 2. Check that all blades are securely fastened to the blade holders. Check that the blade holders are not bent. Use the included balancing kit to balance the fan if needed.
If Light Does Not Work	1. Check the black wiring of motor to receiver, and receiver to AC input. 2. Check for loose or disconnected wires in the fan switch housing. 3. Check that light bulbs are not loose. 4. Check for faulty light bulbs, make sure the light bulb is AC 120V and E26 medium-base. CAUTION: Make sure the main circuit is turned off before entering the switch housing.
Remote Does Not Work	1. Battery is depleted or not installed correctly; replace with a new AAA battery and ensure it is properly installed. 2. Re-pair the remote by long-pressing "FAN OFF" within 3 seconds after turning the wall switch on, then pair.

Customer Service

30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response Within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-Year Warranty

Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.

Contact Information



You can contact us by sending an email to