NineSky
DEHUMIDIFIER

Model: CT2



KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

WELCOME

Thank you for choosing NineSky Dehumidifier to provide you a healthy environment, This user manual will provide you with valuable information necessary for the proper care and maintenance of your new dehumidifier.

INTENDED OF USE

The NineSky dehumidifier is the solution for humidity problems such as dressing room, bedroom, storeroom, bathroom, wardrobes, caravans, etc. It also helping to eliminate musty odor and to prevent the growth of mildew. It is lightweight and easy to transport where you need it the most. Dehumidify and improve your home environment with NineSky.

IMPORTANT SAFTY PRECATIONS

> This appliance is intended for household use. Always store the appliance in an upright position to avoid water leakage.


> Avoid using the power plug in wet or damp place, and place it in areas where the air ventilation is good.

> Don't block the air inlet and the air outlet of the dehumidifier; do not insert any foreign objects into the air outlet, as this will lead to damage.

> Dehumidifier should be placed on a level surface; otherwise the water will overflow.When this dehumidifier is not being used for an extended period of time, please make sure that the water tank is drained.

> Children should not use this product alone and should not play with it.

NAMES AND FUNCTION OF PARTS

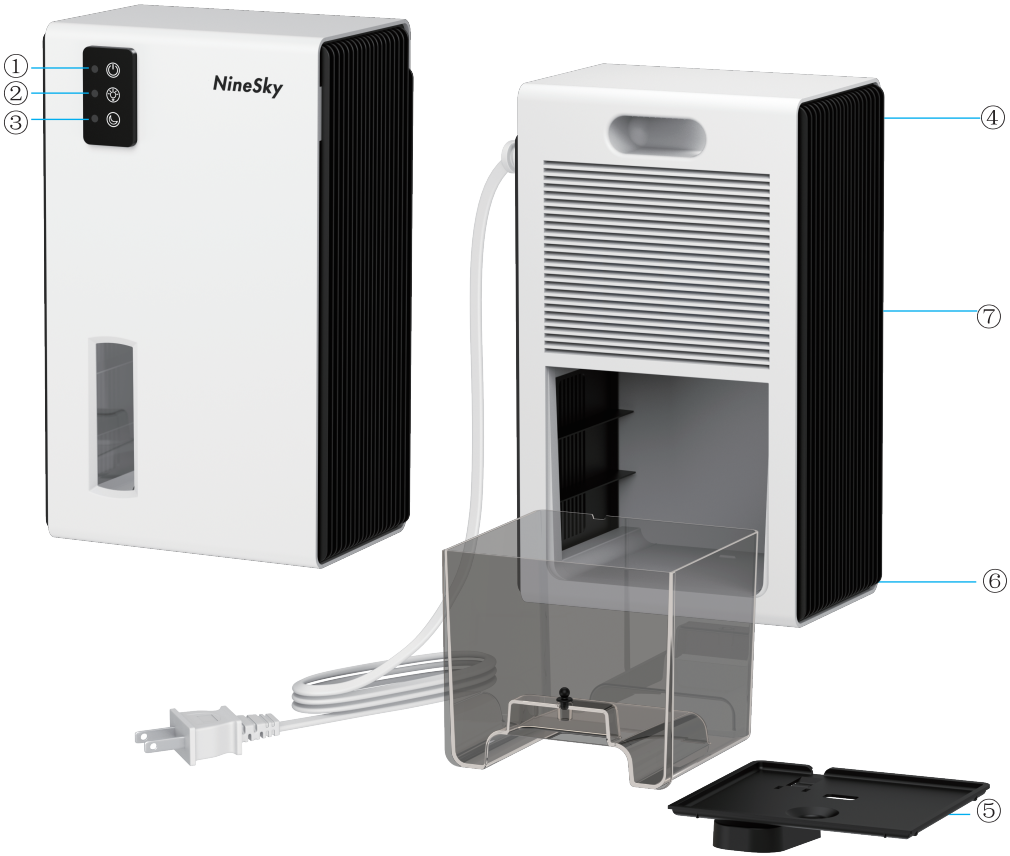

1.On/ Off button
2.Light button
3.Night mode
4.Dry air outlet
5.Water inlet
6.Water tank
7.Air inlet

SPECIFICATIONS

Model	CT2
Dehumidification	1000ML/D(30℃， RH80%)
Rated Power	85W
Rated Voltage	100-220V
Product Size	210×141×350mm
Package Size	236*169*370mm
N.W/G.W	2.7KG/3KG
Working Environment	59℉-104℉， >45%RH
Water tank volume	95oz

A. The way to improve the efficiency of your Dehumidifier:

1. Close the doors and windows where you run this room dehumidifier
2. Keep the front air inlet and the back outlet of this electric dehumidifier free from blocking
3. Run your Home dehumidifier when temperature is more than 15℃ and humidity is more than 45%, over 60% the effect will be better.
4. Best for spaces such as dressing rooms, bedrooms, storerooms, bathrooms,etc.

NOTE:

The effect of this dehumidifier is related to the temperature, the humidity and the size of the room.

The more humid, the better effect.

Ensure the dehumidifier is OFF and unplugged from the wall socket and use a soft cloth to clean away dust or debris from the surface of the unit and air inlets.

HOW TO USE



On/ Off button

On/ Off button ,Press to power on.
LED light open.
Click again to shut down.




LED Light button

If you like a single color, you can lock a color. When you like a certain color, you just need to wait for the light to change to that color automatically, and then press the light button to pause on the color you like.
If you like multiple colors, you can set the light to change automatically.
Or you can click it to set the lights all off.



Night mode

Press the night mode, the lights will all turn off.
But the dehumidifier still works normally, neither delaying the dehumidifier nor affecting your sleep.

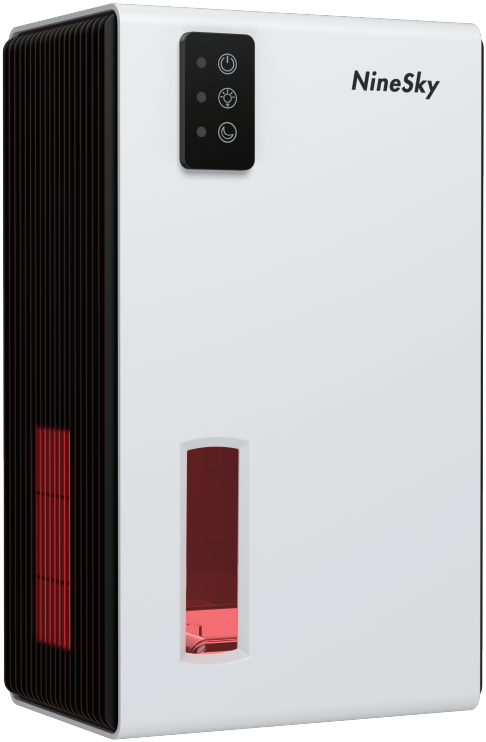

Red light and warning sound

When the water tank is full,reach the water tank or the water tank is in a wrong position, the red light will be on and a warning sound will indicate that the water tank is full.
Need to pour the water out of the water tank and put it back in the Dehumidifier to start the Dehumidifier .


HOW TO REMOVE THE WATER TANK AND POUR OUT THE WATER



1.When the water tank is full, the Red LED Light will Flashing and the dehumidifier will stop working automatically. First, unplug the power plug.



2.Second, remove the water tank.

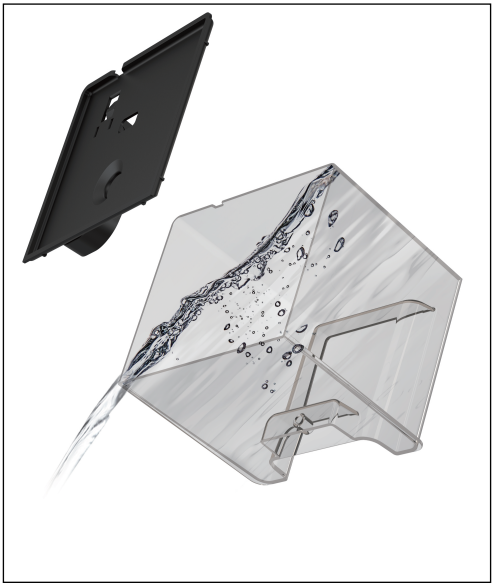

3.Third, remove the cover of the water tank and discard the collected water.



4.Fourth, place the cover back into the dehumidifier. To continue dehumidifying, plug the power plug and push the “ON/OFF" button again.

TROUBLE SHOOTING

Problem	Possible Cause	Solution
The“Red LED” is flashing first when power connected	The water tank is full	Empty the water tank and place it in correct position
	The float gets jammed	Press the float
The dehumidifier doesn’t work	The power supply is cut off	Check if the adaptor is plugged in
	Power socket loose	Check the power socket and the power cord, ensure it is connected well
	The air outlet is blocked	Maintain the minimum clearance at least 10cm around the dehumidifier when the unit is operating

CLEANING AND MAINTENANCE

Before cleaning and maintenance please pull out the plug out of the socket outlet. Wipe the shell of the appliance with a soft damp cloth, please do not use abrasive agent and re solvent, otherwise, the appliance will damage.

SERVICE AND WARRANTY

We offer 1 year warranty for dehumidifier. If you have any problem, question or concern of our products, please feel free to contact us via Email:support@ninesky.us, we will try our best to provide you the best solution within 24 hours.