
- Installation Instructions -



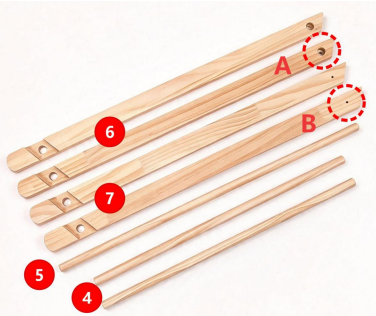

Thank you for choosing our product !
An installation video is available on the product listing page where you purchased this item. Please refer to it for additional guidance during assembly.

Tent Components

01. Tent * 1
02. Reversible Seat Cushion * 1
03. Screw * 4 & L-shaped wrench * 1
04. Round Rod (55cm/21.7 in * 2)
05. Round Rod (65cm/25.6 in * 1)
06. Square Wooden Post – A (69.5cm/27.4 in) * 2
07. Square Wooden Post – B (69.5cm/27.4 in) * 2

Before Assembly:

* Identify the wooden posts: Align the grooves on all wooden posts in the same direction. The posts with the larger pre-drilled holes are Type A (Part 06), while the others are Type B (Part 07).

* Wood surface: Due to the natural properties of wood, some areas may feel rough. If necessary, lightly sand them smooth before assembly.



01. Insert the two Round Rods (04) through the fabric sleeves along the left and right sides of the tent cover.



02. Locate the pre-attached securing straps inside the sleeves, one at the front and one at the back. Then insert Round Rod (05) through the top fabric sleeve.



03. Arrange the two A Posts (06) and two B Posts (07) in an alternating A-B pattern. Make sure the larger pre-drilled holes face inward. Then insert Round Rod (05) through the notched openings. **Repeat on the other side.**



04. Align the Round Rods (04) with the pre-drilled holes in the square wooden posts. Use the included screws and L-shaped wrench (03) to loosely secure the rods in place. **Repeat for all four posts.**



ImportantMake sure all four posts are standing upright and the entire frame is stable without wobbling before fully tightening the screws.

05. Fasten the snaps at the back of the tent and tie the securing straps to keep the tent firmly in place.

06. Place the reversible cushion inside the tent. Either side can be used.

07. Add the decorations by hanging the pom-poms and cat teaser toys from the tops of the posts.